


Build Your Anticipy Pendant

The super-simple picture guide. Like building Legos.

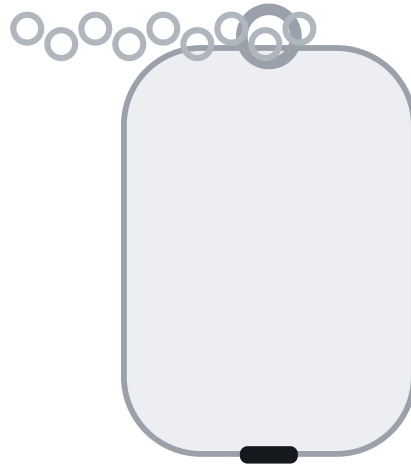

Do this 10 times. That's it.


No experience needed. One small soldering job, then it's just stacking and gluing.

What you have


Four things make one pendant.



1. board

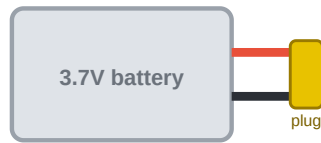

2. battery

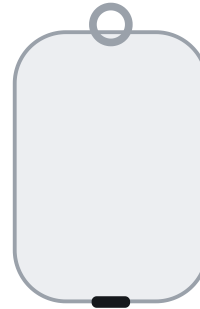

3. shell (2 halves)




4. chain

Before you start

Read this once.

The board comes with a little light and microphone already on it. You only add a battery, put it in the shell, and add a chain. The one real skill is soldering two small wires. If that is new, watch a 2-minute soldering video first, and ask a grown-up because the iron is HOT.

1

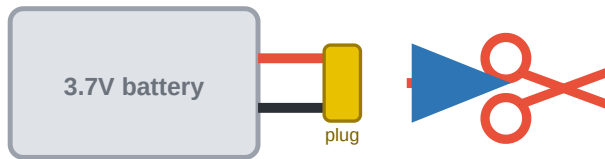


Snip the plug off the battery.

Now you have one RED wire and one BLACK wire.

Grown-up note: we cut the connector because the wires get soldered straight onto the board.

2

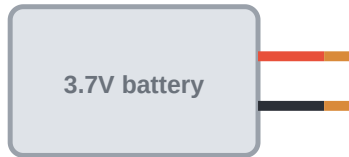


tiny copper tips ✦

Strip a little off each wire.

Just a tiny bit, so the shiny copper shows.

Grown-up note: about 3 mm of bare wire is enough to solder.

3

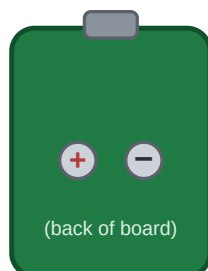


Flip the board over. Find the two dots.

One is +. One is −.

Grown-up note: these are the BAT+ and BAT− pads on the back of the XIAO.

4

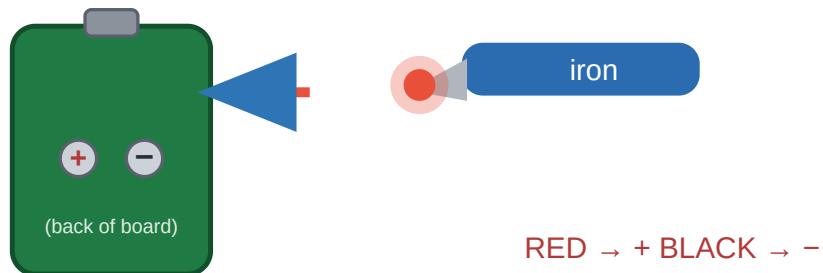

Melt a little solder. Stick the wires on.

RED wire on +. BLACK wire on -. Don't mix them up!

Grown-up note: red to BAT+, black to BAT-. Backwards = it won't turn on.

5




tiny tube

Slide a little tube over each joint.

Warm it so it hugs the wire. Now they can't touch.

Grown-up note: heat-shrink tubing stops the two wires shorting.

6

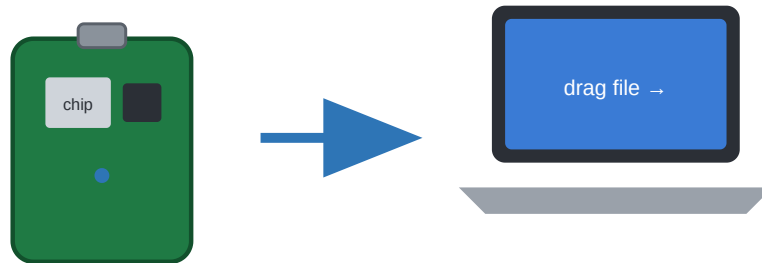


Plug the board into your computer.

Use the cable. Drag the little program onto it.

Grown-up note: USB-C DATA cable. Flash the firmware by dragging the file onto the drive.

7

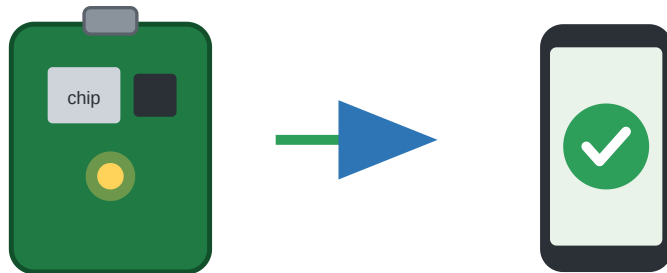


Look! A little light comes on.

Open your phone. It should find your pendant.

Grown-up note: confirm it powers and pairs over Bluetooth before you close it.

8

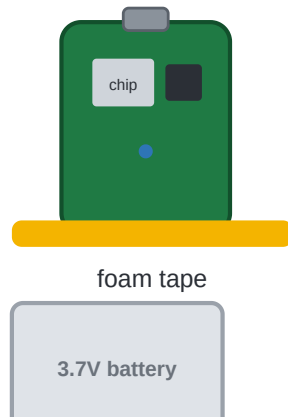


Stick the battery to the board.

Use the foam tape. Make a little sandwich.

Grown-up note: tape the cell flat to the back of the board so nothing rattles.

9

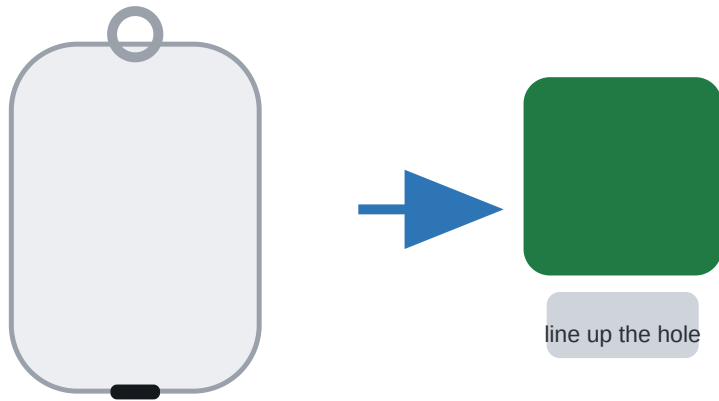

Put the sandwich inside the shell.

Line the charging hole up with the slot.

Grown-up note: orient the USB-C port to the shell's slot so you can still charge it.

10




Push the chain through the loop.

The little ring on top.

Grown-up note: thread one of the 12-pack chains through the molded bail.

11

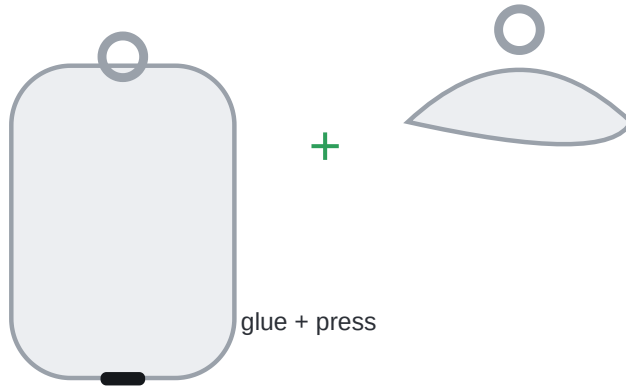

Put glue around the edge. Press the top on.

Hold it tight for a minute.

Grown-up note: clear epoxy on the seam, press the two halves, let it set.

12

You did it! Now make 9 more.



Charge it. YOU'RE DONE!

Now do the same thing 9 more times.

Grown-up note: each unit takes ~30 min once you have the rhythm.

Be safe

Three rules.

1. The iron is HOT. Never touch the tip. Put it back in its stand every time.
2. Do not bend, poke, or squish the battery. If it ever puffs up or gets hot, stop and put it somewhere safe.
3. Work where there is air, and wear the safety glasses.

Shopping checklist

GREEN = already in your cart. RED = still need to add. Bring this so you do not get stuck.

Status	Item	Note
HAVE	10 x XIAO board (nRF52840 Sense)	shipped from DigiKey
IN CART	Battery: 5-pack 3.7V 500mAh	you have 5 cells
IN CART	Battery: EEMB 3.7V 250mAh	1 slim cell
IN CART	Chain: 12-pack stainless 20in	
IN CART	Double-sided foam tape	
IN CART	Clear epoxy (Gorilla, 5-min)	glue the shell shut
IN CART	Kapton tape	insulate the solder joints
IN CART	Silicone wire 30AWG	longer leads if needed
IN CART	Soldering iron kit (iron + 5 tips + stand)	NOTE: no solder included!
ADD	Solder wire, rosin-core 60/40	the kit has none. REQUIRED
ADD	USB-C DATA cable (not charge-only)	to flash + charge the board. REQUIRED
ADD	Flush cutters	cut the battery plug + trim wires
ADD	Flux pen (rosin)	makes the tiny soldering easy
ADD MORE	More batteries: bump the 5-pack to x2 or x3	you have 6 cells; 10 units need ~12
OPTIONAL	Helping-hands clip (~\$12, not the \$61 one)	holds the board, or just tape it
OPTIONAL	Multimeter	check a cell / catch a short. Buy local, faster
OPTIONAL	Isopropyl alcohol (90%+)	clean off flux. Buy at a pharmacy
OPTIONAL	Heat-shrink tube	or just wrap joints in your kapton tape
DECIDE	3D-print the shells OR order prints	you need 10-12 shells
LATER	Apple Developer + a test iPhone	for the phone app, not blocking