Settings menu test - where the wires go (not to scale)

Mega 2560: long double-row header (from above)

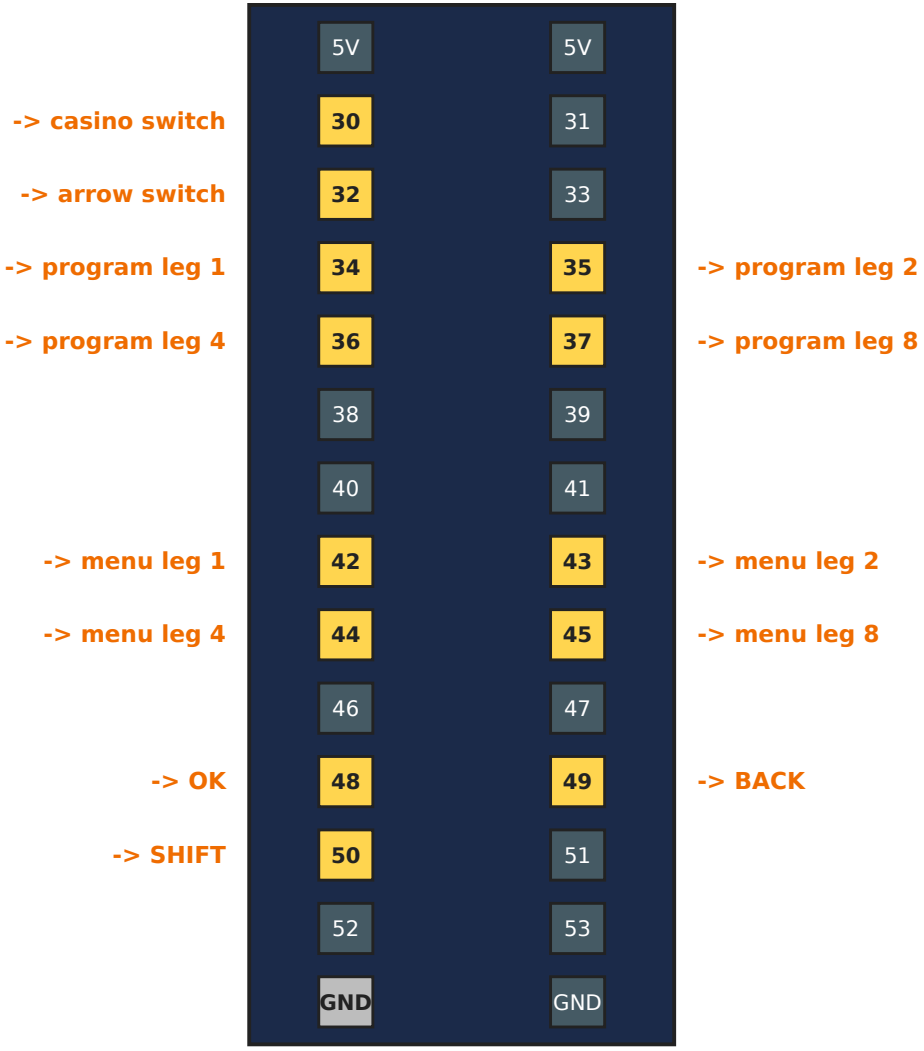

Yellow = used pins; grey = GND (all C legs, buttons, slide switches and the LCD GND go to GND pins).

What goes where

Part	Pin / contact	Mega pin
Program hex switch	legs 1, 2, 4, 8	D34 D35 D36 D37
	C (one leg)	GND
Menu hex switch	legs 1, 2, 4, 8	D42 D43 D44 D45
	C (one leg)	GND
OK button	one contact	D48
BACK button	one contact	D49
SHIFT button	one contact	D50
	other contact	GND
Arrow slide switch	middle contact	D32
Casino slide switch	middle contact	D30
	one side contact	GND
LCD backpack	GND / VCC	GND / 5V
	SDA / SCL	D20 / D21

Rotary switch legs are marked 1, 2, 4, 8 and C (the order differs by maker).
A slide switch has three contacts in a row: the middle one is the common contact.
D20 (SDA) / D21 (SCL): communication header, or the SDA / SCL pins by AREF.