


MARITIME COMPLIANCE TOOLS

USER GUIDE

EU MRV & FuelEU Maritime Voyage Classification Tool — Web Version

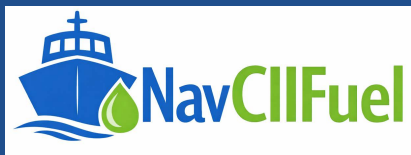

Voyage Classification · EU MRV Regulation (EU) 2015/757 · FuelEU Maritime Regulation (EU) 2023/1805

Prepared for: Vessel Compliance & Reporting Teams

Document version: 1.0

Table of Contents

Table of Contents	2
1 Introduction	3
1.1 Purpose of this guide	3
1.2 What the tool does	3
2 Interface Overview	3
3 Quick Start Workflow	4
4 Tab 1 — Vessel & Voyage Input	4
4.1 Upload Voyage Data (Excel)	4
4.2 Or Enter Voyages Manually	5
5 Tab 2 — Classification Results	6
5.1 Summary Statistics	6
5.2 Voyage Classification Table	6
5.3 Summary by Case & Fuel	7
5.4 Exporting Results	7
6 Tab 3 — Regulation Guide & Port Registry	7
6.1 MRV and FuelEU Scope Rules	8
6.2 Port Classification Registry	8
7 Exporting and Record-Keeping	9
8 Best-Practice Checklist	9
9 Troubleshooting	10
Appendix — Full Interface Reference	11

1 Introduction

1.1 Purpose of this guide

This guide explains how to use the NavCIIFuel EU MRV & FuelEU Maritime Voyage Classification Tool, a browser-based application for classifying vessel voyages under the EU MRV Regulation (EU) 2015/757 and the FuelEU Maritime Regulation (EU) 2023/1805. It walks through every tab, input field, and exported report, using screenshots taken directly from the tool.

The guide is written for ship operators, technical superintendents and compliance officers who need to enter voyage and fuel data, classify voyages against the Port Classification Registry, and produce exportable MRV / FuelEU reports.

1.2 What the tool does

- Classifies each voyage leg as EEA→EEA, EEA→Non-EEA, Non-EEA→EEA, EEA Port Call, or an OMR (Outermost Region) voyage, using the built-in Port Classification Registry.
- Calculates the MRV and FuelEU scope percentage that applies to each leg's CO₂ emissions and fuel consumption, and flags legs where the two regulations diverge.
- Accepts voyage data either by uploading an Excel file or by typing rows directly into the manual entry table, with per-fuel-type consumption captured through a dedicated fuel entry popup.
- Produces summary statistics and a full results table, plus a breakdown by classification case and fuel type.
- Exports classified results, MRV reports, FuelEU reports, an OMR voyage list, and a Part B import file for the FuelEU Calculator — all as Excel workbooks.
- Maintains an editable, searchable Port Classification Registry (pre-loaded with 268 UN/LOCODE ports) that can be saved and re-imported as XML.

Before you start

- The tool runs entirely in your browser — no voyage data is uploaded or sent anywhere.
- Have voyage records (departure/arrival ports and dates, distance sailed) and Bunker Delivery Notes or fuel consumption records ready, broken down by fuel type.
- Use a current version of Chrome, Edge, or Firefox for the best experience.

2 Interface Overview

The tool opens on a fixed header with a Help button, followed by three main tabs — Vessel & Voyage Input, Classification Results, and Regulation Guide — and a Refresh Tables button that is always available alongside them.




Figure 1 — Application header with title and on-screen Help button.




Figure 2 — Main navigation: the three tabs plus the Refresh Tables button.

Field / Control	Description
? (Help)	Opens an on-screen guide covering the overall workflow, the three tabs, voyage classification badges, and a diagram of how each voyage type is scoped.
 Vessel & Voyage Input	Upload voyage data from Excel, or add voyages manually, then classify them.

Field / Control	Description
Drop zone / Browse	Drag an .xlsx, .xls or .csv file here, or click to browse. Each row represents one voyage leg. Supports up to 10,000 voyage rows.
↓ Download Excel Template	Downloads a blank workbook with the correct column headers (including all supported fuel-type columns) and an Instructions sheet.
Columns A–H	Voyage_No, Departure_Port, Departure_Port_Code, Departure_Date, Arrival_Port, Arrival_Port_Code, Arrival_Date, Activity (SEA PASSAGE or PORT).
Column I	Distance (nm) — total voyage distance sailed for that leg.
Columns J onward	Fuel consumption in tonnes, one column per fuel type. Only fill in the columns for fuels actually consumed; leave the rest blank.
Tip - Port codes must be UN/LOCODE format, e.g. NLRTM (Rotterdam), GBSOU (Southampton), SGSIN (Singapore). - Any port code used in the upload that isn't yet in the Port Classification Registry is auto-added and tagged Auto — review it afterwards on the Regulation Guide tab.	

4.2 Or Enter Voyages Manually

OR ENTER VOYAGES MANUALLY

VOYAGE NO	DEPARTURE PORT CODE	ARRIVAL PORT CODE	DEP DATE	ARR DATE	DISTANCE (NM)	FUEL (MT)
V001	NLRTM	SGSIN	01/15/2026	01/30/2026	8420	380.50 MT (1 fuel) ✓
V002	DEHAM	NLRTM	02/02/2026	02/04/2026	310	42.20 MT (1 fuel) ✓
V003	SGSIN	AEJEA	02/10/2026	02/18/2026	3650	210.00 MT (1 fuel) ✓

+ Add Row
Classify These Voyages
Clear

Figure 4 — Manual voyage entry table with three sample rows and fuel data confirmed (✓).

Field / Control	Description
Voyage No	Free-text identifier for the voyage leg, e.g. V001.
Departure / Arrival Port Code	UN/LOCODE port codes for the start and end of the leg — used to look up EEA / Non-EEA / OMR status in the Port Classification Registry.
Dep Date / Arr Date	Departure and arrival dates for the leg.
Distance (NM)	Distance sailed on this leg, in nautical miles.
📄 Enter Fuels	Opens a popup listing every supported fuel type — enter consumption in tonnes for each fuel actually used. A green tick and a totals summary appear on the button once confirmed.
+ Add Row / ✕	Add Row appends a new blank voyage row; ✕ on a row removes it.
▶ Classify These Voyages	Runs the classification engine on all manually entered rows and opens the Classification Results tab.
🗑 Clear	Clears all manually entered rows back to a single blank row, after a confirmation prompt.

5 Tab 2 — Classification Results

This tab appears once voyages have been classified. It has two sub-tabs: Voyage Classification (leg-by-leg results) and Summary by Case & Fuel (aggregated breakdown).

5.1 Summary Statistics



Figure 5 — Summary statistic cards shown at the top of the Classification Results tab.

5.2 Voyage Classification Table

Each row shows independent MRV and FuelEU classifications for one voyage leg, along with the scope percentage that applies to each.



Figure 6 — Colour legend for the voyage classification categories and their scope percentages.

VOYAGE CLASSIFICATION RESULTS												
Each voyage row shows independent MRV and FuelEU classifications. Scroll right for fuel columns. —												
VOYAGE		ROUTE		DATES		EEA STATUS		MRV - EU 2015/757		FUELEU - EU 2023/1805		DISTANCE
VOYAGE NO	FROM PORT	TO PORT	DEP DATE	ARR DATE	EEA DEP	EEA ARR		MRV CLASSIFICATION	SCOPE %	FUELEU CLASSIFICATION	SCOPE %	DISTANCE (NM)
1	MTMAR	EGPSD	2024-12-31	2025-01-01	✓ EEA	✗ Non-EEA		EEA → Non-EEA	50%	EEA → Non-EEA	50%	83
2	TRISK	GRSG	2025-01-21	2025-01-25	✗ Non-EEA	✓ EEA		Non-EEA → EEA	50%	Non-EEA → EEA	50%	823.9
3	GRSG	NULL	2025-01-25	2025-01-28	✓ EEA	✗ Non-EEA		EEA Port Call	100%	EEA Port Call	100%	—
4	GRSG	BGB03	2025-01-28	2025-03-12	✓ EEA	✓ EEA		EEA → EEA	100%	EEA → EEA	100%	431.9
5	GRSG	BGB03	2025-03-12	2025-03-14	✓ EEA	✓ EEA		EEA → EEA	100%	EEA → EEA	100%	166
6	BGB03	NULL	2025-03-14	2025-03-16	✓ EEA	✗ Non-EEA		EEA Port Call	100%	EEA Port Call	100%	—
7	BGB03	DZB3A	2025-03-16	2025-03-27	✓ EEA	✗ Non-EEA		EEA → Non-EEA	50%	EEA → Non-EEA	50%	2,053.7
8	DZB3A	ESCAR	2025-04-06	2025-04-08	✗ Non-EEA	✓ EEA		Non-EEA → EEA	50%	Non-EEA → EEA	50%	—
9	DZB3A	ESCAR	2025-04-06	2025-04-06	✗ Non-EEA	✓ EEA		Non-EEA → EEA	50%	Non-EEA → EEA	50%	3

Figure 7 — Voyage Classification Results table, with filter buttons above it.

Field / Control	Description
Filter buttons	Narrow the table to All voyages, a specific classification category (EEA → EEA, EEA → Non-EEA, Non-EEA → EEA, EEA Port, OMR variants, Out of Scope), or only legs where Δ MRV $\neq$ FuelEU.
MRV Classification / Scope %	The voyage's category and applicable scope percentage under EU MRV Regulation (EU) 2015/757.
Fueleu Classification / Scope %	The voyage's category and applicable scope percentage under FuelEU Maritime Regulation (EU) 2023/1805 — shown separately, since it can differ from the MRV result.
Distance (nm)	Distance sailed on the leg, as entered in the input tab.

5.3 Summary by Case & Fuel

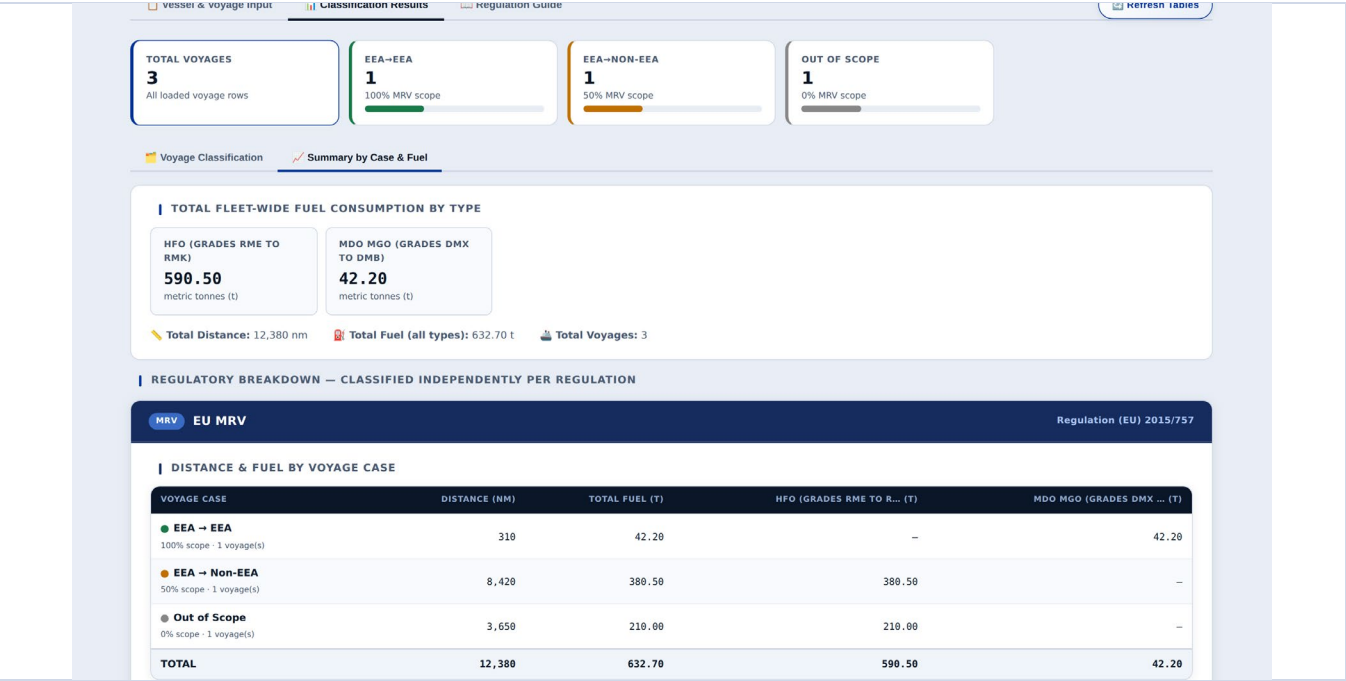


Figure 8 — Summary by Case & Fuel sub-tab, aggregating results across all classified voyages.

5.4 Exporting Results

- ↓ Export Results (Excel) — the full classified voyage table, as shown on screen.
- 📄 Export MRV Report (Excel) — a report formatted for EU MRV Regulation (EU) 2015/757 reporting.
- ⚡ Export FuelEU Report (Excel) — a report formatted for FuelEU Maritime Regulation (EU) 2023/1805 reporting.
- 📊 Export for FuelEU Calculator (Part B) — a workbook formatted to import directly into the companion FuelEU Calculator tool.

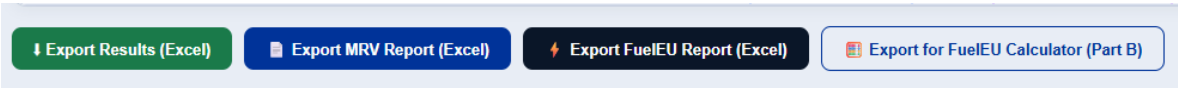


Figure 9 — Exporting options.

6 Tab 3 — Regulation Guide & Port Registry

This tab holds reference material on how MRV and FuelEU scope rules are applied, and the editable Port Classification Registry that drives every voyage's classification.

6.1 MRV and FuelEU Scope Rules

The screenshot displays the 'Regulation Guide' tab with two main sections: 'EU MRV REGULATION (EU) 2015/757 — SCOPE RULES' and 'FUELEU MARITIME (EU) 2023/1805 — SCOPE RULES'.

EU MRV REGULATION (EU) 2015/757 — SCOPE RULES

The EU MRV Regulation applies to ships >5,000 GT calling at EU/EEA ports. CO₂ emissions are monitored based on voyage type:

- EEA → EEA (100%)**: Both departure and arrival ports are within EEA. 100% of fuel and CO₂ emissions reported.
- EEA → Non-EEA (50%)**: Departure is EEA port, arrival is outside EEA. 50% of emissions counted toward MRV obligation.
- Non-EEA → EEA (50%)**: Departure is outside EEA, arrival is EEA port. 50% of emissions counted toward MRV obligation.
- EEA Port Call (100%)**: Emissions during stay at EEA port (anchorage, maneuvering). 100% in-scope.

Non-EEA → Non-EEA voyages with no EEA port call are **out of scope** for EU MRV.

FUELEU MARITIME (EU) 2023/1805 — SCOPE RULES

FuelEU Maritime applies from 1 January 2025 to ships >5,000 GT. It sets GHG intensity targets for energy used:

- EEA→EEA**: 100% of energy used on voyage is within scope
- EEA→Non-EEA / Non-EEA→EEA**: 50% of energy used is within scope
- At EEA port ≥2 hours**: All energy used at berth is in scope
- OMR voyages**: Treated as Non-EEA for FuelEU scope

Energy is calculated as Lower Calorific Value (LCV). Default: HFO = 40.2 MJ/kg, VLSFO = 40.5 MJ/kg, LNG = 48.0 MJ/kg, MDO/MGO = 42.7 MJ/kg.

GHG Intensity Reduction Targets

2025: -2% | 2030: -6% | 2035: -14.5% | 2040: -31% | 2045: -62% | 2050: -80% (vs 2020 baseline of 91.16 gCO₂eq/MJ)

Figure 10 — Regulation Guide tab, showing the EU MRV Regulation (EU) 2015/757 scope rules card.

A matching card further down the tab sets out the FuelEU Maritime (EU) 2023/1805 scope rules and GHG intensity reduction targets by year, using the same EEA / Non-EEA / OMR logic.

6.2 Port Classification Registry

The registry is the single source of truth the tool uses to classify every voyage's From Port and To Port. It comes pre-loaded with 268 real UN/LOCODE ports and lets you set MRV and FuelEU categories independently for each port, since OMR treatment can differ between the two regulations.

The screenshot displays the 'PORT CLASSIFICATION REGISTRY — EEA / NON-EEA / OMR' interface. It includes a search bar, a category filter, and a table of ports with their MRV and FuelEU categories.

PORT CLASSIFICATION REGISTRY — EEA / NON-EEA / OMR

Search by port code, name or country... All Categories 338 of 338 entries

PORT CODE	PORT / REGION NAME	MRV CATEGORY (EU) 2015/757	FUELEU CATEGORY (EU) 2023/1805	SOURCE
AE	United Arab Emirates	EEA	Non-EEA	DEFAULT
AT	Austria	EEA	EEA	DEFAULT
BE	Belgium	EEA	EEA	DEFAULT
BEANR	Antwerp	EEA	EEA	DEFAULT
BEGNE	Ghent	EEA	EEA	DEFAULT
BEOST	Ostend	EEA	EEA	DEFAULT

+ Add Port Export List (Excel) Import List (Excel) Reset to Default List

EEA = European Economic Area port • Non-EEA = outside EEA • OMR = EU Outermost Region — legally EU territory but treated as Non-EEA for scope • N/A = not applicable under that regulation (e.g. OMR has no distinct treatment under MRV 2015/757, so it can be left as N/A there while still set to OMR under FuelEU). Set MRV Category and FuelEU Category independently for each port — OMR treatment may differ between the two regulations. Port codes follow UN/LOCODE format.

Figure 11 — Port Classification Registry, with search, category filter, and per-port MRV / FuelEU category controls.

Field / Control	Description
Search / Category filter	Search by port code, name or country, or filter the list to a single category (EEA, Non-EEA, OMR, N/A).
MRV Category / FuelEU Category	Independent classification per port for each regulation — set separately since OMR ports may be treated differently under MRV versus FuelEU.
Source column	Shows whether a port entry is part of the built-in list or was Auto-added from uploaded/manual voyage data — review Auto entries and correct them if needed.
+ Add Port	Adds a new blank row to the registry for a port not already listed.
 Save XML / ↑ Import XML	Saves the entire registry as an .xml file, or reloads a previously saved registry file.
↓ Export List (Excel) / ↑ Import List (Excel)	Exports the registry as a workbook, or bulk-imports port classifications from a workbook.
 Reset to Default List	Restores the registry to its original built-in list of ports and categories.

7 Exporting and Record-Keeping

- Use  Save XML on the Port Classification Registry whenever you correct or add a port, so custom classifications aren't lost on reload.
- Export the classified voyage results, MRV report and FuelEU report as soon as a classification run has been reviewed and confirmed.
- Use  Refresh Tables after editing the Port Classification Registry, so previously loaded voyages are reclassified against the updated categories.
- Keep the Port_Classification_Registry.xml file together with each period's exported reports, so the exact classification basis used can be reproduced later.
- Name exported files consistently, e.g. VesselName_ReportingPeriod_MRV.xlsx / _FuelEU.xlsx, for easy retrieval.

8 Best-Practice Checklist

- Review any Auto-added ports on the Regulation Guide tab after every upload, and correct their MRV / FuelEU category before exporting reports.
- Use the  MRV ≠ FuelEU filter after each classification run to catch legs that need manual review.
- Double-check fuel consumption entries in the  Enter Fuels popup — only fuels actually consumed should have a non-zero value.
- Keep port codes in UN/LOCODE format for both uploaded files and manual entries.
- Re-run  Refresh Tables after any change to the Port Classification Registry, before exporting final reports.
- Store the Port_Classification_Registry.xml backup together with the exported MRV and FuelEU reports for full traceability.

9 Troubleshooting

Symptom	Likely cause / fix
Classification Results tab is empty	No voyage data has been classified yet — upload a file or click ► Classify These Voyages in the Input tab.
A port shows as Non-EEA when it should be EEA or OMR	The port is missing or misclassified in the Port Classification Registry — search for it on the Regulation Guide tab, correct its category, then click  Refresh Tables.
Uploaded Excel file didn't populate all rows	Column headers don't match the required template — download 4a fresh ↓ Download Excel Template and re-enter the data, or check for extra header rows.
⚠ MRV ≠ FuelEU appears on a voyage	This is expected where a port is treated differently under the two regulations (e.g. certain OMR ports) — review the row and confirm both categories are correct in the registry.
Fuel total shows as 0 MT after using the popup	No individual fuel value was greater than zero when ✓ Confirm was clicked — reopen  Enter Fuels and enter at least one consumption value.
Registry changes disappear after reloading the page	Category changes made directly in the table are session-only until saved — use  Save XML (or Save to Google Drive when prompted) and ↑ Import XML next time to reload them.

Appendix — Full Interface Reference

The screenshot below shows the built-in on-screen Help guide, summarising the workflow, the three tabs, the voyage classification badges, and how each voyage type is scoped — useful as a quick reference alongside this document.

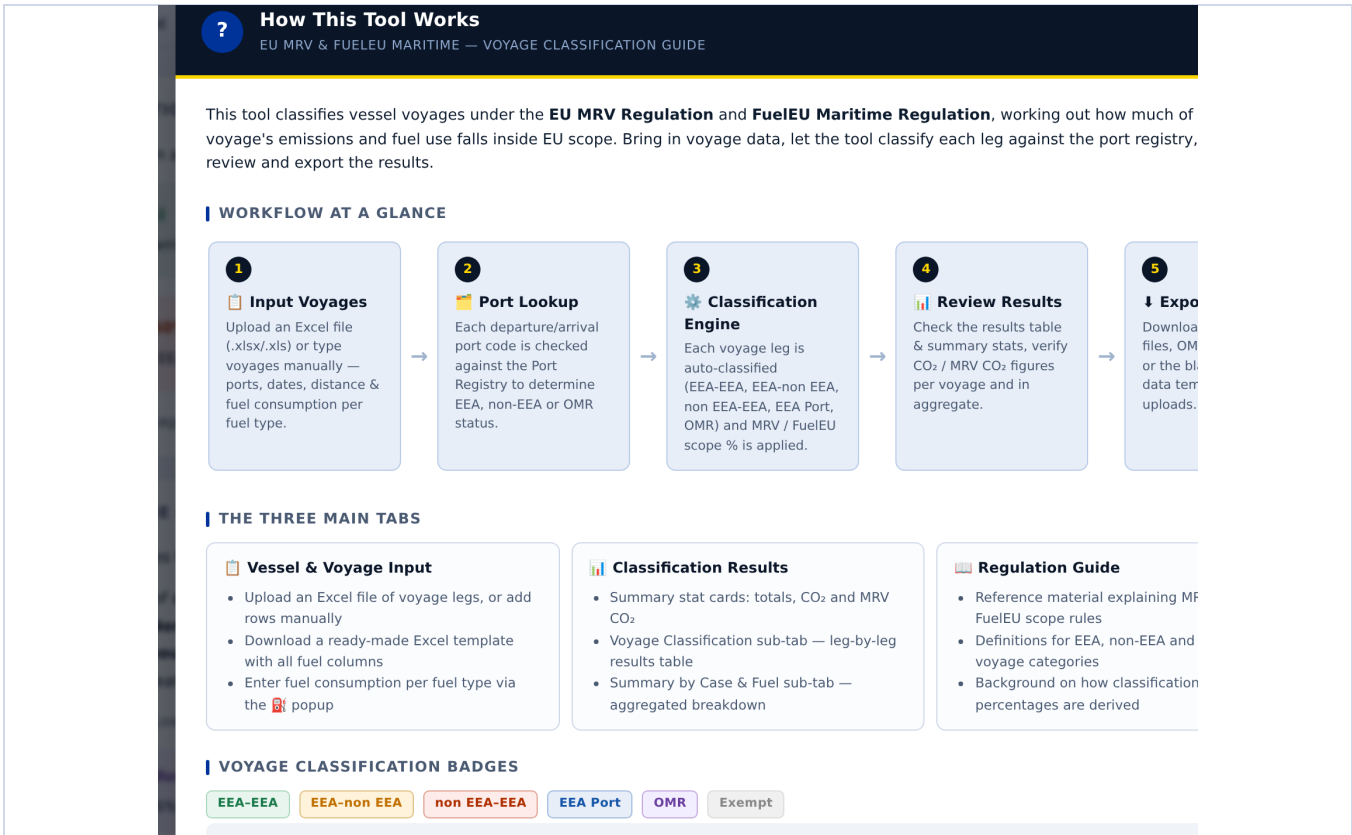


Figure 12 — On-screen Help guide, opened from the ? button in the header.

End of user guide.