DEPARTMENT OF INFORMATION & COMMUNICATION TECHNOLOGY

Embedded Systems and IoT Lab Manual [ICT 3267]

> Semester: VI B. Tech (CCE)

CONTENTS

LAB NO	TITLE	PAGENO.	MARKS	SIGN
	COURSE OBJECTIVES AND OUTCOMES	П		
	INSTRUCTION TO THE STUDENTS	III		
0	START- UP KEIL UVISION4	1		
1	DATA TRANSFER PROGRAMS	10		
2	ARITHMETIC PROGRAMS	14		
3	CODE CONVERSION PROGRAMS	18		
4	PROGRAMS ON SORTING, SEARCHING AND STACK	20		
5	INTERFACING LED TO ARM MICROCONTROLLER	22		
6	PROGRAMS ON MULTIPLEXED SEVEN SEGMENT DISPLAY	28		
7	LCD AND KEYBOARD INTERFACING	33		
8	ADC AND DAC INTERFACING	46		
9	PWM INTERFACING	50		
10	FAMILIARIZATION WITH ARM MBED PROTOTYPING BOARD	53		
11	FAMILIARIZATION WITH ARM MBED PROTOTYPING BOARD EXERCISE	57		
	APPENDIX A	62		
	APPENDIX B	65		
	APPENDIX C	69		

Course Objectives

- To develop skills in real world interfacing circuits.
- To efficiently design software for embedded systems.
- To design software for IoT applications.

Course Outcomes

At the end of this course, students will be able to

- Design real world interfacing circuits to a microcontroller
- Develop software for embedded systems.
- Propose architectural solutions for IoT applications.
- Develop software for IoT applications.

INSTRUCTIONS TO THE STUDENTS

Pre- Lab Session Instructions

- 1. Students should carry the Lab Manual Book and the required stationery to every lab session.
- 2. Be in time and follow the institution dress code.
- 3. Must sign in the log register provided.
- 4. Make sure to occupy the allotted seat and answer the attendance.
- 5. Adhere to the rules and maintain the decorum.

In- Lab Session Instructions

- Follow the instructions on the allotted exercises.
- Show the program and results to the instructors on completion of experiments.
- On receiving approval from the instructor, write the program and results in the lab record.
- Prescribed textbooks and class notes can be kept ready for reference, if required.

General Instructions for the exercises in Lab

- Implement the given exercise individually as well as in allotted teams.
- The programs should meet the following criteria:
 - Programs should be interactive with appropriate prompt messages, error messages if any, and descriptive messages for outputs.
 - Comments should be used to give the statement of the problem.

- o Statements within the program should be properly indented.
- Plagiarism (copying from others) is strictly prohibited and would invite severe penalty during evaluation.
- The exercises for each lab are divided under three sets:
 - Solved exercise.
 - o Lab exercises to be completed during lab hours,
 - o Additional Exercises to be completed outside the lab or in the lab to enhance the skill.
- In case a student misses a lab class, he/ she must ensure that the experiment is completed during the repetition class with the permission of the faculty concerned, but credit will be given only to one day's experiment(s).


Start up Keil uVision4

Aim: Understand the usage of Keil u Vision 4 software for assembly language.

Before you start up, you are recommended that you create a folder to hold all your project files. For example: you can create a folder "FirstARM-Project" ready before hand.


Step1:

You can start up uVision4 by clicking on the icon "Start" menu or "All Programs" on a lab PC. The following screen is what you will see:

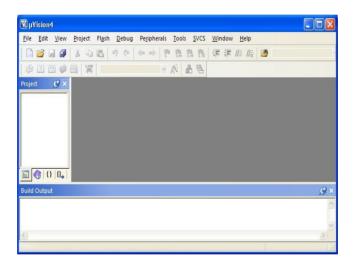


Step2: Create a project

To create a project, click on the "Project" menu from the uVision4 screen and select "New uVision Project...".

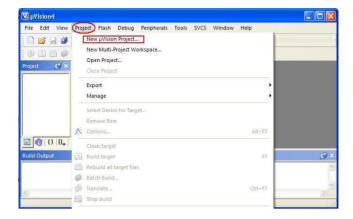


Then, select a folder, give project a name and save.

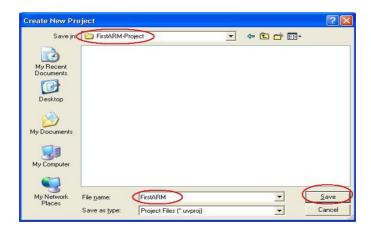


From the "Select Device for Target" window, select "NXP" as the vendor. In that select LPC1768 ARM controller, then click on OK button

Caution

When you choose the chip some general information of the chip is shown in the **Description** box.

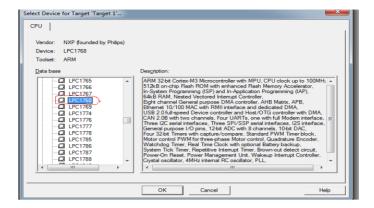

Make sure you click on "NO" for the following pop up window.

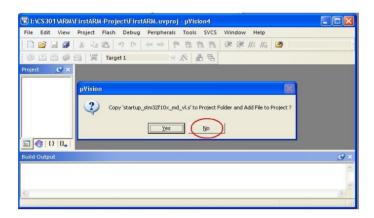


Step3: Create Source File

From the "File" menu, select "New", you will see the "Text1*" text edit window. That is the place you will write your ARM Assembly language program. You can write the program into this window. (Note: give a tab space at the beginning)


```
Project
                    DATATRANSFER.asm
🖃 🛅 Target 1
                           AREA
                                  RESET, DATA, READONLY
  🚊 👸 Source Group
                           EXPORT __Vectors
                        Vectors
     DATATRAI
                          DCD 0x40001000 ; stack pointer value when stack is empty
                          DCD Reset_Handler ; reset vector
                          AREA mycode, CODE, READONLY
                     8
                         ENTRY
                     9
                          EXPORT Reset_Handler
                    10 Reset Handler
                    11
                          MOV RO, #0x123
                    12
                          MOV R1, #0123
                          ADD R2,#33
                    13
                    14
                          ADD R2,R1
                          LDR R4, =0X22222222
                    15
                          LDR RO, =SRC
                    16
                    17
                          MOV R2, #NUM
                    18
                          LDR R3, [R0]
                    19
                          LDR r4, [R0,#4]
                    20
                          LDR r5, [r0, #4]!
                    21
                          LDR r6, [r0], #4
                    22
                    23 STOP
                    24 B STOP
                    25
                    26 NUM EQU 10
                    27 SRC DCD 8,0x123456,34567891
```

Save the program by clicking on the "Save" or "Save As" from the "File" menu and give it a name.

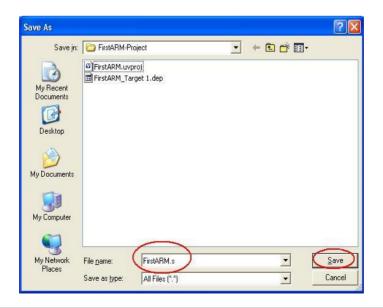


Add Source File to the Project

Right click on the "Source Group 1", select "Add Files to Group 'Source Group 1".

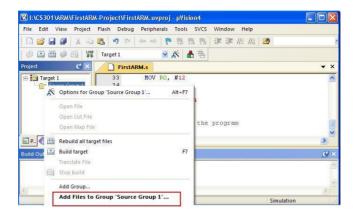


Select "Files of type" as "asm Source file (*.s*;*.src*;*.a*), then select the file "FirstARM.s" for example. Click on "Add", and then click on "Close".

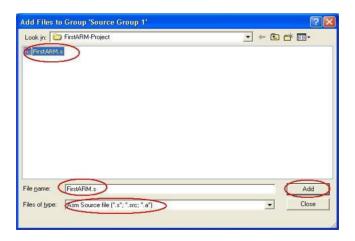


Step4: Build your project

Click on the "+" beside the "Source Group 1", you will see the program "FirstARM.s". Click on the "Build" button or from the "Project" menu, you will see the following screen.

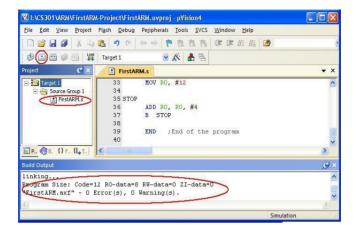


Run the program in your project

Run the program through "Debug" menu.

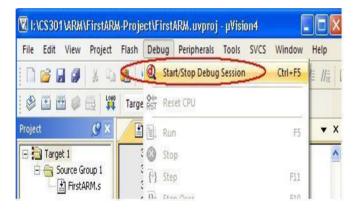


Click on "OK" for the pop up window showing "EVALUATION MODE, Running with Code Size Limit: 32K".

Open uVision4 to full screen to have a better and complete view. The left hand side window shows the registers and the right side window shows the program code. There are some other windows open. Adjust the size of them to have better view. Run the program step by step; observe the change of the values in the registers.

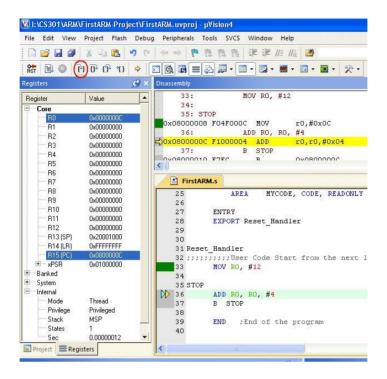

To trace the program use the **Step Over** button or click on **Step Over** from the Debug menu. It executes the instructions of the program one after another. To trace the program one can use the **Step** button, as well. The difference between the **Step Over** and **Step** is in executing functions. While **Step** goes into the function and executes its instructions one by one, **Step Over** executes the function completely and goes to the instruction next to the function. To see the difference between them, trace the program once with **Step Over** and then with **Step**. When PC executing the function and want the function to be executed completely one can use **Step Out**. In the case, the instructions of the function will be executed, it returns from the function, and goes to the instruction which is next to the function call.

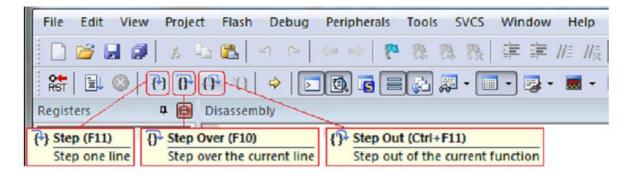

Click on the "Start/Stop Debug Session" again to stop execution of the program.

An example ARM assembly language module

An ARM assembly language module has several constituent parts.

These are:

- Extensible Linking Format (ELF) sections (defined by the AREA directive).
- Application entry (defined by the ENTRY directive).
- Application execution.
- Program end (defined by the END directive).

Consider the following example

```
AREA
         ARMex, CODE, READONLY
                                 ; Name this block of code ARMex
        ENTRY
                                 ; Mark first instruction to execute
start
        MOV
                 r0, #10
                                 ; Set up parameters
                 r1, #3
        MOV
                 r0, r0, r1
                                 ; r0 = r0 + r1
        ADD
        END
                                 ; Mark end of file
```

Application entry

The ENTRY directive declares an entry point to the program. It marks the first instruction to be executed. In applications using the C library, an entry point is also contained within the C library initialization code. Initialization code and exception handlers also contain entry points.

Application execution

The application code begins executing at the label start, where it loads the decimal values 10 and 3 into registers R0 and R1. These registers are added together and the result placed in R0.

Program end

The END directive instructs the assembler to stop processing the source file. Every assembly language source module must finish with an END directive on a last line. Any lines following the END directive are ignored by the assembler.

Lab 1 Data Transfer and Arithmetic Programs

Aim: Familiarization of ARM data transfer instructions.

Introduction to ARM addressing modes: Data can be transferred into and out of ARM controller using different addressing modes. There are different ways to specify the address of the operands for any given operations such as load, add or branch. The different ways of determining the address of the operands are called addressing modes. In this lab, we are going to explore different data transfer instructions of ARM processor and learn how all instructions can fit into a single word (32 bits).

Appendix A gives the different addressing modes used in ARM

Question: Write a ARM assembly language program to copy 16 bit variable from code memory to data memory.

Input : SRC = 0X00000008 at location pointed by R0

Output : DST = 0X00000008 At location pointed by R1

```
AREA RESET, DATA, READONLY
EXPORT __Vectors

__Vectors

DCD 0x10001000 ; stack pointer value when stack is empty
DCD Reset_Handler ; reset vector

ALIGN

AREA mycode, CODE, READONLY
ENTRY
EXPORT Reset Handler
```

Reset Handler

ES LAB MANUAL LAB 1: Data Transfer and Arithmetic Programs

LDR R0, =SRC; Load address of SRC into R0
LDR R1, =DST; Load the address of DST onto R1
LDR R3, [R0]: Load data pointed by R0 into R3

STR R3,[R1]; Store data from R3 into the address pointed by R1

STOP

B STOP

SRC DCD 8,0x123456; SRC location in code segment AREA DATASEG, DATA, READWRITE

DST DCD 0 ;DST location in Data segment

END

Observations to be made

- 1. Data storage into the memory: Click on Memory window you get label Memory1 option type address pointed by R0 in address space and observe how the data are stored into the memory.
- **2. Data movement from one memory to another memory:** Click on Memory window you get label Memory2 option type address pointed by R1 in address space and observe data movement to another location before execution and after execution.

Exercise questions

- 1. Write an ARM assembly language program to transfer block of ten 32 bit numbers from one memory to another
 - a. When the source and destination blocks are non-overlapping
 - b. When the source and destination blocks are overlapping

Hint: Use Register indirect addressing mode or indexed addressing mode

2. Reverse an array of ten 32 bit numbers in the memory.

Lab 1 Arithmetic Programs

Aim: Familiarization of Arithmetic operations - addition and subtraction Please refer to appendix A for arithmetic instructions.

Question: Write a program to add two 32 bit numbers.

```
AREA
           RESET, DATA, READONLY
    EXPORT __Vectors
 Vectors
    DCD 0x40001000 ; stack pointer value when stack is empty
   DCD Reset Handler; reset vector
    ALIGN
AREA mycode, CODE, READONLY
    ENTRY
    EXPORT Reset Handler
Reset Handler
    LDR R0, =VALUE1 ;pointer to the first value1
    LDR R1,[R0]
                      ;load the first value into R1
    LDR R0,=VALU2
                      :pointer to the second value
    LDR R3, [R0]
                      :load second number into r3
    ADDS R6, R1,R3
                      ;add two numbers and store the result in r6
    LDR R2, =RESULT
    STR R6,[R2]
STOP
    B STOP
VALUE1 DCD 0X12345678 ; First 32 bit number
VALUE2 DCD 0XABCDEF12 ; Second 32 bit number
    AREA data, DATA, READWRITE
RESULT DCD 0
```

Exercise questions

- 1. Write a program to add ten 32 bit numbers stored in code segment and store the result in data segment
- 2. Write a program to add two 128 bit numbers stored 2 in code segment and store the result in data segment. Hint: Use indexed addressing mode.
- 3. Write a program to subtract two 128 bit numbers

Additional Exercise questions

1. Write a program to subtract two 32 bit numbers

Lab 2 Arithmetic Programs

Aim: Familiarization of Arithmetic operations - multiplication and division.

```
Question: Write an assembly program to multiply two 32 bit numbers
      AREA RESET, DATA, READONLY
      EXPORT Vectors
   Vectors
      DCD 0x40001000 ; stack pointer value when stack is empty
      DCD Reset Handler ; reset vector
      ALIGN
  AREA mycode, CODE, READONLY
      ENTRY
      EXPORT Reset Handler
  Reset Handler
             LDR R0, =VALUE1
                                ;pointer to the first value1
             LDRH R1,[R0]
                                ;load the first value into r1
             LDR R0,=VALU2
                                 ;pointer to the second value
             LDRH R3, [R0]
                                ;load second number into r3
             MUL R6, R1,R3
                                ;Multiply the values from R1 and R3 and store
                                 ; least significant 32 bit number into R6.
             LDR R2, =RESULT
             STR R6,[R2]
                                ; store result in r6
      STOP
             B STOP
```

```
VALUE1 DCD 0X1234; First 32 bit number
VALUE2 DCD 0X5678; Second 32 bit number
AREA data, DATA, READWRITE
RESULT DCD 0
```

Note: If the result is more than 32 bits, use UMULL instruction.

Question: Write a program to divide a 32 bit number by 16 bit number

• . We follow repetitive subtraction method to divide two numbers.

```
AREA
           RESET, DATA, READONLY
   EXPORT Vectors
Vectors
   DCD 0x40001000; stack pointer value when stack is empty
   DCD Reset Handler; reset vector
   ALIGN
   AREA mycode, CODE, READONLY
   ENTRY
   EXPORT Reset Handler
Reset Handler
          MOV R2,#00
          LDR R0, =VALUE1
                            ;pointer to the first value1
          LDR R1,[R0]
                             :load the first value into r1
          LDR R0,=VALUE2
                             ;pointer to the second value
          LDR R3, [R0]
                             ;load second number into r3
          SUB R1, R3
                             ;Subtract two numbers
   up
          ADD R2,#01
                             :increment a counter
          CMP R1,R3
                             ;compare two numbers
                             ;check R1is greater than R3 or not, if yes loop
          BCS up
          LDR R6, =RESULT
                             ;Quotient
          STR R2,[R6,#4]
          STR R1,[R6]
                             ;Store remainder.
   STOP
```

```
B STOP

VALUE1 DCD 0x200000000 ;First 32 bit number

VALUE2 DCD 0x00050000 ;Second 16 bit number

AREA data, DATA, READWRITE

RESULT DCD 0,0
```

Exercise questions

- 1. Find the sum of 'n' natural numbers using MLA instruction.
- 2. Write an assembly language program to find GCD of two numbers Hint:

3. Write an assembly language program to find LCM of two numbers

```
Hint: i=1
    do{
    remainder= i*a mod b;
    If (remainder==0)
    Exit;
    Else
        i++;
    } while(remainder!=0);
    Return (i*a);
```

Additional Exercise Questions

1. Write a program to multiply two 32 bit numbers using repetitive addition
Hint: If two numbers are in R0 and R1 Registers then use following algorithm
Sum=0;

do { sum=sum+R0; R1--; ;Use ADS instruction for addition and use ADD ;instruction to increment a register by 1

if carry then

R2++; ;Increment carry value by one.

} while(R1!=0); ;Use Compare instruction to check greater

;than or not. And Brach instructions for loop

Result = R2 and R0

2. Write a program for BCD multiplication

Lab 3 Code Conversion Programs

Aim: Familiarization of logical instructions and code conversion programs.

Question: Write an assembly program to convert a 2 digit hexadecimal number into unpacked ASCII.

```
RESET, DATA, READONLY
   AREA
   EXPORT __Vectors
Vectors
   DCD 0x40001000 ; stack pointer value when stack is empty
   DCD Reset Handler; reset vector
   ALIGN
   AREA mycode, CODE, READONLY
   ENTRY
   EXPORT Reset Handler
Reset Handler
          LDR R0,=NUM
          LDR R3,=RESULT
          LDRB R1,[R0]
                            ; load hex number into register R1
          AND R2,R1,#0x0F ; mask upper 4 bits
          CMP R2,#09
                             ; compare the digit with 09
          BLO DOWN
                             ; if it is lower than 9 then jump to down
                             ; lable
          ADD R2,#07
                             ;else add 07 to that number
   DOWN
          ADD R2,#0x30
                             ; Add 30H to the number, Ascii value of first
          STRB R2,[R3]
                             ; digit
          AND R3,R1,#0xF0
                             ; Mask the second digit
          MOV R3,R3,LSR#04; Shift right by 4 bits
          CMP R3,#09
                             ; check for >9 or not
          BLO DOWN1
```

```
ADD R3,#07
DOWN1

ADD R3,#0x30 ; Ascii value of second digit
STRB R3,[R2,#01]
END

NUM DCD 0x000003A
AREA data, DATA, READWRITE
```

RESULT DCD 0

Exercise programs

- 1. Write an ARM assembly language program to covert 2-digit hexadecimal number in ASCII
- 2. Write an assembly language program to convert a 2-digit BCD number in to its equivalent hexadecimal number.
- 3. Write an assembly language program to convert a 2-digit hex number in to its equivalent BCD number

Additional Exercise

- 1. Write an ARM assembly language program to covert 2-digit hexadecimal number in ASCII unpacked form into its equivalent packed hexadecimal number
- 2. Write a program to convert a 32 bit number in the unpacked form into packed form.

Lab 4 Programs on Sorting, Searching and Stack

Aim: To understand the logic of looping and sorting

Question: Write an ARM program to sort a list using bubble sort.

```
AREA RESET, DATA, READONLY
          EXPORT __Vectors
Vectors
          DCD 0x40001000 ; stack pointer value when stack is empty
          DCD Reset_Handler ; reset vector
          ALIGN
          AREA ascend, code, readonly
          ENTRY
    Reset Handler
          mov r4,#0
          mov r1,#10
          Idr r0, =list
          Idr r2, =result
    up
          Idr r3, [r0,r4]
          str r3, [r2,r4]
          add r4, #04
          sub r1,#01
          cmp r1,#00
          bhi up
          Idr r0, =result
                                     ; inner loop counter
          mov r3, #10
          sub r3, r3, #1
          mov r9, r3
                                     ; R9 contain no of passes
                                     ; outer loop counter
    outer_loop
          mov r5, r0
```

LAB5: Interfacing LED to ARM Controller

```
mov r4, r3 ; R4 contains no of compare in a pass inner_loop

Idr r6, [r5], #4
Idr r7, [r5]
cmp r7, r6 ; swap without swp instruction

strls r6, [r5]
strls r7, [r5, #-4]

subs r4, r4, #1
bne inner_loop
sub r3, #1
subs r9, r9, #1
bne outer_loop
```

```
list dcd 0x10,0x05,0x33,0x24,0x56,0x77,0x21,0x04,0x87,0x01
AREA data1, data, readwrite
result DCW 0,0,0,0,0,0,0,0,0
end
```

Exercise questions:

- 1. Write an assembly program to sort an array using selection sort
- 2. Write an assembly program to find the factorial of a unsigned number using recursion
- 3. Write an assembly program to search an element in an array of ten 32 bit numbers using linear search.

Additional Exercise

- 1. Assume that ten 32 bit numbers are stored in registers R0-R10. Sort these numbers in the fully ascending stack using selection sort and store the sorted array back into the registers. Use STM and LDMDB instructions wherever necessary.
- 2. Repeat the above question (4) for fully descending stack using STMDB and LDM instruction wherever necessary.

Lab 5 Interfacing LED to ARM Microcontroller

Aim: Interface LEDs to the ARM cortex LPC1768 microcontroller using ALS interfacing board.

Steps to be followed:

Project Creation in Keil uvision4 IDE:

- Create a project folder before creating NEW project.
- Use separate folder for each project
- Open Keil uVision4 IDE software by double clicking on "Keil Uvision4" icon.
- Select "Project" then to "New Project" and save it with a name in the respective Project folder, which is already you created.
- Select the device as "NXP (founded by Philips)" Select "LPC1768" then Press "OK" and then press "YES" button to add "system LPC17xx.s" file.
- Go to "File" select "New" to open an editor window. Create a source file and use the header file "LPC17xx.h" in the source file and save the file. Color syntax highlighting will be enabled once the file is saved with a Recognized extension such as ".C".
- Right click on "Source Group 1" and select the option "Add Files to Group 'Source Group 1' "add the. C source file(s) to the group.
- Again right click on Source Group 1 and select the option "Add Files to Group 'Source Group 1' "add the file -C:Keil\ARM\startup\NXP\LPC17xx\system_LPC17xx.c
- Any changes made to this file at current project will directly change the source system_LPC17xx.C file. As a result other project settings may get altered. So it is recommended to copy the file C:Keil\ARM\startup\NXP\LPC17xx\system_LPC17xx.c to the project folder
 - C:Keil\ARM\startup\NXP\LPC17xx\system_LPC17xx.c to the project folder and add to the source group.
- Important: This file should be added during each project creation.
- Select "Project" then select "Translate" to compile the File (s).
- Select "Project", select "Build Target" for building all source files such as ".C",".ASM", ".h", files, etc...This will create the hex file if there are no warnings & no errors.

Sample program to turn on/off LED serially.

Note: Before writing the program please check GPIO port pins available in the kit (Refer Appendix C.)

```
#include <LPC17xx.h>
unsigned int i,j;
unsigned long LED = 0x00000010;
int main(void)
{
 SystemInit()
                        ;Add these two function for its
                        ;internal operation
 SystemCoreClockUpdate();
  LPC PINCON->PINSEL0 &= 0xFF0000FF
                        ;Configure Port0 PINS P0.4-P0.11
                        ;as GPIO function
  LPC GPIO0->FIODIR |= 0x00000FF0;
                        ;Configure P0.4-P0.11 as output
                        ;port
 while(1)
      {
            LED = 0x00000010; Initial value on LED
            for(i=1;i<9;i++) //On the LED's serially
            {
             LPC GPIO0->FIOSET = LED;
                        ; Turn ON LED at LSB(LED
                        ;connected ;to p0.4)
             for(j=0;j<10000;j++);a random delay
              LED <<= 1; Shift the LED to the left by one
```

Some Settings to be done in KEILUV4 for Executing C programs:

- In Project Window Right click "TARGET1" and select "options for target "TARGET1" select to option "Target" in that select
 - 1. XTAL 12.0MHz
 - 2. Select IROM1 (starting 0×0 size 0×8000).
 - 3. Select IRAM1 (starting 0×10000000 size 0×8000).
- Then go to option "Output"

Select "Create Hex file".

• Then go to option "Linker"

Select use memory layout from target dialog

Settings to be done at configuration wizard of system_LPC17xx.c file

- There are three clock sources for CPU. Select Oscillator clock out of three. This selection is done by CLKSRCSEL register.
- If we disable the PLL0 System clock will be bypassed directly into CPU clock divider register.
- Use CCLKCFG register for choosing the division factor of 4 to get 3MHz out of 12 MHz Oscillator frequency
- For any other peripherals use the PCLK same as CCLK.

Follow the steps specified below to carry out the settings.

- Double click on system_LPC17xx.c file at project window
- Select the configuration wizard at the bottom
- Expand the icons
- Select Clock configuration
- Under System controls and Status registers

OSCRANGE: Main Oscillator range select 1MHz to 20MHz

OSCEN: Main oscillator enable $\sqrt{}$

• Under Clock source select register (CLKSRCSEL)

CLKSRC: PLL clock source selection Main oscillator

- Disable PLL0 configuration and PLL1 configuration
- Under CPU Clock Configuration register(CCLKCFG)

CCLKSEL: Divide value for CPU clock for PLL0 4

• Under USB Clock configuration register (USBCLKCFG)

USBSEL: Divide value for USB clock for PLL0 4

- Under Peripheral clock selection register 0 (PCLKSEL0) and 1 (PCLKSEL1) select Pclk = Cclk for all.
- Under Power control for peripherals (PCONP)
 Enable the power for required peripherals
- If CLKOUT to be studied configure the Clock output configuration register as

below

CLKOUTSEL: Main Oscillator

CLKOUTDIV: 1 CLKOUT_EN: $\sqrt{}$

ES LAB MANUAL

• Call the functions

SystemInit();

SystemCoreClockUpdate(); at the beginning of the main function without missing. These functions are defined in system_LPC17xx.c where the actual clock and other system control registers are configured.

 A small change is required in the file system_LPC17xx.c after installation. Go to text editor:

#define PLL0_SETUP 0

#define PLL1 SETUP 0

if the above #defines are 1 then make 0

Components required

• ALS-SDA-ARMCTXM3-01: 1 No.

• Power supply (+5V): 1 No.

• Cross cable for programming and serial communication : 1 No

• One working USB port in the host computer system and PC for downloading the software.

• 10 core FRC cables of 8 inch length 2 No

• USB to B type cable 1 No

Some Settings for downloading the program in FLASH MAGIC:

Step1.Connect 9 pin DSUB cross cable from PC to CN9 at the board.

Step2.On the 2 way dip switch SW21. Short jumper JP3

Step3. Open flash magic 6.01

Step4.Make following setting in Flash magic(Only once)

a. Communications:

Device: LPC1768
Com Port: COM1
Baud Rate: 9600

Interface: None(ISP)

Oscillator: 12MHz

b. ERASE:

Select "Erase Blocks Used by Hex File".

c. Hex file:

Browse and select the Hex file which you want to download.

d. Options:

Select "Verify After Programming".

Go to Options -> Advanced Options->communications.

Do not select High Speed Communications, keep baud rate 115200.

Options -> Advanced Options->Hardware config

Select Use DTR & RTS to control RST & ISP Pin.

Select Keep RTS asserted while COM Port open.

T1 = 50ms. T2 = 100ms.

Step5.Start:

Click "Start" to download the hex file to the controller.

Step6. Connect one end of 10 pin FRC cable to CNA1, Short other end to CNA

Step7. Press reset controller switch SW1 and Check output on the LEDs connected to CNA1.

Exercise Questions:

- 1. Write a C program to display 8-bit binary up counter on the LEDs.
- 2. Write a C program to read a key and display an 8-bit up/down counter on the LEDs. **Hint:** Use key SW2(if SW2=1, up counter else down counter), which is available at CNB1 pin 7. Connect CNB1 to any controller connector like CNB, CNC etc. Configure corresponding port pin as GPIO using corresponding PINSEL register and input pin using corresponding FIODIR register.

Additional Exercise:

3. Write a program to simulate an 8- bit ring counter with key press (SW2).

Lab 6 Programs on Multiplexed Seven Segment Display


Aim: To interface and understand the working of multiplexed seven segments display.

Introduction:

There are four multiplexed 7-segment display units (U8, U9, U10 and U11) on the board. Each display has 8-inputs SEG_A (Pin-7), SEG_B (Pin-6), SEG_C (Pin-4), SEG_D (Pin-2), SEG_E (Pin-1), SEG_F (Pin-9), SEG_G (Pin-10) and SEG_H (Pin-5) and the remaining pins pin-3 & pin-8 are Common Cathode CC. These segments are common cathode type hence active high devices.

At power on all the segments are pulled up. A four bits input through CNB2 is used for multiplexing operation. A 1-of-10 Decoder/Driver U7 is used to accept BCD inputs and provide appropriate outputs for enabling the required display.

8 bits data is provided in this block using CNA2. All the data lines are taken buffered at U12 before giving to the displays.

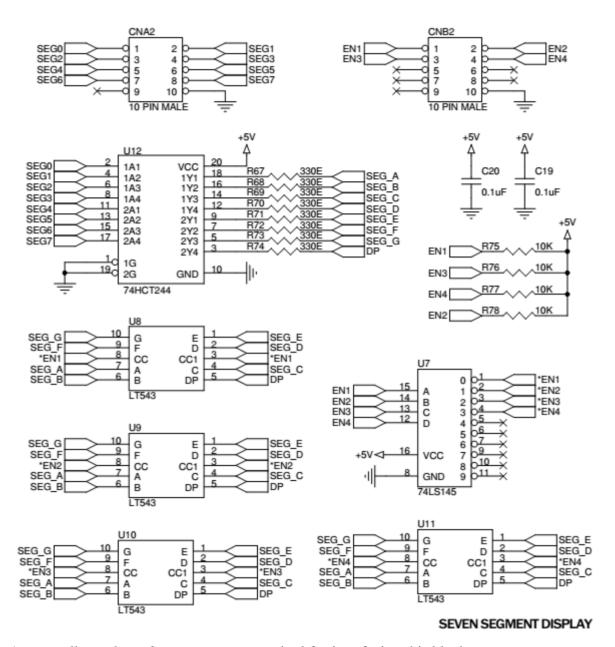

At controller end any 2 connector are required for interfacing this block.

Lookup Table for displaying 0,1,2,3 to 9

Sample program: To simulate 4-digit BCD up counter on the multiplexed seven segment display.

```
#include <LPC17xx.h>
 #include <stdio.h>
 #define FIRST SEG 0xF87FFFFF
 #define SECOND SEG 0xF8FFFFFF
 #define THIRD_SEG 0xF97FFFFF
#define FOURTH SEG 0xF9FFFFFF
 #define DISABLE ALL 0xFA7FFFFF
 unsigned int dig1=0x00, dig2=0x00, dig3=0x00, dig4=0x00;
 unsigned int twenty count = 0x00, dig count=0x00, temp1=0x00;
 unsigned char
array dec[10] = \{0x3F, 0x06, 0x5B, 0x4F, 0x66, 0x6D, 0x7D, 0x07, 0x7F, 0x6F\}
 unsigned char tmr0 flg = 0x00, one sec flg = 0x00;
 unsigned long int \overline{\text{temp2}} = 0 \times 00000000, \overline{\text{i}} = 0;
 unsigned int temp3=0\times00;
 void delay(void);
void display(void);
 int main(void)
      SystemInit();
      SystemCoreClockUpdate();
```

```
LPC PINCON->PINSELO &= 0xFF0000FF;
                                        //P0.4 to P0.11
                                        //GPIO data lines
LPC PINCON->PINSEL3 &= 0xFFC03FFF; //P1.23 to P1.26
                                       //GPIO enable lines
LPC GPIOO->FIODIR \mid= 0x00000FF0; //P0.4 to P0.11 output
LPC GPIO1->FIODIR \mid= 0x07800000; //P1.23 to P1.26 output
while(1)
     Delay();
     dig count +=1;
     if (dig count == 0x05)
           { dig count = 0 \times 00;
                                  }
     if (one sec flg == 0xFF)
           one sec flq = 0x00;
           dig1 +=1;
           if(dig1 == 0x0A)
                 dig1 = 0;
                 dig2 +=1;
                 if(dig2 == 0x0A)
                       dig2 = 0;
                       dig3+=1;
                       if(dig3 == 0x0A)
                            dig3 = 0;
                            dig4 += 1;
                            if(dig4 == 0x0A)
                             {
                                  dig4 = 0;
                             } //end of dig4
                       } //end of dig3
                 } //end of dig2
```

```
} //end of dig1
          } //end of one sec if
          Display();
    } //end of while(1)
}//end of main
void Display(void) //To Display on 7-segments
    if (dig count == 0x01) // For Segment U8
         temp1 = dig1;
         LPC GPIO1->FIOPIN = FIRST SEG;
    }
    else if (dig count == 0x02) // For Segment U9
         temp1 = dig2;
         LPC GPIO1->FIOPIN = SECOND SEG;
    }
    else if (dig count == 0x03) // For Segment U10
         temp1 = dig3;
         LPC GPIO1->FIOPIN = THIRD SEG;
    else if (dig count == 0x04) // For Segment U11
         temp1 = diq4;
         LPC GPIO1->FIOPIN = FOURTH SEG;
    temp1 &= 0x0F;
    temp2 = array dec[temp1]; // Decoding to 7-segment
    temp2 = temp2 << 4;
    LPC GPIOO->FIOPIN = temp2; // Taking Data Lines for 7-Seg
```

Components required

```
• ALS-SDA-ARMCTXM3-01 : 1 No.
• Power supply (+5V) : 1 No.
```

- Cross cable for programming and serial communication: 1 No
- One working USB in the host computer system and PC for downloading the software.

```
10 core FRC cables of 8 inch lengthUSB to B type cable1 No
```

Hardware setup: Connect a 10 core FRC cable from CNA to CNA2 and CNB to CNB2.

Working procedure: After software download and hardware setup, press the reset, Observe the count from 0000 to 9999 on the display.

Exercise Questions:

1. Write a C program for 4 digit BCD up/down counter on seven segment using a switch and timer with a delay of 1-second between each count.

Additional Exercise:

1. Write a C program to simulate a 4 digit BCD down counter. Use timer for a delay

2. Write a program for 4 digit Hexadecimal up/down counter on seven segment using a switch and timer with a delay of 1-second between each count.

Lab 7 Liquid Crystal Display (LCD) and Keyboard Interfacing

Aim: To interface and understand the working of LCD and matrix keyboard.

Introduction:

LCD: A 16×2 alphanumeric LCD can be used to display the message from controller. 16 pin small LCD has to be mounted to the connector CN11. 10 pin connector CNAD is used to interface this LCD from controller. Only higher 4 data lines are used among the 8 LCD data lines. Use POT3 for contrast adjustment and Short the jumper JP16 to use this LCD. LCD connector CN11 is described in this table. CN11 is single row 16 pin female berg.

Pin no CN11	Description
1	Ground
2	+5V
3	LCD contrast
4	RS
5,7,8,9,10	NC
6	En
11 to 14	Data 4 to 7
15	Back light anode
16	Back light cathode

Connection from CNAD to LCD connector CN11 is shown below

Pin no at CNAD	Description	Pin no at CN11
1	L0 – Data line 4 of LCD	11
2	L1 – Data line 5 of LCD	12
3	L2 – Data line 6 of LCD	13
4	L3 – Data line 7 of LCD	14
5	L5 – Command line of LCD	4
6	L5 – Enable line of LCD	6

	Code										Execution Time (max) (when f _{cc} or		
Instruction	RS	R/W	DB7 DB6	DB5	DB4	DB3	DB2	DB1	DB0	Descr	ipti	on	f _{osc} is 270 kHz)
Write data to CG or DDRAM	1	0	Write data							Writes		ta into DDRAM or	37 μs t _{ADD} = 4 μs*
Read data from CG or DDRAM	1	1	Read data	ı						Reads CGRA		ta from DDRAM or	37 μs t _{ADD} = 4 μs*
	I/D S S/C S/C R/L R/L	= 0:	Shift to the Shift to the 8 bits, DL 2 lines, N	t iles dis ift ive right e left = 0: 4 = 0: 1 s, F =	bits line 0: 5>	< 8 do	ts			ACG: ADD: (a AC: A	corr ddr ddr	Display data RAM Character generator RAM CGRAM address DDRAM address esponds to cursor ess) ress counter used for DD and CGRAM esses	Execution time changes when frequency changes Example: When f_{cp} or f_{OSC} is 250 kHz, $37 \mu s \times \frac{270}{250} = 40 \mu s$

Note: - indicates no effect.

* After execution of the CGRAM/DDRAM data write or read instruction, the RAM address counter is incremented or decremented by 1. The RAM address counter is updated after the busy flag turns off. In Figure 10, t_{ADD} is the time elapsed after the busy flag turns off until the address counter is updated.

					C	ode						Execution Time (max) (when f _{co} or
Instruction	RS	R/W	DB7	DB6	DB5	DB4	DB3	DB2	DB1	DB0	Description	f _{osc} is 270 kHz)
Clear display	0	0	0	0	0	0	0	0	0	1	Clears entire display and sets DDRAM address 0 in address counter.	
Return home	0	0	0	0	0	0	0	0	1	_	Sets DDRAM address 0 in address counter. Also returns display from being shifted to original position. DDRAM contents remain unchanged.	1.52 ms
Entry mode set	0	0	0	0	0	0	0	1	I/D	S	Sets cursor move direction and specifies display shift. These operations are performed during data write and read.	37 μs
Display on/off control	0	0	0	0	0	0	1	D	С	В	Sets entire display (D) on/off, cursor on/off (C), and blinking of cursor position character (B).	37 μs
Cursor or display shift	0	0	0	0	0	1	S/C	R/L	-	-	Moves cursor and shifts display without changing DDRAM contents.	37 μs
Function set	0	0	0	0	1	DL	N	F	-	-	Sets interface data length (DL), number of display lines (N), and character font (F).	37 μs
Set CGRAM address	0	0	0	1	ACG	ACG	ACG	ACG	ACG	ACG	Sets CGRAM address. CGRAM data is sent and received after this setting.	37 μs
Set DDRAM address	0	0	1	ADD	Sets DDRAM address. DDRAM data is sent and received after this setting.	37 μs						
Read busy flag & address	0	1	BF	AC	Reads busy flag (BF) indicating internal operation is being performed and reads address counter contents.	0 μs						

Sample program: To display message on LCD

```
#include <lpc17xx.h>
#define RS CTRL 0x08000000 //P0.27
#define EN CTRL 0x10000000 //P0.28
#define DT CTRL 0x07800000 //P0.23 to P0.26 data lines
void lcd init(void);
void wr cn(void);
void clr disp(void);
void delay lcd(unsigned int);
void lcd com(void);
void wr dn(void);
void lcd data(void);
void clear ports(void);
void lcd puts(unsigned char *);
extern unsigned long int temp1 , temp2;
unsigned long int temp1=0, temp2=0;
int main(void)
{
     unsigned long adc temp;
     unsigned int i;
     float in vtq;
     unsigned char vtg[7], dval[7];
     unsigned char Msg3[11] = {"MIT"};
     unsigned char Msg4[12] = {"Department of ICT:"};
     SystemInit();
     SystemCoreClockUpdate();
     lcd init();
     temp1 = 0x80;
           lcd com();
           delay lcd(800);
           lcd puts(&Msg3[0]);
           temp1 = 0xC0;
           lcd com();
           delay 1cd(800);
           lcd puts(&Msg4[0]);
```

```
//lcd initialization
void lcd init()
     /* Ports initialized as GPIO */
    LPC PINCON->PINSEL3 &= 0xFC003FFF; //P0.23 to P0.28
     /* Setting the directions as output */
    LPC GPIO0->FIODIR |= DT CTRL;
     LPC GPIO0->FIODIR |= RS CTRL;
     LPC GPIO0->FIODIR |= EN CTRL;
    clear ports();
     delay 1cd(3200);
     temp2 = (0x30 << 19);
     wr cn();
     delay lcd(30000);
     temp2 = (0x30 << 19);
     wr cn();
     delay 1cd(30000);
     temp2 = (0x30 << 19);
     wr cn();
     delay 1cd(30000);
     temp2 = (0x20 << 19);
     wr cn();
     delay 1cd(30000);
     temp1 = 0x28;
     lcd com();
     delay lcd(30000);
     temp1 = 0x0c;
     lcd com();
     delay 1cd(800);
     temp1 = 0x06;
     lcd com();
     delay 1cd(800);
     temp1 = 0x01;
```

```
lcd com();
    delay lcd(10000);
    temp1 = 0x80;
    lcd com();
    delay 1cd(800);
  return;
}
void lcd com(void)
    temp2 = temp1 & 0xf0;//move data (26-8+1) times : 26 - HN
                        //place, 4 - Bits
    temp2 = temp2 << 19; //data lines from 23 to 26
    wr cn();
    temp2 = temp1 & 0x0f; //26-4+1
    temp2 = temp2 << 23;
    wr cn();
    delay lcd(1000);
  return;
}
// command nibble o/p routine
void wr cn(void)
                                      //write command reg
{
    clear ports();
    LPC GPIOO->FIOPIN = temp2; // Assign the value to the data
                              //lines
  LPC GPIOO->FIOSET = EN CTRL; // EN=1
    delay lcd(25);
    LPC GPIOO->FIOCLR = EN CTRL; // EN =0
  return;
}
// data o/p routine which also outputs high nibble first
// and lower nibble next
void lcd data(void)
  temp2 = temp1 \& 0xf0;
  temp2 = temp2 << 19;
  wr dn();
  temp2= temp1 & 0x0f;
```

```
temp2= temp2 << 23;
  wr dn();
  \overline{\text{delay lcd}(1000)};
  return;
}
// data nibble o/p routine
void wr dn(void)
{
    clear ports();
    LPC GPIOO->FIOPIN = temp2; // Assign the value to the
                                   //data lines
    // EN=1
    LPC GPIO0->FIOSET = EN CTRL;
    delay lcd(25);
    LPC GPIOO->FIOCLR = EN CTRL; // EN =0
  return;
}
void delay lcd(unsigned int r1)
{
    unsigned int r;
    for (r=0; r<r1; r++);
  return;
}
void clr disp(void)
    temp1 = 0x01;
    lcd com();
    delay 1cd(10000);
  return;
void clear ports(void)
  /* Clearing the lines at power on */
    LPC GPIOO->FIOCLR = DT CTRL; //Clearing data lines
    LPC GPIOO->FIOCLR = RS CTRL; //Clearing RS line
    LPC GPIOO->FIOCLR = EN CTRL; //Clearing Enable line
  return;
}
```

Components required

• ALS-SDA-ARMCTXM3-01: 1 No.

• Power supply (+5V): 1 No.

• Cross cable for programming and serial communication: 1 No

• One working USB port in the host computer system and PC for downloading the software.

• 10 core FRC cables of 8 inch length 2 No

• USB to B type cable 1 No

Hardware setup:

Connect 10 pin FRC cable from CND to CNAD. Short the jumper JP16 & JP5. Use POT3 for contrast adjustment.

Working procedure: After software download and hardware setup, press the reset. A fixed message will display on LCD.


Exercise Questions:

1. Simulate DIE tossing on LCD

Hint: Program reads the external interrupt using the key SW2. A random number between 0-6 should be displayed on the LCD upon keypress.

Keyboard connection: The switches SW3 to SW18 are organized as 4 rows X 4 columns matrix. One end of all the switches are configured as columns. The other end of the matrix configured as rows. A row line will be always an output from the controller. Column lines are pulled to ground. A high level sent from the row will appear at column end if the switch is pressed.

Connector CNB3 is used for interfacing this block with controller. At the controller end any connector can be used to interact this connector CNB3.

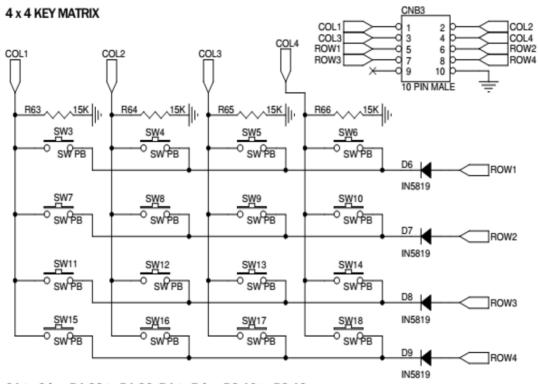

C1 to C4 -> P1.23 to P1.26. R1 to R4 -> P2.10 to P2.13

Sample program: To read a key from the matrix keyboard and display its key code on the LCD.

```
#include <LPC17xx.h>
     void scan(void);
     unsigned char col, row, var, flag, key, *ptr;
     unsigned long int i, var1, temp, temp3;
int main(void)
     SystemInit();
     SystemCoreClockUpdate();
     LPC PINCON->PINSEL3 &= 0xffC03fff; //P1.23 to P1.26 MADE
                                           //GPIO
     LPC PINCON->PINSEL3 &= 0xF00FFFFF; //P2.10 t P2.13 made
                                           //GPIO
     LPC GPIO2->FIODIR \mid= 0x00003C00; //made output P2.10 to
                                         //P2.13 (rows)
     LPC GPIO1->FIODIR &= 0xF87FFFFF; //made input P1.23 to
                                        //P1.26 (cols)
   while(1)
           while(1)
                 for(row=1;row<5;row++)</pre>
                       if(row == 1)
                       var1 = 0x00000400;
                       else if(row == 2)
                       var1 = 0x00000800;
                       else if(row == 3)
                       var1 = 0x00001000;
                       else if(row == 4)
                       var1 = 0x00002000;
                       temp = var1;
                       LPC GPIO2->FIOCLR = 0 \times 00003 \times 00003;
                       LPC GPIO2->FIOSET = var1;
                       flag = 0;
                       scan();
```

```
if(flag == 1)
                         break;
                  } //end for(row=1;row<5;row++)</pre>
                  if(flag == 1)
                  break;
            } //2nd while(1)
void scan(void)
            unsigned long temp3;
            temp3 = LPC GPIOO->FIOPIN;
            temp3 &= 0 \times \overline{0780000};
            if(temp3 != 0x00000000)
                         flag = 1;
                  if (temp3 ==0x0080000)
                         col=0;
                  else if (temp3 == 0 \times 0100000)
                        col=1;
                  else if (temp3 = 0 \times 00200000)
                         col=2;
                  else if (temp3 == 0x0400000)
                        col=3;
            \frac{1}{1st} if (temp3 != 0x0000000)
       }//end scan
                  //write display function to display the keycode
Display(key)
                  //on the LCD or on seven segment display
            }
```

Components required

ALS-SDA-ARMCTXM3-01: 1 No.
Power supply (+5V): 1 No.
Cross cable for programming and serial communication: 1 No

• One working USB port in the host computer system and PC for downloading the software.

10 core FRC cables of 8 inch length
USB to B type cable
1 No

Hardware setup: Connect 10 core FRC cable from CNB to CNB3, short JP4(1, 2) Connect another 10 core FRC cable from CND to CNAD, Short the jumper JP16 & JP5. Use POT3 for contrast.

Working procedure: After software download and hardware setup, use the reset. Identity of key pressed (0 to F) will be displayed on LCD.

Exercise questions:

1. Write a program to input an expression of the type A operator B =, from the key board, where A and B are the single digit BCD numbers and operator may be + or - .Display the result on the LCD.

Lab 8 Analog to Digital Convertor (ADC)

Aim: To understand the working of a 12 bit internal Analog-to-Digital Converter (ADC).

Introduction: The LPC1768 contains a single 12-bit successive approximation ADC with eight channels and DMA support. 12-bit ADC with input multiplexing among eight pins, conversion rates up to 200 kHz, and multiple result registers. The 12-bit ADC can be used with the GPDMA controller. On board there are two interfaces for internal ADC's. AD0.5 (pin P1.31) of controller is used to convert the analog input voltage varied using POT1 to digital value. AD0.4(Pin 1.30) used convert the analog voltage varied using POT4. A input voltage range of 0 to 3.3V is accepted. 000 to FFF is the converted digital voltage range here. Short JP18 (2, 3) to use AD0.4.

Sample program: To configure and read analog data from ADC channel no 5, and display the digital data on the LCD

```
#include<LPC17xx.h>
     #include<stdio.h>
     #include"AN LCD.h"
     #define Ref_Vtg
#define Full Scale OxFFF
                                  3.300
                                             //12 bit ADC
int main(void)
     unsigned long adc temp;
     unsigned int i;
     float in vtg;
     unsigned char vtg[7], dval[7];
     unsigned char Msg3[11] = {"ANALOG IP:"};
     unsigned char Msq4[12] = {"ADC OUTPUT:"};
     SystemInit();
     SystemCoreClockUpdate();
     LPC SC->PCONP |= (1<<15); //Power for GPIO block
     lcd init();
```

LAB 9: PWM Interfacing

```
LPC PINCON->PINSEL3 \mid= 0xC0000000; //P1.31 as AD0.5
     LPC SC->PCONP |= (1<<12); //enable the peripheral ADC
     SystemCoreClockUpdate();
     temp1 = 0x80;
     lcd com();
     delay lcd(800);
     lcd puts(&Msq3[0]);
     temp1 = 0xC0;
     lcd com();
     delay lcd(800);
     lcd puts(&Msq4[0]);
     while(1)
           LPC ADC->ADCR = (1 << 5) | (1 << 21) | (1 << 24); //0x01200001;
     //ADC0.5, start conversion and operational
           //for(i=0;i<2000;i++); //delay for conversion
           while ((adc temp = LPC ADC->ADGDR) == 0x80000000);
     //wait till 'done' bit is 1, indicates conversion complete
           adc temp = LPC ADC->ADGDR;
           adc temp >>= 4;
                                                  //12 bit ADC
           adc temp &= 0x00000FFF;
           in vtg = (((float)adc temp *
(float)Ref Vtg))/((float)Full Scale); //calculating input analog
                                       //voltage
           sprintf(vtg,"%3.2fV",in vtg);
//convert the readings into string to display on LCD
           sprintf(dval,"%x",adc temp);
           for (i=0; i<2000; i++);
           temp1 = 0x8A;
           lcd com();
           delay lcd(800);
           lcd puts(&vtg[0]);
           temp1 = 0xCB;
           lcd com();
           delay lcd(800);
           lcd puts(&dval[0]);
          for(i=0;i<200000;i++);
```

LAB 9: PWM Interfacing

```
for(i=0;i<7;i++)
vtg[i] = dval[i] = 0x00;
adc_temp = 0;
in_vtg = 0;
}</pre>
```

Components required

- ALS-SDA-ARMCTXM3-01: 1 No.
 Power supply (+5V): 1 No.
- Cross cable for programming and serial communication : 1 No
- One working COM port (Ex: COM1) in the host computer system and PC for downloading the software.
- 10 core FRC cables of 8 inch length
 USB to B type cable
 1 No

Hardware Setup: Do the setup related to LCD

Working procedure: Vary POT1 and observe the corresponding analog and digital voltage values on LCD.

Exercise question

a. Write a c program to display the digital value representing the difference in analog voltages at ADC channel 4 and channel 5 on LCD.

Lab 9 Pulse Width Modulation (PWM) Interfacing

Aim: To interface and understand the working of PWM.

Introduction: The PWM is based on the standard Timer block and inherits all of its features, although only the PWM function is pinned out on the LPC 1768. The Timer is designed to count cycles of the system derived clock and optionally switch pins, generate interrupts or perform other actions when the specified timer values occur, based on seven match registers. The PWM function is in addition to these features, and is based on match register events. A PWM output from the controller can be observed as an intensity variation of the LED LD10.

```
Sample program: To vary the intensity of an LED using PWM.
```

```
#include <LPC17xx.H>
void pwm_init(void);
void PWM1_IRQHandler(void);
unsigned long int i;
unsigned char flag,flag1;
int main(void)
{
        SystemInit();
        SystemCoreClockUpdate();
        pwm_init();
        while(1)
        {
            for(i=0;i<=1000;i++); // delay
        }//end of while</pre>
```

```
}//end of main
void pwm_init(void)
     LPC SC->PCONP |= (1<<6);
                                     //PWM1 is powered
     LPC PINCON->PINSEL3 &= ~(0x0000C000);
                                                  //cleared if any other
                                                  //functions are enabled
     LPC_PINCON->PINSEL3 = 0x00008000; //pwm1.4 is selected for the pin
                                            //P1.23
     //LPC_PWM1->PR = 0x0000000000;
                                       //Count frequency : Fpclk
                                       //select PWM1 single edge
     LPC_PWM1->PCR = 0x00001000;
                                        //Reset and interrupt on PWMMR0
     LPC PWM1->MCR = 0x000000003;
     LPC PWM1->MR0 = 30000;
                                     //setup match register 0 count
     LPC PWM1->MR4 = 0x00000100;
                                       //setup match register MR1
                                       //enable shadow copy register
     LPC PWM1->LER = 0x0000000FF;
                                      //RESET COUNTER AND PRESCALER
     LPC PWM1->TCR = 0x000000002;
     LPC PWM1->TCR = 0x000000009;
                                       //enable PWM and counter
     NVIC_EnableIRQ(PWM1_IRQn);
     return;
}
void PWM1_IRQHandler(void)
{
     LPC_PWM1->IR = 0xff; //clear the interrupts
     if(flag == 0x00)
      {
            LPC PWM1->MR4 += 100;
            LPC_PWM1->LER = 0x0000000FF;
            if(LPC_PWM1->MR4>=27000)
```

```
{
    flag1 = 0xff;
flag = 0xff;
LPC_PWM1->LER = 0x0000000fF;
}
else if(flag1 == 0xff)
{
    LPC_PWM1->MR4 -= 100;
    LPC_PWM1->LER = 0x0000000fF;

    if(LPC_PWM1->LER = 0x500)
    {
        flag = 0x00;
        flag1 = 0x00;
        LPC_PWM1->LER = 0X0000000fF;
    }
}
```

Hardware setup: Connect 10 pin FRC cable from CNB to CNB1.

Working procedure: As the pulse width varies, intensity of LED LD10 varies. Observe the pulses at TP5. Observe the amplitude level at TP6.

Exercise question:

Write a program to set the following intensity levels to the LED connected to PWM output. Use ROW-0 of keyboard for intensity variation

Intensity level	Key pressed
10%	0
25%	1
50%	2
75%	3

Lab 10 , Lab11 Familiarization with ARM mbed Prototyping Board

Aim: Familiarize with ARM mbed NXP LPC1768 prototyping board by interfacing with LEDs.

Introduction: The mbed Microcontrollers are a series of ARM microcontroller development boards designed for rapid prototyping. The mbed NXP LPC1768 Microcontroller is designed for prototyping all sorts of devices, especially those including Ethernet, USB, and the flexibility of lots of peripheral interfaces and FLASH memory. It is packaged as a small DIP form-factor for prototyping with through-hole PCBs, stripboard, and breadboard. It includes a built-in USB FLASH programmer. The pinout diagram in Figure 12.1 shows the commonly used interfaces and their locations. Note that all the numbered pins (p5-p30) can also be used as DigitalIn and DigitalOut interfaces.

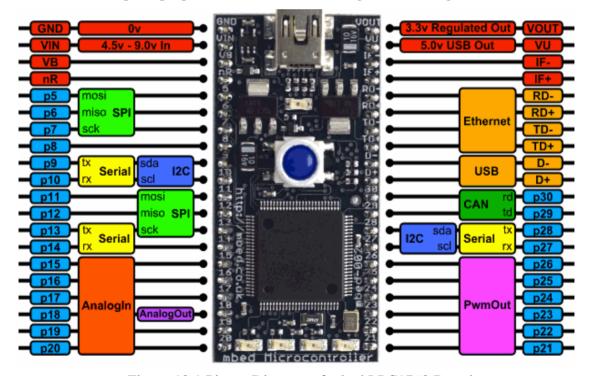


Figure 12.1 Pinout Diagram of mbed LPC1768 Board

Components Required:

- An mbed microcontroller
- A USB cable for connecting the microcontroller and PC.
- A PC with one working USB port for flashing the code.

To build the programs either using the ARM mbed Online Compiler or ARM mbed Studio could be used.

Steps to be followed for using the online compiler:

- Connect the mbed microcontroller to a PC. The status light will glow, indicating
 power on. The PC will recognize the mbed microcontroller as a standard USB
 drive.
- 2. Go to the new USB drive, and click on MBED.HTML to open it in a web browser.
- 3. Create an mbed account using your learner id (Username: your registration number). To use the online compiler, you will need to verify your email address. URL: https://os.mbed.com/account/signup/
- 4. Click on the "Compiler" tab in the dashboard page, as shown in Figure 12.2.



Figure 12.2 Mbed Dashboard

5. Create a new program by selecting "New Program" in the "New" tab of the online IDE. As shown in Figure 12.3, type in the program name and click "OK".

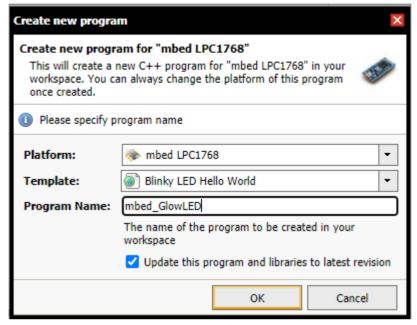


Figure 12.3 Creation of a New Program

- 6. In the Program Workspace, a main.cpp file will be created. Clicking on that file will reveal a sample program to blink a LED. Insert your own code in place of that. Alternatively, you could import your code into the workspace. Save your program.
- 7. Compile the code by clicking on the "Compile" tab, or press CTRL-D. The Online Compiler compiles the code into an executable file, which will be downloaded. When prompted, save the file(.bin) in mbed board's USB device folder.
- 8. Press reset switch on the board to complete the flashing/programming process.

Sample Question: Write a CPP program to blink all four LEDs in the mbed LPC1768 board

```
//*********************
// Program written using C++ for mbed LPC1768 board.
// Program to blink all four onboard LEDs.
// Author: ****
// Date: DD-Mon-YYYY
//********************
#include "mbed.h"
DigitalOut myled1(LED1);
DigitalOut myled2(LED2);
DigitalOut myled3(LED3);
DigitalOut myled4(LED4);
int main()
  while(1) {
    //turn on LED1 through LED4
    myled1 = 1;
    myled2 = 1;
    myled3 = 1;
    myled4 = 1;
    wait(0.5);
              // delay of 0.5 seconds
    //turn off LED1 through LED4
    myled1 = 0;
    myled2 = 0;
    myled3 = 0;
    myled4 = 0;
              //delay of 0.5 seconds
    wait(0.5);
  }
}
```

ES LAB MANUAL LAB 10, LAB11: Familiarization with ARM mbed Board

Exercise Programs

- 1. Write a CPP program to display a 4-bit binary up counter on the LEDs.
- 2. Write a CPP program to display a 4-bit binary down counter on the LEDs.
- 3. Write a CPP program to display a ring counter on the LEDs.

Appendix A: Instructions

Instruction Set Summary

Mnemonic	Operation	Description
<u>ADC</u>	Rd := Rn + <u>Op2</u> + C	Add with carry
ADD	Rd := Rn + <u>Op2</u>	Add
<u>ADDS</u>	Rd: = Rn+ Op2	Add and update falgs
<u>ADR</u>	Rd: = Rn, label	Load register with adress
AND	Rd := Rn AND Op2	AND
<u>ANDS</u>	Rd := Rn AND Op2	AND update flags
<u>ASR</u>	Rd: = Rn,#LSB,#width	Arithmetic shift right
<u>B</u>	R15 := address	Branch
<u>BIC</u>	Rd := Rn AND NOT Op2	Bit Clear
<u>BL</u>	R14 := address of next instruction, R15 :=address	Branch with Link
<u>BX</u>	R15 := Rn, change to Thumb if address bit 0 is 1	Branch and Exchange
CLZ	Rd := number of leading zeroes in Rm	Count Leading Zeroes
<u>CMN</u>	CPSR flags := Rn + Op2	Compare Negative
<u>CMP</u>	CPSR flags := Rn - Op2	Compare
<u>EOR</u>	Rd:= Rn EOR Op2	Exclusive OR
<u>LDM</u>	Stack manipulation (Pop)	Load multiple Registers (refer last paragraph of this appendix)
LDMIA	LDMIA Rn!, {reglist}	Load multiple registers from memory
<u>LDR</u>	Rd := [address][31:0]	Load 32-bit word from memory.
<u>LDRB</u>	Rd := ZeroExtend ([address][7:0])	Load register byte value to Memory.
<u>LDRH</u>	Rd := ZeroExtend ([address][15:0])	Load register 16-bit halfword value to Memory.
MCR	cRn:=rRn { <op>cRm}</op>	Move CPU register to coprocessor register
MLA	Rd := (Rm * Rs) + Rn	Multiply Accumulate
MOV	Rd := <u>Op2</u>	Move register or constant
MRS	Rn := PSR	Move PSR status flags to register

MSR	PSR := Rm	Move register to PSR status flags
MUL	Rd := Rm * Rs	Multiply
MVN	Rd := NOT Rm	Move inverted register or constant
NOP	None	No operation
<u>ORR</u>	Rd:=Rn OR Op2	OR
<u>PUSH</u>	PUSH {reg list}	Push registers on to the stack pointed by R13
<u>POP</u>	POP{reg. list}	Pop registers from the stack pointed by R13
<u>RSB</u>	Rd := Op2 - Rn	Reverse Subtract
<u>RSC</u>	Rd := Op2 - Rn - 1+Carry	Reverse Subtract with Carry
RBIT	RBIT Rd, Rn	Reverse the bit order in a 32-bit word
REV	REV Rd, Rn	converts 32-bit big-endian data into little- endian data or 32-bit little-endian data into big-endian data
ROR	Rd: = Rd, Rs	Rotate Rd register by Rs bits
RRX	Rd: = Rd, Rm	Rotate Right with Extend
SBC	Rd := Rn - Op2 - 1+Carry	Subtract with Carry
<u>STM</u>	stack manipulation (Push)	Store Multiple (refer last paragraph of this appendix
<u>STR</u>	<address>:=Rd</address>	Store register to memory
<u>STRB</u>	[address][7:0] := Rd[7:0]	Store register byte value to Memory.
<u>STRH</u>	[address][15:0] :=Rd[15:0]	Store register 16-bit halfword value to Memory
<u>SUB</u>	Rd := Rn - Op2	Subtract
<u>TEO</u>	CPSR flags:= Rn EOR Op2	Test bitwise equality
<u>TST</u>	CPSR flags:= Rn AND Op2	Test bits
UMULL	UMULL r0, r4, r5, r6	Unsigned Long Multiply

A conditional instruction is only executed on match of the condition flags in the Program Status Register. For example, the BEQ (B instruction with EQ condition) branches only if the Z flag is set. If the {cond} field is empty the instruction is always executed.

{cond} Suffix	Tested Status Flags	Description
EQ	Z set	equal
NE	Z clear	not equal
CS/HS	C set	unsigned higher or same
CC/LO	C clear	unsigned lower
MI	N set	negative
PL	N clear	positive or zero
VS	V set	overflow
VC	V clear	no overflow
HI	C set and Z clear	unsigned higher
LS	C clear or Z set	unsigned lower or same
GE	N equals V	signed greater or equal
LT	N not equal to V	signed less than
GT	Z clear AND (N equals V)	signed greater than
LE	Z set OR (N not equal to V)	signed less than or equal
AL	(ignored)	always (usually omitted)

Addressing Mode for LDM and STM

The instructions LDM and STM provide four different addressing modes. The addressing mode specifies the behavior of the base register and is explained in the following table.

Addressing Mode	Description
IA	Increment base register after instruction execution.
IB	Increment base register before instruction execution.
DA	Decrement base register after instruction execution.
DB	Decrement base register before instruction execution.

Examples:

```
STMDB R2!, {R4,R5,LR}
LDMIA R0!, {R1-R5}
STMDB R6!, {R0,R1,R5}
```

Appendix B: Addressing modes

Name	Alternative Name	ARM Examples
Register to register	Register direct	MOV R0, R1
Absolute	Direct	LDR R0, MEM
Literal	Immediate	MOV R0, #15 ADD R1, R2, #12
Indexed, base	Register indirect	LDR R0, [R1]
Pre-indexed, base with displacement	Register indirect with offset	LDR R0, [R1, #4]
Pre-indexed, autoindexing	Register indirect pre-incrementing	LDR R0, [R1, #4]!
Post-indexing, autoindexed	Register indirect post-increment	LDR R0, [R1], #4
Double Reg indirect	Register indirect Register indexed	LDR R0, [R1, R2]
Double Reg indirect with scaling	Register indirect indexed with scaling	LDR R0, [R1, r2, LSL #2]
Program counter relative		LDR R0, [PC, #offset]

Literal Addressing

In this addressing mode data is a part of instruction. '#' symbol is used to indiacate the data. ARM and Thumb instructions can only be 32 bits wide. You can use a MOV or MVN instruction to load a register with an immediate value from a range that depends on the instruction set. Certain 32-bit values cannot be represented as an immediate operand to a single 32-bit instruction, although you can load these values from memory in a single

instruction. you can load any 32-bit immediate value into a register with two instructions, a MOV followed by a MOVT. Or, you can use a pseudo-instruction, MOV32, to construct the instruction sequence for you. You can also use the LDR pseudo-instruction to load immediate values into a register

Examples		Meaning
CMP R0,		;Compare Register content R0 with 22
ADD R1,	R2, #18	;Add the content of R2 and 18 then store ;the result in R1
MOV R1,		;copy the data 30 into register R1
MOV R1,		; copy the data ff in hexadecimal into R1
MOV R2,	#0xFF0000FF	
AND RO,	R1, #0xFF00000)
CMN R0,		; update the N, Z, C and V flags
CMPGT SI		; update the N, Z, C and V flags

- MOV can load any 8-bit immediate value, giving a range of 0x0-0xFF (0-255). It can also rotate these values by any even number. These values are also available as immediate operands in many data processing operations, without being loaded in a separate instruction.
- MVN can load the bitwise complements of these values. The numerical values are -(n+1), where n is the value available in MOV.
- A MOVT instruction that can load any value in the range 0x0000 to 0xFFFF into the most significant half of a register, without altering the contents of the least significant half.
- The LDR Rd,=const pseudo-instruction generates the most efficient single instruction to load any 32-bit number

Introduction to Register Indirect Addressing : Register indirect addressing means that the location of an operand is held in a register. It is also called indexed addressing or base addressing.

Register indirect addressing mode requires three read operations to access an operand. It is very important because the content of the register containing the pointer to the operand can be modified at runtime. Therefore, the address is a vaiable that allows the access to the data structure like arrays.

- Read the instruction to find the pointer register
- Read the pointer register to find the oprand address
- Read memory at the operand address to find the operand

Some examples of using register indirect addressing mode:

```
LDR R2, [R0] ; Load R2 with the word pointed by R0

STR R2, [R3] ; Store the word in R2 in the location ; pointed by R3
```

LDR Rd,=label can load any 32-bit numeric value into a register. It also accepts PC-relative expressions such as labels, and labels with offsets

Register Indirect Addressing with an Offset

ARM supports a memory-addressing mode where the effective address of an operand is computed by adding the content of a register and a literal offset coded into load/store instruction. For example,

Instruction	Effective Address	
LDR R0, [R1, #20]	R1 + 20 ; loads R0 with the word ; pointed at by R1+20	_

ARM's Autoindexing Pre-indexed Addressing Mode

This is used to facilitate the reading of sequential data in structures such as arrays, tables, and vectors. A pointer register is used to hold the base address. An offset can be added to achieve the effective address. For example,

Instruction		Effective	Address
LDR R0, [R1	, #4]!	R1 + 4	; loads R0 with the word ;pointed at by R1+4 then ;update the pointer ;by adding 4 to R1

ARM's Autoindexing Post-indexing Addressing Mode

This is similar to the above, but it first accesses the operand at the location pointed by the base register, then increments the base register. For example,

Instruction	Effective A	ddress
LDR RO, [R1], #4	R1	;loads R0 with the word ;pointed at by R1 then ;update the pointed by ;adding 4 to R1

Program Counter Relative (PC Relative) Addressing Mode

Register R15 is the program counter. If you use R15 as a pointer register to access operand, the resulting addressing mode is called PC relative addressing. The operand is specified with respect to the current code location. Please look at this example,

Instruct	ion	Effective	Address
LDR R0,	[R15, #24]	R15 + 24	;loads R0 with the word ;pointed at by R1+24

APPENDIX C

GPIO extension connectors:

There are four 10 pin FRC type male connectors, they extends the controllers general purpose port lines for the use of user requirements. Details on each connector is given below:

CNA –10 pin male box type FRC connector. Port lines P0.4 to P0.11 from controller are terminated in this connector. They can be extended to interface few on board or external peripherals. The pins mentioned in the above table are configured to work as a GPIO's at power on. Other alternate functions on those pins needs to be selected using respective PINSEL registers.

Pin CNA	PIN LPC1768	Description
1	81	P0.4/I2SRX_CLK/RD2/CAP2.0
2	80	P0.5/I2SRX_WS/TD2/CAP2.1
3	79	P0.6/I2SRX_SDA/SSEL1/MAT2.0
4	78	P0.7/I2STX_CLK/SCK1//MAT2.1
5	77	P0.8/I2STX_WS/MISO1/MAT2.2
6	76	P0.9/I2STX_SDA/MOSI1/MAT2.3
7	48	P0.10/TXD2/SDA2/MAT3.0
8	49	P0.11/RXD2/SCL2/MAT3.1
9	-	No connection
10	-	Ground

 ${f CNB}-10$ pin male box type FRC connector. Port lines from P1.23 to P1.26 and P2.10 to

P2.13 are terminated in this connector.

ES LAB MANUAL

Description of the connector CNB:

Pin CNB	Pin LPC1768	Description
1	37	P1.23/MCI1/PWM1.4/MISO0
2	38	P1.24/MCI2/PWM1.5/MOSI0
3	39	P1.25/MCOA1/MAT1.1
4	40	P1.26/MCOB1/PWM1.6/CAP0.0
5	53	P2.10/EINTO/NMI
6	52	P2.11/EINT1/I2STX_CLK
7	51	P2.12/EINT2/I2STX_WS
8	50	P2.13/EINT3/I2STX_SDA
9	-	No connection
10	-	Ground

 $\mathbf{CNC}-10$ pin male box type FRC connector. Port lines from P0.15 to P0.22 and P2.13 are terminated in this connector.

Pin CNC	Pin LPC1768	Description
1	62	P0.15/TXD1/SCK0/SCK
2	63	P0.16/RXD1/SSEL0/SSEL
3	61	P0.17/CTS1/MISO0/MISO
4	60	P0.18/DCD1/MOSI0/MOSI
5	59	P0.19/DSR1/SDA1
6	58	P0.20/DTR1/SCL1
7	57	P0.21/RI1/RD1
8	56	P0.22/RTS1/TD1
9	50	P2.13/I2STX_SDA
10	-	Ground

ES LAB MANUAL

 ${\bf CND}-10$ pin male box type FRC connector. Port lines from P0.23 to P0.28 and P2.0 to P2.1 are terminated in this connector.

-1	-1		
Pin CND	Pin LPC1768	Description	
1	9	P0.23/AD0.0/I2SRX_CLK/CAP3.0	
2	8	P0.24/AD0.1/I2SRX_WS/CAP3.1	
3	7	P0.25/AD0.2/I2SRX_SDA/TXD3	
4	6	P0.26/AD0.3/AOUT/RXD3	
5	25	P0.27/SDA0/USB/SDA	
6	24	P0.28/SCL0/USB_SCL	
7	75	P2.0/PWM1.1/TXD1	
8	74	P2.1/PWM1.2/RXD1	
9	-	No connection	
10	-	Ground	