

# TMS320F28055 Piccolo controlCARD R1.2 Information Guide

Version 1.0 – July 2012

C2000 Systems and Applications Team



Fig 1: TMDSCNCD28055ISO Experimenter's Kit

## 1 Introduction

The Piccolo F28055 controlCARD (TMDSCNCD28055ISO) from Texas Instruments (TI) provides a great way to learn and experiment with the TMS320F2805x device family within TI's C2000 family of microcontrollers (MCUs). The controlCARD is intended to provide a well-filtered robust design capable of working in most environments. This document goes over the hardware details of the F28055 controlCARD and explains the functions, locations of jumpers, and connectors present on the board.

Each controlCARD comes with a "Hardware Developer's Kit", a full set of files necessary to deploy a C2000 device. These files include:

- Schematics
- Bill of Materials (BOM)
- Gerber files

NOTE: this kit is designed to be a kit to explore the functionality of the F28055 microcontroller. Even though the controlCARD can be treated as a good reference design, it is not intended to be a complete customer design. Full compliance to safety, EMI/EMC and other regulations are left to the designer of the final customer's system.

## 2 Errata

## 2.2 Errata - Currently No Errata

# 3 Getting Familiar with the controlCARD

### 3.1 F28055 controlCARD Features

- F28055 Microcontroller located on the DIMM100 side of the controlCARD
- DIMM100 Edge Card Interface Allows for compatibility with all of C2000's DIMM100 controlCARD based application kits and controlCARDs
- Built-in Isolated JTAG Emulation xds100v2 emulator provides a convenient interface to Code Composer Studio without additional hardware. An external JTAG emulator can be used with minor component changes.
- Key Signal Breakout All GPIO, ADC and other key signals routed to gold connector fingers
- Robust Power Supply Filtering Single 5V input supply powers an on-CARD 3.3V LDO. All MCU inputs are then decoupled using LC filters near the device.
- ADC Clamping ADC inputs clamped with diode protection
- Anti-Aliasing Filters Noise filters (small RC filters) available on several ADC input pins.
- Separate Power and Ground planes
- Small Size 90mm x 38mm (3.5" x 1.5")

## 3.2 Assumed Operating Conditions

This kit is assumed to run at standard room conditions. The EVM should run at approximately Standard Ambient Temperature and Pressure (SATP) with moderate-to-low humidity.

## 3.3 Software

All software for the TMS320F2805x family of MCUs can be found within c2000Ware (<a href="http://www.ti.com/c2000">http://www.ti.com/c2000</a>). Once installed the key examples can be found at:

\C2000Ware\_X\_XX\_XX\_XX\device\_support\f2805x\

This example software includes many projects that allow the user to experiment with the ADC, PWM, and many other C2000 peripherals.

# 4 Connectivity

## 4.1 xds100v2 Emulator and SCI/UART Connectivity

The F28055 controlCARD provides emulation and USB-to-UART adapter functionality on the controlCARD. This allows for a convenient method to debug and demo the F28055 MCU.

Note that the FTDI chip, its support circuitry and associated isolation components are placed in Macro A, the left section of the controlCARD. Each of these components contains an additional A within the component reference designator (ie RA2 for resistor 2 in Macro A)



Fig2: xds100v2 Emulation circuitry and isolation circuitry is denonted by an A

## **5 Hardware References**

Table 1 on the next page shows the various connections available on the board. Fig 3, below, illustrates the location of many of these components on the board:

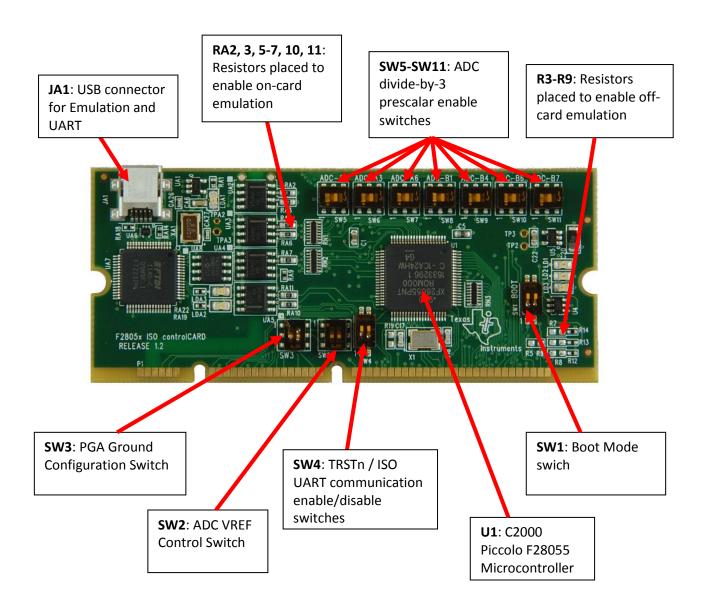


Fig3: Key components on the controlCARD

JA1	USB mini A connector used to provide xds100v2 emulation and SCI
	communication through dedicated FTDI logic
_EDs	
LD1	Turns on when the controlCARD is powered ON (green)
LD2	Controlled by GPIO-31 with negative logic (red)
LD3	Controlled by GPIO-34 with negative logic (red)
LDA1	Turns on when ISO JTAG logic is powered on (green)
LDA2	UART/SCI RX toggle indicator (blue)
LDA3	UART/SCI TX toggle indicator (blue)
RA2, RA3, RA5-RA7, RA10, RA11	Resistors should be removed for external JTAG emulators to be able to access the F2805x MCU.
R3-R9	
	Resistors should be populated for external JTAG emulators to be able to access the F2805x MCU.  It position in BOLD)
	access the F2805x MCU.  It position in BOLD)
	access the F2805x MCU.
Switches (defaul	access the F2805x MCU.  It position in BOLD)  Boot Mode Switch: Controls the Boot Options of the F2805x device. See the device
Switches (defaul	access the F2805x MCU.  It position in BOLD)  Boot Mode Switch: Controls the Boot Options of the F2805x device. See the device datasheet for more information. (0 is down, 1 is up)  Position 1 Position 2 (GPIO-34) (TDO)
Switches (defaul	access the F2805x MCU.  It position in BOLD)  Boot Mode Switch: Controls the Boot Options of the F2805x device. See the device datasheet for more information. (0 is down, 1 is up)  Position 1 Position 2
Switches (defaul	access the F2805x MCU.  It position in BOLD)  Boot Mode Switch: Controls the Boot Options of the F2805x device. See the device datasheet for more information. (0 is down, 1 is up)  Position 1 Position 2 (GPIO-34) (TDO) 0 0 Parallel I/O 0 1 Wait mode
Switches (defaul	access the F2805x MCU.  It position in BOLD)  Boot Mode Switch: Controls the Boot Options of the F2805x device. See the device datasheet for more information. (0 is down, 1 is up)  Position 1 Position 2 (GPIO-34) (TDO) 0 0 Parallel I/O 0 1 Wait mode 1 0 SCI
Switches (defaul	access the F2805x MCU.  It position in BOLD)  Boot Mode Switch: Controls the Boot Options of the F2805x device. See the device datasheet for more information. (0 is down, 1 is up)  Position 1 Position 2 (GPIO-34) (TDO) 0 0 Parallel I/O 0 1 Wait mode
Switches (defaul	Boot Mode Switch: Controls the Boot Options of the F2805x device. See the device datasheet for more information. (0 is down, 1 is up)  Position 1 Position 2 (GPIO-34) (TDO) 0 0 Parallel I/O 0 1 Wait mode 1 0 SCI 1 Get mode; the default get mode is boot-

	Position 1 – Controls VREF-HI, the value that the ratio-metric ADC will convert as the maximum 12-bit value, which is 0x0FFF.  • In the downward position, VREF-HI will be connected to 3.3V.  • In the upward position, VREF-HI will be connected to pin 66 of the DIMM-100 socket. This will allow a connected motherboard to control the ADC VREF-HI value.  Position 2 – Controls VREF-LO, the value that the ratio-metric ADC will convert as the minimum 12-bit value, which is 0x0000.  • In the downward position, VREF-LO will be connected to 0V.  • In the upward position, VREF-LO will be connected to pin 16 of the DIMM-100 socket. This will allow a connected motherboard to control the ADC VREF-LO value.
SW3	F2805x PGA Ground Configuration:
	<ul> <li>Position 1 – Motor PGA Ground:         <ul> <li>In the upward position, the Motor PGA GND will be connected to pin 5 of the DIMM-100 connector. This will allow a connected motherboard to control drive the PGA GND (potentially for Kelvin sensing).</li> <li>In the downward position, the Motor PGA GND will be grounded locally on the controlCARD.</li> </ul> </li> <li>Position 2 – PFC PGA Ground:         <ul> <li>In the upward position, the PFC PGA GND will be connected to pin 4 of the DIMM-100 connector. This will allow a connected motherboard to control drive the PGA GND (potentially for Kelvin sensing).</li> <li>In the downward position, the PFC PGA GND will be grounded locally on the controlCARD.</li> </ul> </li> </ul>
SW4	<ul> <li>TRSTn / ISO UART communication signal enables:</li> <li>ON - TRSTn Enable:         <ul> <li>ON - TRSTn signal from ISO JTAG circuit will be connected to the MCU. This setting is valid when the MCU is being debugged or programmed via JTAG.</li> <li>OFF - TRSTn signal from ISO JTAG circuit will NOT be connected to the MCU. This setting is valid when the device will boot from FLASH or boot from a peripheral directly.</li> </ul> </li> <li>Position 2 - ISO UART communication enable:         <ul> <li>ON - The C2000 MCU's GPIO-28 (and pin 43 of the DIMM-100 connector) will be coupled to the FTDI USB-to-Serial adapter. This allows UART communication via the FTDI chip. However, in this position, GPIO-28 will be forced high by the FTDI chip. Functionality of pin 43 of the DIMM-100 connector will be limited.</li> <li>OFF - The C2000 MCU will NOT be connected to the FTDI USB-to-Serial adapter. Pin 43 of the DIMM-100 connector will be directly connected to GPIO-28.</li> </ul> </li> </ul>

### SW5-SW11

ADC divide-by-3 prescaler enable:

Each switch enables or disables a divide-by-3 hardware prescalar. This functionality is sometimes necessary in order to allow the F28055 MCU to control existing C2000 system kits. SW5-11 allow the user to selectively prescale the Gain Amplifiers on ADC-A1, ADC-A3, ADC-A6, ADC-B1, ADC-B4, ADC-B6 or ADC-B7 respectively.

- In the upward position, the specified ADC channel is divided-bythree. This effectively allows the associated ADC and gain amplifier to have a total gain of 1. (if the amplifier's gain is programmable then the default gain of the amplifier is 3). (signal \* 1/3 \* 3 = signal)
- In the downward position, the specified ADC channel is directly passed to the ADC pin of the MCU.

Table 1: Hardware References

## SCHEMATIC DISCLAIMER AND WARNINGS

TI provides the High Voltage DMC and PFC kit schematic drawings to help users develop C2000 based reference design products. Application safety, safety of the High Voltage DMC and PFC kit and design integrity of such reference designs are solely responsibility of the user. Any reference designs generated off these schematics must take into account necessary product safety design requirements, including interface components in order to avoid user risks including potential for fire hazard, electrical shock hazard and personal injury, including considerations for anticipated agency certification compliance requirements.

Such product safety design criteria shall include but not be limited to critical circuit creepages and clearances, component selection, and required protective means (ie output fusing) depending on the specific loads being controlled.

TI accepts no responsibility for design integrity of any reference designs based on supplied schematic drawings and the schematics are strictly for development purposes.

## **EVALUATION BOARD/KIT IMPORTANT NOTICE**

Texas Instruments (TI) provides the enclosed product(s) under the following conditions:

This evaluation board/kit is intended for use for **ENGINEERING DEVELOPMENT, DEMONSTRATION, OR EVALUATION PURPOSES ONLY** and is not considered by TI to be a finished end-product fit for general consumer use. Persons handling the product(s) must have electronics training and observe good engineering practice standards. As such, the goods being provided are not intended to be complete in terms of required design-, marketing-, and/or manufacturing-related protective considerations, including product safety and environmental measures typically found in end products that incorporate such semiconductor components or circuit boards. This evaluation board/kit does not fall within the scope of the European Union directives regarding electromagnetic compatibility, restricted substances (RoHS), recycling (WEEE), FCC, CE or UL, and therefore may not meet the technical requirements of these directives or other related directives.

Should this evaluation board/kit not meet the specifications indicated in the User's Guide, the board/kit may be returned within 30 days from the date of delivery for a full refund. THE FOREGOING WARRANTY IS THE EXCLUSIVE WARRANTY MADE BY SELLER TO BUYER AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED, IMPLIED, OR STATUTORY, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE.

The user assumes all responsibility and liability for proper and safe handling of the goods. Further, the user indemnifies TI from all claims arising from the handling or use of the goods. Due to the open construction of the product, it is the user's responsibility to take any and all appropriate precautions with regard to electrostatic discharge.

EXCEPT TO THE EXTENT OF THE INDEMNITY SET FORTH ABOVE, NEITHER PARTY SHALL BE LIABLE TO THE OTHER FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES.

TI currently deals with a variety of customers for products, and therefore our arrangement with the user **is not exclusive**.

TI assumes no liability for applications assistance, customer product design, software performance, or infringement of patents or services described herein.

Please read the User's Guide and, specifically, the Warnings and Restrictions notice in the User's Guide prior to handling the product. This notice contains important safety information about temperatures and voltages. For additional information on TI's environmental and/or safety programs, please contact the TI application engineer or visit <a href="https://www.ti.com/esh">www.ti.com/esh</a>.

No license is granted under any patent right or other intellectual property right of TI covering or relating to any machine, process, or combination in which such TI products or services might be or are used.

Mailing Address:

Texas Instruments
Post Office Box 655303
Dallas, Texas 75265

Copyright © 2006, Texas Instruments Incorporated

### **FCC Warning**

This evaluation board/kit is intended for use for **ENGINEERING DEVELOPMENT, DEMONSTRATION, OR EVALUATION PURPOSES ONLY** and is not considered by TI to be a finished end-product fit for general consumer use. It generates, uses, and can radiate radio frequency energy and has not been tested for compliance with the limits of computing devices pursuant to part 15 of FCC rules, which are designed to provide reasonable protection against radio frequency interference. Operation of this equipment in other environments may cause interference with radio communications, in which case the user at his own expense will be required to take whatever measures may be required to correct this interference.