

PICASO-SGC Command Set

Software Interface Specification

Document Date: 29th April 2010

Document Revision: 3.0

Note: This manual applies to the PICASO-SGC Revision 17 PmmC files and above.

Table of Contents

1.	Host Interface	5
	1.1 Command Protocol : Flow Control	5
	1.2 Power-up and Reset	5
	1.3 Splash Screen on Power Up	
	1.4 4DSL Memory Card Script Program	
	1.5 Auto Run Memory Card Script Program	6
2.	Command Set	7
	2.1 General Commands	
	2.1.1 AutoBaud - 55hex	
	2.1.2 Set new Baud Rate - 51hex	
	2.1.3 Version-Device Info Request - 56hex	
	2.1.4 Replace Background Colour - 42hex	
	2.1.5 Clear Screen - 45hex	
	2.1.6 Display Control Functions - 59hex	
	2.1.7 Set Volume - 76hex	16
	2.1.8 Sleep - 5Ahex	
	2.1.9 Read GPIO Pin - 69hex	
	2.1.10 Write to GPIO Pin - 79hex	
	2.1.11 Read GPIO Bus - 61hex	
	2.1.12 Write to GPIO Bus - 57hex	
	2.2 Graphics Commands	
	2.2.1 Add User Bitmap Character - 41hex	
	2.2.2 Draw User Bitmap Character - 44hex	
	2.2.3 Draw Circle - 43hex	
	2.2.4 Draw Triangle - 47hex	
	2.2.5 Draw Image-Icon - 49hex	
	2.2.6 Set Background colour - 4Bhex	
	2.2.7 Draw Line – 4Chex	
	2.2.8 Draw Polygon - 67hex	
	2.2.9 Draw Rectangle - 72hex	
	2.2.10 Draw Ellipse - 65hex	
	2.2.11 Draw Pixel - 50hex	
	2.2.12 Read Pixel - 52hex	
	2.2.13 Screen Copy-Paste - 63hex	
	2.2.14 Replace Colour - 6Bhex	
	2.2.15 Set Pen Size - 70hex	
	2.3 Text Commands	
	2.3.1 Set Font - 46hex	
	2.3.2 Set Transparent-Opaque Text - 4Fhex	
	2.3.3 Draw ASCII Character (text format) - 54hex	
	2.3.4 Draw ASCII Character (graphics format) - 74hex	
	2.3.5 Draw "String" of ASCII Text (text format) - 73hex	
	2.3.6 Draw "String" of ASCII Text (graphics format) - 53hex	44

	2.3.7 Draw Text Button - 62hex	45
	2.4 Touch Screen Commands	46
	2.4.1 Get Touch Coordinates - 6Fhex	47
	2.4.2 Wait Until Touch - 77hex	48
	2.4.3 Detect Touch Region – 75hex	49
	2.5 SD Memory Card Commands (Low-Level/RAW)	50
	2.5.1 Initialise Memory Card - @69hex	51
	2.5.2 Set Address Pointer of Card (RAW) - @41hex	52
	2.5.3 Read Byte Data from Card (RAW) - @72hex	53
	2.5.4 Write Byte Data to Card (RAW) - @77hex	54
	2.5.5 Read Sector Block Data from Card (RAW) - @52hex	55
	2.5.6 Write Sector Block Data to Card (RAW) - @57hex	56
	2.5.7 Screen Copy – Save to Card (RAW) - @43hex	57
	2.5.8 Display Image-Icon from Card (RAW) - @49hex	58
	2.5.9 Display Object from Card (RAW) - @4Fhex	59
	2.5.10 Display Video-Animation Clip from Card (RAW) - @56hex	
	2.5.11 Run Script (4DSL) Program from Card (RAW) - @50hex	62
	2.6 SD Memory Card Commands (FAT-Level/DOS)	63
	2.6.1 Initialise Memory Card - @69hex	64
	2.6.2 Read File from Card (FAT) - @61hex	65
	2.6.3 Write File to Card (FAT) - @74hex	
	2.6.4 Erase File from Card (FAT) - @65hex	69
	2.6.5 List Directory of Card (FAT) - @64hex	70
	2.6.6 Screen Copy – Save to Card (FAT) - @63hex	71
	2.6.7 Display Image-Icon from Card (FAT) - @6Dhex	72
	2.6.8 Play Audio WAV file from Card (FAT) - @6Chex	73
	2.6.9 Run Script (4DSL) Program from Card (FAT) - @70hex	74
	2.7 Script Control Commands (4DSL - Script Language)	75
	2.7.1 Delay - 07hex	76
	2.7.2 Set Counter - 08hex	77
	2.7.3 Decrement Counter - 09hex	78
	2.7.4 Jump to Card Address If Counter Not Zero - OAhex	79
	2.7.5 Jump to Card Address - OBhex	80
	2.7.6 Exit-Terminate Script Program - OChex	81
	2.8 Summary List of Commands available for Scripting	82
3.	Appendix A: Development and Support Tools	83
	3.1 PmmC Loader – PmmC File Programming Software Tool	83
	3.2 microUSB – PmmC Programming Hardware Tool	83
	3.3 Display Initialisation Setup Personality (DISP) – Software Tool	84
	3.4 Graphics Composer – Software Tool	85
	3.5 FONT Tool – Software Tool	87
	3.6 FAT Controller – Software Test Tool	88
	3.7 RMPET – Software Tool	89
	3.8 Evaluation Display Modules	90

4. Appendix B: Using the FAT-Controller to Compose Script Programs	91
4.1 Getting Started	
4.2 Starting a Script	
4.3 Running the Script	
4.4 Running the .4ds Script Program from the Memory Card	
4.5 Running the Auto-Run Script Slide Show	
4.6 Running Graphics Composer GCI files from the Memory Card	
Proprietary Information	
Disclaimer of Warranties & Limitation of Liability	

1. Host Interface

The PICASO-SGC chip is a slave peripheral device and it provides a bidirectional serial interface to a host controller via its UART. All communications between the host and the device occur over this serial interface. The protocol is simple and easy to implement.



Serial Data Format: 8 Bits, No Parity, 1 Stop Bit. Serial data is true and not inverted.

1.1 Command Protocol: Flow Control


The PICASO-SGC is a slave device and all communication and events must be initiated by the host. Each command is made up of a sequence of data bytes. When a command is sent to the device and the operation is completed, it will always return a response. For a command that has no specific response the device will send back a single acknowledge byte called the ACK (06hex), in the case of success, or NAK (15hex), in the case of failure.

Commands having specific responses may send back varying numbers of bytes, depending upon the command and response. It will take the device a certain amount of time to respond, depending on the command type and the operation that has to be performed. If the PICASO-SGC chip receives a command that it does not understand it will reply back with a negative acknowledge called the NAK (15hex). Since a command is only identified by its position in the sequence of data bytes sending incorrect data can result in wildly incorrect operation.

1.2 Power-up and Reset

When the PICASO-SGC device comes out of a power up or external reset, a sequence of events must be observed before attempting to communicate with the module:

- Allow up to 500ms delay after power-up or reset for the PICASO-SGC to settle. Do not attempt to communicate with the device during this period. The device may send garbage on its TX Data line during this period, the host should disable its Rx Data reception.
 - **Note**: For applications that utilise memory cards with large capacity, allow up to 3 seconds for the card initialisation.
- The host must send the Auto-Baud command, capital 'U' (55hex), at 9600 baud and wait for an ACK (06hex) from the PICASO-SGC. The default baud rate of the PICASO-SGC is 9600 bps and the host must communicate initially with the device at this speed. The "Set new Baud-Rate" command can then be used to change to a different baud-rate if desired.
 - **Note**: Unlike the GOLDELOX-SGC, the PICASO-SGC does not have an Auto-Baud feature. To maintain compatibility, the Auto-Baud command must still be sent (at 9600 baud) for the PICASO-SGC.
- Once the host receives the ACK, the PICASO-SGC is now ready to accept commands from the host.

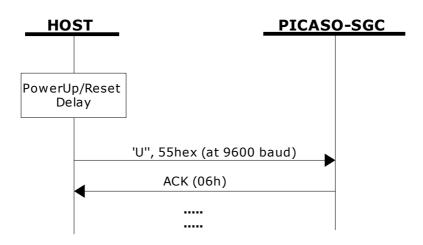

1.3 Splash Screen on Power Up

The PICASO-SGC will wait up to 5 seconds with its screen blank for the host to transmit the Auto-Baud command ('U', 55hex). If the host has not transmitted the Auto-Baud command by the end of this period the PICASO-SGC will display a built-in splash screen. If the host has transmitted the Auto-Baud command, the screen will remain blank. This wait period is for those customer specific applications where the splash screen is undesired.

1.4 4DSL Memory Card Script Program

The complete command set for the PICASO-SGC device is listed in section 2 of this document. The command execution is not only limited to the host sending these via the serial interface. The majority of them can be composed as a script and written into memory card. A 4DSL script program is a sequence of those commands that reside and can be executed from inside the memory card and these can be a combination of graphics, text, image, video and audio commands. Complete list of commands available for the scripting program is listed in section 2.8.

1.5 Auto Run Memory Card Script Program


The PICASO-SGC has a feature that will auto run a preloaded script program on power-up. The PICASO-SGC device is equipped to accept memory cards and when using the FAT file system, upon power-up, if a 4DSL script program file called 'autoexec.4ds' exists on the memory card, the PICASO-SGC will automatically run this script program. This is a useful feature for those stand alone applications where the device does not require a host controller to send commands to the PICASO-SGC to play a slide show of images, video clips, etc.

The user will have to create and upload a slide show composition to the card to benefit from this auto play feature.

Refer to 'Section 4: Appendix B' at the end of this document for a quick guide to creating scripting files using the FAT-Controller software tool available from 4D Labs.

2. Command Set

The command interface between the PICASO-SGC and the host is via the serial interface. Easy to learn commands provide complete access to all the available functions of the PICASO-SGC. The simplified command set also means that very low overheads are imposed on the host controller. Commands and responses can be either single bytes or many bytes. All commands return a response, either an acknowledge or data.

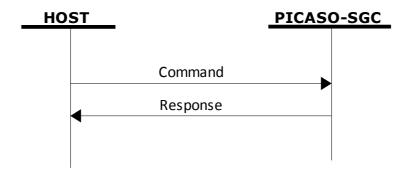

The command set is grouped into following sections:

- General Commands
- Graphics Commands
- Text Commands
- Touch Screen Commands
- SD Memory Card Commands (Low-Level/RAW)
- SD Memory Card Commands (FAT-Level/DOS)
- Script Control (4DSL Scripting Language) Commands

Each Command set is described in detail in the following sections.

Separation characters such as commas ',' or spaces ' ' or brackets'(' ')' between bytes that are shown in the command/response syntax descriptors are purely for legibility purposes and must not be considered as part of any transmitted/received data unless specifically stated.

2.1 General Commands

Summary of Commands in this section:

- AutoBaud 55hex
- Set new Baud-Rate 51hex
- Version-Device Info Request 56hex
- Replace Background Colour 42hex
- Clear Screen **45hex**
- Display Control Functions 59hex
- Set Volume **76hex**
- Sleep **5Ahex**
- Read GPIO Pin 61hex
- Write GPIO Pin 69hex
- Read GPIO Bus 79hex
- Write GPIO Bus 57hex

2.1.1 AutoBaud - 55hex

Command	cmd	
	cmd	55(hex) or U(ascii): Command header byte
Response	acknowledge	
	acknowledge	06 (hex) : ACK byte
Description	This must be the very first command sent to the PICASO-SGC (at 9600 baud) after power-up	
	or reset.	

2.1.2 Set new Baud Rate - 51hex

Command	cmd, rate		
	cmd	51(hex) or Q(ascii): Command header byte	
	rate	00 hex : 110 Baud	
		01 hex: 300 Baud	
		02 hex : 600 Baud	
		03 hex : 1200 Baud	
		04 hex : 2400 Baud	
		05 hex : 4800 Baud	
		06 hex : 9600 Baud	
		07 hex : 14400 Baud	
		08 hex : 19200 Baud	
		09 hex : 31250 Baud	
		0A hex : 38400 Baud	
		0B hex : 56000 Baud	
		0C hex : 57600 Baud	
		0D hex : 115200 Baud	
		0E hex : 128000 Baud	
		OFhex : 256000 Baud	
Response	acknowledge		
	acknowledge	06 (hex) : ACK byte if successful	
		15(hex): NAK byte if unsuccessful	
Description	This command	changes the Baud-Rate on the fly.	

2.1.3 Version-Device Info Request - 56hex

Command	cmd, Output	
	cmd	56 (hex) or V (ascii) : Command header byte
	Output	O0hex: Outputs the version and device info to the serial port only. O1hex: Outputs the version and device info to the serial port as well as to the screen.
Response	device_type, h	ardware_rev, firmware_rev, horizontal_res, vertical_res
	device_type	This response indicates the device type. 00hex = micro-OLED. 01hex = micro-LCD. 02hex = micro-VGA.
	hardware_rev	This response indicates the device hardware version
	firmware_rev	This response indicates the device firmware version.
	horizontal_res	This response indicates the horizontal resolution of the display. 22hex: 220 pixels 28hex: 128 pixels 32hex: 320 pixels 60hex: 160 pixels 64hex: 64 pixels 76hex: 176 pixels 96hex: 96 pixels FF hex: Unknown
	vertical_res	This response indicates the vertical resolution of the display. See horizontal_res above for resolution options. 22hex: 220 pixels 28hex: 128 pixels 32hex: 320 pixels 60hex: 160 pixels 64hex: 64 pixels 76hex: 176 pixels 96hex: 96 pixels FF hex: Unknown
Description	This command characteristics	d requests all the necessary information from the device about its

2.1.4 Replace Background Colour - 42hex

Command	d cmd, colour(msb:lsb)		
	cmd	42(hex) or B(ascii): Command header byte	
	colour	2 bytes (16 bits) define the background colour in RGB format: R4R3R2R1R0G5G4G3G2G1G0B4B3B2B1B0 where: msb: R4R3R2R1R0G5G4G3 lsb: G2G1G0B4B3B2B1B0	
Response acknowledge		150 1 6261665 155525155	
	acknowledge	06 (hex): ACK byte if operation successful 15 (hex): NAK byte if unsuccessful	
Description	This command changes the current background colour. Once this command is sent, only the background colour will change. Any other object on the screen with a different colour value will not be affected.		
Example	Command Data: 42hex, FFhex, FFhex This example sets the background colour value to FFFFhex (White).		

2.1.5 Clear Screen - 45hex

Command	cmd		
	cmd	45(hex) or E(ascii): Command header byte	
Response acknowledge			
	acknowledge	06 (hex): ACK byte if successful 15 (hex): NAK byte if unsuccessful	
Description	This command clears the entire screen using the current background colour		
Example	Command Data: 45hex (Clear the screen).		

2.1.6 Display Control Functions - 59hex

Command	cmd, mode, value		
	cmd	59 (hex) or Y (ascii) : Command header byte	
	mode	00hex : Backlight Control	
		value = 00hex : BACKLIGHT OFF	
		value = 01hex : BACKLIGHT ON	
		01hex : Display ON/OFF	
		value = 00hex : DISPLAY OFF	
		value = 01hex : DISPLAY ON	
		02hex : Contrast Adjust	
		value = 00hex – 0Fhex : CONTRAST RANGE	
		03hex : Display PowerUp-Shutdown (low power mode)	
		value = 00hex : DISPLAY SHUTDOWN	
		value = 01hex : DISPLAY POWERUP	
		04hex : Display Orientation	
		value = 01hex : LANDSCAPE	
		value = 02hex : LANDSCAPE_R (Rotated)	
		value = 03hex : PORTRAIT	
		value = 04hex : PORTRAIT_R (Rotated)	
		Note: The orientation command is effective for all graphics and text	
		functions except for images and video. For example, if the natural	
		orientation of the display is PORTRAIT and the orientation was set to	
		LANDSCAPE, images and video will remain in the PORTRAIT mode.	
		To achieve a true LANDSCAPE format display, the DISP software tool must	
		be used to set the proper display hardware parameters which is then	
		programmed into the PICASO-SGC.	
		05hex : Touch Control	
		value = 00hex : Enable Touch Screen	
		value = 01hex : Disable Touch Screen	
		value = 02hex : Reset the Active region to the entire Screen	
		06hex : Image Format (for @43hex and @49hex commands)	
		value = 00hex : New Format, includes header (type2) value = 01hex : Old Format, no header (type1)	
		08hex : Protect FAT	
		value = 00hex : PROTECT	
		value = 00hex : PROTECT	
		Note: This command protects the FAT file system (if present) on the card	
		from being read or written to by low level (RAW) commands. If the	
		memory card contains any FAT (FAT16 or FAT32) partition, when the	
		initialise command is executed or the device comes out of a reset, FAT	
		Protection is turned ON automatically. This means the host will not be	
		able to access the card using Low-Level (RAW) read or write commands	
		unless it subsequently turns off the FAT protection.	
		For a 'Non Standard' card containing two partitions, one FAT and one	
		RAW (Partition type DA hex), the default is "PROTECT". In this case FAT	
		reads and writes will occur to the FAT partition and RAW reads and writes	
		will be offset into the RAW partition. i.e. a write to sector 0 will write to	
		This was allest after the transfer and a write to sector of will write to	

	value	sector 0 in the raw partition. FAT32 is currently not supported. If you mount a FAT32 formatted disk, you will not be able to access it at all, both FAT and RAW commands will fail. You can either reformat the memory card as FAT or unprotect the card and replace sector 0 with 512 hex 00s. See mode description above.
Response acknowledge		See mode description above.
	acknowledge	06(hex) : ACK byte if successful 15(hex) : NAK byte if unsuccessful
Description	This command has multiple features. Refer to individual notes above.	

2.1.7 Set Volume - 76hex

Command	cmd, volume		
	cmd	76 (hex) or v (ascii) : Command header byte	
	volume	Volume is in the range of 8 – 127 (08hex - 7Fhex) 08hex : Minimum Volume.	
		7Fhex : Maximum Volume. Special Values:	
		00hex: Mute.	
		01hex: Volume Down 8.	
		03hex : Volume Down.	
		FDhex: Volume Up.	
		FEhex: Volume Up 8.	
		FFhex: Mute Off.	
Response	acknowledge		
	acknowledge	06 (hex) : ACK byte if successful	
		15(hex): NAK byte if unsuccessful	
Description This command sets the volume level of the AUDIO pin output.		sets the volume level of the AUDIO pin output.	

2.1.8 Sleep - **5**Ahex

Command	cmd, options, sleep_time		
	cmd	5A (hex) or Z (ascii) : Command header byte	
	options	80hex : Turn off uSD (must reinit manually)	
		40hex: Turn off Audio (will turn on automatically when used)	
		20hex : Turn off Touch	
		08 hex : Wake-Up on P1 state change	
		04 (hex): Wake-Up on P0 state change	
		02 (hex) : Wake-Up on Touch	
		01 (hex): Wake-Up on Serial	
	sleep_time	1 byte sleep time in seconds:	
		0 : Sleep forever (wake up on P0 or P1 or RESET).	
		1-255 : Seconds to Sleep.	
Response	acknowledge		
acknowledge 06 (hex): ACK byte when wake-up on event		06 (hex): ACK byte when wake-up on event	
		15(hex): NAK byte if unsuccessful	
Description	Description Puts parts of the PICASO-SGC into a lower power state to conserve power		
	waits for certain conditions to wake it up. If it is desired to turn off the display then do the		
	first using "Display Control Functions - 59hex" command (mode 1 option).		

2.1.9 Read GPIO Pin - 69hex

Command	cmd, pin			
	cmd	69(hex) or i(ascii): Command header byte		
	pin	Select one of P0 – P15 pins:		
		0 - 15 : P0 - P15		
Response	pin_status			
	pin_status	Returns 1 byte:		
		00 (hex) : Pin is Low		
		01 (hex): Pin is High		
Description	Reads the sta	Reads the state of the selected GPIO pin (P0-P15). Returns 0 or 1.		

2.1.10 Write to GPIO Pin - 79hex

Command	cmd, pin, value					
	cmd 79 (hex) or y (ascii) : Command header byte					
	pin	Select one of P0 – P15 pins: 0 - 15 : P0 - P15				
	value	0 : write Low to pin 1 : write High to pin				
Response	acknowledge					
	acknowledge	06(hex): ACK byte if successful 15(hex): NAK byte if unsuccessful				
Description	Writes a LOW	Writes a LOW or HIGH to the specified GPIO pin (P0-P15).				

2.1.11 Read GPIO Bus - 61hex

Command	emd			
	cmd	d 61 (hex) or a (ascii) : Command header byte		
Response	bus_status	bus_status		
	bus_status	Returns 1 byte BUSO-BUS7 status.		
Description	Reads the state of the GPIO Bus (BUSO-BUS7 or P8-P15).			

2.1.12 Write to GPIO Bus - 57hex

Command	cmd, value	md, value		
	cmd	57(hex) or W(ascii): Command header byte		
	value	1 byte value to write to GPIO Bus (BUSO-BUS7).		
Response	acknowledge			
	acknowledge	06 (hex) : ACK byte if successful		
		15(hex): NAK byte if unsuccessful		
Description	Writes a byte to the GPIO Bus (BUSO-BUS1 or P8-P15).			

2.2 Graphics Commands

Summary of Commands in this section:

- Add User Bitmap Character **41hex**
- Draw User Bitmap Character **44hex**
- Draw Circle **43hex**
- Draw Triangle **47hex**
- Draw Image-Icon **49hex**
- Set Background colour 4Bhex
- Draw Line 4Chex
- Draw Polygon **67hex**
- Draw Rectangle **72hex**
- Draw Ellipse **65hex**
- Draw Pixel 50hexRead Pixel 52hex
- Screen Copy-Paste **63hex**
- Replace colour 6Bhex
- Set Pen Size 70hex

2.2.1 Add User Bitmap Character - 41hex

Command	cmd, gr	oup,	char	_idx,	data	1, da	ıta2,	, d	ataN	
	cmd		4	1 (he	x) or	A (aso	:ii) : (Comr	nand	header byte
	group						•			format
									•	format
										ap format
	shar id	.,	_							ap format
	char_idx			to 6	3 (00 5 (00	hex t hex t	o 3F l o 0F l	nex): nex):	64 ch 16 ch	to memory. haracters of 8x8 format when group = 00 hex haracters of 16x16 format when group = 01 hex haracters of 32x32 format when group = 02 hex
	data1d	dataN	n	napp	ed ch	arac	ter.			ake up the composition and format of the bit- is 1 byte wide (8bits) by 8 bytes deep which
			T v	vhich	6x16 mak	bitn es N	nap (= 2x1	16 = 3	32.	on is 2 bytes wide (16bits) by 16 bytes deep on is 4 bytes wide (32bits) by 32 bytes deep
				ence	N =	4x32	= 12	8		
Response	acknow									
	acknow	ledge		-	-				essful iccess	
Description	are 3 d	differ	ent s	size b	oitma	ps a	vailal	ole, 8	3x8 fo	ped character into the internal memory. There ormat, 16x16 format and 32x32 format. The propriate value in 'group'.
		b7	b6	b5	b4	b3	b2	b1	b0	← Data Bits
										data1 (18hex)
										data2 (24hex)
										data3 (42hex)
										data4 (81hex)
										data5 (81hex)
										data6 (42hex)
										data7 (24hex)
										data8 (18hex)
		Exan	nple	of 8x	8 Us	er de	finec	l bitn	nap	
Example	Comma 41hex,			hex,	18he	x, 24	hex,	42he	x, 81l	hex, 81hex, 42hex, 24hex, 18hex
	This exa		e ado	ds an	d sav	es a	user	defii	ned 8	x8 bitmap (group 0) as character index 1 into

2.2.2 Draw User Bitmap Character - 44hex

Command	cmd, group, char_idx, x(msb:lsb), y(msb:lsb), colour(msb:lsb)				
	cmd	44(hex) or D(ascii): Command header byte			
	group	Selects the appropriate bitmap format 00 hex: selects the 8x8 bitmap format 01 hex: selects the 16x16 bitmap format 02 hex: selects the 32x32 bitmap format			
	char_idx	Bitmap character index to draw from the previously added bitmap characters into memory. 0 to 63 (00 hex to 3F hex): 64 characters of 8x8 format when group = 00 hex 0 to 15 (00 hex to 0F hex): 16 characters of 16x16 format when group = 01 hex 0 to 7 (00 hex to 07 hex): 4 characters of 32x32 format when group = 02 hex			
	x	Horizontal display position of the bitmap character (2 bytes).			
	У	Vertical display position of the bitmap character (2 bytes).			
	colour	2 bytes bitmap colour value.			
Response	acknowledge				
	acknowledge	06 (hex) : ACK byte if successful 15 (hex) : NAK byte if unsuccessful			
Description	bitmap charact User defined b	draws the previously defined user the real location (x, y) on the screen. It is allow drawing & displaying thic patterns quickly & effectively.			
Examples	(Display 8x8 bit Command Data 44hex, 00hex, (Display 8x8 bit Command Data 44hex, 00hex, 0	O1hex, 00hex, 00hex, 00hex, 00hex, F8hex, 00hex tmap character (group 0) index 1 at x = 0, y = 0, colour = RED). a: 02hex, 00hex, 08hex, 00hex, 00hex, 07hex, E0hex tmap character (group 0) index 2 at x = 8, y = 0, colour = GREEN).			

2.2.3 Draw Circle - 43hex

Command		N v(mch·lch) radiuc(mch·lch) colour(mch·lch)
	cmd	y, y(msb:lsb), radius(msb:lsb), colour(msb:lsb) 43(hex) or C(ascii): Command header byte
		Horizontal position of the circle centre (2 bytes).
	X	Vertical position of the circle centre (2 bytes).
	y radius	Radius of the circle (2 bytes).
	colour	
Dospopso	acknowledge	2 bytes define the circle colour.
Response	acknowledge	OC/hov) + ACV byto if suggested
	acknowledge	06(hex): ACK byte if successful 15(hex): NAK byte if unsuccessful
Description	value set in the on the value of when Pen Size :	will draw a coloured circle centred at (x, y) with a radius determined by the e 'radius' byte. The circle can be either solid or wire frame (empty) depending the Pen Size (see Set Pen Size command). = 0 : circle is solid = 1 : circle is wire frame pensize=1 x,y rad pensize=0
Example	Command Dat	

2.2.4 Draw Triangle - 47hex

Command	d cmd,x1(msb:lsb),y1(msb:lsb),x2(msb:lsb),y2(msb:lsb),x3(msb:lsb),y3(msb:lsb),color(n			
	cmd	47(hex) or G(ascii): Command header byte		
	x1, y1, x2, y2, x3, y3	3 vertices of the triangle. These must be specified in an anti-clockwise fashion (2 bytes per each parameter).		
	color	2 bytes triangle colour value.		
Response	acknowledge			
	acknowledge	06 (hex) : ACK byte if successful 15 (hex) : NAK byte if unsuccessful		
Description	This command clock wise man	draws a Solid/Wire-Frame triangle. The vertices must be specified in an antiner, i.e.		
	x2 < x1	: x3 > x2 : y2 > y1 : y3 > y1		
	when Pen Size =	e frame triangle is determined by the value of the Pen Size setting. = 0 : triangle is solid = 1 : triangle is wire frame x1,y1 pensize=0 x2,y2 x1,y1 x3,y3		

2.2.5 Draw Image-Icon - 49hex

Command	cmd, x(msb:lsb), y(msb:lsb), width(msb:lsb), height(msb:lsb), colourMode, pixel1, pixelN						
	cmd	49(hex) or I(ascii): Command header byte					
	х	Image horizontal start position (top left corner, 2 bytes).					
	У	Image vertical start position (top left corner, 2 bytes).					
	width	Horizontal size of the image (2 bytes).					
	height	Vertical size of the image (2 bytes).					
	colourMode	08 (hex): 256 colour mode, 8bits/1byte per pixel. 10 (hex): 65K colour mode, 16bits/2bytes per pixel.					
	pixel1pixelN	Image pixel data where N is the total number of pixels. N = width x height (when colourMode = 08hex) N = 2 x width x height (when colourMode = 10hex)					
Response	acknowledge						
	acknowledge	06(hex): ACK byte if successful 15(hex): NAK byte if unsuccessful					
	more effective	size of the image specified by width and height parameters. This command is than using the "Put Pixel" command, where there are no overheads in x, y location of each pixel.					

2.2.6 Set Background colour - 4Bhex

Command	cmd, colour(msb:lsb)				
	cmd	4B(hex) or K(ascii): Command header byte			
	colour	2 bytes (16 bits) define the background colour in RGB format: R4R3R2R1R0G5G4G3G2G1G0B4B3B2B1B0 where: msb: R4R3R2R1R0G5G4G3 lsb: G2G1G0B4B3B2B1B0			
Response	acknowledge				
	acknowledge	06 (hex): ACK byte if operation successful 15 (hex): NAK byte if unsuccessful			
Description	mode text in	sets the background colour for the next erase and draw(refers to opaque Set Transparent-Opaque Text — 4Fhex) commands to be sent. Once this ent, the background colour will only change when it is rewritten. Nothing on be affected.			
Example	Command Dat 4Bhex, FFhex,				

2.2.7 **Draw Line – 4Chex**

Command	cmd, x1(msb:l	sb), y1 (msb:lsb), x2 (msb:lsb), y2 (msb:lsb), colour (msb:lsb)						
	cmd	4C(hex) or L(ascii) : Command header byte						
	x1	Top left horizontal start position of line (2 bytes).						
	y1	y1 Top left vertical start position of line (2 bytes).						
	x2	Bottom right horizontal end position of line (2 bytes).						
	y2	Bottom right vertical end position of line (2 bytes).						
	colour	2 bytes define the Line colour.						
Response	acknowledge							
	acknowledge	06 (hex) : ACK byte if successful 15 (hex) : NAK byte if unsuccessful						
		x1,y1 x2,y2						
Example		ta: 00hex, 00hex, 00hex, 00hex, 7Fhex, 00hex, 7Fhex, FFhex, FFhex E line (FFFFhex) from (x1 = 0000hex, y1 = 0000hex) to (x2 = 007Fhex, y2 =						

2.2.8 Draw Polygon - 67hex

Command	cmd, vertices,	x1(msb:lsb), y1(msb:lsb),, xn(msb:lsb), yn(msb:lsb), colour(msb:lsb)
	cmd	67(hex) or g(ascii) : Command header byte
	vertices	Number of vertices from 3 to 7. This byte specifies the number of vertices of the polygon.
	x1,y1,xn, yn	Vertices of the triangle. These can be specified in any fashion. Each parameter is 2 bytes.
	colour	2 bytes triangle colour value.
Response	acknowledge	
	acknowledge	06 (hex) : ACK byte if successful 15 (hex) : NAK byte if unsuccessful
	manner. Currer	x1,y1 x7,y7 x7,y7 x6,y6 x4,y4 x5,y6

2.2.9 Draw Rectangle - 72hex

Command	cmd, x1(msb:lsb), y1(msb:lsb), x2(msb:lsb), y2(msb:lsb), colour(msb:lsb)		
	cmd	72(hex) or r(ascii): Command header byte	
	x1	Top left horizontal start position of rectangle (2 bytes).	
	у1	Top left vertical start position of rectangle (2 bytes).	
	x2	Bottom right horizontal end position of rectangle (2 bytes).	
	y2	Bottom right vertical end position of rectangle (2 bytes).	
	colour	2 bytes define the rectangle colour.	
Response	acknowledge		
	acknowledge	06 (hex) : ACK byte if successful 15 (hex) : NAK byte if unsuccessful	
		r is chosen to be that of the background then the effect will be erasure. If Pen previously set to 0, the rectangle will be solid, otherwise it will be wire-frame x1,y1 pensize=1 x2,y2 x1,y1 pensize=0	

2.2.10 Draw Ellipse - 65hex

Command	cmd, x(msb:lsk	o), y(msb:lsb), rx(msb:lsb), ry(msb:lsb), colour(msb:lsb)
	cmd	65 (hex) or e (ascii) : Command header byte
	x	Horizontal position of the ellipse centre (2 bytes).
	У	Vertical position of the ellipse centre (2 bytes).
	rx	Radius in the x-axis (2 bytes).
	ry	Radius in the y-axis (2 bytes).
	colour	2 bytes define the ellipse colour.
Response	acknowledge	
	acknowledge	06 (hex): ACK byte if successful 15 (hex): NAK byte if unsuccessful
	(empty) depen Pen Size = 0 : e	ne x radius) and ry (the y radius). The ellipse can be either solid or wire frame ding on the value of the Pen Size (see Set Pen Size command). Ilipse is solid Ilipse is wire frame.

2.2.11 Draw Pixel - 50hex

Command	cmd, x(msb:lsb), y(msb:lsb), colour(msb:lsb)	
	cmd	50 (hex) or P (ascii) : Command header byte
	x	Horizontal position of the pixel (2 bytes).
	У	Vertical position of the pixel (2 bytes).
	colour	2 bytes (16 bits) define the pixel colour in RGB format:
		R4R3R2R1R0G5G4G3G2G1G0B4B3B2B1B0 where:
		msb: R4R3R2R1R0G5G4G3 lsb: G2G1G0B4B3B2B1B0
Response	acknowledge	130. G2G1G0B4B3B2B1B0
	acknowledge	06 (hex) : ACK byte if successful
		15(hex): NAK byte if unsuccessful
Description	This command	will draw a coloured pixel at location (x, y) on the screen.
		×,y •
Example	Command Dat	a: 01hex, 00hex, 0Ahex, FFhex, FFhex
		pixel (FFFFhex) at location (x = 0001hex, y = 000Ahex).
	Diaw a writte pixel (1111 liex) at location (x = 000 tilex, y = 000 Allex).	

2.2.12 Read Pixel - 52hex

Command	cmd, x(msb:lsb), y(msb:lsb)		
	cmd	52(hex) or R(ascii): Command header byte	
	x	Horizontal position of the pixel (2 bytes).	
	У	Vertical position of the pixel (2 bytes).	
Response	colour(msb:lsb)		
	colour	Returns back 2 bytes (16 bits) pixel colour in RGB format: R4R3R2R1R0G5G4G3G2G1G0B4B3B2B1B0 where: msb: R4R3R2R1R0G5G4G3 (msb is 1 st byte) lsb: G2G1G0B4B3B2B1B0 (lsb is 2 nd byte)	
Description	This command will read the colour value of a pixel at location (x, y) on the screen and return it to the host. This is a useful command when for example a white pointer is moved across the screen and the host can read the colour on the screen and switch the colour of the pointer when it's on top of a light coloured area.		
Example	Command Data: 52hex, 00hex, 01hex, 00hex, 0Ahex PICASO-SGC Response: 00hex, 1Fhex Reads a BLUE pixel (001Fhex) at location (x = 0001hex, y = 000Ahex).		

2.2.13 Screen Copy-Paste - 63hex

Command	cmd, xs(msb:ls	b), ys (msb:lsb), xd (msb:lsb), yd (msb:lsb), width (msb:lsb), height (msb:lsb)
	cmd	63 (hex) or c (ascii) : Command header byte
	xs	Top left horizontal start position of screen area to be copied (source, 2bytes).
	ys	Top left vertical start position of screen area to be copied (source, 2 bytes).
	xd	Top left horizontal start position of where copied area is to be pasted (destination, 2 bytes).
	yd	Top left vertical start position of where copied area is to be pasted (destination, 2 bytes).
	width	Width of screen area to be copied (source, 2 bytes).
	height	Height of screen area to be copied (source, 2 bytes).
Response	acknowledge	
	acknowledge	06(hex): ACK byte if successful 15(hex): NAK byte if unsuccessful
Description	This command copies a specified area of the screen as a bitmap block. The start location of the block to be copied is represented by xs , ys (top left corner) and the size of the area to be copied is represented by width and height parameters. The start location of where the block is to be pasted (destination) is represented by xd , yd (top left corner). This is a very powerful feature for animating objects, smooth scrolling, implementing a windowing system copying patterns across the screen to make borders or tiles.	

2.2.14 Replace Colour - 6Bhex

Command	cmd, x1, y1, x2, y2, old colour(msb:lsb), new colour(msb:lsb)		
	cmd	6B(hex) or k(ascii): Command header byte	
	x1	Top left horizontal start position.	
	y1	Top left vertical start position.	
	x2	Bottom right horizontal end position.	
	y2	Bottom right vertical end position.	
	old colour	2 bytes (16 bits) define the background colour in RGB format: R4R3R2R1R0G5G4G3G2G1G0B4B3B2B1B0 where: msb: R4R3R2R1R0G5G4G3	
		R4R3R2R1R0G5G4G3G2G1G0B4B3B2B1B0 where: msb: R4R3R2R1R0G5G4G3 lsb: G2G1G0B4B3B2B1B0	
Response	acknowledge		
	acknowledge	06 (hex): ACK byte if operation successful 15 (hex): NAK byte if unsuccessful	
Description	This command replaces the old colour of the selected rectangular region to the new specified colour		

2.2.15 Set Pen Size - 70hex

Command	cmd, size	
	cmd	70(hex) or p(ascii): Command header byte
	size	Selects one of the 2 options:
		00 hex : All graphics objects are drawn solid
		01 hex : All graphics objects are drawn wire-frame
		Note: Does not apply to polygon command.
Response	acknowledge	
	acknowledge	06 (hex) : ACK byte if successful
		15(hex): NAK byte if unsuccessful
Description	This command	determines if certain graphics objects are drawn in solid or wire frame
	fashion.	
Examples	Command Data	ı:
	70hex, 00hex	
	(All objects will	be drawn solid).
	Command Data	ı:
	70hex, 01hex	
	(All objects will	be drawn wire-frame).

2.3 Text Commands

The PICASO-SGC is shipped with 4 internal fonts. These fonts can be altered, deleted and replaced with new fonts. The **FONT-Tool** is a free software tool that can assist in the conversion of any Windows fonts into the bitmap format that can be used by the PICASO-SGC. The converted font set can then be exported into the **DISP-Tool** utility which can then be downloaded into the PICASO-SGC on-chip flash memory. Both the FONT-Tool and the DISP-Tool are available free from www.4dsystems.com.au

Summary of Commands in this section:

- Set Font 46hex
- Set Transparent-Opaque Text 4Fhex
- Draw ASCII Character (text format) 54hex
- Draw ASCII Character (graphics format) 74hex
- Draw "String" of ASCII Text (text format) 73hex
- Draw "String" of ASCII Text (graphics format) 53hex
- Draw Text Button 62hex

2.3.1 Set Font - 46hex

Command	cmd, fontSet				
	cmd	46 (hex) or F (ascii) : Co	ommand header byte		
	fontSet	Selects one of interna	Il fonts. The supplied 3 fonts are:		
			mall size font set		
		01 hex : 8x8 m	nedium size font set		
			large size font set		
			a largest size font set		
			tered and other fonts can be added with the aid of the		
		FONT-Tool and the DI	SP-Tool software tools.		
Response	acknowledge				
	acknowledge	06 (hex) : ACK byte if s 15 (hex) : NAK byte if			
Description	This command	d selects one of the a	available internal fonts. Changes take place after the		
	command is s	ent. Any character on t	the screen with the previous font set will remain as it		
	was.				
	NOTE: The PI	CASO-SGC is shipped w	vith 4 fonts displaying the characters 0x20 to 0x7f'. i.e.		
	7		The user can alter the number of fonts, delete existing		
		fonts, and, or, add extra fonts, up to the amount of available user flash (a very limited			
	•		art at 0x20, or end at 0x7f. It could, for example start at		
_		end at 0x39 ('9').			
Examples	Command Dat	ta:	! ** # \$ % & ' () * + , /		
	46hex, 00hex (Select small 5x7 font).		0123456789:;<=>?		
	(Select Siliali S	7.7 TOTIL).	@ A B C D E F G H I J K L M N O		
	Command Dat	ta:	P Q R S T U V W X Y Z E \] ^		
	46hex, 01hex		'abcdefqhi.iklmno parstuvwxyz { }~ ■		
	(Select mediur	m 8x8 font).	! " # \$ % & ' () * + , /		
		,	0 1 2 3 4 5 6 7 8 9 : ; < = > ?		
	Command Dat	ta:	@ A B C D E F G H I J K L M N O		
	46hex, 02hex		PQRSTUVWXYZ[\1^_		
	(Select large 8	x12 font).	`abcdefghijklmno pgrstuvwxyz{;}~""""""""""""""""""""""""""""""""""""		
	Camana and Dat	.	! " # \$ 2 & ' () * + , /		
	Command Date 46hex, 03hex	ta:	0 1 2 3 4 5 6 7 8 9 : ; < = > ?		
	(Select largest	12v16 font)	<pre>@ A B C D E F G H I J K L M N O</pre>		
	(Select largest	12x10 lollej.	PQRSTUVWXYZ[\]^_		
			parstuvuxuz {		
			!"#\$%&!()*+/		
			0123456789:; <=>?		
			@ A B C D E F G H I J K L M N O		
			Paksinamxizi/1/-		
			Paretuviiv 77		
			pqi stuvwxyzti j b		

2.3.2 Set Transparent-Opaque Text - 4Fhex

cmd, mode	
cmd	4F(hex) or O(ascii): Command header byte
mode	Select one of the following options for text appearance:
	00 hex : Transparent, objects behind text are visible.
	01 hex : Opaque, objects behind text blocked by background.
acknowledge	06 (hex): ACK byte if successful 15 (hex): NAK byte if unsuccessful
	will change the attribute of the text so that an object behind the text can ed or transparent. Changes take place after the command is sent.
4Fhex, 00hex (Transparent te Command Data 4Fhex, 01hex	xt mode).
	cmd mode acknowledge acknowledge This command either be blocke Command Data 4Fhex, 00hex (Transparent te

2.3.3 Draw ASCII Character (text format) - 54hex

Command	cmd, char, col	umn, row, charColour(msb:lsb)
	cmd	54(hex) or T(ascii) : Command header byte
	char	Inbuilt standard ASCII character.
		range: 32dec – 127dec (20hex - 7Fhex).
	column	Horizontal position of the character (character units).
	row	Vertical position of the character (character units).
	charColour	2 bytes define the character colour.
Response	acknowledge	
	acknowledge	06 (hex): ACK byte if successful 15 (hex): NAK byte if unsuccessful
Description	This command will draw/display an ASCII character anywhere on the screen in character unit coordinates. The horizontal position of the character is specified by the column and the vertical position is specified by the row parameters. Use the "Set Font - 46hex" command to select the desired font.	
Example		Othex, 00hex, FFhex, FFhex Character 'A' (41hex) at column = 0, row = 0, colour = white (FFFFhex). AAAAA AAAAA Column A Column

2.3.4 Draw ASCII Character (graphics format) - 74hex

Command	cmd, char, x(m	sb:lsb), y(msb:lsb), charColour(msb:lsb), width, height
	cmd	74(hex) or t(ascii): Command header byte
	char	Inbuilt standard ASCII character. range: 32dec – 127dec (20hex - 7Fhex).
	x	Horizontal position of the character (pixel units, 2 byte parameter).
	у	Vertical position of the character (pixel units, 2 byte parameter).
	charColour	2 bytes define the character colour.
	width	This byte defines the width or horizontal size (multiplier) of the character.
	height	This byte defines the height or vertical size (multiplier) of the character.
Response	acknowledge	
	acknowledge	06 (hex): ACK byte if successful 15 (hex): NAK byte if unsuccessful
		option allows text of any size (determined by width and height) to be placed. The font of the character is determined by the 'Set Font' command.

2.3.5 Draw "String" of ASCII Text (text format) - 73hex

Command	cmd, column, row, font, stringColour(msb:lsb), "string", terminator	
	cmd	73(hex) or s(ascii): Command header byte
	column	Horizontal start position of the string (character units).
	row	Vertical start position of the string (character units).
	font	This byte specifies which internal font set to use for the string. The supplied fonts are: 0:5x7 internal font 1:8x8 internal font 2:8x12 internal font 3:12x16 internal font These fonts can be altered and other fonts can be added. ORing the fonts with 0x10 will cause the string to be displayed in a proportional manner (egox10 is font 0 proportional, 0x11 is font 1 proportional, etc). 2 bytes define the string text colour.
	"string"	String of ASCII characters to be displayed (max. 256 characters).
	terminator	The string must be terminated with 00 hex.
Response	acknowledge	
	acknowledge	06(hex): ACK byte if successful 15(hex): NAK byte if unsuccessful
Description	ASCII text ar character unit start position of column and the by the row paterminated with string is longer of characters	will draw/display a string of hywhere on the screen in a coordinates. The horizontal of the string is specified by the se vertical position is specified arameters. The string must be the one of the result of the maximum number per line, a wrap around will be next line. Maximum string ytes.

2.3.6 Draw "String" of ASCII Text (graphics format) - 53hex

Command	cmd, x(msb:lsb), y(msb:lsb), font, stringColour(msb:lsb), width, height, "string", terminator
	cmd	53(hex) or S(ascii): Command header byte
	x	Top left horizontal start position of the string (pixel units). 2 byte parameter.
	У	Top left vertical start position of the string (pixel units). 2 byte parameter.
	font	This byte specifies which internal font set to use for the string. The supplied
		fonts are:
		0:5x7 internal font
		1:8x8 internal font
		2:8x12 internal font
		3: 12x16 internal font
		These fonts can be altered and other fonts can be added. OR ing the fonts
		with 0x10 will cause the string to be displayed in a proportional manner (eg
		0x10 is font 0 proportional, 0x11 is font 1 proportional, etc).
	stringColour	2 bytes define the string text colour.
	width	This byte defines the width or horizontal size multiplier of the character in the string. Effects the total width of the string. 1 byte parameter.
	height	This byte defines the height or vertical size multiplier of the character in the string. Effects the total height of the string. 1 byte parameter.
	"string"	String of ASCII characters to be displayed (max. 256 characters).
	terminator	The string must be terminated with 00 hex.
Response	acknowledge	
	acknowledge	06 (hex) : ACK byte if successful
		15(hex): NAK byte if unsuccessful
Description	This command will draw/display a string of ASCII text anywhere on the screen in pix coordinates specified by x and y parameters. The horizontal start position of the string specified by x and the vertical position is specified by y . The string must be terminated wit 00 hex. The size of the characters are determined by the width and height parameters. If the length of the string is longer than the maximum number of characters per line, a wra around will occur on to the next line. Maximum string length is 512 bytes .	

2.3.7 Draw Text Button - 62hex

Command		nsb:lsb), y(msb:lsb), buttonColour(msb:lsb), font, stringColour(msb:lsb), "string", terminator
	cmd	62 (hex) or b (ascii) : Command header byte
	state	This byte specifies whether the displayed button is drawn UP (not pressed) or DOWN (pressed). 0 : Button Down (pressed) 1 : Button Up (not pressed)
	x	Top left horizontal start position of the button (2 bytes).
	У	Top left vertical start position of the button (2 bytes).
	buttonColour	2 bytes define the button colour.
	font	This byte specifies which internal font set to use for the string. The supplied fonts are: 0:5x7 internal font 1:8x8 internal font 2:8x12 internal font 3:12x16 internal font These fonts can be altered and other fonts can be added.
	stringColour	2 bytes define the string text colour.
	width	This byte defines the width or horizontal size (x magnification) of the character in the string. Effects the total width of the string and button.
	height	This byte defines the height or vertical size (y magnification) of the character in the string. Effects the total height of the string and button.
	"string"	String of ASCII characters displayed inside the button. Limit the string to a single line width.
	terminator	The string must be terminated with 00 hex.
Response	acknowledge	
	acknowledge	06(hex): ACK byte if successful 15(hex): NAK byte if unsuccessful
Description	the ones used The (x, y) reference button and automatically screen with the inside the button pressed) position value in the 's	will place a Text button similar to in a PC Windows environment. ers to the top left corner of the the size of the button is calculated and drawn on the ne string text relatively justified on. The button can be displayed in not pressed) or DOWN (button on by specifying the appropriate state' byte. Separate button and provide many variations in d format.

2.4 Touch Screen Commands

The following commands are related to Touch Screen support of the PICASO-SGC and they are described in this section.

Summary of Commands in this section:

- Get Touch Coordinates 6Fhex
- Wait Until Touch 77hex
- Detect Touch Region **75hex**

Touch screen must be enabled to be able to use the touch commands. To enable touch screen, See section 2.1.6.

2.4.1 Get Touch Coordinates - 6Fhex

Command	cmd, mode	
	cmd	6F (hex) or o (ascii) : Command header byte
	mode	00hex : Wait until any touch activity
		01hex: Wait until Touch press
		02hex: Wait until Touch release
		03hex: Wait until Touch Moving
		04hex: Get Touch status
		05hex : Get Touch coordinates
Response	x_coord(msb:ls	b), y_coord(msb:lsb)
	x_coord	2 byte value for x-coordinates of the touch screen.
		For mode = 04hex only, returns the following:
		0 : No Touch Activity
		1 : Touch Press
		2 : Touch Release
		3: Touch Moving
	y_coord	2 byte value for y-coordinates of the touch screen.
Description	This command returns the x and y coordinate of a touch to the screen for 00hex to and 05hex . Note that for "mode = 05hex " the coordinates relate to the last touch activity i.e. to be same as the coordinates returned to the touch command with mode 00hex - 0 coordinates detected for the touch command with "mode = 04hex " when touch occurred.	

2.4.2 Wait Until Touch - 77hex

Command	cmd, value(msl	cmd, value(msb:lsb)	
	cmd	77(hex) or w(ascii) : Command header byte	
	value	2 byte wait time in milliseconds. Maximum value of 65,535 msec or 65.5 seconds.	
Response	acknowledge		
	acknowledge	06 (hex) : ACK byte if successful 15 (hex) : NAK byte if unsuccessful	
Description	When objects from the memory card such as images are displayed sequentially, a delay car be inserted between subsequent objects. A delay basically has the same effect as a NOP (Not Operation) which can be used to determine how long the object stays on the screen before the next object is displayed. If the user touches the display during the delay period, the delay will end immediately. The touch region, if used, is taken into account.		

2.4.3 Detect Touch Region – 75hex

Command	cmd, x1(msb:ls	b), y1 (msb:lsb), x2 (msb:lsb), y2 (msb:lsb)
	cmd	75 (hex) or u (ascii) : Command header byte
	x1	Top left horizontal start position of the region (2 bytes).
	у1	Top left vertical start position of the region (2 bytes).
	x2	Bottom right horizontal end position of the region (2 bytes).
	y2	Bottom right vertical end position of the region (2 bytes).
Response	acknowledge	
	acknowledge	06 (hex) : ACK byte if successful 15 (hex) : NAK byte if unsuccessful
Description	on the screen. touch activity touch activity	specifies a touch detect region. This setting will filter out any outside the region and only within that region will be "Get Touch Coordinates — and. x1,y1 touch region x2,y2

2.5 SD Memory Card Commands (Low-Level/RAW)

The commands detailed in this section utilise the SD/microSD memory card which must be connected to the SPI port of the PICASO-SGC. The memory card is used as the storage medium for all multimedia objects such as images, icons, animations and video clips which can be accessed and displayed. The memory card can also be used by the host controller as a general purpose storage medium such as data logging applications.

The following commands are related to Low-Level memory card operations and they are described in this section.

Summary of Commands in this section:

- Initialise Memory Card @69hex
- Set Address Pointer of Card (RAW) @41hex
- Read Byte Data from Card (RAW) @72hex
- Write Byte Data to Card (RAW) @77hex
- Read Sector Block Data from Card (RAW) @52hex
- Write Sector Block Data to Card (RAW) @57hex
- Screen Copy-Save to Card (RAW) @43hex
- Display Image-Icon from Card (RAW) @49hex
- Display Object from Card (RAW) @4Fhex
- Display Video-Animation Clip from Card (RAW) @56hex
- Run Script (4DSL) Program from Card (RAW) @50hex

2.5.1 Initialise Memory Card - @69hex

Command	ext_cmd, cmd	
	ext_cmd	40(hex) or @(ascii): Extended Command header byte
	cmd	69 (hex) or i(ascii): Command header byte
Response	acknowledge	
	acknowledge	06 (hex) : ACK byte if successful
		15(hex): NAK byte if unsuccessful or card not present.
Description	This command initialises the memory card. The memory card is always initialised upon Power-Up or Reset cycle, if the card is present. If the card is inserted after the power up or a reset then this command must be used to initialise the card.	
	Note! There is	no card insert/remove auto detect facility.

2.5.2 Set Address Pointer of Card (RAW) - @41hex

	T		
Command	ext_cmd, cmd, Address(Umsb:Ulsb:Lmsb:Llsb)		
	ext_cmd 40(hex) or @(ascii) : Extended Command header byte		
	cmd 41 (hex) or A (ascii) : Command header byte		
	Address	A 4 byte card memory address (big endian) for byte wise access.	
Response	acknowledge		
	acknowledge	06 (hex) : ACK byte if successful	
		15(hex): NAK byte if unsuccessful or card not present.	
Description	This command sets the internal memory address pointer for byte wise reads and writes.		
	After a byte read or write, the memory Address pointer is automatically incremented		
	internally to the next byte address location.		

2.5.3 Read Byte Data from Card (RAW) - @72hex

Command	ext_cmd, cmd	
	ext_cmd	40(hex) or @(ascii): Extended Command header byte
	cmd	72(hex) or r(ascii) : Command header byte
Response	data_byte	
	data_byte	1 byte of card data
Description	this command Pointer of Mer byte of data re	provides a means of reading a single byte of data back from the card. Before can be used, memory address location must be set using the "Set Address mory Card" command. Once this command is sent, the device will return 1 elating to that memory location set by the memory address pointer. The ss location pointer is automatically incremented to the next byte address

2.5.4 Write Byte Data to Card (RAW) - @77hex

Command	ext_cmd, cmd, data	
	ext_cmd	40(hex) or @(ascii) : Extended Command header byte
	cmd	77(hex) or w(ascii): Command header byte
	data	1 byte of card data
Response	acknowledge	
	acknowledge	06 (hex): ACK byte if successful 15 (hex): NAK byte if unsuccessful or card not present.
Description	This command permits writing single bytes of data to the card. This is useful for writing smartchunks of data at irregular intervals quickly. For large data blocks it is more efficient to use the "Write Sector Block Data to Memory Card" command described previously. Before this command can be used, the card memory address location must be set using the "Set Address Pointer of Memory Card" command. Once the Write Byte command is sent, single byte of data will be stored to that memory location set by the memory address pointer. The memory address pointer is automatically incremented to the next location.	
	Only the data byte is written. Other bytes in the command message are not stored.	

2.5.5 Read Sector Block Data from Card (RAW) - @52hex

Command	ext_cmd, cmd, SectorAdd(hi:mid:lo)		
	ext_cmd 40(hex) or @(ascii) : Extended Command header byte		
	cmd 52 (hex) or R (ascii) : Command header byte		
	SectorAdd	3 bytes (big endian) sector address. Sector address range from 0 to 16,777,215 depending on the capacity of the card. Each sector is 512 bytes in size. There are 2048 sectors per every 1Mb of card memory.	
Response	data(1512)		
	data	512 bytes of sector data	
Description	This command will return 512 bytes of data relating to a sector.		

2.5.6 Write Sector Block Data to Card (RAW) - @57hex

Command	ext_cmd, cmd,	SectorAdd(hi:mid:lo), data(1512)
	ext_cmd	40(hex) or @(ascii): Extended Command header byte
	cmd	57(hex) or W(ascii) : Command header byte
	SectorAdd	3 bytes (big endian) sector address.
	data	512 bytes of sector data. Data length must be 512 bytes.
Response	acknowledge	
	acknowledge	06 (hex): ACK byte if successful 15 (hex): NAK byte if unsuccessful or card not present.
Description	This command allows downloading and writing blocks of sector data to the card. The data block must always be 512 bytes in length. For large volumes of data such as images, the data must be broken up into multiple sectors (chunks of 512 bytes) and this command then maybe used many times until all of the data is written. If the data block to be written is less than 512 bytes in length, then make sure the rest of the remaining data are padded with 00hex or FFhex (it can be anything). If only few bytes of data are to be written then the "Write Byte Data to Card - @77hex" command can be used. Once this command is sent, the device will take a few milliseconds to write the data into its memory card and at the end of which it will respond. Only data(1512) are written to the sector. Other bytes in the command message do not get written.	

2.5.7 Screen Copy – Save to Card (RAW) - @43hex

Command	ext_cmd, cmd, x(msb:lsb), y(msb:lsb), width(msb:lsb), height(msb:lsb), SectorAdd(hi:mid:lo)		
	ext_cmd	40(hex) or @(ascii): Extended Command header byte	
	cmd	43(hex) or C(ascii): Command header byte	
	х	Top left horizontal start position of screen area to be copied (2 bytes).	
	У	Top left vertical start position of screen area to be copied (2 bytes).	
	width	Width of screen area to be copied (source, 2 bytes).	
	height	Height of screen area to be copied (source, 2 bytes).	
	SectorAdd	3 bytes (big endian) sector address where the copied screen area is to be saved.	
Response	acknowledge		
	acknowledge	06 (hex) : ACK byte if successful 15 (hex) : NAK byte if unsuccessful	
Description	This command copies an area of the screen of specified size. The start location of the block to be copied is represented by x , y (top left corner) and the size of the area to be copied is represented by width and height parameters. This is similar the "Screen Copy-Paste" command but instead of the copied screen area being pasted to another location on the screen it is stored into the memory card. The stored screen image can then be later recalled from the memory card and redisplayed onto the screen at the same or different location by using the "Display Image-Icon from Card" command. This is a very powerful feature for animating objects, smooth scrolling, or implementing a windowing system.		
	16 bit i The im	creen Copy-Save to Card" command always stores that part of the screen as a mage, i.e. 2 bytes per pixel. ages or icons when stored into the memory card must be sector boundary , i.e. the object start location must be at the start of a sector boundary.	

2.5.8 Display Image-Icon from Card (RAW) - @49hex

Command	ext_cmd.cmd	x(msb:lsb), y(msb:lsb), width(msb:lsb), height(msb:lsb), colourMode,
- January	SectorAdd(hi:n	
	ext_cmd	40(hex) or @(ascii): Extended Command header byte
	cmd	49(hex) or I(ascii): Command header byte
	х	Image horizontal start position (top left corner, 2 bytes).
	У	Image vertical start position (top left corner, 2 bytes).
	width	Horizontal size of the image (2 bytes).
	height	Vertical size of the image (2 bytes).
	colourMode	08 (hex): 256 colour mode, 8bits/1byte per pixel. 10 (hex): 65K colour mode, 16bits/2bytes per pixel.
	SectorAdd	3 bytes (big endian) sector address of a previously stored Image-Icon that is about to be displayed.
Response	acknowledge	
	acknowledge	06(hex): ACK byte if successful 15(hex): NAK byte if unsuccessful
Description	This command displays a bitmap image or an icon on the screen that has been pressured at a particular sector address in the memory card. The screen position of the imbe displayed is specified by (x, y) and the size of the image by width and height parameter the previously stored image was in 8 bit colour format (1 byte per pixel) or 16 bits (2 per pixel) then this must be specified in the colourMode byte parameter. Do not st image/icon in one colour format then display it in another colour format, this will resuccorrupted image. Notes:	
	• The "So 16 bit i • The im	creen Copy-Save to Card" command always stores that part of the screen as a mage, i.e. 2 bytes per pixel. ages or icons when stored into the memory card must be sector boundary I, i.e. the object start location must be at the start of a sector boundary.

2.5.9 Display Object from Card (RAW) - @4Fhex

Command	ext_cmd, cmd, Address(Umsb:Ulsb:Lmsb:Llsb)		
	ext_cmd 40(hex) or @(ascii) : Extended Command header byte		
	cmd 4F (hex) or O (ascii) : Command header byte		
	Address	A 4 byte card memory address (big endian) of a previously stored Object that is about to be displayed.	
Response	acknowledge		
	acknowledge	06 (hex) : ACK byte if successful	
		15(hex): NAK byte if unsuccessful or card not present.	
Description	Some of the commands can be stored as objects in the memory card which can be later recalled by the host on demand and displayed or executed. The user must make sure the 32 bit address of each stored command/object is known before using this feature. For example, a series of images can be stored as icons and later displayed as the application requires them. The table at the end of this section lists all of the commands that can be stored as objects within the memory card.		

2.5.10 Display Video-Animation Clip from Card (RAW) - @56hex

Command	ext_cmd, cmd,	x(msb:lsb), y(msb:lsb), delay, SectorAdd(hi:mid:lo)
	ext_cmd	40(hex) or @(ascii): Extended Command header byte
	cmd	56 (hex) or V (ascii) : Command header byte
	x	Video horizontal start position (top left corner, 2 bytes).
	У	Video vertical start position (top left corner, 2 bytes).
	delay	1 byte inter-frame delay in milliseconds. This parameter can be used to determine the speed of the video playback.
	SectorAdd	3 bytes (big endian) sector address of a previously stored video-animation clip that is about to be displayed.
Response	acknowledge	
	acknowledge	06 (hex) : ACK byte if successful 15 (hex) : NAK byte if unsuccessful
Description	Image/Video loaded to the SD card using Raw with header on the Graphics Composer . This command plays a video or an animation clip on the screen that has been previously stored at a particular sector address in the memory card. The screen position of the clip to be played is specified by (x, y) and the size of the clip by width and height parameters. Note: To create the video, use the 'uSD Raw' option and a sector offset that is greater that the start of the Raw partition, because Graphics Composer currently does not recognism multiple partitions on a uSD card. To issue the Display Video command the Sector Address in the offset into the raw partition, not the offset you specified in Graphics Composer.	
	GOLDELOX-SGO	mat used by this command is different from the video format used in the C format. The video parameters such as width, height and colour-mode are ideo header file and do not need to be specified by the host.
Example1	Partition a 4GB card such that first NonFs sector is 3872257. Set the offset address, under "uSD Raw", to 3872260. Sector address to display the video will be 0000(MSW), 0003(LSW).	
Example2		ct FAT" command (not recommended), the Sector addresses to be used will the sector offset specified in GC file.
		3 card such that first NonFs sector is 3872257. Set the offset address, under 3872260. Sector address to display the video will be 003B(MSW), 1604(LSW).

Command	ext_cmd, cmd, x(msb:lsb), y(msb:lsb), width(msb:lsb), height(msb:lsb), colourMode, delay, frames(msb:lsb), SectorAdd(hi:mid:lo)			
	ext_cmd	40(hex) or @(ascii): Extended Command header byte		
	cmd	56 (hex) or V (ascii) : Command header byte		
	x	Video horizontal start position (top left corner, 2 bytes).		
	У	Video vertical start position (top left corner, 2 bytes).		
	width	Width of the video/animation, 2 bytes		
	height	Height of the video/animation, 2 bytes		
	colourMode	08 (hex): 256 colour mode, 8bits/1byte per pixel. 10 (hex): 65K colour mode, 16bits/2bytes per pixel.		
	delay	1 byte inter-frame delay in milliseconds. This parameter can be used to determine the speed of the video playback.		
	frames			
	SectorAdd	3 bytes (big endian) sector address of a previously stored video-animation clip that is about to be displayed.		
Response	acknowledge			
	acknowledge	06 (hex): ACK byte if successful 15 (hex): NAK byte if unsuccessful		
Description	Image/Video loaded to the SD card using Raw without header on the Graphics Composer . This command plays a video or an animation clip on the screen that has been previously stored at a particular sector address in the memory card. Position of the clip to be played is specified by (x, y) . Other parameters can be extracted from the text file created on the Graphics Composer after burning the slide show on the SD card under serial platform option. Display Control Function (<i>Syntax: cmd, mode, value</i>) can be used to set "Image Format" to "Old format" i.e mode = 06hex. Value = 01hex. Refer to Sec 2.1.6. Image format is "Old Format" by default. Note: Make sure colourMode is same as set on the Graphics Composer while setting the video/animation properties.			
Example	Set Display Control Function 59hex, 06hex, 01hex Display video/Animation from card 40hex, 56hex, 00hex, 00hex, 00hex, 01hex, 40hex, 00hex, F0hex, 10hex, 00hex, 02hex, 5Fhex, 00hex, 10hex, 00hex			

2.5.11 Run Script (4DSL) Program from Card (RAW) - @50hex

Command	ext_cmd, cmd,	Address(Umsb:Ulsb:Lmsb:Llsb)	
	ext_cmd	40(hex) or @(ascii) : Extended Comm	and header byte
	cmd	50(hex) or P(ascii): Command header	r byte
	Address	A 4 byte card memory start addres Language) program.	s (big endian) of a 4DSL (4D Scripting
Response	acknowledge		
	acknowledge	There is no response to a successful may never end. 15 (hex): NAK byte if unsuccessful or	command, as potentially the command card not present.
Description	The majority of the commands can be composed as a script and written into memory card. A 4DSL script program is a sequence of those commands that reside and can be executed from inside the memory card and these can be a combination of graphics, text, image, video and audio commands. Complete list of commands available for the scripting program is listed in section 2.8.		
	and automatication further interactions	ally start executing a 4DSL script progra	ointer to jump to the specified address am, from the memory card without any sequentially execute any valid 4DSL the program.
Example	A sample script program inside the memory card:		
_	Address	Command	Comment
	00000000	45	Erase Screen
	0000001	43 00 64 00 32 00 14 00 1F	Draw Circle
	000000A	07 03 E8	Delay(1second)
	000000D	72 00 00 00 00 00 3C 00 3C 07 E0	Draw Rectangle
	00000018	40 56 00 00 00 00 00 46 00 32 10	Play video from card
		0A 02 5F 00 10 00	
	00000029	0B 00 00 00 00	Goto Address 00000000

2.6 SD Memory Card Commands (FAT-Level/DOS)

The commands detailed in this section utilise the SD/microSD memory card which must be connected to the SPI port of the PICASO-SGC. The memory card is used as the storage medium for all multimedia objects such as images, icons, animations and video clips which can be accessed and displayed. The memory card can also be used by the host controller as a general purpose storage medium such as data logging applications.

The following commands are related to FAT-Level memory card operations and they are described in this section. Currently only the FAT (FAT16) format is supported. FAT32 is not supported and if a FAT32 formatted card is used then all access (both RAW and FAT16 commands) to the card will fail.

Note: The PICASO-SGC also supports high capacity HC memory cards (4Gb and above). The available capacity of SD-HC cards varies according to the way the card is partitioned and the commands used to access it.

The FAT partition is always first (if it exists) and can be up to the maximum size permitted by FAT16. Windows will format FAT16 up to 2Gb and the Windows command prompt will format FAT16 up to 4Gb.

For the RAW partition, byte reads and writes can access 2^32 (i.e. 4gb) of the card, Sector reads and writes can access 2^24 sectors (of 512 bytes, i.e. 8gb). The total amount of the card usable is the sum of the FAT and RAW partitions.

Summary of Commands in this section:

- Initialise Memory Card @69hex
- Read File from Card (FAT) @61hex
- Write File to Card (FAT) @74hex
- Erase file from Card (FAT) @65hex
- List Directory from Card (FAT) @64hex
- Screen Copy-Save to Card (FAT) @63hex
- Display Image-Icon from Card (FAT) @6Dhex
- Play Audio WAV file from Card (FAT) @6Chex
- Run Script (4DSL) Program from Card (FAT) @70hex

2.6.1 Initialise Memory Card - @69hex

Command	ext_cmd, cmd	
	ext_cmd 40(hex) or @(ascii) : Extended Command header byte	
	cmd	69 (hex) or i(ascii): Command header byte
Response	acknowledge	
	acknowledge	06 (hex) : ACK byte if successful
		15(hex): NAK byte if unsuccessful or card not present.
Description	This command initialises the memory card. The memory card is always initialised upon Power-Up or Reset cycle, if the card is present. If the card is inserted after the power up or a reset then this command must be used to initialise the card.	
	Note! There is no card insert/remove auto detect facility.	

2.6.2 Read File from Card (FAT) - @61hex

Command	ext_cmd, cmd,	handshaking, "file_name", terminator	
	ext_cmd	40(hex) or @(ascii): Extended Command header byte	
	cmd	61 (hex) or a (ascii) : Command header byte	
	handshaking	How often the host sends an ACK(06hex) to request more data during	
		transmission:- 00 – No handshaking, Use only for small files (<= 512 bytes) 01 – Once for each byte 02 – Once for each two bytes 50(32hex), maximum allowed	
	file_name	The filename is 1-12 chars long with an assumed '.' between chars 8 and 9, if there is not one specified in the filename.	
	terminator	The file_name string must be terminated with a NULL, 00 (hex).	
Response	file_size(Umsb:Ulsb:Lmsb:Llsb), file_data(1N), acknowledge		
	file_size	4 bytes of file size (big endian format).	
	file_data	Complete file data block: No Handshaking Block of file data: block size determined by value set in handshaking.	
	acknowledge	06 (hex) : ACK byte if successful 15 (hex) : NAK byte if unsuccessful	
Description	Using this command, the host can read a DOS compatible (FAT) file from the memory card. Because the time taken to process the read bytes varies, a technique is required to ensure that the host communications buffer does not overflow and data is not lost. This is implemented by a simple <i>handshaking</i> protocol where the PICASO-SGC will break up the file into smaller data blocks. When the host receives a block, it sends an ACK(06hex) to request the next block of data. The size of the data block is initially set by the host in the command packet, specified by the value in the "handshaking" byte. The larger the value the better, as long as the host system can buffer the incoming block size. Setting this value too low will slow the transfer.		
	The first 4 bytes sent by the device, after receiving the command packet, represent the size of the requested file (Umsb:Ulsb:Lmsb:Llsb). The host then responds with an ACK(06hex) to indicate it wants the file, or NAK(15hex) if it wishes to terminate the receive. The first block of data bytes (block size set by the handshaking value) of the file are then sent from the device, the host then responds with another ACK(06hex) to receive the next block of bytes. This process continues until all of the file data has been received.		
	The device responds with a final ACK if the transfer completes successfully, otherwise it responds with a NAK. The final ACK is not part of the handshaking.		
	Note: Refer to Diagram1 and Diagram2 on the next page.		


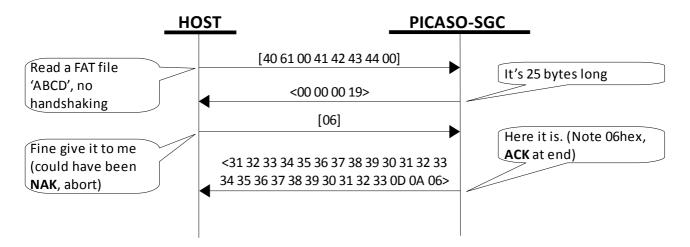


Diagram 1: Read File - No Handshaking

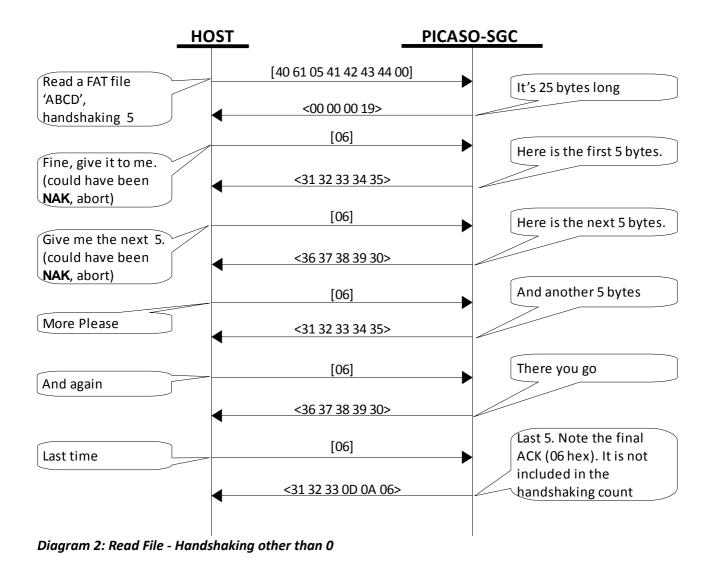

© 2010 4D Labs www.4d-Labs.com Page 66 of 91

2.6.3 Write File to Card (FAT) - @74hex

Command	ext_cmd, cmd, options, "file_name", terminator, filesize(Umsb:Ulsb:Lmsb:Llsb), file_data(1 N)		
	ext_cmd	40(hex) or @(ascii): Extended Command header byte	
	cmd	74 (hex) or t (ascii) : Command header byte	
	options	Controls handshaking (how often the device sends an ACK to request more data from the host) and whether an existing file is appended to. Handshaking:	
		00 – No handshaking, limit this to small files (<= 100 bytes) 01 – Once for each byte 02 – Once for each two bytes	
		50(32 hex), maximum allowed Append Mode:	
		 00(hex) – No Append, file will be created (or overwritten if it exists). 80(hex) – Append mode, file will be appended to (or created if it doesn't exist). 	
		Note: The two options are added, or OR ed together to produce the final options, e.g. 82 (hex) would indicate handshaking for every two bytes and Append mode.	
	file_name	The filename is 1-12 chars long with an assumed '.' between chars 8 and 9, if there is not one specified in the filename.	
	terminator	The file_name string must be terminated with a NULL, 00 (hex).	
	file_size	4 bytes of file size (big endian format).	
	file_data	Complete file data block: No Handshaking Block of file data: block size determined by value set in handshaking.	
Response	acknowledge		
	acknowledge	06 (hex): ACK byte if successful 15 (hex): NAK byte if unsuccessful	
Description	This command allows the host to write a DOS compatible (FAT) file to the memory card. PICASO-SGC device serial port (UART), has a buffer size of 512 bytes for capturing incordata from the host. If this buffer fills up and overflows, data will be lost. Therefore the must allow the device enough time to write its buffer to the memory card so it can treceive further file data from the host. For small files (less than 100 bytes in the approach) the host can send the complete file data in one attempt. However, for larger files simple handshaking protocol is implemented where the host sends the file data in so blocks. Using this handshaking method, the host always waits for an ACK from the debefore sending the next block of data. The size of the data block is initially set by the host the command packet, specified by the handshaking value in the "options" byte. The late the value the better. Setting it too low will slow the transfer. The first ACK is always sent the device, after the filesize parameter is transmitted by the host, or this could also be a in which case one of the parameters is invalid or a file system error occurred.		
		et handshaking to zero if the file size is larger than 512 bytes. Diagram3 and Diagram4 on the next page.	


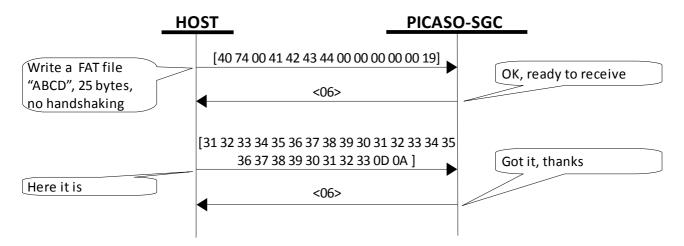


Diagram 3: Write File - No Handshaking

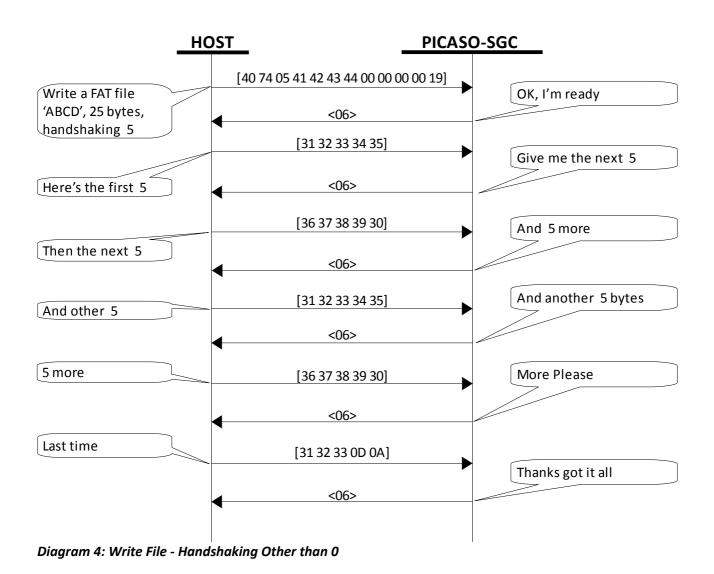

© 2010 4D Labs www.4d-Labs.com Page 68 of 91

2.6.4 Erase File from Card (FAT) - @65hex

Command	ext_cmd, cmd, "file_name", terminator		
	ext_cmd	40(hex) or @(ascii): Extended Command header byte	
	cmd_hdr	65(hex) or e(ascii): Command header byte	
	file_name	The filename is 1-12 chars long with an assumed '.' between chars 8 and 9, if there is not one specified the filename.	
	terminator	The file_name string must be terminated with a NULL, 00 (hex)	
Response	acknowledge		
	acknowledge	06 (hex) : ACK byte if file deleted successfully	
		15(hex): NAK byte if file not found or an error has occurred	
Description	Erases the file specified in the "file_name".		

2.6.5 List Directory of Card (FAT) - @64hex

Command	ext_cmd, cmd,	"file_name", terminator	
	ext_cmd	40(hex) or @(ascii) : Extended Command header byte	
	cmd_hdr	64 (hex) or d (ascii) : Command header byte	
	file_name	The filename is 1-12 chars long with an assumed '.' between chars 8 and 9, if there is not one specified the filename. Wild cards such as '*' and '?' are allowed.	
	terminator	The file_name string must be terminated with a NULL, 00 (hex)	
Response	"fileName1", delimiter, , "fileNameN", delimiter, acknowledge		
	fileName	Character string of the file name in the memory card. Maximum of 12 character bytes (including '.' separator) are returned in the string for the file name. This will be repeated for all files in the directory. An empty directory with no files or the result of an unsuccessful file name or wild card search will only return an ACK.	
		Note: At present the PICASO-SGC chip only supports a single directory structure. Future enhancements will support nested directories.	
	delimiter	0A (hex) : newline	
	acknowledge	06 (hex): ACK byte if successful 15 (hex): NAK byte if an error has occurred	
Description	Returns a directory listing (stream of characters) consisting of the files names matching the "file_name" delimited by a Newline(0A hex) character. Always responds with an ACK at the completion of a listing. Responds with a NAK if a file error occurs.		
		ctory with no files or the result of an unsuccessful file name or wild card return an ACK.	

2.6.6 Screen Copy – Save to Card (FAT) - @63hex

Command	ext_cmd, cmd, terminator	x(msb:lsb), y(msb:lsb), width(msb:lsb), height(msb:lsb), "file_name",	
	ext_cmd	40(hex) or @(ascii): Extended Command header byte	
	cmd	63 (hex) or c (ascii) : Command header byte	
	х	Top left horizontal start position of screen area to be copied (2 bytes).	
	У	Top left vertical start position of screen area to be copied (2 bytes).	
	width	Width of screen area to be copied (source, 2 bytes).	
	height	Height of screen area to be copied (source, 2 bytes).	
	file_name	The filename is 1-12 chars long with an assumed '.' between chars 8 and 9, if there is not one specified the filename.	
	terminator	The file_name string must be terminated with a NULL, 00 (hex)	
Response	acknowledge	knowledge	
	acknowledge	06 (hex) : ACK byte if successful 15 (hex) : NAK byte if unsuccessful	
Description	This command copies an area of the screen of specified size. The start location of the block to be copied is represented by x , y (top left corner) and the size of the area to be copied is represented by width and height parameters. This is similar the "Screen Copy-Paste" command but instead of the copied screen area being pasted to another location on the screen it is stored into the memory card in FAT format with the specified filename . The stored screen image can then be later recalled from the memory card and redisplayed onto the screen at the same or different location by using the "Display Image-Icon from Card (FAT)" command. This is a very powerful feature for animating objects, smooth scrolling, or implementing a windowing system. Note: This command always stores that part of the screen as a 16 bit image, i.e. 2 bytes per pixel.		

2.6.7 Display Image-Icon from Card (FAT) - @6Dhex

Command	ext_cmd, cmd,	"file_name", terminator, x(msb:lsb), y(msb:lsb), imagePos(msb:lsb)	
	ext_cmd	40(hex) or @(ascii): Extended Command header byte	
	cmd	6D(hex) or m(ascii): Command header byte	
	file_name	The filename is 1-12 chars long with an assumed '.' between chars 8 and 9, if there is not one specified the filename.	
	terminator	The file_name string must be terminated with a NULL, 00 (hex)	
	х	Image horizontal start position (top left corner).	
	У	Image vertical start position (top left corner).	
	imagePos	3 bytes (big endian) sector address of a previously stored Image-Icon that is about to be displayed.	
Response	acknowledge		
	acknowledge	06 (hex) : ACK byte if successful 15 (hex) : NAK byte if unsuccessful	
Description	This command displays a bitmap image or an icon on to the screen that has been previously stored in the FAT file (specified by " filename ") on the memory card. The screen position of the image to be displayed is specified by (x, y) .		
	Note: The "Screen Copy-Save to Card (FAT)" command always stores that part of the screen as a 16 bit image, i.e. 2 bytes per pixel.		
	This command can also be used to display multimedia objects in the GCI file, created from the Graphics Composer. The video parameters such as width, height and colour-mode are built into the GCI file; they don't need to be specified by the host controller. All you need is GCI filename which is loaded to the SD card, and the pointer to the multimedia object which can be found from the .DAT file created by the Graphics Composer along with the GCI file.		

2.6.8 Play Audio WAV file from Card (FAT) - @6Chex

Command	ext_cmd, cmd,	option, "file_name", terminator	
	ext_cmd	40(hex) or @(ascii): Extended Command header byte	
	cmd	6C(hex) or I(ascii): Command header byte	
	option	This byte specifies the available options for the WAV file:	
		00hex : Return when playing complete	
		01hex : Return immediately	
		02hex : STOP currently playing WAV file	
		O3hex: PAUSE currently playing WAV file	
		04hex : RESUME currently playing WAV file	
		05hex : LOOP playing until stopped	
	file_name	The name of the WAV file in the memory card. The file name is 1-12 chars long with an assumed '.' between chars 8 and 9, if there is not one specified the filename.	
	terminator	The file_name string must be terminated with a NULL, 00 (hex)	
Response	acknowledge		
	acknowledge	06 (hex): ACK byte if successful 15 (hex): NAK byte if unsuccessful	
Description	This command plays a WAV file from the memory card. Wave files should be mono to keep data bandwidth to a minimum, and should be 'canonic' format. Lots of windows formats		
	wont work. Use something like 'Cool Edit' or similar to tailor the wav files to a suitable format.		
	The ideal sample rate of the WAV file is 16Khz-Mono and the maximum should be 22Khz. Any higher sample rate will extremely slow down the system. Sample rates below 12Khz, the PWM will cause aliasing (filtering is a bare minimum).		
	If you only hear noise or random snippets of sound remember, the Speed and Capacity of the memory card are important, most 2Gb cards should be fine, 64mb cards fail all but the most simple sounds.		

2.6.9 Run Script (4DSL) Program from Card (FAT) - @70hex

Command	ext_cmd, cmd, "file_name", terminator		
	ext_cmd	40(hex) or @(ascii): Extended Command header byte	
	cmd	70 (hex) or p (ascii) : Command header byte	
	file_name	The file name of the scripting file in the memory card. The file name is 1-12 chars long with an assumed '.' between chars 8 and 9, if there is not one specified the filename.	
	terminator	The file_name string must be terminated with a NULL, 00 (hex)	
Response	acknowledge		
	acknowledge	06 (hex): ACK byte if successful 15 (hex): NAK byte if unsuccessful or card not present.	
Description	further interact display objects the Jump to Adare no undesiration. The PICASO-SG run a preloade up, if a file automatically ethose stand alcommands to the user will have a stand play from the user will have been standed to the user will have been standed to the user will have been standed to the user will have been supported to a standard the user will have been standard to the user will have been supported to a standard the user will have been supported to the user will be used to the user will be user will be used to the user will be user	nand executes the specified file name from the memory card without any tion by the host processor. It will sequentially execute all valid commands and until it gets to the end of the file. It is advisable to have the Exit Program or ddress commands at the end of the user composed program to ensure there able results at the end of the file. 6C device is equipped to accept memory cards and has a feature that will auto d script program on power-up. When using the FAT file system, upon power-called 'autoexec.4ds' exists on the memory card, the PICASO-SGC will execute this script program from the memory card. This is a useful feature for one applications where the device does not require a host controller to send the PICASO-SGC to play a slide show of images, video clips, etc. ave to create and upload a slide show composition to the card to benefit from eature. Indix B at the end of this document for a quick guide to creating scripting files controller software tool available from 4D Labs.	

2.7 Script Control Commands (4DSL - Script Language)

The commands detailed in this section must reside in the SDHC/SD/microSD memory card. They form the heart of a simple Scripting Language that can be sequentially executed and run from the card. Majority of the commands described in the previous sections can also be included and executed within the script. Additional commands are under development to expand the scripting language and these will be released in due course.

Summary of Commands in this section:

- Delay **07hex**
- Set Counter **08hex**
- Decrement Counter 09hex
- Jump to Card Address If Counter Not Zero OAhex
- Jump to Card Address OBhex
- Exit-Terminate Script Program OChex

2.7.1 Delay - 07hex

Command	ScriptCmd, value(msb:lsb)		
	scriptCmd	07 (hex) : Delay script command	
	value	2 byte (big endian) delay value in milliseconds.	
Description	When commands are executed within the script program a delay can be inserted between		
	subsequent commands. A delay basically has the same effect as a NOP (No Operation) which		
	can be used as a pause between drawing objects or displaying images-videos etc.		

2.7.2 Set Counter - 08hex

Command	ScriptCmd, v	ScriptCmd, value		
	scriptCmd	08(hex): Set Counter script command		
	value	1 byte counter value that can be used with "Decrement Counter" and "Jump		
		to Address If Counter Not Zero" commands to form loops. Practical values		
		should be between 2 and 255.		
Description	Series of images that might be part of an animation may need to be redisplayed over are over to achieve a lengthy viewing. This command when used in conjunction wi "Decrement Counter" and "Jump to Address If Counter Not Zero" commands allow the user to determine exactly how many times the series of images are looped. For example, we may want to animate the Globe rotating. Let's say we have 10 image slid of the Globe at different rotated positions residing in the memory card. When the image are displayed sequentially, the effective duration will only be the length of time it takes display the 10 image frames. We can increase that length by looping through the animatic a number of times depending on the value set in the counter. When the display reaches the end of the last frame and encounters the Decrement Counter followed by Jump to Address Counter Not Zero commands, the counter will be decremented and then the internal point			
	will jump to the memory Address specified in the "Jump to Address If Counter Not Zero"			
	command. This sequence will repeat until the value in the counter reaches zero. The			
	following demonstrates how this maybe used: Address Comment			
	00000000	Set Counter (value = 25),		
	00000002	Display Image from Memory Card (image1),		
	00000012	Delay(10ms),		
	00000015	Display Image from Memory Card (image2),		
	00000025	Delay(10ms),		
	00000119 00000129	Display Image from Memory Card (image10), Delay(10ms),		
	00000123	Decrement Counter		
	00000132	Jump to Address if Counter Not Zero (Address = 00000002)		
	Note: The above example is typical of how a series of commands might be loaded into the memory card and then executed by using the Run Program from Memory Card command. The commands would of course be the series of hex codes.			





















2.7.3 Decrement Counter - 09hex

Command	ScriptCmd		
	scriptCmd	09 (hex) : Decrement Counter script command	
•		e Counter. See detailed description on how this command can be used e "Set Counter" command section.	

2.7.4 Jump to Card Address If Counter Not Zero - OAhex

Command	ScriptCmd, Address(Umsb:Ulsb:Lmsb:Llsb)		
	scriptCmd	OA (hex) : Jump to Address If Counter Not Zero script command	
	Address	A 4 byte (big endian) card memory jump address if counter is not zero.	
Description	address. If the	counter is not zero the program pointer will jump to the specified card counter is zero then it will continue executing the next script command. ailed description on how this command can be used effectively in the "Set nand section.	

2.7.5 Jump to Card Address - OBhex

Command	ScriptCmd, Address(Umsb:Ulsb:Lmsb:Llsb)		
	scriptCmd	OB (hex): Jump to Address script command	
	Address	A 4 byte (big endian) card memory jump address.	
Description		will force the internal 32 bit program memory pointer to jump to the specified card address and start executing commands from there.	

2.7.6 Exit-Terminate Script Program - OChex

Command	ScriptCmd	
	scriptCmd	OC (hex): Exit-Terminate Script Program script command
Description	This command forces the program to stop executing from the memory card and ready to accept and execute commands from the host via the serial interface. When the internal program memory pointer encounters this command it will force the command execution from memory card to terminate. It can also be sent, by the host, via the serial link to terminate a program currently executing from the memory card.	

2.8 Summary List of Commands available for Scripting

The commands listed below are all of the available commands for composing a script program that can be executed within the memory card.

- Version-Device Info Request 56hex
- Replace Background Colour 42hex
- Clear Screen 45hex
- Display Control Functions **59hex**
- Set Volume 76hex
- Add User Bitmap Character 41hex
- Draw User Bitmap Character 44hex
- Draw Circle 43hex
- Draw Triangle **47hex**
- Draw Image-Icon 49hex
- Set background colour 4Bhex
- Draw Line 4Chex
- Draw Polygon **67hex**
- Draw Rectangle 72hex
- Draw Ellipse 65hex
- Draw Pixel 50hex
- Screen Copy-Paste 63hex
- Replace Colour 6Bhex
- Set Pen Size 70hex
- Set Font 46hex
- Set Transparent-Opaque Text **4Fhex**
- Draw ASCII Character (text format) 54hex
- Draw ASCII Character (graphics format) 74hex
- Draw "String" of ASCII Text (text format) 73hex
- Draw "String" of ASCII Text (graphics format) 53hex
- Draw Text Button 62hex
- Wait Until Touch (with time out) 77hex
- Initialise Memory Card @69hex
- Display Video-Animation Clip from Card (RAW) @56hex
- Write File to Card (FAT) @74hex
- Erase file from Card (FAT) @65hex
- List Directory from Card (FAT) @64hex
- Screen Copy-Save to Card (FAT) @63hex
- Display Image-Icon from Card (FAT) @6Dhex
- Play Audio WAV file from Card (FAT) @6Chex
- Delay **07hex**
- Set Counter 08hex
- Decrement Counter 09hex
- Jump to Card Address If Counter Not Zero **OAhex**
- Jump to Card Address OBhex
- Exit-Terminate Script Program OChex

3. Appendix A: Development and Support Tools

3.1 PmmC Loader - PmmC File Programming Software Tool

The 'PmmC Loader' is a free software tool for Windows based PC platforms. Use this tool to program the latest PmmC file into the PICASO-SGC chip embedded in your application board. It is available for download from the 4D Systems website, www.4dsystems.com.au



3.2 microUSB - PmmC Programming Hardware Tool

The micro-USB module is a USB to Serial bridge adaptor that provides a convenient physical link between the PC and the PICASO-SGC device. A range of custom made micro-USB devices such as the uUSB-MB5 and the uUSB-CE5 are available from 4D Systems www.4dsystems.com.au. The micro-USB module is an essential hardware tool for all the relevant software support tools to program, customise and test the PICASO-SGC chip.






3.3 Display Initialisation Setup Personality (DISP) - Software Tool

DISP is a free software tool for Windows based PC platforms. Use this tool to:-


- Configure the PICASO-SGC chip to work with a specific display.
- Modify the way the chip initially sets up the display, e.g. screen saver, brightness, etc.
- Construct the splash screens.
- Replace or modify the embedded fonts.

It is available for download from the 4D Systems website, www.4dsystems.com.au.

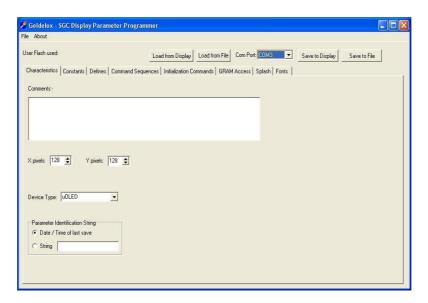

3.4 Graphics Composer – Software Tool


The Graphics Composer is a free software tool for Windows. This software tool is an aid to composing a slide show of images/animations/movie-clips (multi-media objects) which can then be downloaded into the SDHC/SD/uSD/MMC memory card that is supported by the PICASO-SGC. The host simply sends commands to the PICASO-SGC to display the multimedia objects.

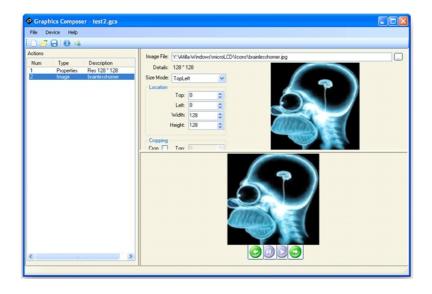

3.5 FONT Tool – Software Tool


Font-Tool is a free software utility for Windows based PC platforms. This tool can be used to assist in the conversion of standard Windows fonts (including True Type) into the bitmap fonts used by the PICASO-SGC chip. It is available for download from the 4D Systems website, www.4dsystems.com.au.

Disclaimer: Windows fonts may be protected by copyright laws. This software is provided for experimental purposes only.

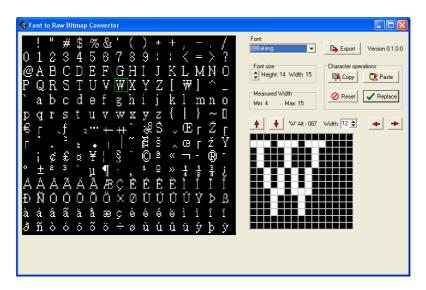

3.6 FAT Controller – Software Test Tool


The 4D FAT Controller is a free software tool to test all of the functionality of the GOLDELOX-DOS, GOLDELOX-SGC and the PICASO-SGC devices and their respective modules. It is useful in learning about how to communicate with the chips and the modules. For the GOLDELOX-SGC and the PICASO-SGC it can also simulate most of the operation of the device and assist in the creation of simple scripts, either simulating the execution of those scripts and / or downloading them into a uSD/uSDHC card for execution on the display.

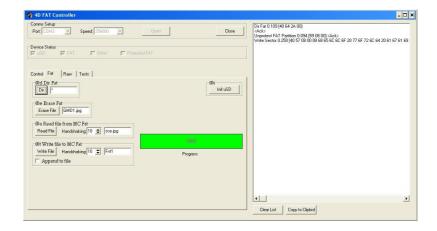

3.7 RMPET – Software Tool

uSD/SD/SDHC memory cards nearly always come pre-partitioned with a single partition. Windows only accesses the first partition on the card and ignores any other partitions. Removable Media Partition Edit Tool (RMPET) can split a large card into two partitions, the first partition for use as a FAT16 partition and the second partition for use as a RAW partition. RMPET allows setting of the first partition to a percentage of the card, the 2Gb maximum of the FAT16 Windows format program, or the 4Gb maximum of FAT16 when the command prompt format command is used.

It is available for download from the 4D Systems website, www.4dsystems.com.au.

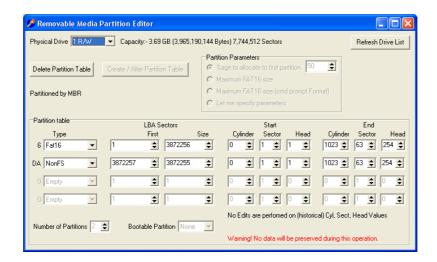

3.8 Evaluation Display Modules

The following modules, available from 4D Systems, can be used for evaluation purposes to discover what the PICASO-SGC processor has to offer.






4. Appendix B: Using the FAT-Controller to Compose Script Programs

4.1 Getting Started

- Download and run the FAT-Controller software (for PC Windows) from the <u>www.4dsystems.com.au</u> website.
- You will need a USB to Serial converter module to provide a serial link between the FAT-Controller running on your PC and the PICASO-SGC application display module. 4D Systems has a range of appropriate modules such uUSB-CE5 and uUSB-MB5.

4.2 Starting a Script

- Before starting to construct your script, click the "Clear Script" command button, otherwise the script log will start from the time Com port is opened.
- Run all the appropriate commands you need for the script composition and click "Save Script" to save the script with .4dScpObj extension.

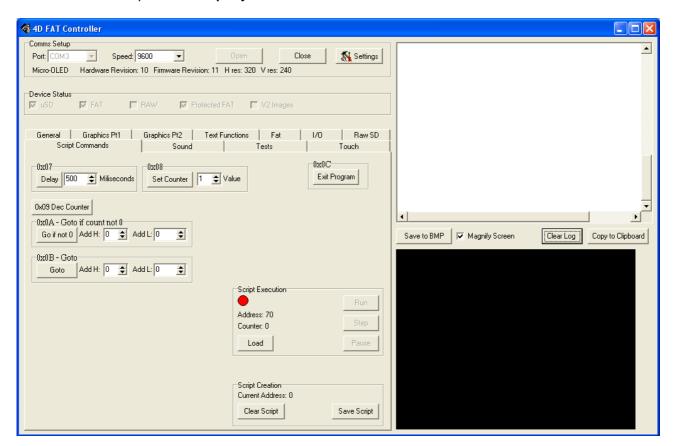

4.3 Running the Script

- Click Load button under the "Script Execution Section" under the "Script Commands" tab. A
 dialogue box will open up.
- Select your saved script file and click Run to run the script.

4.4 Running the .4ds Script Program from the Memory Card


- Under the "Fat" tab look for the "@p Run Program as from MC FAT" option.
- Insert the memory card into the PICASO-SGC based application display module with. Make sure the .4ds script file is saved on to the memory card.
- Now click Execute Program. This command will run the slide show with the command sent to the PICASO-SGC via the serial port.

4.5 Running the Auto-Run Script Slide Show

- To make an Auto-Run script file, rename the created script file (described previously) to autoexec.4ds and save it to the memory card.
- Insert the memory card into the application display module and power up the module. The autoexec.4ds script file will now run automatically.


4.6 Running Graphics Composer GCI files from the Memory Card

- The Graphics Composer is a separate software tool that will convert all standard image and video files into a format that can be used by the PICASO-SGC device. It can be downloaded from www.4dsystems.com.au
- The Graphics Composer will create bot a GCI and DAT file. Load both of these files into the memory card.
- Open the DAT file with a text editor and note the the image/video file names and their corresponding addresses in the memory card. See snapshot below:

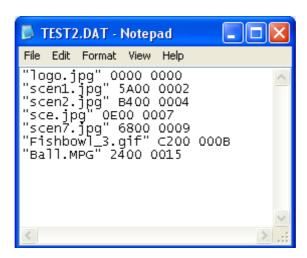

- Note the addresses on the DAT file are LSW (Least Significant Word), MSW (Most Significant Word) e.g. for "scen1.jpg" the LSW = 5A00(hex) and the MSW = 0002(hex).
- Under the "Fat" tab look for the "Display Image @m" command. Enter the GCI file name along with its extension.
- Enter the screen position you wish to display the image.
- Enter the address location of the image in the GCI file. Note that the entry is in decimal. For example for "scen1.jpg" Index H = 2 (0002hex), Index L = 23040 (5A00hex).

• Click the "Display Image" button. The image will now be displayed on the target display module. Make sure the memory card is first inserted into the display module.

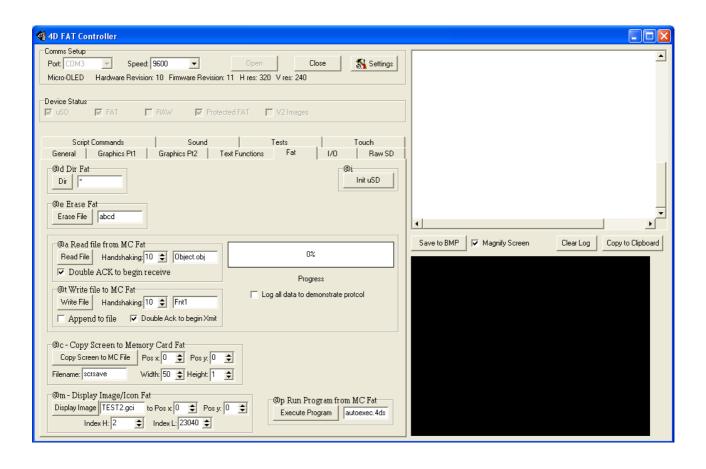

Proprietary Information

The information contained in this document is the property of 4D Labs Pty. Ltd. and may be the subject of patents pending or granted, and must not be copied or disclosed with out prior written permission.

4D Labs endeavours to ensure that the information in this document is correct and fairly stated but does not accept liability for any error or omission. The development of 4D Labs products and services is continuous and published information may not be up to date. It is important to check the current position with 4D Labs.

All trademarks belong to their respective owners and are recognised and acknowledged.

Disclaimer of Warranties & Limitation of Liability

4D Labs makes no warranty, either express or implied with respect to any product, and specifically disclaims all other warranties, including, without limitation, warranties for merchantability, non-infringement and fitness for any particular purpose.

Information contained in this publication regarding device applications and the like is provided only for your convenience and may be superseded by updates. It is your responsibility to ensure that your application meets with your specifications.

In no event shall 4D Labs be liable to the buyer or to any third party for any indirect, incidental, special, consequential, punitive or exemplary damages (including without limitation lost profits, lost savings, or loss of business opportunity) arising out of or relating to any product or service provided or to be provided by 4D Labs, or the use or inability to use the same, even if 4D Labs has been advised of the possibility of such damages.

Use of 4D Labs' devices in life support and/or safety applications is entirely at the buyer's risk, and the buyer agrees to defend, indemnify and hold harmless 4D Labs from any and all damages, claims, suits, or expenses resulting from such use. No licenses are conveyed, implicitly or otherwise, under any 4D Labs intellectual property rights.

Copyright 4D Labs Pty. Ltd. 2000-2010.