

SOUTH CENTRAL RAILWAY
SC DIVISION - ALERT ADVICE No. 15/2025

No.sfy-12/SC/AA-15/2025

Date: 03.10.2025

Sub: Shunting on Hand operated Points-Precautions

On 29.09.25 at about 10.20 hrs, while performing shunting with 14no's of empty Coaches with Loco No 13653/WDG3/MLY from Washing line no 4 to Line No3, during forward movement point No 31 (Hand operated point) got trailed through and while backing on to washing siding line no 3, rear trolley in 13th Coach SC 224161 & front trolley in 12th coach 195275/SC from engine got derailed as they have taken two routes. In view of the above incident, it is once again reiterated some of the precautions to be taken while performing shunting on hand operated points for safety in operations.

Shunting in non-interlocked portion/yard of the station:

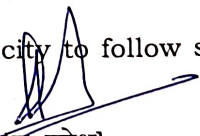
- The Shunting Staff shall be vigilant, alert and shall be in possession of hand signals both by day and night.
- The Loco Pilot / Shunter shall not, however, depend entirely on signals and shall always be vigilant and cautious (GR 5.13.2)
- Do rely more on hand signals than Walkie-Talkie sets while performing shunting
- If the formation is lengthy where the hand signals cannot be seen by each other, depute another person to mediate.
- Observe the correct setting and locking of all point/s either by cotter pin or through clamp & padlock and then exhibit the hand signals
- SPIs where available, the shunting staff and the LP/Shunter shall observe the 'off' position of SPI before making a movement.
- While pushing the formation on to a dead end location, ensure to depute a person at the dead end location to exhibit danger hand signal.
- Ensure air continuity on all wagons while performing shunting.
- Be vigilant, attentive and in a position to stop short of any obstructions while performing shunting.
- In case of any doubt, stop shunting and ensure correct setting & locking of point.

LP/Shunter while performing shunting with or without formation on running lines protected by signals or on non-running lines not protected by signals:

- In case of electric traction loco – do not forget to change the cab (SR 4.21).
- In case of diesel traction loco with dual cab – do not forget to change the cab (SR 4.21).
- In case of diesel traction loco with conventional locos single – do not forget to change the control stand (RB letter No. 2014/M (L)/466/7101.Misc dated 13.3.2015).
- In case of electric / diesel traction multi-loco – do not forget to change the loco (RB letter No. 2014/M (L)/466/7101.Misc dated 13.3.2015).

Note: Ultimate goal of this rule / objective is to ensure that LP/Shunter is always in the leading portion and visibility is not impaired.

The above laid down Instructions/Procedure may be given wide publicity to follow staff without any deviation and compliance to be ensured.


वरि. मंसंधि/सिकं
[A. Suresh]
Sr. DSO/SC

Copy: DRM/SC for kind information.
ADRM/O and ADRM/I for kind information.
All Branch Officers for information and necessary action.
All Field Supervisors for information and necessary action.

दक्षिण मध्य रेलवे

सिकंदराबाद मंडल – चेतावनी सूचना सं. 15/2025

सं. sfy-12/SC/AA-15/2025

दिनांक: 03.10.2025

विषय: हथ प्रचालित पाइंटों पर शंटिंग – पूर्वोपाय

दि. 29.09.2025 को लगभग 10.20 बजे, वाशिंग लाइन संख्या 4 से लाइन नंबर 3 तक लोको नंबर 13653/WDG3/MLY के 14 खाली डिब्बों के साथ शंटिंग करते समय, आगे बढ़ते समय पाइंट नंबर 31 (हथ प्रचालित पाइंट) पीछे छूट गया और वाशिंग साइडिंग लाइन नंबर 3 पर वापस आते समय, इंजन से 13वें कोच SC 224161 की पिछली ट्रॉली और 12वें कोच 195275/SC की अगली ट्रॉली पटरी से उतर गई क्योंकि उन्होंने दो मार्ग अपनाए थे. उपरोक्त घटना को देखते हुए, परिचालन में सुरक्षा के लिए हथ प्रचालित पाइंटों पर शंटिंग करते समय बरती जाने वाली कुछ सावधानियों को एक बार फिर दोहराया जाता है.

स्टेशन के गैर-अंतर्पाशित हिस्से/यार्ड में शंटिंग:

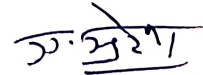
- शंटिंग कर्मचारी को सतर्क एवं सावधान रहना होगा और दिन और रात दोनों समय उनके पास हथ सिगनल होने चाहिए.
- लोको पायलट/शंटर पूरी तरह से सिगनल पर निर्भर नहीं रहेंगे और हमेशा सतर्क एवं सावधान रहेंगे. (सा.नि. 5.13.2)
- शंटिंग करते समय वाकी-टाकी सेट के बजाए हथ सिगनलों पर अधिक भरोसा रखें.
- यदि फार्मेशन लंबा है जहां एक दूसरे द्वारा हथ सिगनलों को नहीं देखा जा सकता हो, तो दूसरे व्यक्ति को हस्तक्षेप करने के लिए नियुक्त करें.
- सभी पाइंटों की सही सेटिंग और कॉटर पिन द्वारा या क्लैप और पैडलॉक द्वारा लॉकिंग देखें और उसके बाद हथ सिगनलों का प्रदर्शन करें.
- जहां एसपीआई उपलब्ध हों, वहां शंटिंग स्टाफ और लोको पायलट/शंटर को मूवमेंट करने से पहले एसपीआई की 'ऑफ' स्थिति का निरीक्षण करना चाहिए.
- डेड एंड लोकेशन पर फार्मेशन को धकेलते समय, डेड एंड लोकेशन पर खतरा हथ सिगनल प्रदर्शित करने के लिए एक व्यक्ति को नियुक्त करना सुनिश्चित करें.
- शंटिंग करते समय सभी वैगनों पर वायु निरंतरता सुनिश्चित करें.
- सतर्क, सावधान रहें और शंटिंग करते समय किसी भी अवरोध से पहले रुकने की स्थिति में रहें.
- किसी भी संदेह के मामले में, शंटिंग बंद करें और पाइंट की सही सेटिंग और लॉकिंग सुनिश्चित करें.

सिगनलों द्वारा संरक्षित रनिंग लाइनों पर या सिगनलों द्वारा संरक्षित न की गई नॉन-रनिंग लाइनों पर फार्मेशन के साथ या बिना फार्मेशन के शंटिंग करते समय लोको पायलट/शंटर:

- विद्युत कर्षण लोको के मामले में – कैब बदलना न भूलें (स.नि. 4.21).
- ड्यूअल कैब के साथ डीज़ल कर्षण लोको के मामले में – कैब बदलना न भूलें (स.नि. 4.21).
- पारंपरिक सिंग लोको के साथ डीज़ल कर्षण लोको के मामले में – कंट्रोल स्टैंड को बदलना न भूलें (रेलवे बोर्ड का पत्र सं. 2014/M (L)/466/7101.Misc दिनांक 13.3.2015).
- विद्युत डीज़ल कर्षण मल्टि-लोको के मामले में – लोको को बदलना न भूलें (रेलवे बोर्ड का पत्र सं. 2014/M (L)/466/7101.Misc दिनांक 13.3.2015).

नोट: इस नियम/उद्देश्य का अंतिम लक्ष्य यह सुनिश्चित करना है कि लोको पायलट/शंटर हमेशा आगे रहे और दृश्यता खराब न हो.

उपर्युक्त निर्धारित अनुदेशों/प्रक्रिया का व्यापक प्रचार किया जाए ताकि कर्मचारी बिना किसी विचलन के इसका पालन करें तथा इसका अनुपालन सुनिश्चित किया जाए.


(ए.सुरेश)

वमंसंधि/सिकंदराबाद

प्रतिलिपि: मंरेप्र/सिकंदराबाद को सूचनार्थ.

अमंरेप्र/प्रचा और अमंरेप्र/इन्फ्रा को सूचनार्थ.

सभी शाखा अधिकारियों को सूचना एवं आवश्यक कार्रवाई के लिए.

सभी फील्ड पर्यवेक्षकों को सूचना एवं आवश्यक कार्रवाई के लिए.