

दक्षिण मध्य रेलवे

संरक्षा.387/फ्लाई लीफ/17/2025

फ्लाई लीफ सं. 17 / 2025

ध्यान दें सर्वसंबंधित ”

डेड कोच मूवमेंट के दौरान एफएसडीएस के लिए अनुदेश (एलएचबी और आईसीएफ कोच स्टॉक)

(फायर एंड स्मोक डिटेक्शन सिस्टम (एफएसडीएस) और फायर डिटेक्शन एंड सप्रेसन सिस्टम (एफडीएसएस) जिल्ड-2 के लिए मटेनेंस मैनुअल (एलएचबी और आईसीएफ कोच) आईआरसीएमटीईसीएच / जीडब्ल्यूएल / एम / एफएसडीएस / एफडीएसएस / 1.0, अक्टूबर, 2024)


ए. अगर कोच को सिक-लाइन अटेंशन, आईओएच/एसएस-I/एसएस-II/एसएस-III शेड्यूल या पेरेंट डिपो के लिए किसी डेड अटैच मूवमेंट के लिए अलग किया जाता है, तो नीचे दी गई गतिविधियाँ करनी होंगी :

- (i) कोच को रिक्त स्थिति में तालाबंद करके ले जाया जाएगा.
- (ii) एफएसडीएस के एमसीबी को "ऑफ" करना होगा.
- (iii) एफएसडीएस का उसकी बैटरी (वैगन टर्मिनल नं.1) से कनेक्शन काट देना होगा.
- (iv) एफएसडीएस के ब्रेक वाल्व को पृथक करना होगा.
- (v) एफएसडीएस पैनल पर एक स्टिकर भी चिपकाना है. स्टिकर निम्नप्रकार का होगा:

"एफएसडीएस का एमसीबी "ऑफ" कर दिया जाएगा और वैगन (टर्मिनल नंबर 1) का कनेक्शन काट दिया जाएगा. ब्रेक वाल्व को भी पृथक करना होगा."

ए) पावर पैनल (एफडीएस) की बैटरी को पृथक करने के उपाय

- (i) 110 वोल्ट पावर सप्लाय बंद करने के लिए एमसीबी को निचले स्थिति में ड्रॉप करें.
- (ii) वैगन टर्मिनल नंबर 1 से केबल हटाएं और खुले सिरे पर इंसुलेशन टेप लगाएं.
- (iii) बैटरी को फिर से चालू करने के लिए वैगन टर्मिनल नंबर 1 पर उसी केबल को फिर से जोड़ें और 110 वोल्ट डीसी पावर सप्लाय को फिर से चालू करने के लिए एमसीबी चालू करें.

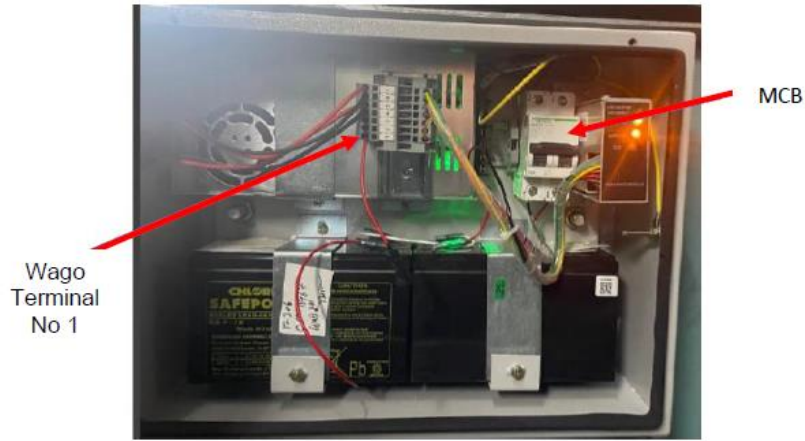

नीचे दिए गए चित्र में दिखाए अनुसार अंडर फ्रेम पर लगे ब्रेक वाल्व को न्यूमेटिकली पृथक करें:



ओपन स्थिति



पृथक स्थिति

बी) ब्रेक वाल्व को पृथक करने के लिए अपनाई जाने वाली प्रक्रिया

- (i) ब्रेक वाल्व हैंडल पर उपलब्ध लॉकिंग क्लैप व्यवस्था को हटाएं/ढीला करें/खोलें.
- (ii) पृथक करने के लिए ब्रेक वाल्व हैंडल को पाइप लाइन के समानांतर (पैरेलल) (180°) से लम्बवत (परपेंडिकुलर) (90°) दिशा में घुमाएँ.

बी. जब भी कोच दोबारा रोक से जोड़ने लायक हों जाएं, तो रोक में जोड़ते समय निम्नलिखित सुनिश्चित करना आवश्यक होगा :

- (i) ब्रेक वाल्व सामान्य काम करने की स्थिति में होना चाहिए (हैंडल ओपन करने की स्थिति में)
- (ii) केबल को वैगन टर्मिनल नंबर 1 से जोड़ना है और एफएसडीएस के एमसीबी को "ऑन" करना है.
- (iii) एफएसडीएस पैनल आदि पर चिपकाए गए स्टिकर को हटाना होगा.

संरक्षा संगठन

दक्षिण मध्य रेलवे

अस्वीकरण:

यह स्पष्ट किया जाता है कि इस फ्लाई लीफ में इस विषय पर उल्लिखित उपर्युक्त सामग्री विभिन्न मैनुअल, रेलवे बोर्ड के पत्रों और अन्य पत्रों के उद्धरण हैं. इसे मूल पत्र और समय-समय पर जारी दूसरे मैनुअल/पत्र के साथ पढ़ा जाना चाहिए और यह आरडीएसओ, रेलवे बोर्ड या क्षेत्रीय रेलवे द्वारा निर्धारित किसी वर्तमान प्रावधान का अधिक्रमण नहीं करती है. यह फ्लाई लीफ सिर्फ मार्ग-निर्देशन के लिए है और यह कोई वैधानिक दस्तावेज़ नहीं है.

SOUTH CENTRAL RAILWAY

Safety.387/Fly Leaf/17/2025

Fly Leaf No. 17/ 2025

Attention..... All Concerned

Instruction for FSDS during Dead Coach Movement. (LHB & ICF Coaches Stock).


(Maintenance Manual for Fire and Smoke Detection System (FSDS) and Fire Detection and Suppression System (FDSS)
Volume-2 (LHB & ICF Coaches) IRCAMTECH / GWL / M / FSDS / FDSS / 1.0, October, 2024)

A. If the coaches are detached for sick-line attention, IOH/SS-I/SS-II/SS-III schedule or any dead attach movement for parent depot, following activities to be followed:

- (i) Coach to be moved as empty in a locked condition.
- (ii) MCB of FSDS is to be switched "OFF".
- (iii) The connection of FSDS with its battery (Wagon terminal no. 1) should be disconnected.
- (iv) Brake valve of FSDS is to be isolated.
- (v) A sticker is also to be pasted on FSDS panel. The sticker shall be as under "MCB of FSDS shall be switched "OFF" and Wagon (Terminal no. 1) connection shall be disconnected. Brake valve is also to be isolated"

a) Steps for Isolating the Battery of the Power panel (FDS).

- (i) Drop the MCB to down position to switch off 110 V power supply.
- (ii) Remove Cable from Wagon terminal No 1 and apply insulation tape on the exposed end.
- (iii) For reinstating the Battery re-join same cable at Wagon terminal No 1 and switch on the MCB for reinstating 110 V DC power supply.

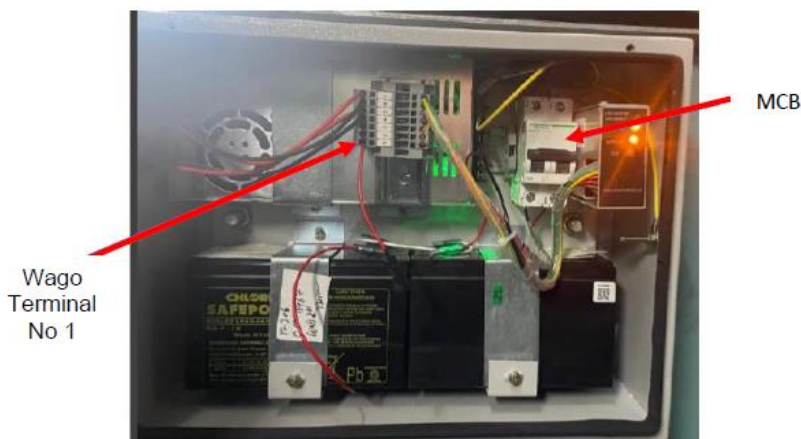

Isolate the Brake Valve pneumatically situated on the under frame as shown in the figure below:



Open Position



Isolated Position

b) Procedure to be followed to isolated the Brake Valve.

- (i) Remove/ loose/unscrew the Locking Clamp arrangement provided to Brake Valve Handle.
- (ii) To isolate move/rotate the Brake Valve Handle from Parallel (**180°**) to perpendicular (**90°**) direction to Pipe Line.

B. Whenever coaches are fit to be attached again with rake, following needs to be ensured during attachment in rake:

- (i) Brake valve to be in normal functioning position (Handle position to open).
- (ii) Cable to be connected to Wagon terminal no. 1 and MCB of FSDS is to be switched "ON".
- (iii) Sticker pasted on FSDS panel etc. to be removed.

SAFETY ORGANISATION

SOUTH CENTRAL RAILWAY

Disclaimer :

It is clarified that the above content mentioned on the subject in this FLY Leaf is an extract from different manuals, RB's letters and other letters. The same to be read in conjunction with the original letter & other manuals / letters issued from time to time and does not supersede any existing provisions laid down by RDSO, Railway Board or Zonal Railways. This FLY Leaf is for guidance only and it is not a statutory document.