



Build the Marshall Guv'nor, based on the schematic by Michael Burgundy. The circuit has been modified for true bypass switching. Trademarks remain property of their owners.

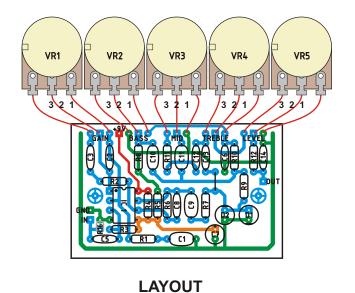

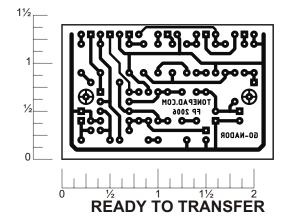

Parts List

		aı	ເວ	LIS
Resistor	S			

R9 - 1k5 (1.5k)

Resistors		Potentiometers	Capacitors	
R1 - 2k2 (2.2k)	R10 - 680 ohm	VR1 - 100kB	C1 - 0.1µF	C10 - 0.1µF
R2 - 10k	R11 - 100 ohm	VR2 - 10kA	C2 - 120pF	C11 - 0.22µF
R3 - 1M	R12 - 22k	VR3 - 10kA	C3 - 0.068µF	C12 - 0.01µF
R4 - 47k	R16 - 2M2 (2.2M)	VR4 - 10kA	C5 - 0.01µF	C13 - 0.004µF
R5 - 47k		VR5 - 100kB	C6 - 0.068µF	C14 - 470pF
R6 - 680k			C7 - 10µF	
R7 - 1k			C8 - 220pF	IC's/Diodes
R8 - 680 ohm			C9 - 0.22µF	IC1 - TL072

D1 - Red LED D2 - Red LED

