
## **Segger MCU JTAG Adapter**

1) Plug the cable for the Segger adapter into the front panel MCU JTAG connector. The polarization pin and the red stripe should be as shown below.

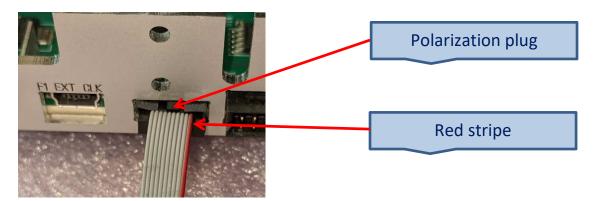

2) Connect the other end of the cable to a Segger adapter that is wired according to the following table and the photo as shown below. The names in the "Segger 20-pin header name" column are printed on the left side of the adapter. The numbers in the "Adapter 10-pin cable number" column are printed on the right side of the adapter.

Segger 20-pin	Segger 20-pin	Adapter 10-pin	Color	
header number	header name	cable number		
1	VTREF (1)	10	Yellow	
5	TDI (5)	1	Blue	
7	TMS/SWDIO (7)	7	Red	
9	TCK/SWCLK (9)	5	Red	
13	TDO/SWO (13)	3	Yellow	
	GND	2, 4, 6, 8	White	

