



6089-127 RevA Final SM-CM Assembly

1. Get an SM and unplug the front panel handle switch connector from the SM
 - 1.1. These connectors are FRAGILE!
 - 1.2. Do not pull on the wires

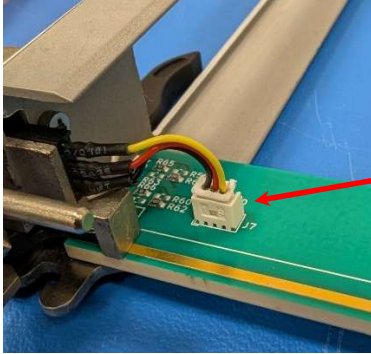


Front panel handle switch connector

2. Flip the board over to the bottom. Remove the front panel handle screws
 - 2.1. Use a #0 square-tip screwdriver
 - 2.2. Do not use a Phillips-head screwdriver
 - 2.3. Do not lose the screws. We don't have spares.
 - 2.4. Set aside the front panel

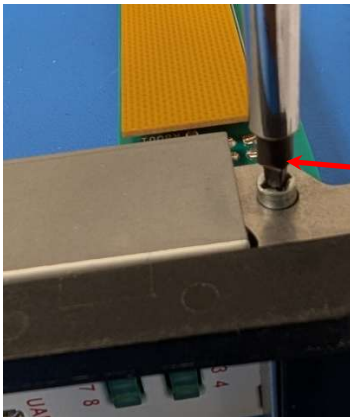


Square-drive screwdriver to remove handle screws

3. Remove the splice plates
 - 3.1. The bottom cover does not need to be removed

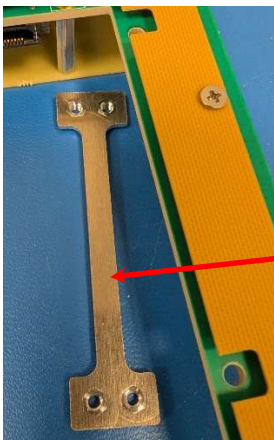


Splice plate removed with cover in place

4. Flip the board over to the top. Unplug the front panel LED circuit board
 - 4.1. Support the SM main board while unplugging
 - 4.2. Wiggle it out. Do not bend the pins.

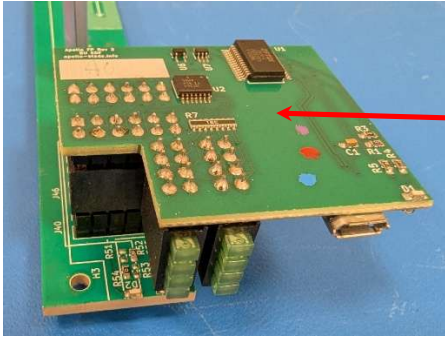


LED board ready for removal

5. Get a CM
 - 5.1. Do not use matching serial numbers. Matching numbers will become confusing.
6. Connect the CM to the SM
 - 6.1. With the SM flat on the table, set the CM into the cutout opening
 - 6.2. Mate the boards, pressing evenly on both sides with your index fingers on the SM top cover standoffs and your thumbs on the CM front panel

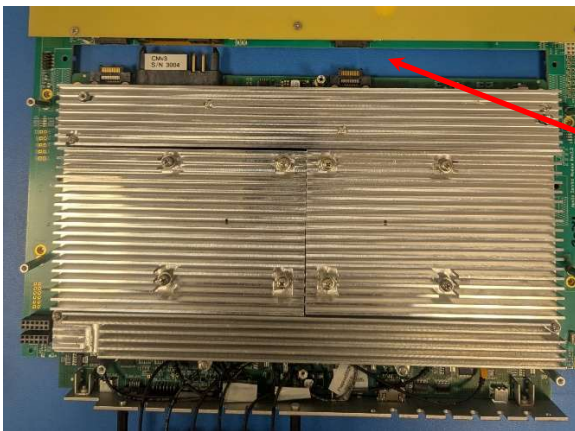

CM placed in the SM cutout,
ready to connect

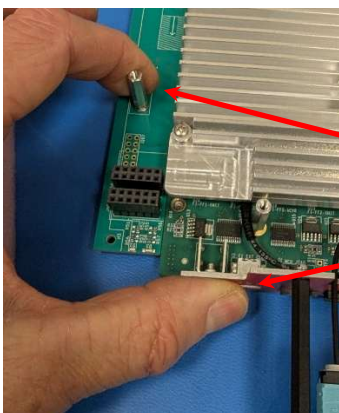

Index-finger and thumb
positioned to apply pressure

Attach first splice plate

- 6.3. Without lifting either board, rotate the combo so that one side hangs over the edge of the table
- 6.4. Slide a splice plate into position
- 6.5. Loosely insert 4 6-mm long M3 screws from the bottom



Hanging over edge of table




Place splice plate in position



Insert screws from the bottom. A jeweler's screwdriver is very handy.


7. Rotate the combo so the opposite side is over the edge of the table and attach the second splice plate in the same way as the first

8. Flip the board over to the bottom and tighten the splice plate screws
8.1. Use the torque-driver and tighten to 3.5 in-lbs

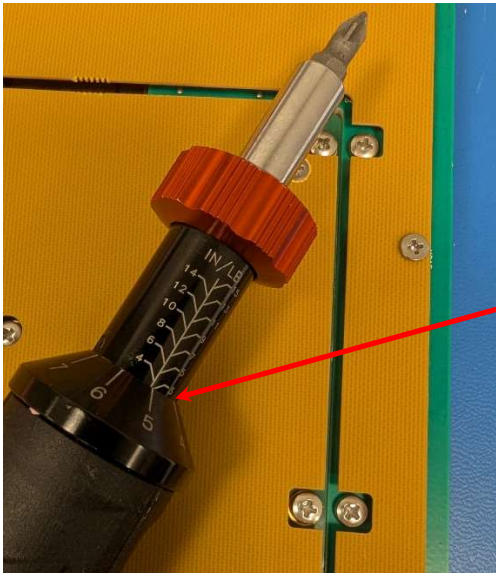


Tighten splice plate screws
to 3.5 in-lbs

9. Flip the board over to the top side and install the SM's front panel LED board

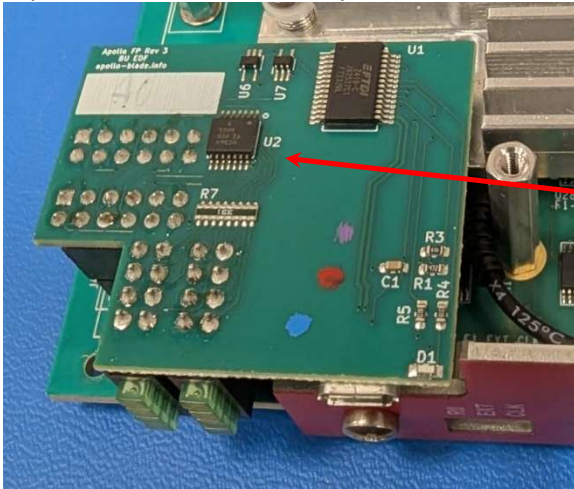

Plug in LED board


10. Remove the center screw from the CM front panel

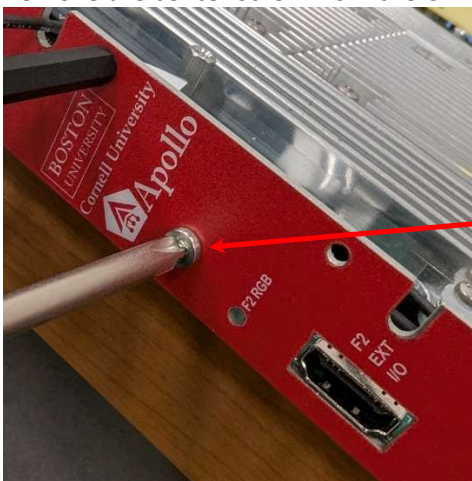

Remove center screw

11. Attach the SM front panel

11.1. The SM front panel LED board will need some wiggling to align the LEDs and connector with the openings in the front panel

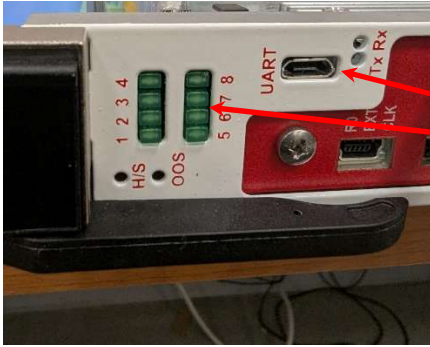


Align LEDs and connector with openings in front panel

12. Flip the board over to the bottom side and install the front panel handle screws

12.1. Line up the holes in the handle mounts with the holes in the board

12.2. Install the screws just barely snug

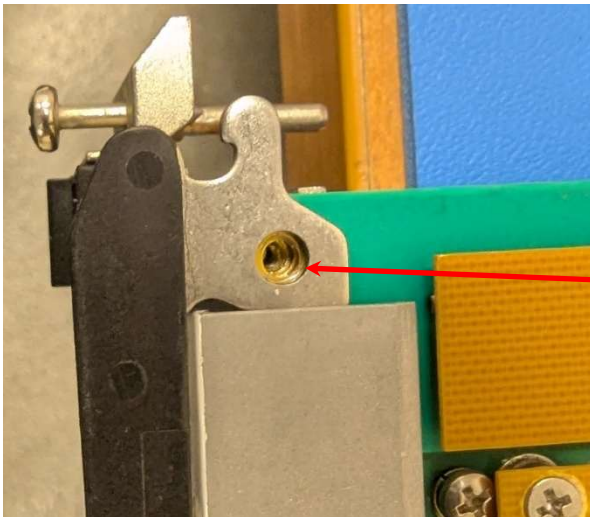

Align board hole with handle hole

13. Install a 6 mm long M3 screw in the center of the front panel



M3 x 6-mm screw

