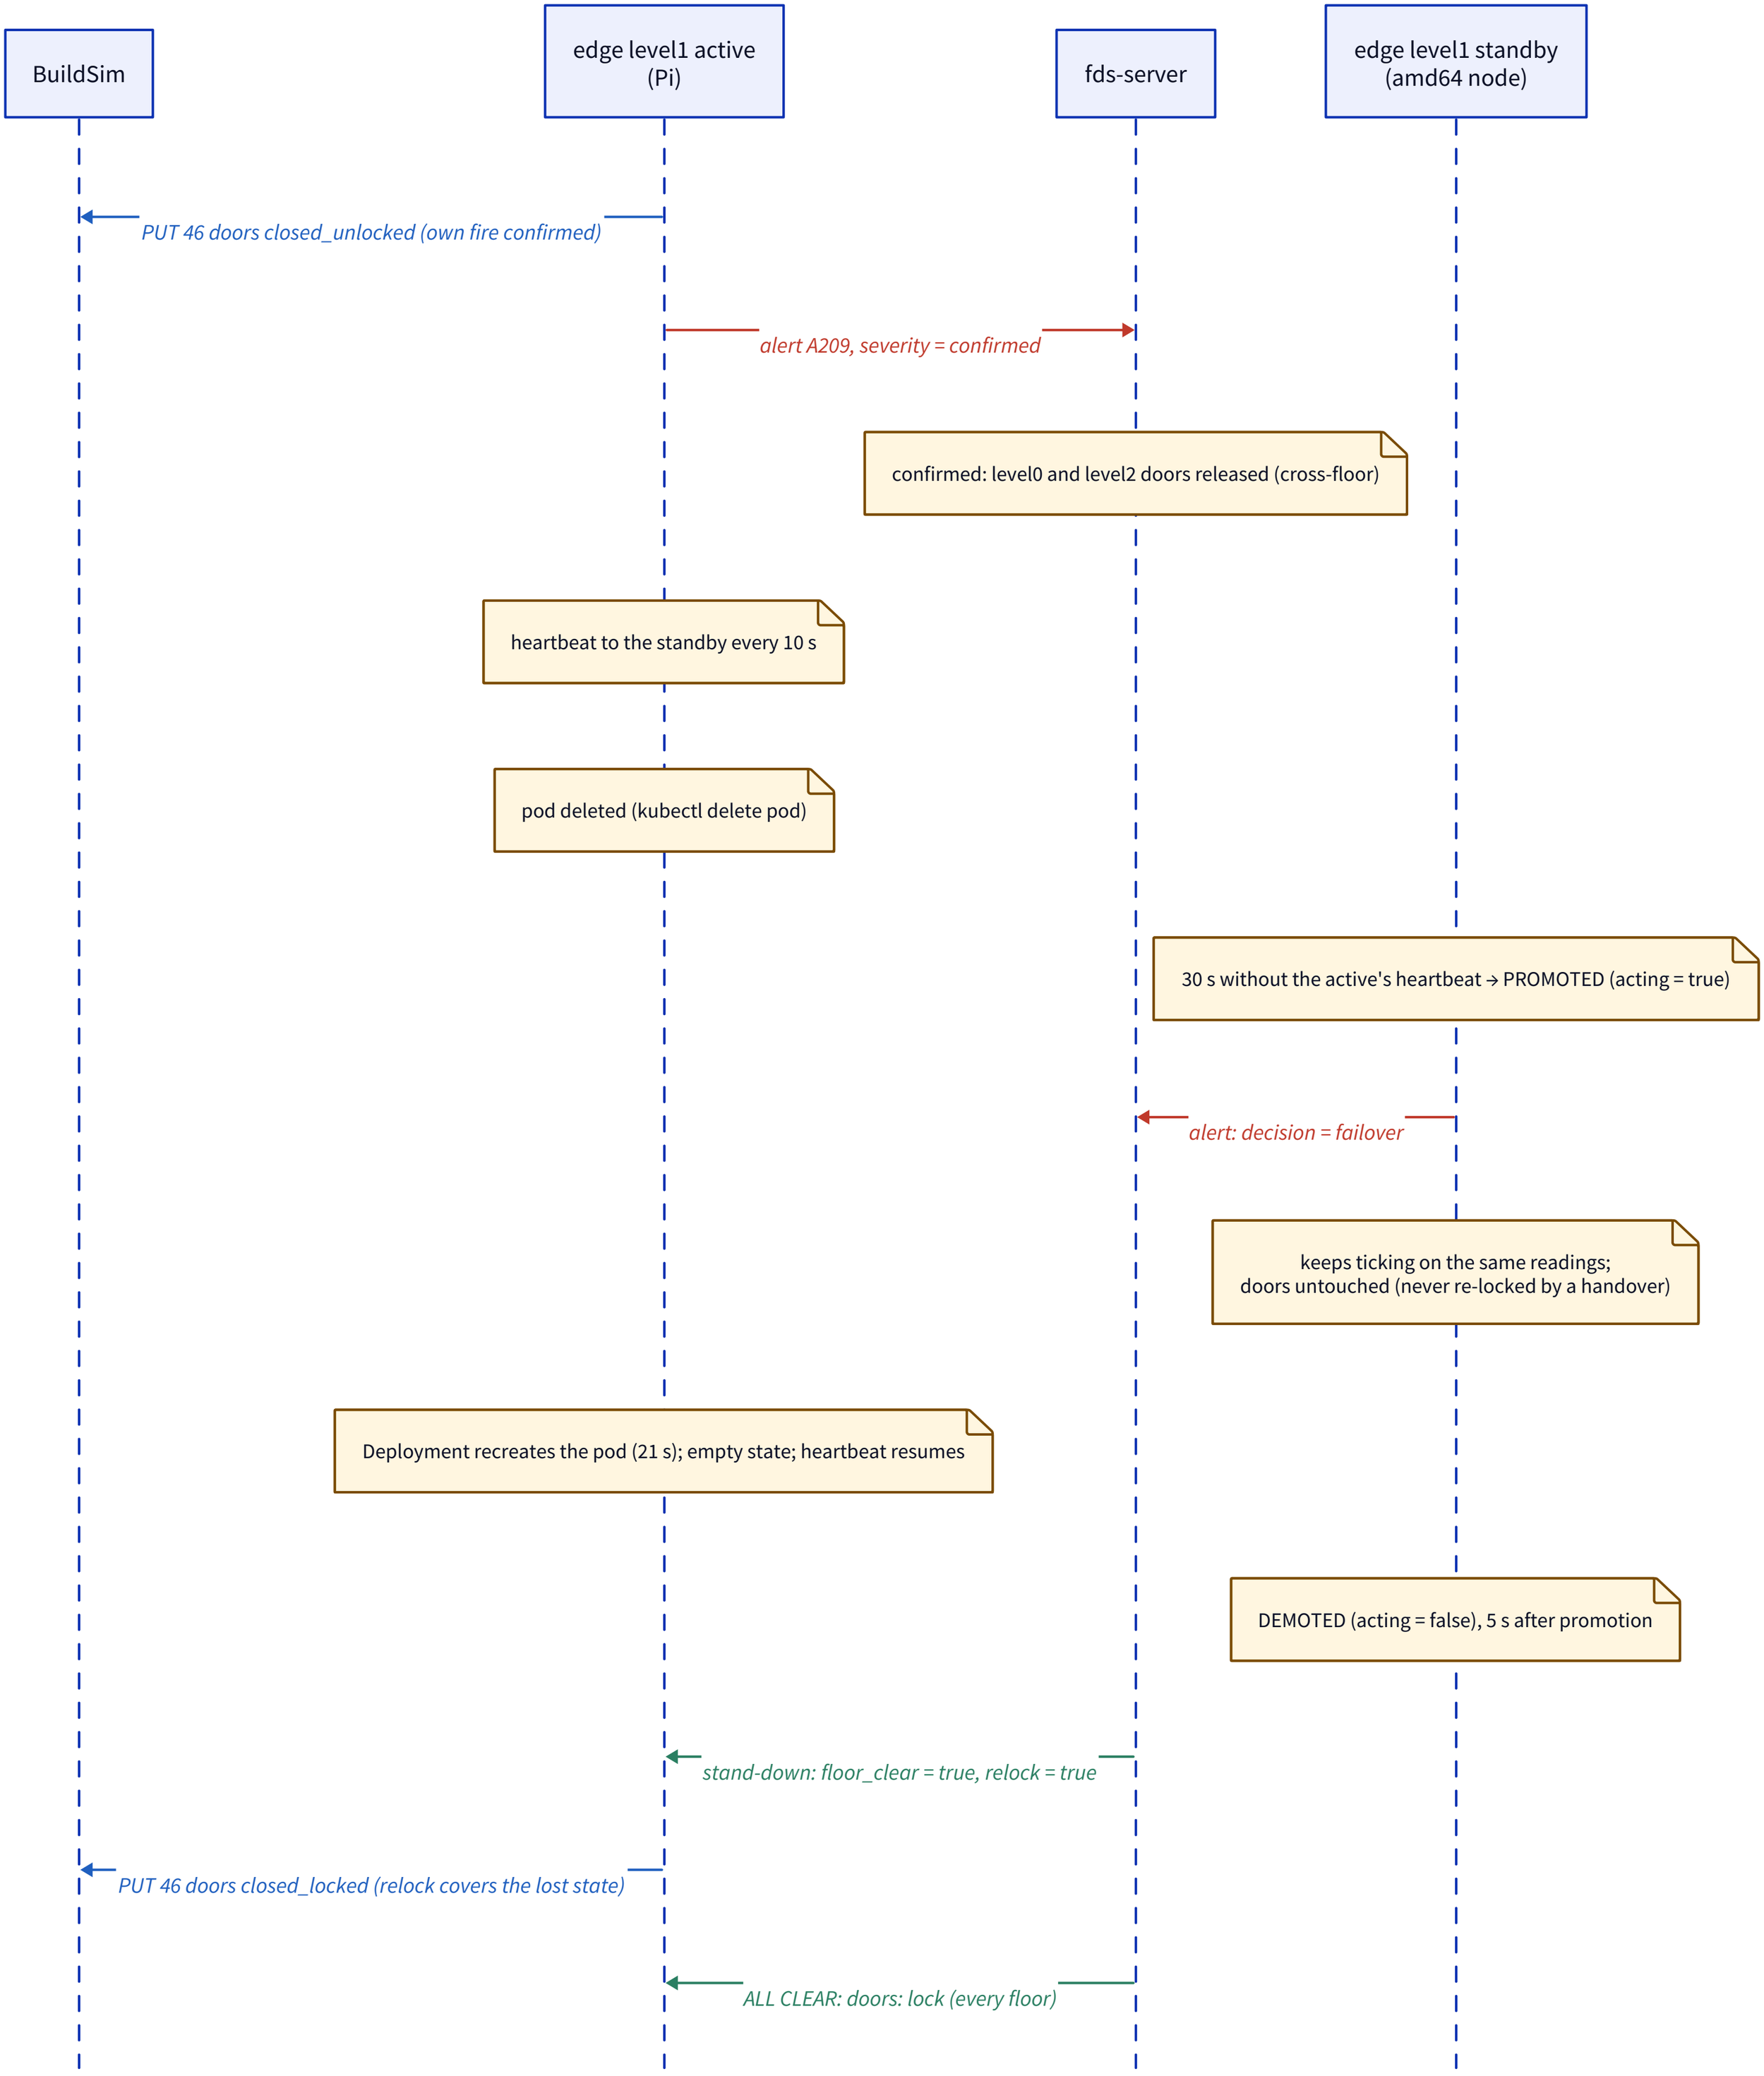

BuildSim
edge level1 active (Pi)
fds-server
edge level1 standby (amd64 node)
PUT 46 doors closed_unlocked (own fire confirmed)
alert A209, severity = confirmed
confirmed: level0 and level2 doors released (cross-floor)
heartbeat to the standby every 10 s
pod deleted (kubectl delete pod)
30 s without the active's heartbeat → PROMOTED (acting = true)
alert: decision = failover
keeps ticking on the same readings;
doors untouched (never re-locked by a handover)
Deployment recreates the pod (21 s); empty state; heartbeat resumes
DEMOTED (acting = false), 5 s after promotion
stand-down: floor_clear = true, relock = true
PUT 46 doors closed_locked (relock covers the lost state)
ALL CLEAR: doors: lock (every floor)