
ENVIROFLOW

Assembly instructions

Vehicle decontamination mat




To install the mat you will need:
- Electric pump or car compressor

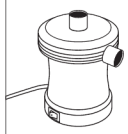


Required number of people:
- 1 - 2 people

1

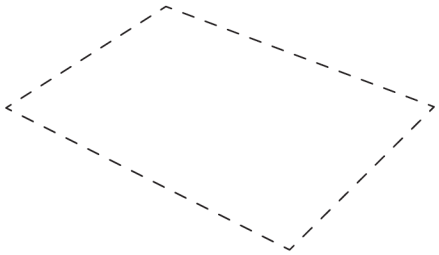


Remove any objects with sharp edges, e.g. glass, wire, stones, etc.

2

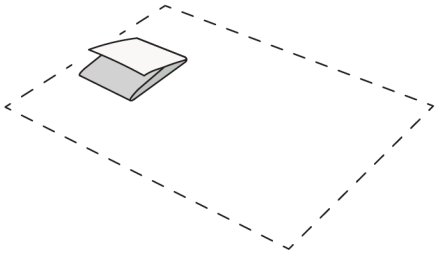


Place the folded mat in a suitable location.

3

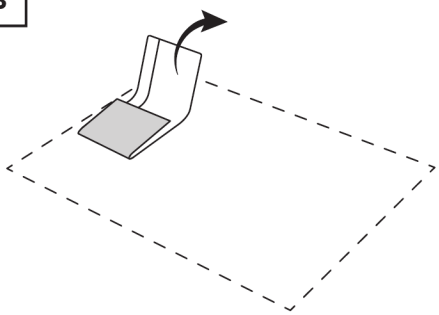


Unfold the mat sideways.

4

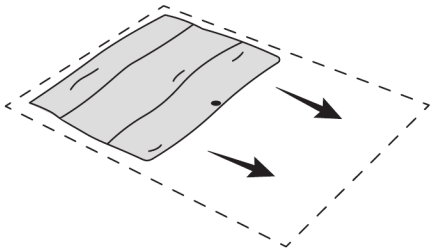


Roll out the mat towards the opposite side.

5

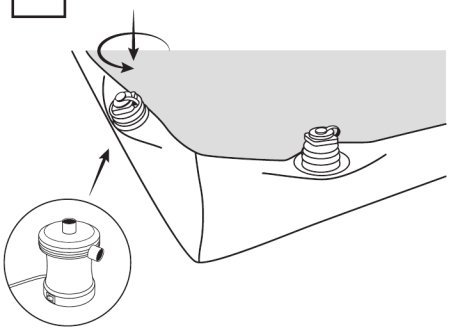

After unfolding the mat, unscrew the valve. Fill the walls with air using an electric pump, then close the valve.
Attention! The pressure must not exceed 0.8 bar.

6

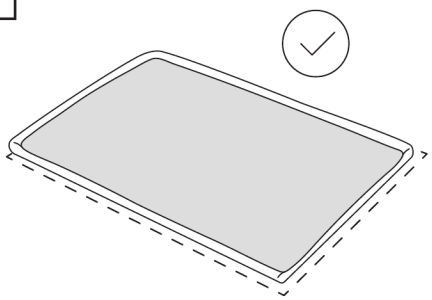

The mat is ready for use.