

ENVIROFLOW


Spill containment berms - assembly instructions

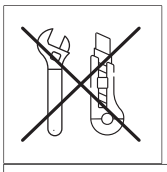

No tools required.
The required number of people for assembly is one or two, depending on the size of the berm.

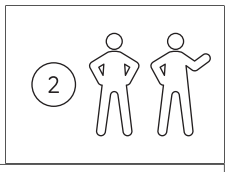


1

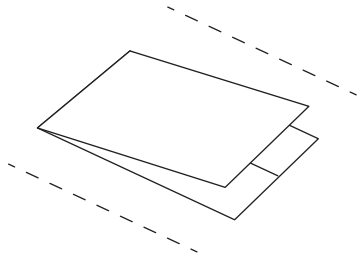


Place the spill containment berm in its final location.

2

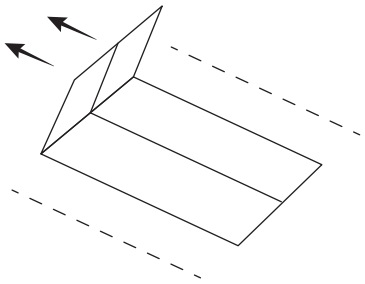


Unfold the spill containment berm.

3

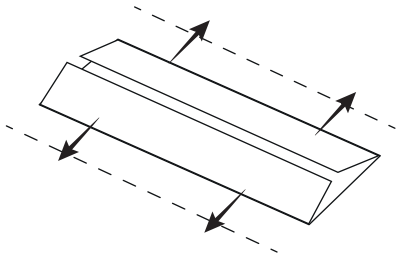


Unfold the berm sides.

4

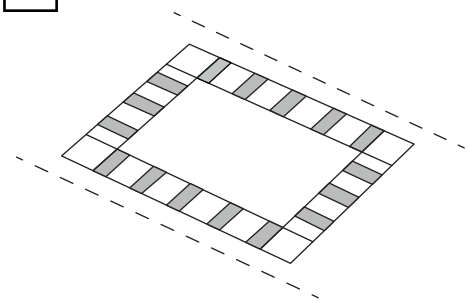


The spill containment berm is now ready for the brackets to be placed.

5

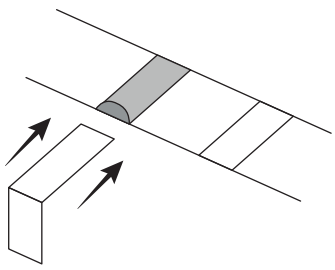


Place the bracket in the mounting pocket (long edge) so that its base is under the berm.

6

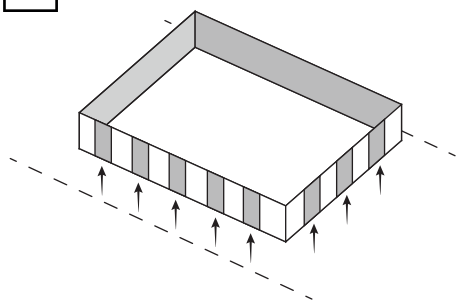


Repeat for all mounting pockets.

7

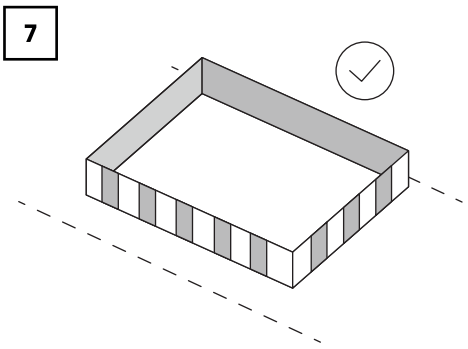


The spill containment berm is now ready for use.

8

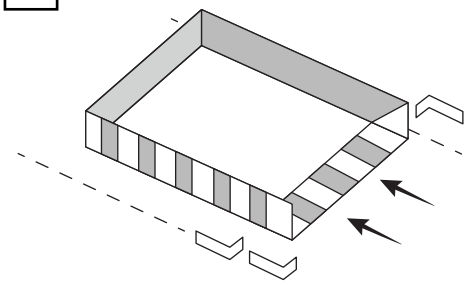

To allow the entry and exit of vehicles, pull the brackets out of the wall to be folded.

9

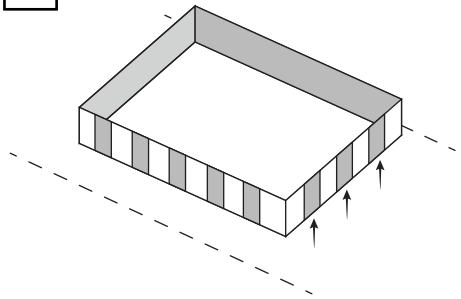

After the action is completed, put the brackets back into the mounting pockets.

EnviroFlow | Molendijk 70, 3235 XH Rockanje, the Netherlands | CoC 94667748 | VAT NL005099776B64
tel: +31 6 19 13 32 52 | +31 6 33 97 00 44 | Info@enviroflow.nl | www.enviroflow.nl