
ENVIROFLOW

Car wash mat - assembly instructions



To install the mat you will need:


• Electric pump or car compressor

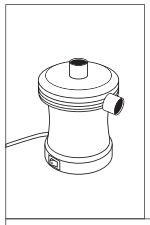

Required number of people:


• 1 - 2 people

1

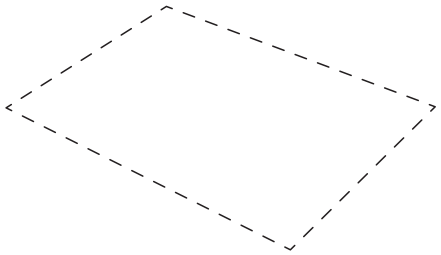


Remove any objects with sharp edges, e.g. glass, wire, stones, etc.

2

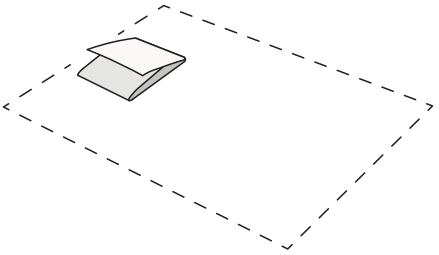


Place the folded mat in the chosen location.

3

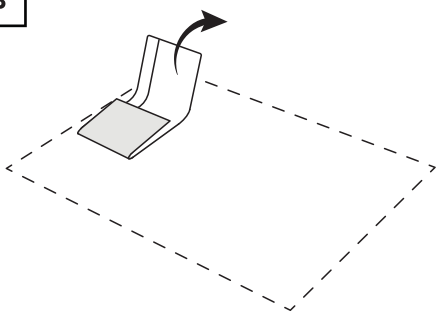


Unroll the mat sideways.

4

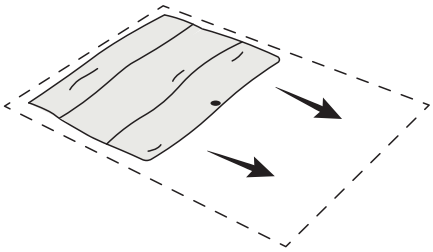


Roll out the mat towards the opposite side.

5

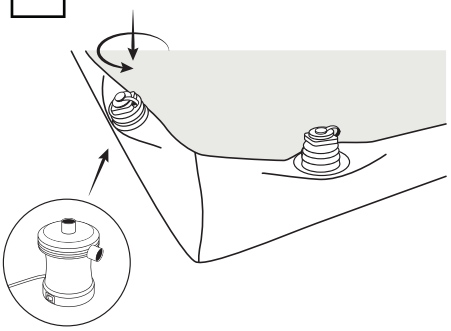

After unfolding the mat, unscrew the valve. Fill the walls with air using an electric pump, then close the valve.
Attention! The pressure must not exceed 0.1 bar.

6

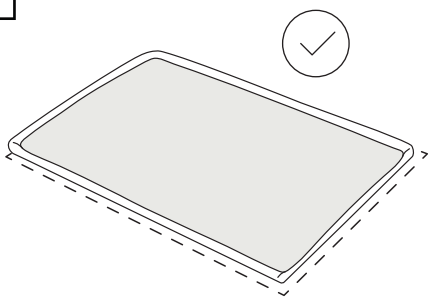

The mat is ready for use.

EnviroFlow | Molendijk 70, 3235 XH Rockanje, the Netherlands | CoC 94667748 | VAT NL005099776B64
tel: +31 6 19 13 32 52 | +31 6 33 97 00 44 | Info@enviroflow.nl | www.enviroflow.nl