MixTape-Micronoise Jubilee-Edition

1. Grind and polish the corners **smoothly**

2. Bend the legs of the chip and solder it on.
Achtung: notch to the left side.

7. LED with the little corner to the right.

11. Solder cables for Battery.
Red Cable is ⊕

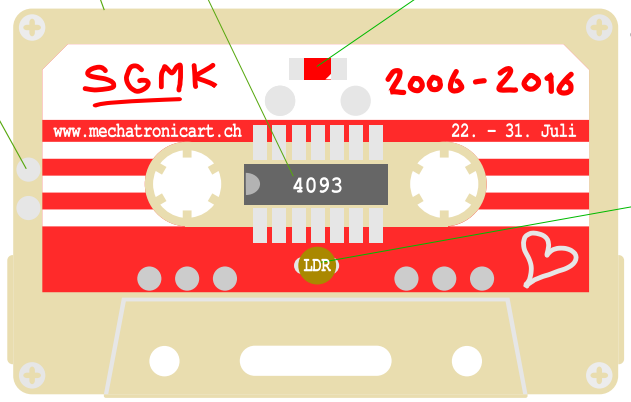

8. Led Dependant Resistor (LDR) goes through front and soldered from the back.

3. Solder the capacitor (greenn and black).
The electrolitic cap has **polarity**, ⊖ to the right!

4. Resistor come here.
Tip: Cut one leg short and hold the long one while soldering.

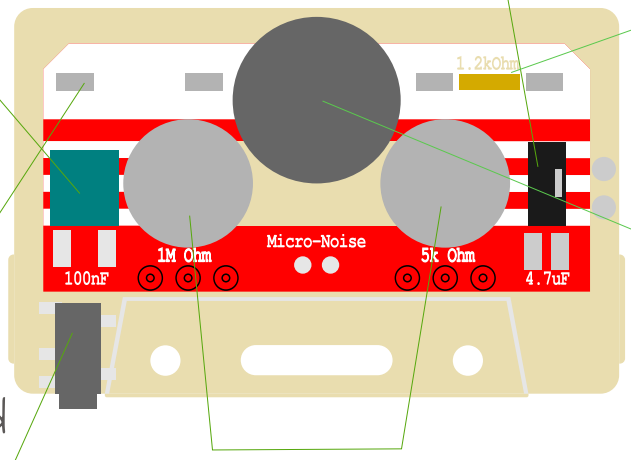

9. Mount speaker on the back and solder on front.

6. Bend the legs of the button and solder it on.

5. GoldenAudio Jack has to be soldered **very carefully.**

10. Bend the pins of the potentiometers up.
Achtung: two different values of pots! Read the writing carefully (5k Ohm and 1M Ohm).
Put the pots through and screw them on.
Solder the pins onto the pads on the back.

12. Solder the power wires to the batteryholder and plug it in.

Schweizerische Gesellschaft für Mechatronische Kunst
SGMK