

ARM controllers:

Introduction:

The British computer manufacturer [Acorn Computers](#) first developed the Acorn RISC Machine architecture (ARM) in the 1980s to use in its personal computers. The official *Acorn RISC Machine* project started in October 1983. They chose [VLSI Technology](#) as the *silicon partner*, as they were a source of ROMs and custom chips for Acorn. Wilson and Furber led the design.

<https://www.mepits.com/tutorial/194/arm/arm>.

❑ **Some of the advantages of ARM processors are listed below:**

- ❑ They are cheap as compared to other processors.
- ❑ They are designed with such features that it consumes less power.
- ❑ The devices with ARM processor can have a much better [battery](#) life than other processors.
- ❑ They perform one operation at a time and thus work faster.
- ❑ The availability and applications support has also made the users choose ARM processors.

□ ARM processors are a particular type of processors which are made by the ARM holdings PLC. This processor is also known as **Reduced Instruction Set Computing (RISC)** in which simple central processing units produce a high performance quality for the users. It has 32 bits RISC load architecture. Nowadays ARM processor are widely used in a number of electronic products such as mobile phones, tablets, multi-media players and many more electrical devices. The direct administration of the memory is not possible in this design and is handled by the use of registers. They are also used in personal digital assistants, digital media and music layers, hand-held gaming systems, and hard drives of the computer.

ARM processors vs. Intel processors: When you purchase a processor you will get to know that some of the designs use Intel Atom processors while the other uses ARM architecture. These both processors are designed in a way for low-power operation. They are created to give the mobile a long battery life. But they are both based on different ideology. The **ARM** structure is made very simple and is intended to keep the energy wastage to the minimum. Intel processors are made of complicated designs to match the compatibility of the company's desktop and laptop CPU's. ARM processors are being used in the portable devices from a very long time but Intel has just entered to this area. Intel is believed to have a serious competition with the ARM technology. The power chips of ARM processors are relatively low in price, so if Intel will have to reconsider their pricing strategies to compete with it. The entry of ARM processors and their wide usage has forced Intel to increase their efficiency.

- Simulation is the process of using a simulation software (simulator) to verify the functional correctness of a digital design that is modeled using a HDL (hardware description language) like Verilog.
- Synthesis is a process in which a design behavior that is modeled using a HDL is translated into an implementation consisting of logic gates. This is done by a synthesis tool which is another software program.

Difference between 8051, AVR, PIC, ARM microcontrollers:

<https://www.elprocus.com/difference-between-avr-arm-8051-and-pic-microcontroller/>.

<http://www.firmcodes.com/difference-arm-microcontrollers/>.

8051 Microcontroller

[8051 microcontroller](#) is an 8-bit family of microcontroller is developed by the **Intel** in the year 1981. This is one of the popular families of microcontroller are being used all across the world. This microcontroller was moreover referred as “system on a chip” since it has 128 bytes of RAM, 4Kbytes of a ROM, 2 Timers, 1 Serial port, and 4 ports on a single chip. The CPU can also work for 8bits of data at a time since 8051 is an 8-bit processor. In case the data is bigger than 8 bits, then it has to be broken into parts so that the CPU can process easily. Most manufacturers contain put 4Kbytes of ROM even though the number of ROM can be exceeded up to 64 K bytes.

PIC Microcontroller

Peripheral Interface Controller (PIC) is microcontroller developed by a **Microchip**, [PIC microcontroller](#), PIC microcontroller is fast and simple to implement program when we contrast other microcontrollers like 8051. The ease of programming and simple to interfacing with other peripherals PIC become successful microcontroller. We know that microcontroller is an integrated chip which is consists of RAM, ROM, CPU, [TIMER and COUNTERS](#), PIC microcontroller is fast and simple to implement program when we contrast other microcontrollers like 8051. The ease of programming and simple to interfacing with other peripherals PIC become successful microcontroller. We know that microcontroller is an integrated chip which is consists of RAM, ROM, CPU, TIMER and COUNTERS. The PIC is a microcontroller which as well consists of RAM, ROM, CPU, timer, counter, ADC ([analog to digital converters](#)), PIC microcontroller is fast and simple to implement program when we contrast other microcontrollers like 8051. The ease of programming and simple to interfacing with other peripherals PIC become successful microcontroller. We know that microcontroller is an integrated chip which is consists of RAM, ROM, CPU, TIMER and COUNTERS. The PIC is a microcontroller which as well consists of RAM, ROM, CPU, timer, counter, ADC ([analog to digital converters](#)), DAC (digital to analog converter). PIC Microcontroller also support the protocols like CAN, SPI, UART for an interfacing with additional peripherals. PIC mostly used to

AVR Microcontroller

[AVR microcontroller](#) was developed in the year of 1996 by Atmel Corporation. The structural design of AVR was developed by the Alf-Egil Bogen and Vegard Wollan. AVR derives its name from its developers and stands for Alf-Egil Bogen Vegard Wollan RISC microcontroller, also known as Advanced Virtual RISC. The AT90S8515 was the initial microcontroller which was based on the AVR architecture, though the first microcontroller to hit the commercial market was AT90S1200 in the year 1997.

AVR Microcontrollers are Available in three Categories:

TinyAVR:- Less memory, small size, appropriate just for simpler applications.

MegaAVR:- These are the mainly popular ones having a good quantity of memory (up to 256 KB), higher number of inbuilt peripherals and appropriate for modest to complex applications.

XmegaAVR:- Used in commercial for complex applications, which need large program memory and high speed.

Main Difference between AVR, ARM, 8051 and PIC Microcontrollers

	8051	PIC	AVR	ARM
Bus width	8-bit for standard core	8/16/32-bit	8/32-bit	32-bit mostly also available in 64-bit
Communication Protocols	UART, USART, SPI, I2C	PIC, UART, USART, LIN, CAN, Ethernet, SPI, I2S	UART, USART, SPI, I2C, (special purpose AVR support CAN, USB, Ethernet)	UART, USART, LIN, I2C, SPI, CAN, USB, Ethernet, I2S, DSP, SAI (serial audio interface), IrDA
Speed	12 Clock/instruction cycle	4 Clock/instruction cycle	1 clock/ instruction cycle	1 clock/ instruction cycle
Memory	ROM, SRAM, FLASH	SRAM, FLASH	Flash, SRAM, EEPROM	Flash, SDRAM, EEPROM
ISA	CLSC	Some feature of RISC	RISC	RISC
Memory Architecture	Von Neumann architecture	Harvard architecture	Modified	Modified Harvard architecture
Power Consumption	Average	Low	Low	Low
Families	8051 variants	PIC16, PIC17, PIC18, PIC24, PIC32	Tiny, Atmega, Xmega, special purpose AVR	ARMv4, 5, 6, 7 and series
Community	Vast	Very Good	Very Good	Vast

Manufacturer	NXP, Atmel, Silicon Labs, Dallas, Cypress, Infineon, etc.	Microchip Average	Atmel	Apple, Nvidia, Qualcomm, Samsung Electronics, and TI etc.
Cost (as compared to features provide)	Very Low	Average	Average	Low
Other Feature	Known for its Standard	Cheap	Cheap, effective	High speed operation Vast
Popular Microcontrollers	AT89C51, P89v51, etc.	PIC18fXX8, PIC16f88X, PIC32MXX	Atmega8, 16, 32, Arduino Community	LPC2148, ARM Cortex-M0 to ARM Cortex-M7, etc.

ARM

- ARM: Advanced RISC Machines
- Most widely used 32- bit RISC instruction set architecture
- The relative simplicity makes it suitable for low power devices
- ARM7, ARM9, ARM11 and Cortex
- Approximately 90% of all embedded 32-bit RISC processors
- Used extensively in consumer electronics, including PDAs, mobile phones, digital media and music players, hand-held game consoles, calculators and computer peripherals such as hard drives and routers.

Product Code Description

- M: Multiplier
ARM processor have hardware multiplier unit doing multiplication
- I: Embedded ICE Macrocel
Hardware circuit used to generate trace information. Used in advance debugging.
- E: Enhanced Instruction Set
- J: Java Acceleration by Jazelle mode
Hardware circuit used for running JAVA byte code
- F: Vector Floating point
Hardware implementation of floating operations.
- S: Synthesizable Version
The ARM architecture can be modified as it comes in terms of soft processor core.

ARM

- ARM has 3 instruction set states
 1. 32-bit **ARM** instruction set
 2. 16-bit **Thumb** instruction set
 3. 8-bit **Jazelle** instruction set
- ARM – 32 bit Load/Store architecture with every instruction being **conditional**.
- Thumb- 16 bit with only branch instructions being conditional and only half of the registers used
- Jazelle- Allows Java byte code to be directly executed in ARM architecture. Improves performance by 5x-10x

Example

- ARM7TDMI

This is the ARM7 family processor which has T= Thumb instruction set, D= Debug Unit, M= MMU(Memory Management Unit), I= Embedded Trace core.

- ARM946E-S

1. ARM9xx core
2. Enhanced Instruction set
3. Synthesizable

Main features of the ARM Instruction Set

- * **All instructions are 32 bits long.**
- * **Most instructions execute in a single cycle.**
- * **Every instruction can be conditionally executed.**
- * **A load/store architecture**
 - Data processing instructions act only on registers
 - Three operand format
 - Combined ALU and shifter for high speed bit manipulation
 - Specific memory access instructions with powerful auto-indexing addressing modes.
 - 32 bit and 8 bit data types and also 16 bit data types on ARM Architecture v4.
 - Flexible multiple register load and store instructions
- * **Instruction set extension via coprocessors**

Processor Modes

- **The ARM has seven operating modes:**
 - **User** : unprivileged mode under which most tasks run
 - **FIQ** : entered when a high priority (fast) interrupt is raised
 - **IRQ** : entered when a low priority (normal) interrupt is raised
 - **SVC** : (Supervisor) entered on reset and when a Software Interrupt instruction is executed
 - **Abort** : used to handle memory access violations
 - **Undef** : used to handle undefined instructions
 - **System** : privileged mode using the same registers as user mode


ARM Pipelining examples

- **Fetch:** Read Op-code from memory to internal Instruction Register
- **Decode:** Activate the appropriate control lines depending on Opcode
- **Execute:** Do the actual processing

The Instruction Pipeline

- * **The ARM uses a pipeline in order to increase the speed of the flow of instructions to the processor.**
 - Allows several operations to be undertaken simultaneously, rather than serially.

ARM

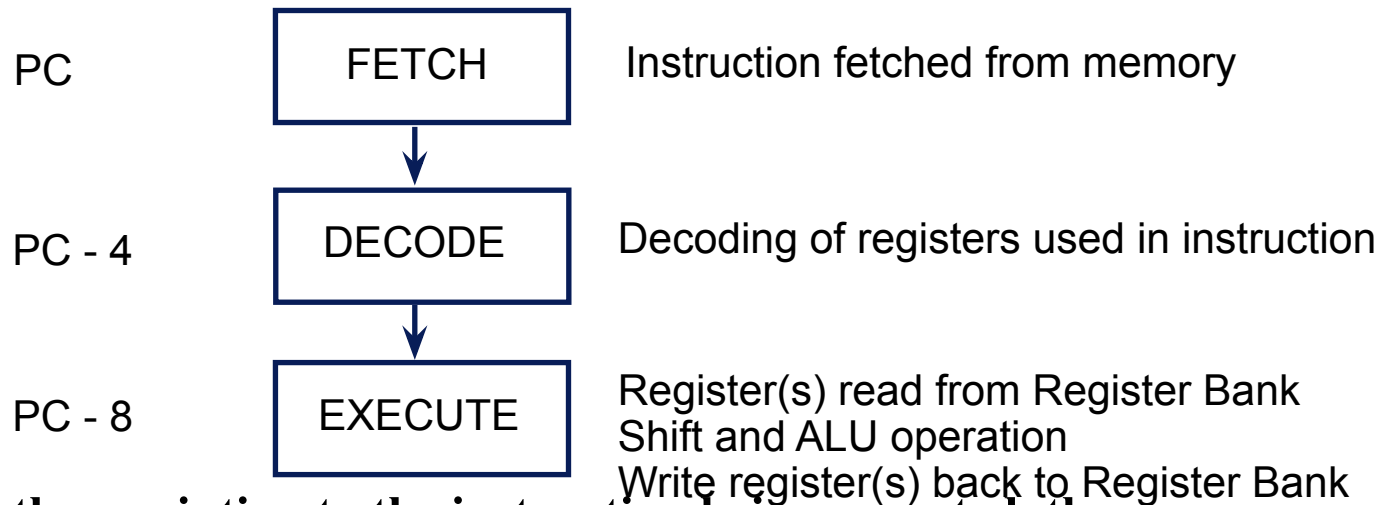


- * **Rather than pointing to the instruction being executed, the PC points to the instruction being fetched.**

Pipelining :

https://www.slideshare.net/black_pearl/arm-processor?next_slideshow=1.

Note: Slides from 63 to 78 only.


ARM7TDMI Pipelining

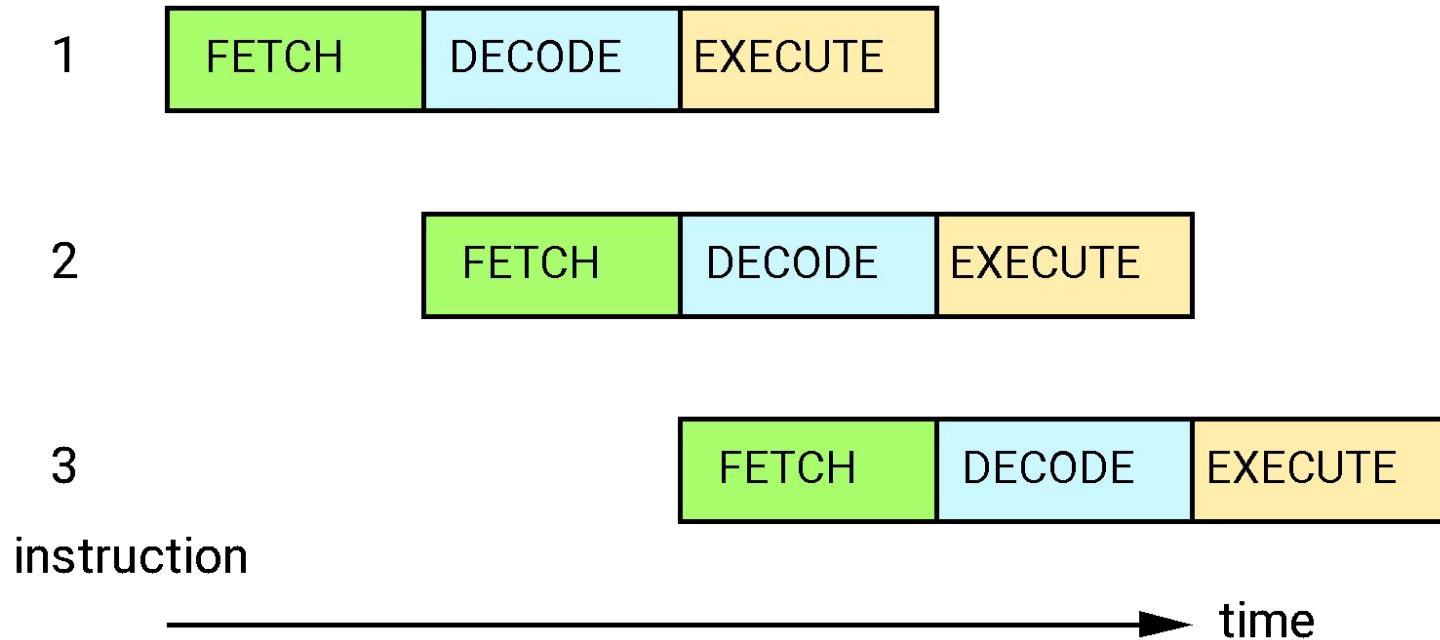

- Simple instructions (like **ADD**) Complete at a rate of one per cycle

ARM7TDMI Pipelining


- More complex instructions:

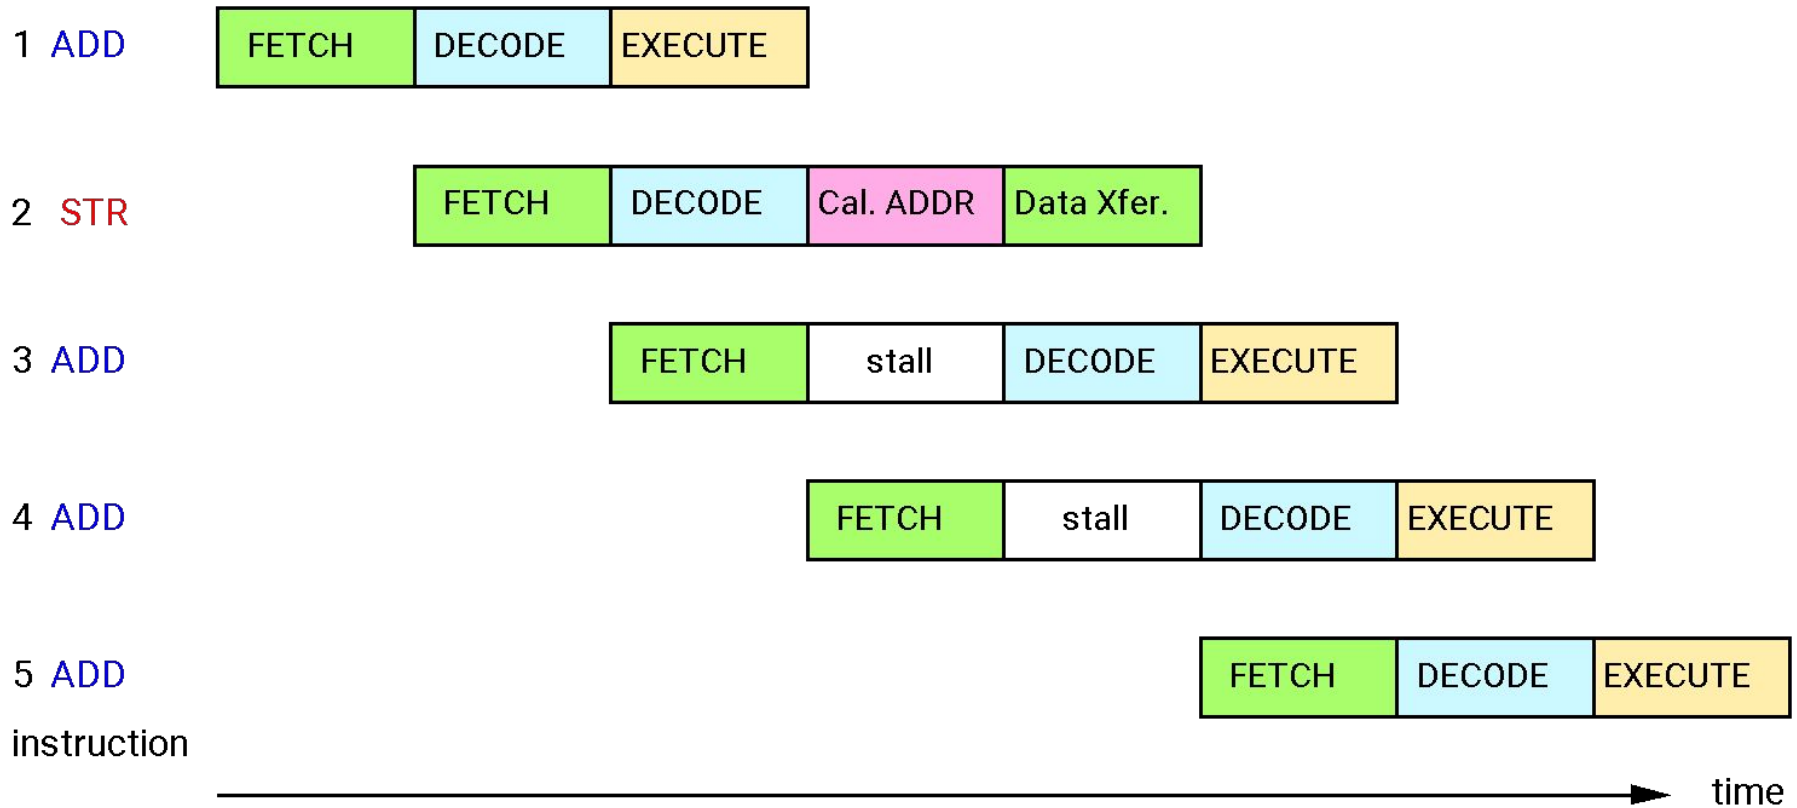


STR : 2 effective clock cycles (+1 cycle)

Pipeline changes for ARM9TDMI

ARM7TDMI

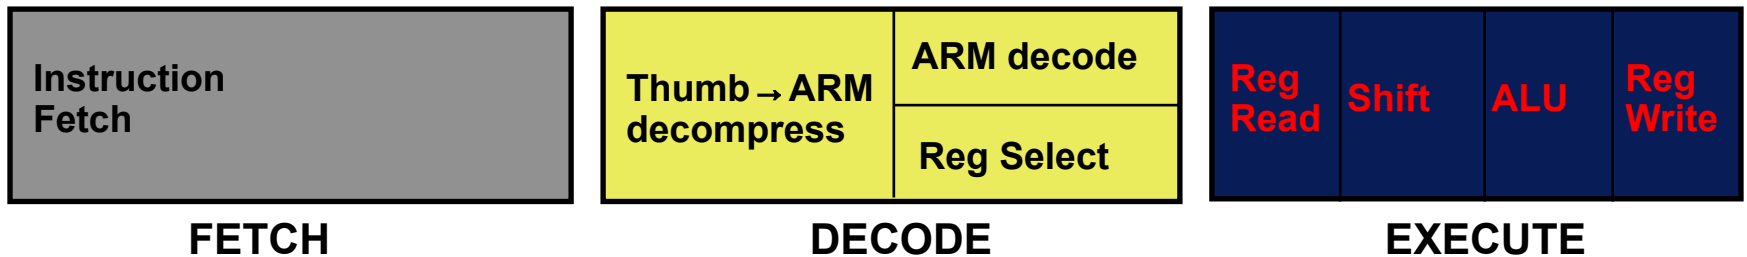


ARM9TDMI

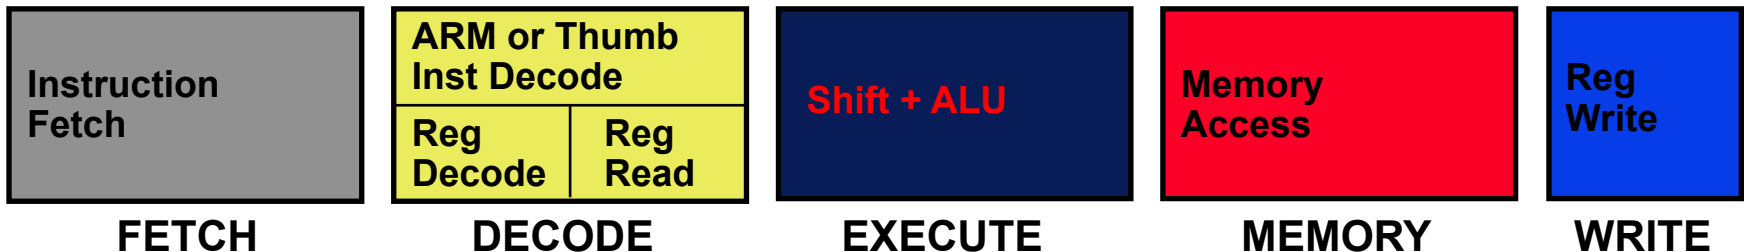


ARM10


ARM10 vs. ARM11 Pipelines

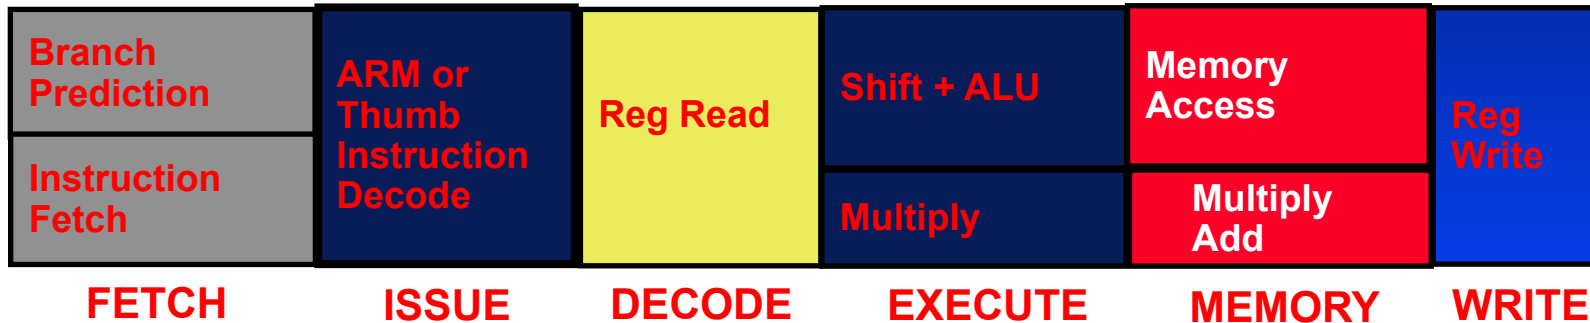

ARM11

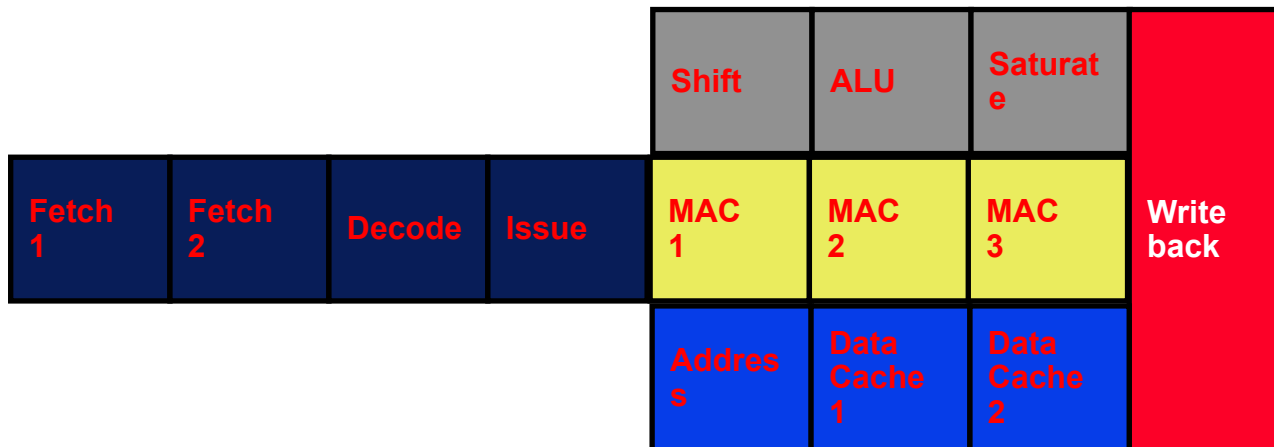


Example ARM-based System

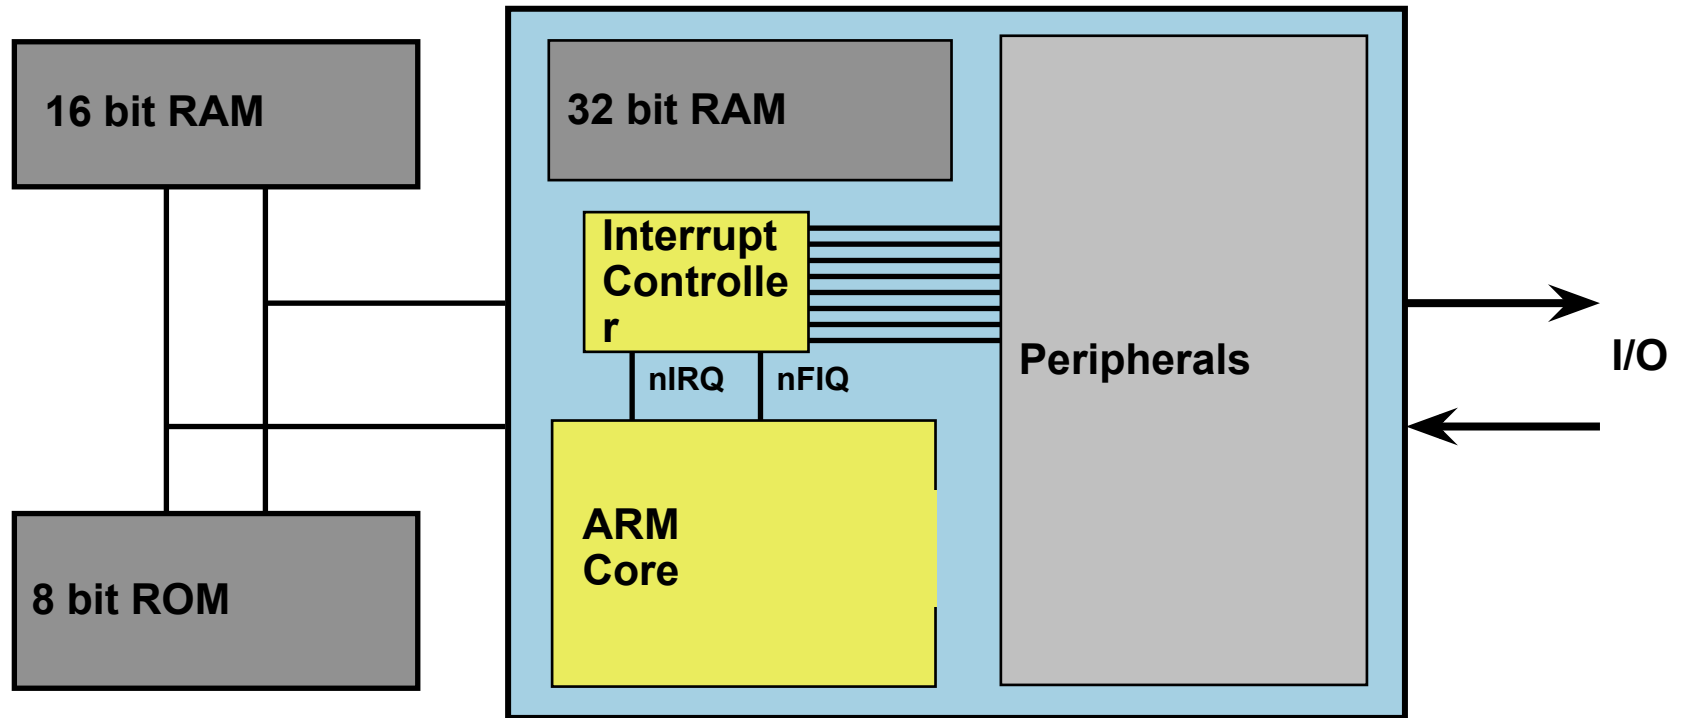

An Example AMBA System

AMBA: Advanced Microcontroller Bus Architecture

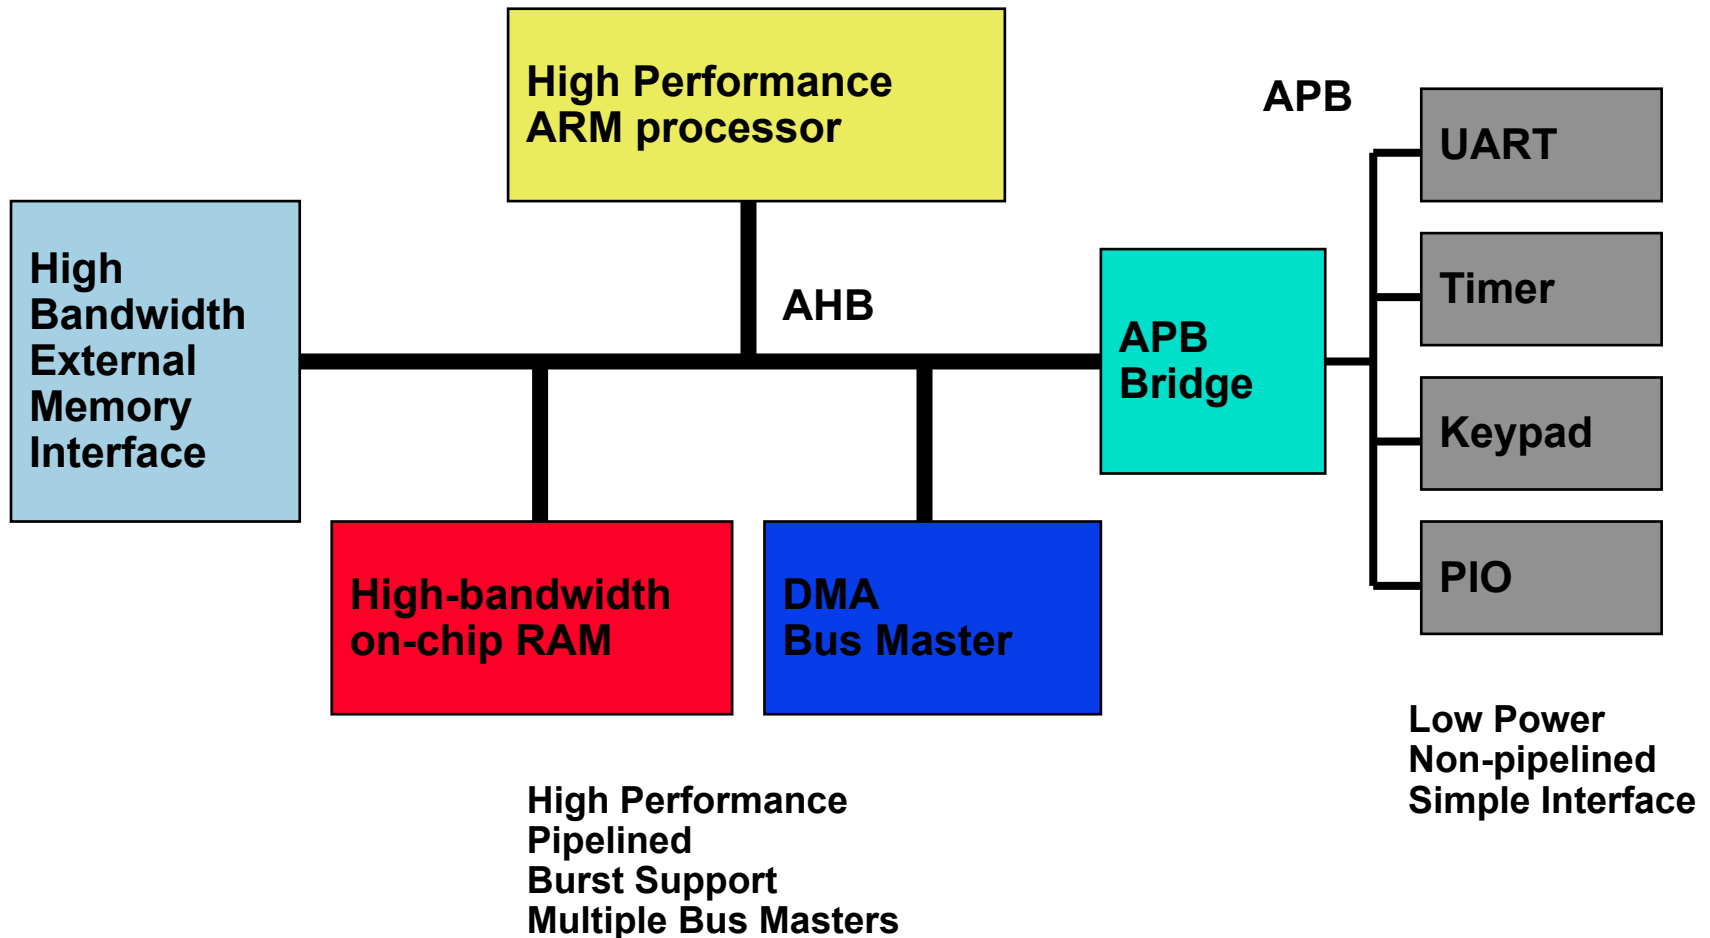

Advanced Peripheral Bus (APB), Advanced High-performance Bus (AHB)

AMBA systems are based around two buses, a high performance system bus and a lower performance peripheral bus.

The high performance bus (AHB) should connect all of the high performance, high bandwidth modules, such as the ARM Processor, any DMA engines, perhaps some fast, 32 bit wide local RAM (or wider to suit the ARM Bus Master being used), an external memory interface, and the interface to the lower performance bus. The number of modules connected here should be kept to a minimum to reduce the bus loading on this high performance bus and allow it to run much faster.

The bulk of the design modules are placed on the lower performance Peripheral Bus (APB). Modules placed here are not accessed as frequently as AHB modules, and as a result of the APB timing, need not consume power (in their APB interfaces) when there is no APB activity. The address and data bus widths on the APB only need to be as wide as required, compared to the AHB where the maximum address and data widths are specified to maximize system performance in this critical area.

So when a design is being partitioned, the main design criteria are

AHB	APB
High Performance	Low Power
Frequent Access	Simple Interface
Pipelined timing	Non-pipelined

We don't go into multi-layer AHB, AHB Lite or any other AMBA configurations in this presentation.