Model NHQ202M to NHQ206L Dual High Voltage Power Supplies

Features

- Dual HV supplies in single NIM packages
- Regulated 0 to ± 2kV, 3kV, 4kV, 5kV and 6 kV DC, output current - see table
- programmable HV-ramp 2 .. 255 V/S and 500 V/S ramp hardware settable, up and down
- LCD Display 4 digits with sign for voltage and current.
- Resolution of voltage indication: 1V
- Resolution of current indication: 1uA
- Frontpanel LED indicators for polarity
- Low noise and ripple for high resolution detectors: ≤ 2 mVpp typical, 5mVpp max.
- Settable voltage and current limiting
- Short circuit and overload protected
- Programmable HV parameter setting and polling of actual values via RS232C interface
- Continuous setting of HV over full range with 10 turn Helipot
- Easy access to manual polarity switch
- External input for HV shutdown

Description

The Models NHQ 202M-206L HV supplies are a two channel high voltage version in a NIM chassis. Modern patented circuit principles in connection with the latest SMT manufacturing technologies permit the design and construction of very compact high voltage supplies with excellent specifications.

All NHQ models are 1 slot wide, and offer either manual control or operation via RS232 Interface. The use of this interface supports more then the manual control functionality.

The high voltage supplies provide high precision output voltages together with very low ripple and noise, even under full load. Separate 10%-step hardware switches enable to set voltage and current limits. An INHIBIT input provides instant shutdown to protect sensitive detector devices.

Additionally, the maximal output current per channel is programmable via the interface. The high voltage outputs protected against overload and short circuit. The output polarity can be selected by manual rotary switches accessable from the side of the module without having to take the side-cover off.

The output polarity can also be set by software through the RS232C interface. The chosen polarity is displayed by a NHQ205M 23052002

LED on the front panel and a sign on the LCD display. It is not allowed to change the polarity under power! An undefined switch setting (not at one of the end positions) will cause no output voltage.

For effective protection of connected devices the maximum output voltage and current can be selected in 10%-steps with the rotary switches V_{max} and I_{max} (switch dialed to 10 corresponds to 100%). An output voltage or current exceeding the set limit is signalled by the red front panel error LED.



The range of NHQ 200 series HV supplies

| Model | Output | Outp. Current | Ripple | LCD res. | LCD res. | Power req. | Power req. | Type | Order |
|----------|---------|---------------|--------------|----------|----------|------------|------------|------|--------|
| | Voltage | per channel | typical | current | voltage | +/- 24V | +/- 6V | | Number |
| NHQ 202M | 0 2 kV | 0 6 mA | < 0.5 mV pp | 1 μA | 1 V | < 800 mA | < 100 mA | NIM | HVI202 |
| NHQ 203M | 0 3 kV | 0 4 mA | < 0.5 mV pp | 1 μA | 1 V | < 800 mA | < 100 mA | NIM | HVI203 |
| NHQ 204M | 0 4 kV | 0 3 mA | < 1 mV pp | 1 μA | 1 V | < 800 mA | < 100 mA | NIM | HVI204 |
| NHQ 205M | 0 5kV | 0 2 mA | < 2 mV pp | 1 μA | 1 V | < 800 mA | < 100 mA | NIM | HVI205 |
| NHQ 206L | 0 6 kV | 0 1 mA | < 2 mV pp | 1 μA | 1 V | < 500 mA | < 100 mA | NIM | HVI206 |

Function of the KILL switch: Switch to the right position: (ENABLE KILL)

The output voltage will be shut off permanently without ramp on exceeding V_{max} , I_{max} or in the presence of an INHIBIT signal (Low=active). Restoring the output voltage is possible after operating the switches HV-ON or KILL or reading "LAM status" and then "Start voltage change" by DAC control.

Note: When capacitance is effective at the HV-output or when the rate of change of output voltage is high (hardware ramp) at high load, then the KILL function will be released by the current charging the condenser. In this case use a small rate of output change (software ramp) or select not until output voltage is set voltage.

Switch to the left position: (DISABLE KILL)

The output voltage will be limited to V_{max}, output current to I_{max} respectively; INHIBIT shuts the output voltage off without ramp, the previous voltage setting will be restored with hard- or software ramp on INHIBIT no longer being present.

Operation under RS232 control

The most important parameters of the high voltage supply can be set and read under computer control via the RS232 interface. An optional VI (virtual instrument) is available for easy setting of parameters by simple mouse click.

RS232 control mode

1st Write function: set voltage; ramp speed; maximal

output current (current trip); auto start

 2^{nd} Switch function: output voltage = set voltage, output

voltage = 0

3rd Read function: set voltage; actual output voltage; ramp

speed; actual output current; current trip; auto start; hardware limits current and

voltage; status


Front panel switches are having priority over software control.

Manual control mode

While the unit is operated in manual control mode, RS232 read cycles are interpreted only. Commands are accepted, but do not result in a change of the output voltage.

Options

NHQ 04 Supply voltage <u>+</u> 24V (<900 mA)
CAN-Bus interface instead of RS232C interface

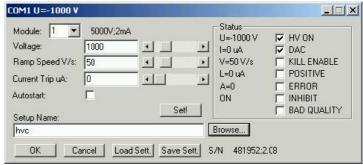

The HVC program for controlling via RS232, control and status window

NHQ205M



Specifications

| Model | NHQ | 202M | 203M | 204M | 205M | 206L | | | |
|---------------------------------------|---|---|---------|---------|---------|---------|--|--|--|
| Output voltage V ₀ | kV | 0 2 | 0 3 | 0 4 | 0 5 | 0 6 | | | |
| Output current per channel | mA | 0 6 | 0 4 | 0 3 | 0 2 | 0 1 | | | |
| Stability (no load / load) | ΔV_0 | <5 x 10 ⁻⁵ | | | | | | | |
| Stability | <5 x 10 ⁻⁵ | | | | | | | | |
| Temperature coefficient | /K | <5 x 10 ⁻⁵ | | | | | | | |
| Ripple | mVp-p typ. | < 2 | | | | | | | |
| | mVp-p max. | 5 | | | | | | | |
| LCD Display | | 4 digits with sign, switch controlled | | | | | | | |
| | | voltage display in [V] | | | | | | | |
| | | current display in [μΑ] | | | | | | | |
| Res. of current measurement | 1 μΑ | | | | | | | | |
| Res. of voltage measurement | | 1 V | | | | | | | |
| Accuracy current measurement | | ± (0,05% I ₀ +0,02% I _{0 max} + 1 digit) for one year | | | | | | | |
| Accuracy voltage measurement | | \pm (0,05% V ₀ +0,02% V _{0 max} + 1 digit) for one year | | | | | | | |
| Voltage | CONTROL | upper position: 10 - turn potentiometer | | | | | | | |
| control | switch in: | lower position (DAC): control via serial interface | | | | | | | |
| Rate of change of | hardware ramp: | 500 V/s (on HV-ON/ -OFF) | | | | | | | |
| output voltage | software ramp: | 2 255 V/s | | | | | | | |
| Protection | | - separate current and Voltage limit | | | | | | | |
| | | (hardware, rotary switch in 10%-steps) | | | | | | | |
| | | INHIBIT (ext. signal, TTL-level, Low=active) | | | | | | | |
| | | - programmable current trip (software) | | | | | | | |
| Power requirements V _{INPUT} | ± 24 V | < 800mA | < 800mA | < 800mA | < 800mA | < 500mA | | | |
| | ± 6 V | < 100mA | < 100mA | < 100mA | < 100mA | < 100mA | | | |
| Case | NIM-Standard module: NIM #1 | | | | | | | | |
| Connectors | NIM: 3-pin, Interface: 9-pin female D-Sub connector | | | | | | | | |
| HV Connector | SHV (module rear panel) | | | | | | | | |
| INHIBIT Connector | LEMO (module front panel) | | | | | | | | |
| Operating temperature | 0 +50 °C | | | | | | | | |
| Storage temperature | -20 +60 °C | | | | | | | | |

