
77-21-00

Engine Model(s): MODEL(S) PW150A

## Figure 3 ITT Thermocouple & Wiring Harness Installation

Figure 3 ITT Thermocouple & Wiring Harness Installation

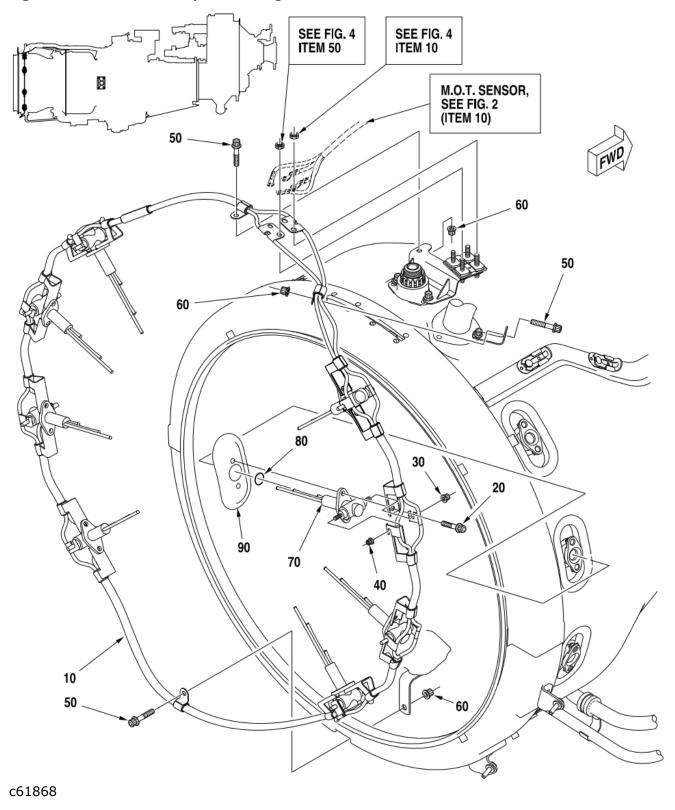

Export Classification: Outside US (EAR): Contains 1025% 9E991, US (EAR): NSR, Outside US (ITAR): NSR, US (ITAR): NSR, EIPA (ECL): NSR, DPA (CGD): NSR

	Fig. Item	Part No.	Airline Part No.	Nomenclature	Effect Code	Units Per Assy.
_	1			ITT THERMOCOUPLE & WIRING HARNESS INSTALLATION SEE 72-00-00 FIG.1 FOR NHA		REF
	10	3047287- 01		• WIRING HARNESS, EXHAUST GAS TEMPERATURE FOR ADDITIONAL INFORMATION REFER TO P&WC ABBREVIATED COMPONENT MAINTENANCE MANUAL P/N 77-21-11 (3053101)		1
	20	MS9696-		ATTACHING PARTS		16
		<u>08</u>		- BOLT, MACHINE, DBL HEX		
	30	ST3515- 01		NUT, SLFLKG, HEX     0.190-32UNJF-3B     REFER TO PARTS SUBSTITUTION LIST IN     INTRODUCTION		8
	40	ST3516- 01		NUT, SLFLKG, HEX     0.164-32UNJC-3B     REFER TO PARTS SUBSTITUTION LIST IN     INTRODUCTION		8
	50	MS9696- 08		- BOLT, MACHINE, DBL HEX		3
	60	ST3030- 09		- NUT OPTION (IC) SEE NUT OPTION TABLE*		3
	70	3048221- 01		THERMOCOUPLE, IMMERSION (ITT) FOR ADDITIONAL INFORMATION REFER TO P&WC ABBREVIATED COMPONENT MAINTENANCE MANUAL P/N 77-21-03 (3043621)		8
	80	ST3477- 11		GASKET OPTION (IC)     (IC) CONSISTS OF:		8
		ST3474- 11		• GASKET		REF
		ST3476- 11		- GASKET		REF
	90	3048175- 01 (72-54- 75)		COVER, THERMOCOUPLE		8

- ITEM NOT ILLUSTRATED