ILLUSTRATED PARTS CATALOG Manual Part No. 3043524 77-21-00 - Figure 3 Rev. 36.0 - 01/JUL/19

Engine Model(s): PW150

77-21-00

Figure 3 ITT Thermocouple & Wiring Harness Installation

Figure 3 ITT Thermocouple & Wiring Harness Installation

Export Classification: ECCN=Contains 10-25% 9E991;ECL=NSR

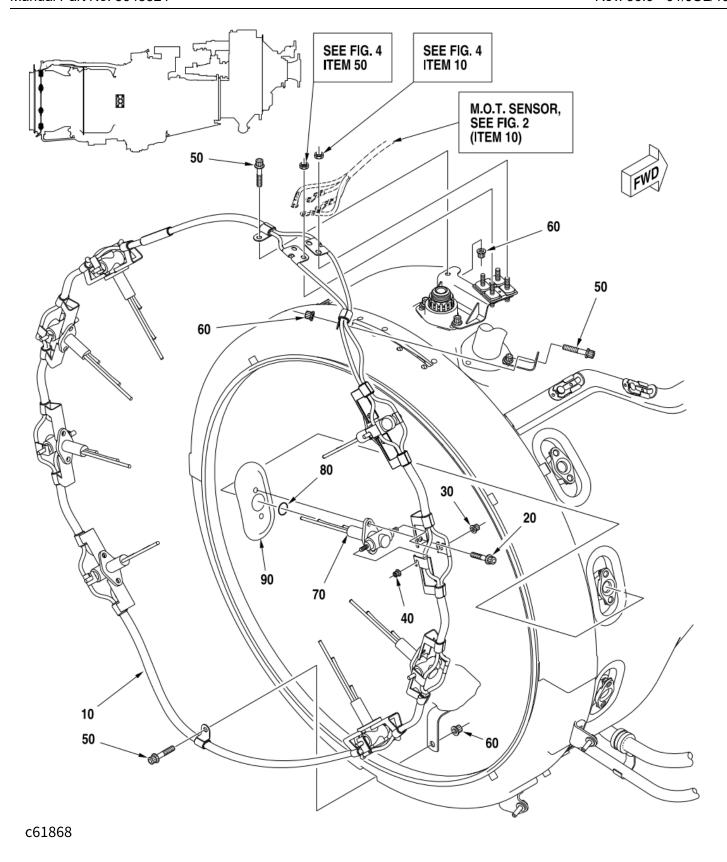


	Fig. Item	Part No.	Airline Part No.	Nomenclature	Effect Code	Units Per Assy.
_	1			ITT THERMOCOUPLE & WIRING HARNESS INSTALLATION SEE 72-00-00 FIG.1 FOR NHA		REF
	10	3047287- 01		• WIRING HARNESS, EXHAUST GAS TEMPERATURE FOR ADDITIONAL INFORMATION REFER TO P&WC ABBREVIATED COMPONENT MAINTENANCE MANUAL P/N 77-21-11 (3053101)		1
	20	MS9696- 08		ATTACHING PARTS - BOLT, MACHINE, DBL HEX		16
	30	ST3515- 01		• NUT, SLFLKG, HEX 0.190-32UNJF-3B REFER TO PARTS SUBSTITUTION LIST IN INTRODUCTION		8
	40	ST3516- 01		• NUT, SLFLKG, HEX 0.164-32UNJC-3B REFER TO PARTS SUBSTITUTION LIST IN INTRODUCTION		8
	50	MS9696- 08		BOLT, MACHINE, DBL HEX		3
	60	ST3030- 09		• NUT OPTION (IC) SEE NUT OPTION TABLE*		3
	70	3048221- 01		■ THERMOCOUPLE, IMMERSION (ITT) FOR ADDITIONAL INFORMATION REFER TO P&WC ABBREVIATED COMPONENT MAINTENANCE MANUAL P/N 77-21-03 (3043621)		8
	80	ST3477- 11		GASKET OPTION (IC) (IC) CONSISTS OF:		8
		ST3474- 11		- GASKET		REF
		ST3476-		- GASKET		REF

Fig. Item	Part No.	Airline Part No.	Nomenclature	Effect Code	Units Per Assy.
90	3048175- 01 (72-54- 75)		• COVER, THERMOCOUPLE		8

[—] ITEM NOT ILLUSTRATED