

+3V3

ENABLE 12V

→ V+

GND

+5V +3V3 VBAT

V+ GND


ENABLE_12V


PSU1

TITLE: usb-interface

Document Number: REV:


Date: 11.11.20 11:51 Sheet: 1/1

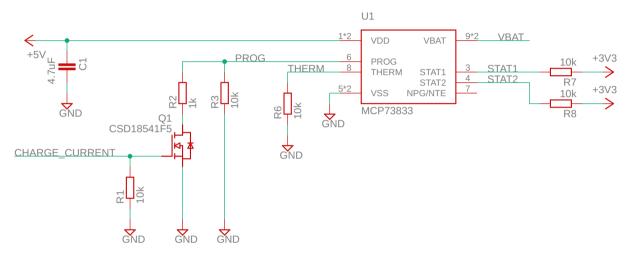

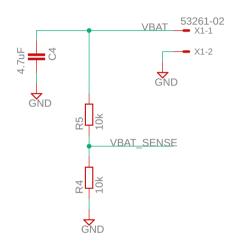



Defaults to 100mA. Width CHARGE_CURRENT = HIGH the charge Current increases to \sim 1A.

TITLE:	usb-interface		
Docume	nt Number:		REV:
Date: 1	1.11.20 11:51	Sheet: 1	L/1

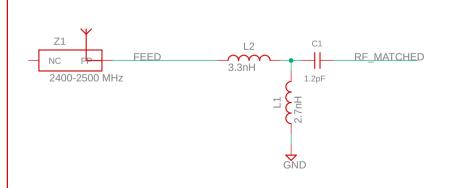



TITLE:	usb-interface		
Docume	nt Number:		REV:
Date: 12	L.11.20 11:51	Sheet: 1/1	

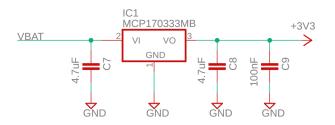


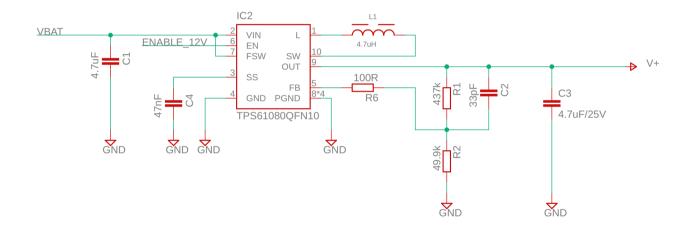


TITLE: (ısb-interface		
Document	Number:		REV:
Date: 11.1	1.20 11:51	Sheet:	1/1

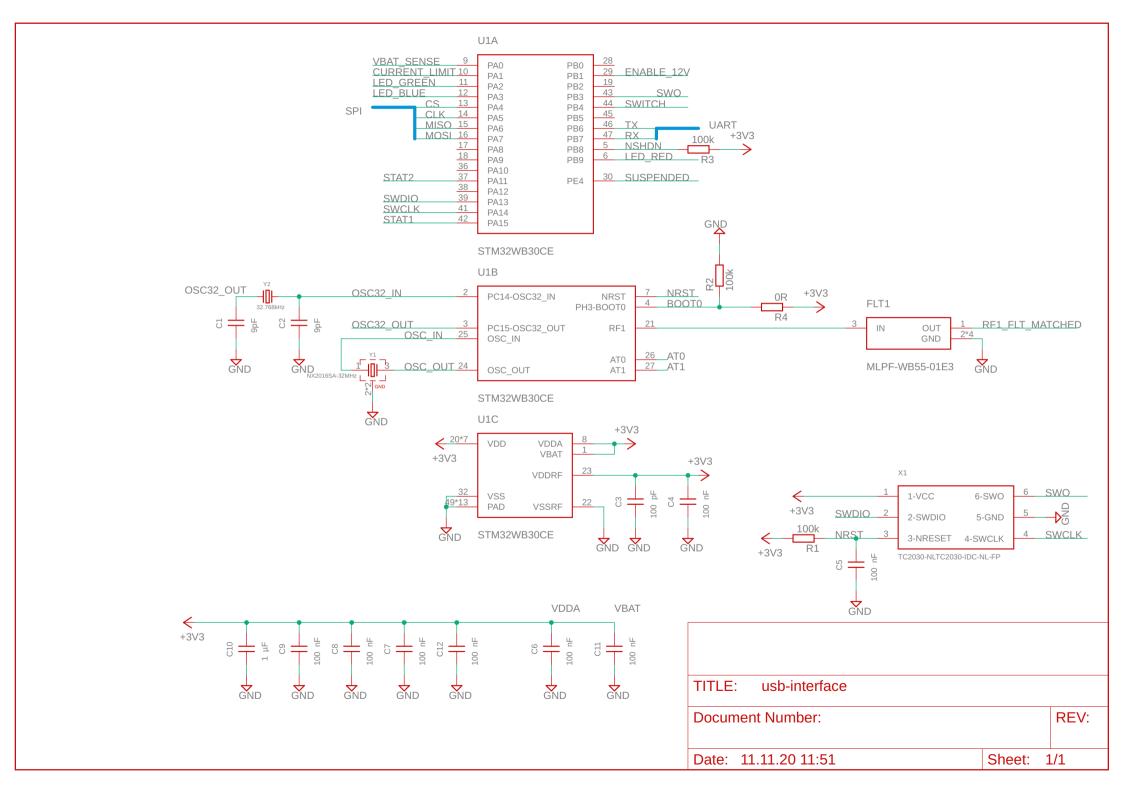

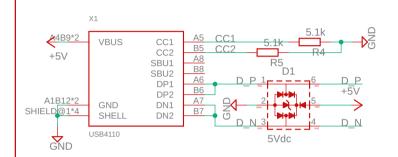

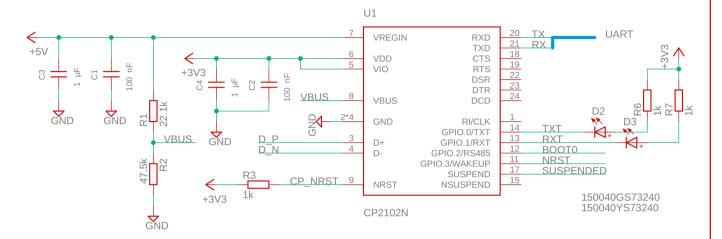

TITLE:	usb-interface		
Docume	nt Number:		REV:
Date: 1	1.11.20 11:51	Sheet: 2	L/1

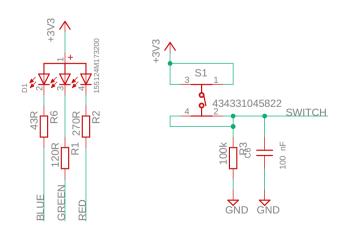

TITLE:	usb-interface		
Docume	nt Number:		REV:
Date: 1	1.11.20 11:51	Sheet: 1/1	