



One per abutment, under the face wall, centred on the wall line. The bottom course of the face bears on its top.

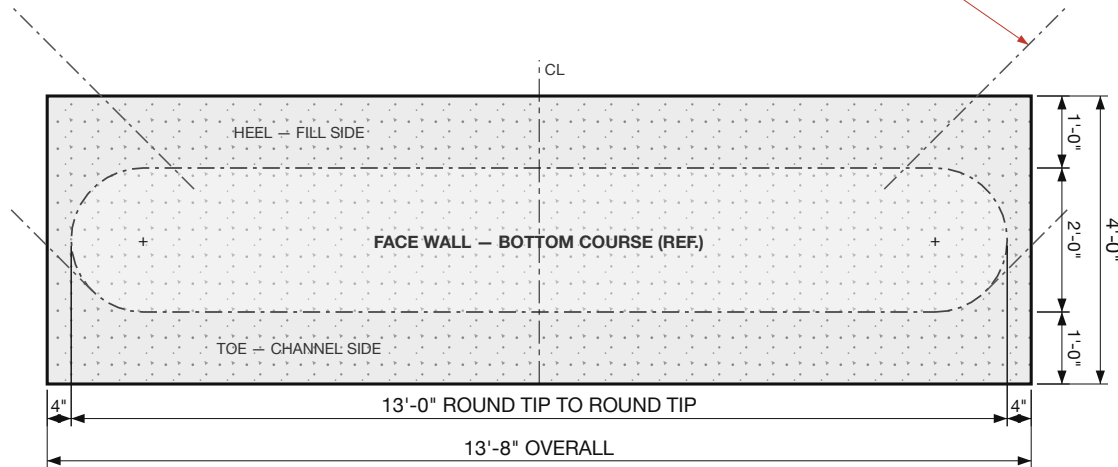

SCALE 3/8" = 1'-0" · + = corner round pivot

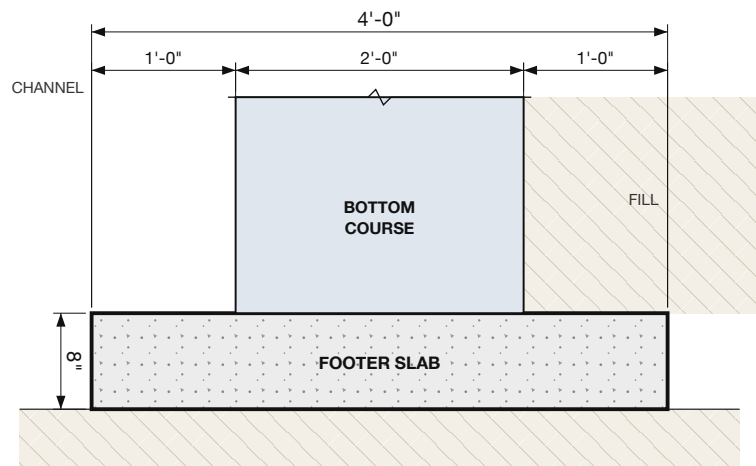

SCALE 3/4" = 1'-0" · bottom course = C1, or C0 with the extra course on

1. Two pieces, identical — one per abutment, under the face wall. Form layout is on Sheet 2.
2. Centre the slab on the wall line: 1'-0" toe on the channel side, 1'-0" heel on the fill side, 4" past each corner round tip.
3. The TOP is the bearing surface for the bottom course. Screed straight and float flat — no broom, no bumps. Flat within 1/8" in 10'. Edges square.
4. Set on a compacted, level base. Blocks sit directly on the flat top — the slab has no studs.
5. The same slab is used in both model options. With the extra course on, C0 bears on it instead of C1 and the bridge sits 2' higher.
6. Hold length and width to $\pm 1/4"$, thickness to $\pm 1/4"$.


- **WING FOOTING.** The wings flare off this slab at 45° and bear only partly on it. Standard layout: about 1.5 of the 12 sq ft under each C1 wing block. With C0: the corner round and about a third of the 6' End's body; the 2' tip block is fully off. Each wing needs a footing whose top matches this slab's top.
- Reinforcing steel — size, spacing, cover.
- Lifting inserts — piece is ≈5,470 lb.
- Base preparation and allowable bearing pressure.
- Concrete mix and strength.
- Wall stability — the walls are one block deep. Check sliding and overturning, especially with the extra course.

PIECE DATA — EACH			
Length	13'-8"	Weight	≈ 5,470 lb @ 150 pcf
Width	4'-0"	Quantity	2 — identical
Thickness	8"	Both pours	2.70 CY + waste
Volume	36.4 cu ft (1.35 CY)	Bearing face	TOP — flat, floated

PROJECT	SHEET	QTY	DATE	REV	SHEET
ATV BRIDGE — 90' SPAN	FOOTER SLAB — PIECE DRAWING	2 — identical	2026-10-09	0	1 of 2
Dimensions govern — do not scale. Scales are true only when printed at 100% on 11×8.5.		Drawn by:		Checked:	


FORM — CAST TOP UP

Plain rectangular box. The bed forms the bottom; the screeded top is the bearing face, so the rails set how flat the blocks sit.

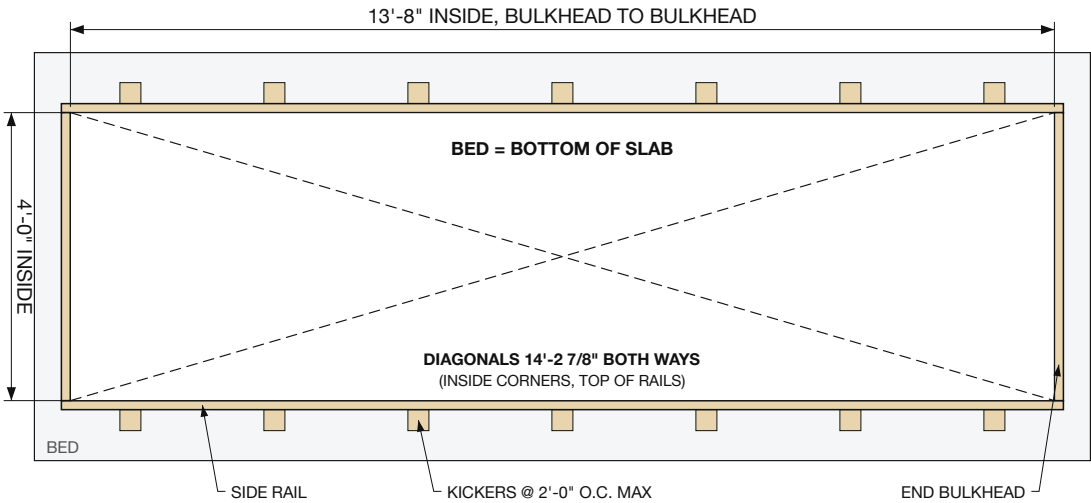


1 FORM PLAN — LOOKING DOWN INTO THE FORM

SCALE 3/8" = 1'-0"



2A FORM SECTION — LENGTHWISE

SCALE 3/8" = 1'-0"

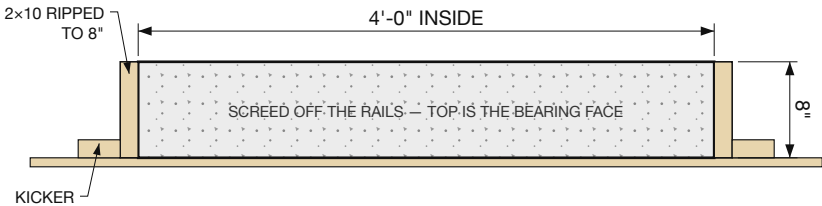

2B SECTION ACROSS FORM

SCALE 3/4" = 1'-0"

FORM MATERIALS (SUGGESTED)

- Bed** Flat, level shop floor, or 3/4" ply on sleepers, min 5'-0" x 15'-0". This face goes down on the base, so finish doesn't matter, but it must be flat.
- Side rails (2)** 2x10 ripped to exactly 8", 13'-11" long — cut from 16' stock. Pick straight boards: the rails set the bearing face.
- Bulkheads (2)** 2x10 ripped to exactly 8", 4'-0" long, fit between the rails.
- Kickers** 2x4 blocks screwed to the bed against the rails, 2'-0" o.c. max. Tie across the top at mid-length if the rails bow.

BUILD AND CHECK

- Set the bed flat and level — 1/8" max over the length.
- Snap the inside rectangle 13'-8" x 4'-0". Set rails and bulkheads to it, tops exactly 8" above the bed all the way around.
- Square it: inside diagonals at the top of the rails 14'-2 7/8" both ways.
- Sight down both rails and check them with a straightedge — no crown or sag. The screed rides on them.
- Caulk the seams, oil every contact face with form release.
- STOP — set steel and lift inserts per the HOLD items on Sheet 1.**
- Pour, vibrate, screed off the rails. Float the top flat — no broom. Check with a straightedge before it sets: 1/8" in 10'.
- After stripping: 13'-8" x 4'-0" x 8". Mark the wall centreline and both round-tip positions (4" in from each end) on the top.

POUR

1.35 CY per slab, 2.70 CY for both — allow ~10% for waste. ≈5,470 lb each.

HOLD — CONFIRM BEFORE POURING (SHEET 1)

Rebar · lift inserts · base prep · concrete mix · wing footing. Build the form now; leave it open until these are set.

PROJECT	SHEET	QTY	DATE	REV	SHEET
ATV BRIDGE — 90' SPAN	FOOTER SLAB — FORM LAYOUT	2 — identical	2026-10-09	0	2 of 2

Dimensions govern — do not scale. Scales are true only when printed at 100% on 11x8.5.

Drawn by:

Checked: