

1. Insert the wire passer around the bone (all shown below).




# 2. Insert the auxiliary tool.






## 3. Combine and close both components.

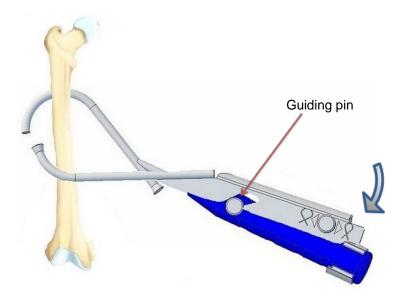

- Put the notch of the auxiliary tool over the guiding pin and gently slide the components together.
- Align the handle and the auxiliary tool. During the process, the auxiliary tool slides in the notch.


## 4. Check the correct position once connected.

Align the auxiliary tool until it reaches the end of the notch.

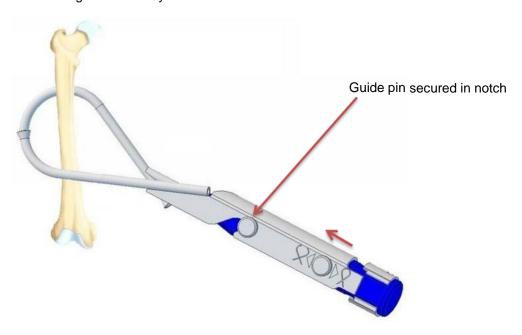



# 5. Lock the components by turning the safety ring.

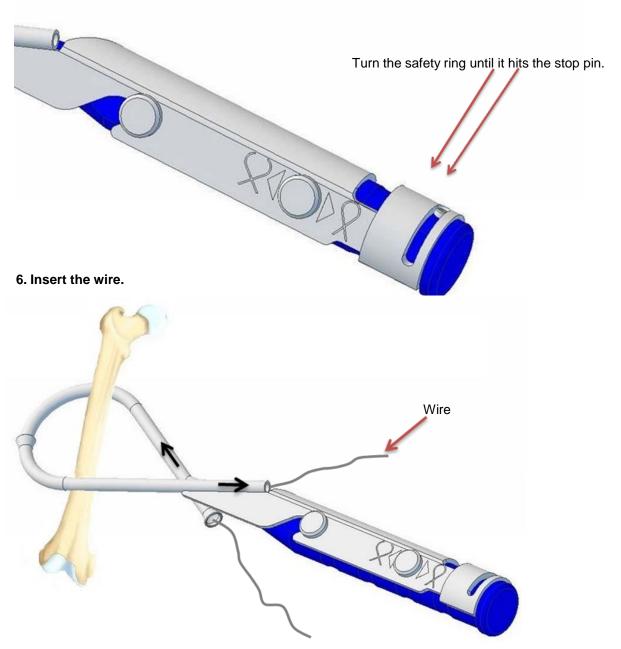

- Insert the wire in the direction indicated by above black arrows.
- Disassembly occurs in reverse order. Make sure that the wire does not retract during the process.



## Instructions for Use Wire Guides with Extension

Artemamed, LLC does not accept any liability if these instructions for use have not been observed or followed.

Replacement parts can be obtained from Artemamed:

Artemamed 82.5245 Wire Guide with Extension 11" Ø 45mm, plastic handle, blue Artemamed 82.5250 Wire Guide with Extension 11  $\frac{1}{2}$ " Ø 70mm, plastic handle, blue



7901 4th St. N STE 10963, Saint Petersburg, Florida, 33702

Email: <a href="mailto:sales@arteamedical.com">sales@arteamedical.com</a>
Website: <a href="mailto:www.artemamed.com">www.artemamed.com</a>