

Structural Post Installation Guide

It is the responsibility of the installer to meet or exceed all code and safety requirements, and to obtain all required building permits. These instructions are only a guide and may not address every circumstance. The deck and railing installer should determine and implement appropriate installation techniques for each situation. **The manufacturer shall not be held liable for improper or unsafe installations.**

Step 1 • Safety Precautions

a) Review all local building codes and always use safety equipment when installing these products.

Step 2 • Mounting Surface Preparation

a) Determine placement of post on deck surface. Set post in place and mark mounting holes.

Step 3 • Mount Post

a) Mount post to deck surface using one of the options and suggested mounting hardware listed in Mounting Options.

NOTE: Installer must determine the proper mounting hardware based on application (not included).

Base plate will accommodate 3/8" to 1/2" maximum hardware size.

b) With Post secured to surface, check post with a level. If the post needs to be adjusted for plumb, loosen mounting bolts and adjust with included 1/4" shims. Tighten mounting bolts.


NOTE: Included shims allow approximately 4-5° maximum plumb correction.

WOOD SURFACES

Installation Method for Pressure Treated or Wood Fiber Based Composite Decking


All-Thread Bolts

Flat Washer S.S. (12)
Lock Washer S.S. (12)
S.S. Nut (12)

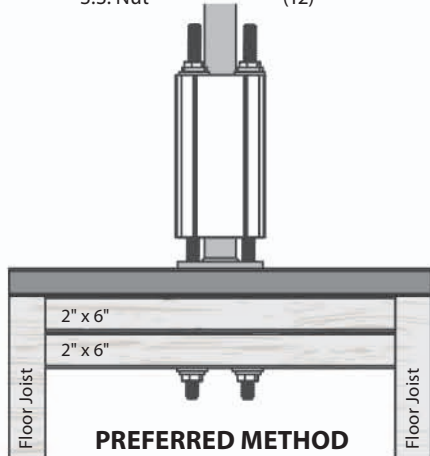


Carriage Bolts

Flat Washer S.S. (12)
Lock Washer S.S. (12)
S.S. Nut (12)

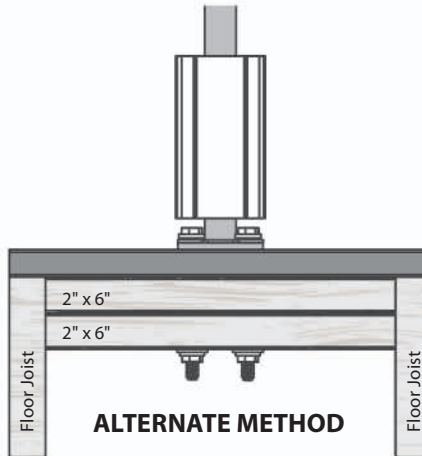


Structural Post Kit Includes

Adjustable height
for 36" or 42" Rail

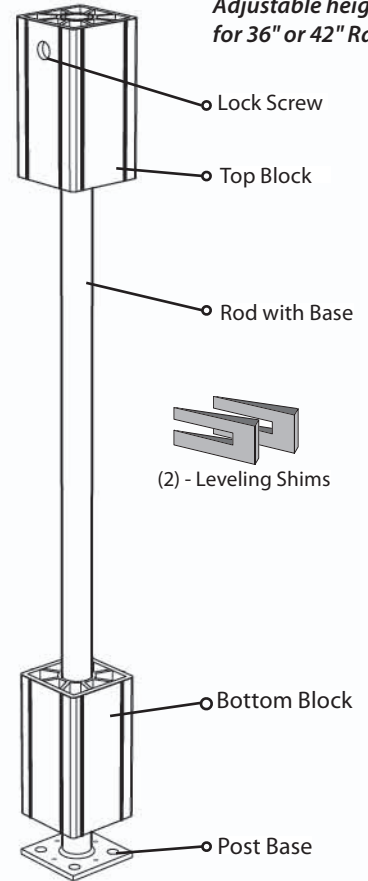

Installation Method for Cellular PVC or Hollow-Core Composite Decking


To achieve maximum installation strength - Hollow Core Composite or Cellular PVC deck boards should be notched/cut out around Structural Post Mount and Structural Post Mount installed directly to sub-structure blocking.

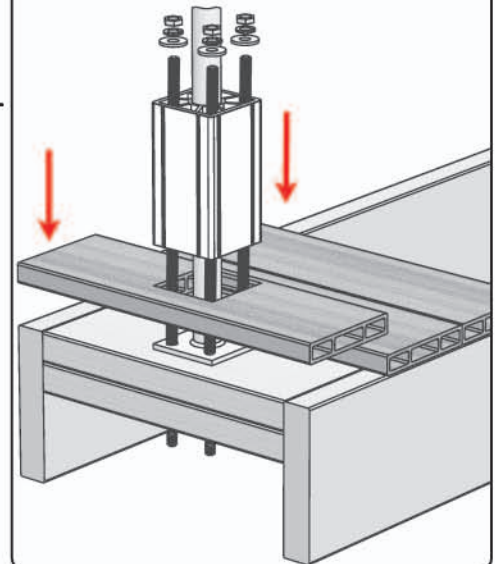

CONCRETE SURFACES

All-Thread Bolts


Flat Washer S.S. (4)
Lock Washer S.S. (4)
S.S. Nut (4)

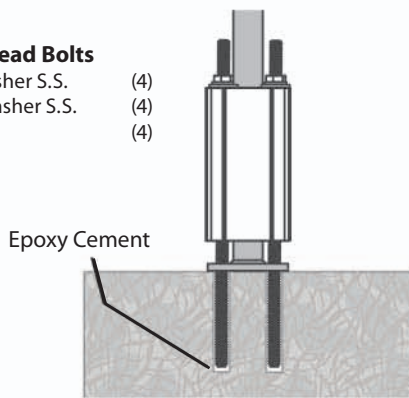

PREFERRED METHOD

Lag Bolts

Flat Washer S.S. (4)
Lock Washer S.S. (4)
Lag Bolts (4)
Concrete Anchor (4)

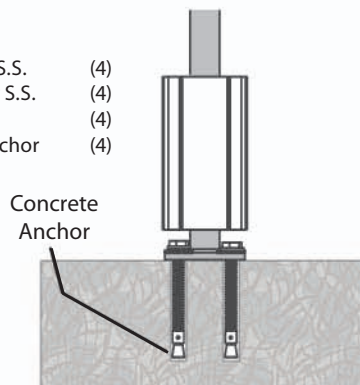

ALTERNATE METHOD


42" RAILING HEIGHT

Commercial Installation


It is necessary to adjust the Structural Post Mount Top Block when installing 42" railing. To adjust height, remove lock screw, remove and rotate block, reinstall block and lock screw.

NOTE: Make certain screw is tight on top block.

Remove Lock Screw

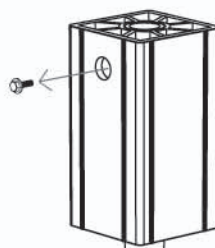

Rotate Top Block

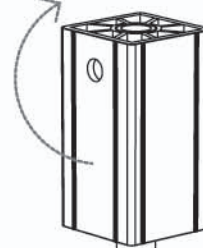

Reinstall Lock Screw



Leveling Structural Post Installation Guide

It is the responsibility of the installer to meet or exceed all code and safety requirements, and to obtain all required building permits. These instructions are only a guide and may not address every circumstance. The deck and railing installer should determine and implement appropriate installation techniques for each situation.

The manufacturer shall not be held liable for improper or unsafe installations.

Step 1 Safety Precautions

Review all local building codes.

Always use safety equipment when installing these products.

Step 2 Lay out Post and mark holes located at four (4) corners of Leveling Base on Mounting Surface.
(Note: leveling base plate makes it nice to mark pattern)

Step 3 With Mounting holes marked, drill with the appropriate size bit & mounting anchor.
(Note: Holes in post will take up to a 1/2" mounting bolt.)

Step 4 Set Structural Post in place, Leveling Base Plate first and then Structural Post.
Align Structural Post & Leveling Base Plate with mounting holes & install mounting bolts.
Gently tighten mounting bolts.

Step 5 Check for plumb. Install (4) four small adjusting bolts in pre threaded holes in post base.
Loosen mounting bolts if necessary & tighten adjustment bolts until plumb.
Tighten mounting bolts.

Step 6 If additional adjustment is nessecary:


Insert (2) two shims under post base around mounting bolts. Repeat Step 5.

Step 7 Trim shims flush with post base.


Adjusting Top Block Height (for 42" high railing)

When using 42" high railing, it is necessary to adjust top block height.
To adjust height, remove lock screw, remove and rotate block, reinstall block, reinstall lock screw. (See illustrations for adjusting top block height)
MAKE CERTAIN SCREW IS TIGHT ON TOP BLOCK.


Leveling Structural Post Kit Includes

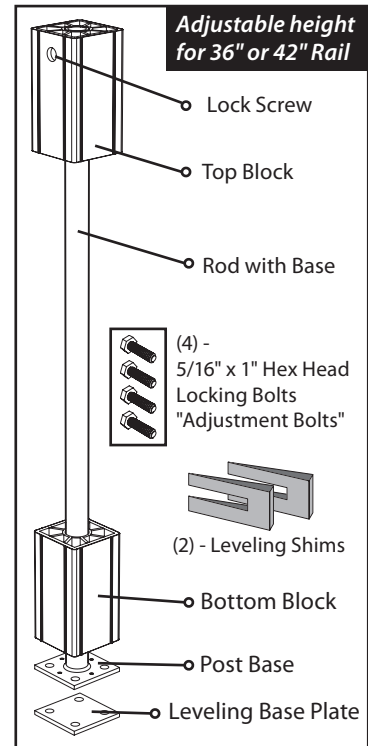


Step 2 & 3

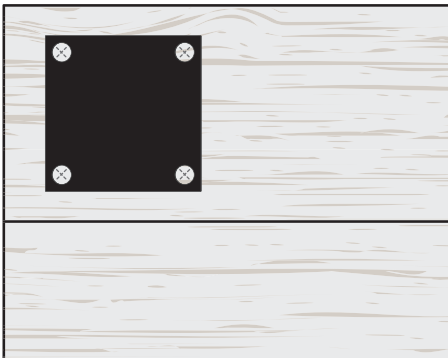


Step 4

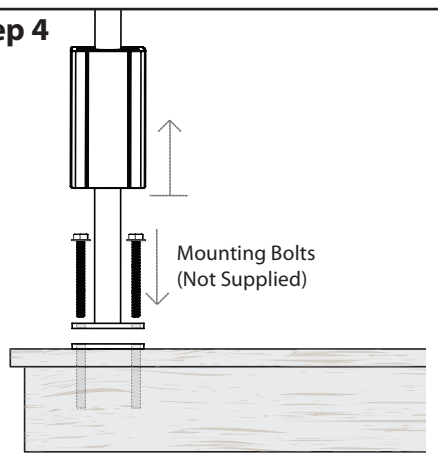

Step 5

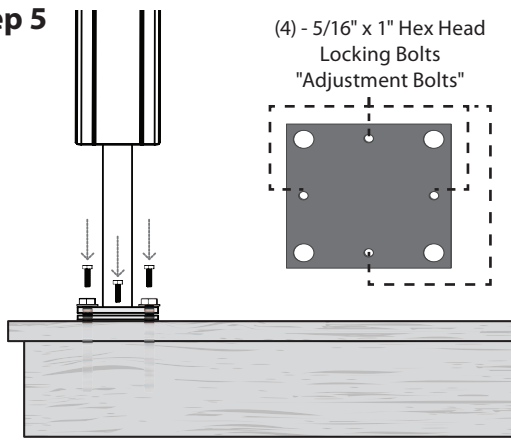


Step 6 & 7

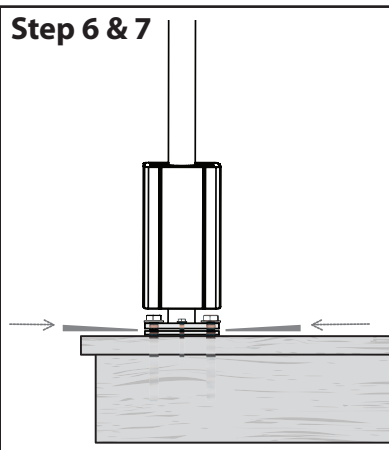


Adjusting Top Block Height

Remove Lock Screw

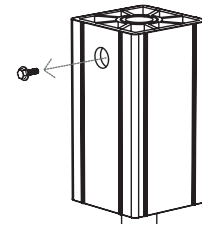

Rotate Top Block

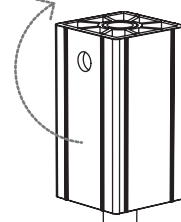

Reinstall Lock Screw

