Devices and Communication Buses for Devices Network

3


The following facts have been presented in the previous chapters:


е

 \mathcal{C}

a

- Embedded systems' hardware consist of processors, microcontrollers or DSPs and basic hardware units such as power supply, clock circuits, reset circuits, memory devices (ROM, flash and RAM) of different sizes and speed of access, and IO peripheral devices and ports for the UART, modem, transceiver, timer-counter, keypad, touch screen or LCD or LED display, DAC, ADC and pulse dialer
- Embedded system microprocessors interface with real world IO devices, such as DMA and bus controllers, peripherals, IO ports and keypad.
- The controllers, peripherals and ports have addresses using which the processor accesses bytes and words. An embedded system connects to devices such as the keypad, touch screen, multiline display unit, printer or modem or motors through ports.
- During a read or write operation, the processor accesses that address in a memory-mapped IO, as if it were accessing a memory address. A decoder takes the system memory or IO address bus signals as the input and generates a port or device select signal, CS and selects the port or device.





We can't think of a computer without IO devices for the video output, mouse, keyboard input, CD and magnetic storage. We can't think of a mobile smart phone without the devices for LCD or touchscreen, IO port interfaces, keypad, timers, dialer, speaker, radio interface and flash memory storage. Similarly, we can't think of an embedded system without IO devices, timers and other devices. In fact, the devices play the most significant role in any embedded system. A device connects and accesses to and from the system-processor and memory either internally or through an internal controller or through a port, with each port having an assigned port addresses similar to a memory addresses.

Distributed devices are networked using sophisticated IO buxes. For example, take the case of an automobile: all embedded devices in automobile have a microcontroller, and network through IO bus. The devices in an automobile are distributed at different locations. These are networked using a bus called Control Area Network (CAN) bus. Similarly, a camera interfaces to a computer and printer through a USB bus or Bluetooth device.

Advanced networking devices such as transceivers and encrypting and decrypting devices operate at high speeds.

A hardware engineer designing an embedded system must, therefore, clearly understand the features of interface circuits and their speed of operations and the buses that network the devices.

We will learn the following topics in this chapter:

- 1. Serial and parallel input, output and IO ports
- 2. Synchronous serial-communication devices and examples of High-Level Data Link Control
- Asynchronous serial-communication devices and their examples, R\$232C and UART
- 4. Parallel ports and parallel communication devices
- 5. Wireless devices
- Sophisticated interfacing features in the systems for fast IOs, fast transceivers, and real time voice and video IOs
- Timing and counting devices, and the concept of real time clock, software timers and watchdog timers
- Inter Integrated Circuit (I²C) communication bus between multiple distributed ICs and the CAN bus as the control network between the distributed devices in the automobiles
- Universal Serial Bus (USB) for fast serial transmission and reception between the host embedded system and distributed serial devices like the keyboard, printer, scauner and ISDN system
- 10. IBM Standard Architecture—(ISA) and Peripheral Component Interconnect (PCI)/PCI-X (PCI Extended) buses between a host computer or system and PC-based devices, systems or cards; for example, PCI bus between the PC and Network Interface Card (NIC)

- 11. Internet-enabled embedded devices and their network protocols
- 12. Wireless protocols for mobile and wireless networks

3.1 IO TYPES AND EXAMPLES

A serial port is a port for serial communication. Serial communication means that over a given line or channel one bit can communicate and the bits transmit at periodic intervals generated by a clock. A serial port communication is over short or long distances.

A parallel port is a port for parallel communication. Parallel communication means that multiple bits can communicate over a set of parallel lines at any given instance. A parallel port communicates within the same board, between ICs or wires over very short distances of at most less than a meter.

A serial or parallel port can provide certain special features and sophistication (Section 3.4) by using a processing element.

Ports can interconnect by wireless. Wireless or mobile communication is serial communication but without wires, can be over a short-range personal area network as well as long-range wireless network, and transmission takes place by using carrier frequencies. The carrier modulates the serial bits before transmission in air [Sections 3.5 and 3.13]. A receiver demodulates and retrieve the serial bits back.

Serial and parallel ports of IO devices can be classified into following IO types: (i) Synchronous serial input (ii) Synchronous serial output (iii) Asynchronous serial UART input (iv) Asynchronous serial UART output (v) Parallel port one bit input (vi) Parallel port output (vii) Parallel port output. Some devices function both as input and as output; for example, a modem.

3.1.1 Synchronous Serial Input

The part 1 in Figure 3.1(a) shows a synchronous input serial port. Each bit in each byte and each received byte is in synchronization. Synchronization means separation by a constant interval or phase difference [part 2 in Figure 3.1(a)]. If clock period equals T, then each byte at the port is received at input in period 8 T. The bytes are received at constant rates. Each byte at the input port separates by 8 T and data transfer rate for the serial line bits is 1/T bps [1 bps = 1-bit per second]. The sender, along with the serial bits, also sends the clock pulses SCLK (serial clock) to the receiver port pin. The port synchronizes the serial data-input bits with clock bits.

The serial data input and clock pulse-input are on same input line when the clock pulses either encode or modulate serial data input bits suitably. The receiver detects clock pulses and receives data bits after decoding or demodulating.

When a separate SCLK input is sent, the receiver detects at the middle, positive or negative edge of the clock pulses that indicate whether data-input is 1 or 0 and saves the bits in 8-bit shift register. The processing element at the port (peripheral) saves the byte at a port register from where the microprocessor reads the byte.

Synchronous serial input is also called master output slave input (MOSI) when the SCLK is sent from the sender to the receiver and slave is forced to synchronize sent inputs from the master as per the master clock inputs. Synchronous serial input is also called master input slave output (MISO) when the SCLK is sent to the sender (slave) from the receiver (master) and the slave is forced to synchronize sending the inputs to master as per the master clock's outputs.

Synchronous serial input is used for interprocessor transfers, audio inputs and streaming data inputs.

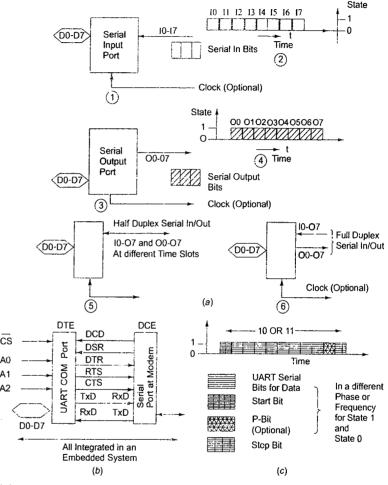


Fig. 3.1 (a) Input serial port, Output Serial port, Bi-directional half-duplex serial port, and Bi-directional full-duplex serial port (b) Handshaking signals at COM port in computer and (c) a UART serial port bits

3.1.2 Synchronous Serial Output

The part 3 in Figure 3.1(a) shows a synchronous output serial port. Each bit in each byte is in synchronization with a clock. The bytes are sent at constant rates [part 4 in Figure 3.1(a)]. If the clock period equals T, then the data transfer rate is 1/T bps. The sender sends either the clock pulses at SCLK pin or the serial data output and clock pulse-input through same output line when the clock pulses either suitably modulate or encode the serial output bits.

The processing element at the port (peripheral) sends the byte through a shift register at the port to which the microprocessor writes the byte.

Synchronous serial output is used for interprocessor transfers, audio outputs and streaming data outputs,

3.1.3 Synchronous Serial Input-Output

The part 5 in Figure 3.1(a) shows a synchronous serial input-output port. Each bit in each byte synchronizes with the clock input and output. The bytes are sent or received at constant rates as shown in parts (2) and (4) in Figure 3.1(a)]. The IOs are on same IO line when the clock pulses suitably modulate or encode the serial input and output, respectively. If the clock period equals T, then the data transfer rate is 1/ T bps. The processing element at the port (peripheral) sends and receives the byte at a port register to or from which the microprocessor writes or reads the byte.

Synchronous serial input/outputs are also called master input slave output (MISO) and master output slave input (MOSI), respectively.

They are used for interprocessor transfers and streaming data. The bits are read from or written on magnetic media such as a hard disk or on optical media such as a CD by using devices with serial synchronous IO ports.

The part 6 in Figure 3.1(a) shows the IO synchronous port when input and output lines are separate.

3.1.4 Asynchronous Serial input

Figure 3.1(b) shows the asynchronous input serial port line, denoted by RxD (receive data). Each RxD bit is received in each byte at fixed intervals but each received byte is not in synchronization. The bytes can separate by variable intervals or phase differences. Figure 3.1(c), on the right side, shows the starting point of receiving the bits for each byte, indicated by a line transition from 1 to 0 for a period T. When a sender shifts after every clock period T, then a byte at the port is received at input in period 10 T or 11 T. The time of 2 T is due to use of additional bits at the start and end of each byte. An addition time of 1T is taken when a P-bit is sent before the stop bit.

The bit transfer rate (for the serial line bits) is (1/T) baud per second but different bytes may be received at varying intervals. The word 'Baud' is taken from a German word for raindrop. Bytes pour from the sender like raindrops at irregular intervals. The sender does not send the clock pulses along with the bits.

The receiver detects n bits at the intervals of T from the middle of the first indicating bit, n = 0, 1, ..., 10 or 11, finds out whether the data-input is 1 or 0 and saves the bits in an 8-bit shift register. The processing element at the port (peripheral) saves the byte at a port register, from where the microprocessor reads the byte.

Asynchronous serial input is also called UART input if the serial input is according to the UART protocol (Section 3.2.3). Asynchronous serial input is used for keypad and modern inputs.

3.1.5 Asynchronous Serial Output

Figure 3.1(b) shows the asynchronous output serial port line, denoted by TxD (transmit data). Each bit in each byte is sent at fixed intervals but each output byte is not in synchronization (it is separated by a variable interval or phase difference). The Figure 3.1(c) shows the starting point of sending the bits for each byte, which is indicated by a line transition from 1 to 0 for a period T. The sender port of TxD does not send clock pulses along with the bits.

The sender transmits bytes at the minimum intervals of n T. Bits start from the middle of the start indicating bit, where n = 0, 1, ..., 10 or 11 and sends the bits through a 10- or 11-bit shift register [Figure 3.1(c)]. The processing element at the port (peripheral) sends the byte at a port register to where the microprocessor writes the byte.

Asynchronous serial output is also called UART output if the serial output is according to a UART protocol (Section 3.2.3). Asynchronous serial output is used for modem and printer inputs.

3.1.6 Parallel Port

A parallel port can have one or multibit input or output and can be bi-directional IO.

- (i) One bit input, output and IO
- (ii) Eight or more bit input, output and IO

Section 3.3 will describe parallel device ports in detail.

3.1.7 Half Duplex and Full Duplex

The part 5 in Figure 3.1(a) on the left side shows the IO serial port (bi-directional half-duplex serial port). Half duplex means that at any point communication can only be one way (input or output) on a bi-directional line. An example of half-duplex mode is telephone communication. On one telephone line, we can talk only in the half-duplex mode. The part 6 in Figure 3.1(a) shows the separate input and output serial port lines. Full duplex means that the communication can be both ways simultaneously. An example of the full duplex asynchronous mode of communication is communication between the modem and computer through the TxD and RxD lines [Figure 3.1(b)].

There are two types of communication ports for IOs: serial and parallel. Serial line port communication is synchronous when a clock of the master device controls the synchronization of the bits on the line. Serial line port communication is asynchronous when clocks of the sender and receiver are independent and bytes are received, not necessarily at constant phase differences. Serial communication can be full duplex, which means simultaneously communication both ways, or half duplex, which means one way communication.

3.1.8 Examples of Serial and Parallel Port IOs

Table 3.1 gives a classification of IO devices into various types. It also gives examples of each type.

Table 3.1 Examples of various types of IO devices

10 Device Type	Examples
Serial synchronous input	Inter-processor data transfer, reading from CD or hard disk, audio input, video input, dial tone, network input, transceiver input, scanner input, remote controller input, serial IO bus input, reading from flash memory using SDIO (Secure Data Association IO) card
Serial synchronous output	Inter-processor data transfer. multiprocessor communication, writing to CD or hard disk, audio output, video output, dialer output, network device output, remote TV Control, transceiver output, and serial IO bus output, writing to flash memory using SDIO card
Serial asynchronous input	Keypad controller serial data-in, mice, keyboard controller data in, modem input, character inputs on serial line [also called UART (universal receiver and transmitter) input when according to UART mode]

(Contd)

10 Device Type	Examples
Serial asynchronous output	Output from modern, output for printer, the output on a serial line [also called UART output when according to UART mode]
Parallel port single bit input	(i) Completion of a revolution of a wheel. (ii) achieving preset pressure in a boiler, (iii) exceeding the upper limit of the permitted weight over the pan of an electronic balance, (iv) presence of a magnetic piece in the vicinity of or within reach of a robot arm to its end point and (v) filling a liquid up to a fixed level
Parallel port single bit output	(i) PWM output for a DAC, which controls liquid level, temperature, pressure, speed or angular position of a rotating shaft or a linear displacement of an object or a d.c. motor control (ii) pulses to an external circuit
Parallel port input	(i) ADC input from liquid level measuring sensor or temperature sensor or pressure sensor or speed sensor or d.c. motor rpm sensor (ii) Encoder inputs for bits for angular position of a rotating shaft or a linear displacement of an object
Parallel port output	(i) LCD controller for multiline LCD display matrix unit in a cellular phone to display on screen the phone number, time, messages, character outputs or pictogram bit-images or e-mail or web page (ii) print controller (iii) stepper motor coil driving output bits

3.2 SERIAL COMMUNICATION DEVICES

3.2.1 Synchronous, Iso-synchronous and Asynchronous Communications from Serial Devices

Synchronous Communication When a byte (character) or frame (a collection of bytes) of data is received or transmitted at constant time intervals with uniform phase differences, the communication is called synchronous. Bits of a data frame are sent in a fixed maximum time interval. Iso-synchronous is a special case when the maximum time interval can be varied.

An example of synchronous serial communication is frames sent over a LAN. Frames of data communicate, with the time interval between each frame remaining constant. Another example is the inter-processor communication in a multiprocessor system. Table 3.2 gives a synchronous device port bits.

Figure 3.1(a) part 2 showed the serial IO bit format and serial line states as a function of time. Two characteristics of synchronous communication are as follows:

- Bytes (or frames) maintain a constant phase difference. It means they are synchronous, that is, in synchronization. There is no permission for sending either the bytes or the frames at random time intervals; this mode therefore does not provide for handshaking during the communication interval. [Handshaking means that the source and destination first exchange the signals between them before they communicate the data bits.] The master is the one whose clock pulses guide the transmission and slave is the one which synchronizes the bits as per the master clock.
- 2. A clock ticking at a certain rate must always be there to serially transmit the bits of all the bytes (or frames). The clock is not always implicit to the synchronous data receiver. The transmitter generally transmits the clock rate information in the synchronous communication of the data.

Table 3.2 Synchronous device port bits

S.No.	Bits at Port	Compulsory or Optional	Explanation
1.	Sync code bits or bi- sync code bits or frame start and end signaling bits	Optional	A few bits (each separated by interval ΔT) as Sync code for frame synchronization or signaling precedes the data bits ¹ . There may be inversion of code bits after each frame. Flag bits at start and end are also used in certain protocols
2.	Data bits	Compulsory	m frame bits or 8 bits transmit such that each bit is at the line for time ΔT or each frame is at the line for time m. ΔT^2
3.	Clock bits	Mostly not optional	Either on a separate clock line or on a single line such that the clock information is also embedded with the data bits by an appropriate encoding or modulation

¹Reciprocal of ΔT is the transfer rate in bit per second (bps). ²m may be a large number. It depends on the protocol.

Figure 3.2 gives ten methods by which synchronous signals, with the clocking information, are sent. (i) There are two separate lines for the data bits and clock. The parallel-in serial-out (PISO) and serial-in parallel-out (SIPO) are used for transmitting and receiving the signals for data, respectively. (ii) There is a common line and the clock information is encoded by modulating the clock with the stream of bits. (iii) There are preceding and succeeding additional synchronizing and signaling bits. There are five common methods of encoding the clock information into a serial stream of the bits: (a) Frequency Modulation (FM (b) Mid Frequency Modulation (MFM) (c) Manchester coding (d) Quadrature amplitude modulation (QAM) (e) Bi-phase coding. The synchronous receiver separates serial bits of the message as well as synchronizing clock.

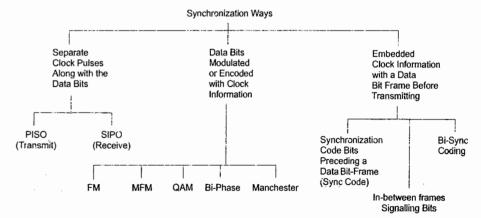


Fig. 3.2 Ten ways by which the synchronous signals with the clocking information transmit from a master device to slave device

Asynchronous Communication When a byte (characters) or frame (a collection of bytes) of data is received or transmitted at variable time intervals, communication is called *asynchronous*. Voice data on the line is sent in asynchronous mode. Over a telephone line the communication is asynchronous. Another example is keypad communication.

An example of mode of asynchronous communication is RS232C communication between the UART devices (Section 3.2.2).

UART communication (Section 3.2.3) for asynchronous data is used for the transfer of information between the keypad or keyboard and computer.

Two characteristics of asynchronous communication are as follows:

- Bytes (or frames) need not maintain a constant phase difference and are asynchronous, that is, not in synchronization. Bytes or frames can be sent at variable time intervals. This mode therefore facilitates in-between handshaking between the serial transmitter port and serial receiver port.
- 2. Though the clock must tick at a certain rate to transmit bits of a single byte (or frame) serially, it is always implicit to the asynchronous data receiver. The transmitter does not transmit (neither separately nor by encoding using modulation) along with serial stream of bits any clock rate information in asynchronous communication. The receiver clock is thus not able to maintain identical frequency and constant phase difference with the transmitter clock.

When a device sends data using a serial communication frame, it may not be as simple as shown in Figures 3.1(a) and (b) or as given in Table 3.2. It can be complex and has to be as per the protocol, which is followed by transmitting and receiving devices during communication between them.

Example 3.1

An IBM personal computer has two COM ports (communication ports), COM1 and COM2. These have 8 bytes at IO addresses 0x3F8 and 0x2F8.

Figure 3.1(b) showed COM port handshaking signals besides TxD and RxD. When a modem connects, it detects a carrier signal on the telephone line. A modem sends data carrier detect DCD signal at time t_0 . A modem then communicates data set ready (DSR) signal at time t_1 when it receives the bytes on the line. The receiving end responds at time t_2 by data terminal ready (DTR) signal. After DTR, request to send (RTS) signal is sent at time t_3 and the receiving end responds by clear to send (CTS) signal at time t_4 . After the response CTS, the data bits are transmitted by modem from t_5 to the receiver terminal at successive intervals [Figure 3.1(c)]. Between two sets of bytes sent in asynchronous mode, the handshaking signals RTS and CTS can again be exchanged. This explains why the bytes do not remain synchronized during asynchronous transmission.

A communication system may use the following protocols for synchronous or asynchronous transmission from a device port: RS232C, UART, HDLC, X.25, Frame Relay, ATM, DSL and ADSL. These are protocols for networking the physical devices in telecommunication and computer networks. Ethernet and token ring are protocols used in LAN networks. There are a number for protocols for serial communication. RS232C, UART and HDLC are described in Sections 3.2.2 to 3.2.4.

The protocols in embedded network devices such as bridges, routers, embedded Internet appliances use bridging, routing, application and web protocols. Internet enabled embedded systems use application protocols — HTTP (hyper text transfer protocol), HTTPS (hyper text transfer protocol Secure Socket Laver), SMTP (Simple Mail Transfer Protocol), POP3 (Post office Protocol version 3), ESMTP (Extended SMTP), TELNET (Tele network), FTP (file transfer protocol), DNS (domain network server), IMAP4 (Internet Message Exchange Application Protocol) and Bootp (Bootstrap protocol) and others (Section 3.11).

Embedded wireless appliances use wireless protocols—IrDA, Bluetooth, 802.11 and others (Section 3.13).

Synchronous, iso-synchronous and asynchronous are three ways of communication. Clock information is transmitted explicitly or implicitly in synchronous communication. The receiver clock continuously maintains constant phase difference with the transmitter clock. HDLC is a data link protocol for computer networks and telecommunication devices. RS232C and UART are asynchronous mode communication standard.

3.2.2 RS232C/RS485 Communication

(i) RS232C RS232C communication is between DTE (computer) COM (communication) port and DCE (modem) port. DTE stands for 'Data Terminal Equipment'. DCE stands for 'Data Communication Equipment'. RS232C is an interfacing signal standard between DCE and DTE.

Figure 3.1(b) showed the interfacing (handshaking) signals on a RS232C port. The receive data and transmit data signals from RS232C port are RxD and TxD, respectively. RS232C port serial RxD and TxD bits are asynchronous and follow UART protocol (Section 3.2.3). Receiver end voltage level from – 3 to – 25 V denotes logic 1 and voltage level from +3 to +25 V denotes logic 0. Transmitter end voltage level from +5 to –15 V denotes logic 1 and voltage level from +5 to +15 V denotes logic 0.

Example 3.2

The IBM personal computer two COM ports (communication ports) called COM2 and COM1, have IO addresses 0x2F8-0x2FF and 0x3F8-0x3FF, respectively. The COM port is RS232C port. It has TxD and RxD serial output and input. It has handshaking signals DCD. DSR. DTR. RTS and CTS.

RS232C port in a computer is used upto 9600 baud/s asynchronous serial transmission rate with UART mode communication. Generally baud rates are set at 300, 600, 1200, 4800 and 9600. When transmitting upto 0.25 m or 1 m on cable (untwisted) the maximum baud rate can be 115.2 k or 38.4 k baud/s, respectively.

RS232C port is used for keyboard serial communication at 1200 baud/s asynchronous serial transmission rate with UART mode communication at IBM PC COM port. The signals used arc RTS, CTS. TxD and RxD for keypad communication. A mice port also is RS232C COM port in the computer. (New mice nowadays use USB in place of COM port).

Example 3.3

A mobile smart phone has a Bluetooth device for personal area wireless network. A Bluetooth device is capable of emulating DCE serial port, which can now communicate in UART mode. A computer on the other hand has a serial port called COM port (Example 3.1). The mobile device is placed on a cradle. The mobile device port data-pins connect the cradle pins. The cradle connects to the computer or laptop COM port. The mobile and computer serial ports then communicate. The data (for example, pictures or address book data) between them synchronize between COM and emulated serial at Bluetooth device.

RS232C standard provides for UART serial port asynchronous mode communication. A different set of voltage levels are prescribed for the 0s and 1s in RS232C standard.

(ii) RS485 RS485, now called EIA-485 is a protocol for physical layer in case of two wire full or half duplex serial connection between multiple points. Transmission is at 35 Mbps upto 10 meter and 100 Kbps up to 1.2 km. Electrial signals are between + 12 V and -7 V. Logic 1 is +ve and 0 is reverse polarity. Difference in potential defines logic 1 and 0. A converter is used to convert RS232C bits to RS485 and another for vice versa.

3.2.3 UART

Figure 3.1(b) showed handshaking signals of RS232C port and UART serial bits in the output to a serial line device. The UART mode is as follows:

- 1. A line is in non-return to zero (NRZ) state. It means that in the idle state the logic state is 1 at serial line.
- The start of serial bits is signaled by 1 → 0 transition (negative edge) on the line for a period equal to reciprocal of baud rate. The baud rate is preset at both receiver and transmitter. The receiver detects the start bit at middle of the interval, logic 0 state of the transmitter start bit.
- 3. UART bits, when sending a byte, consist of start bit, 8 data bits (for example, for an ASCII character or for a command word), option programmable bit (P-bit) and stop bit, each during the interval δT. When sending or receiving a byte, the logic states during interval 10 δT or 11 δT are as shown in Figure 3.1(c) as a function of time t. A bit period, δT is equal to the reciprocal of baud rate, the rate at which the bits from UART transmitter are sent. One extra bit before the stop bit is programmable bit P and is called TB8 at the transmitter and RB8 at the receiver.
- 4. The data bits in certain specific cases can be 5 or 6 or 7 instead of 8.
- 5. The stop bit can be for a minimum interval of 1.5 δ T or 2 δ T instead of δ T in certain specific cases.
- 6. Optional programmable bit (P-bit) can be used for parity detection or can be used to specify the purpose of the serial data bits that are before the P-bit. For example, P can specify bits as the bits of a control or command word when P = 1 and data bits when P = 0. Bit P can specify the address of receiver when P = 1 and data when P = 0 so that only the addressed receiver wakes up and receives the data in the subsequent data transfers. When P is used as address/data specification, it provides a means to interface a number of UART devices through a common set of TxD and RxD lines and form a UART bus.

UART 16550 includes a 16-byte FIFO buffer and is nowadays used more commonly as compared to the original IBM PC COM port, which had an 8-bit register at UART port and was based on 8250 and did not include the FIFO buffer.

UART serial port communication is usually either in 10 bits or in 11 bits format: one start bit, 8 data bits, one optional bit and one stop bit. UART communication can be full duplex, which is simultaneously both ways, or half duplex, which is one way. It is an important communication mode.

3.2.4 HDLC Protocol

When data are communicated using the physical devices on a network, synchronous serial communication may be used. HDLC (High Level Data Link Control) is an International Standard protocol for a data link network. It is used for linking data from point to point and between multiple points. It is used in telecommunication and computer networks. It is a bit-oriented protocol. The total number of bits is not necessarily an integer multiple of a byte or a 32-bit integer. Communication is full duplex.

Table 3.3 gives the synchronous network device port bits in an HDLC protocol. The reader may refer to a standard textbook, for example, "Data Communications, Computer Networks and Open Systems" by Fred Halsall from Pearson Education (1996) for details of HDLC and its field bits.

 Table 3.3
 Format of bits in synchronous HDLC protocol-based network device

S.No.	Bits ¹ at Port	Present Compulsorily or Optionally	Explanation
1	Frame start and end sign- aling flag bits	Compulsory	Flag bits at start as well as at end are (011111110)
2	Address bits for destination	Compulsory	8-bits in standard format and 16-bits in extended format
3a	Control bits Case 1: information frame	Compulsory as per case 1 or 2 or 3	First bit 0, next 3 bits N(S), next bit P/F^2 and last 3 bits N(R) in standard format N(R) ³ and N(S) = 7 bits each in extended format
3b	Control bits case 2: supervisory frame	_	First two bits (10), next 2 bits RR ³ or RNR or REJ or SREJ, next bit P/F and last 3 bits N(R) in standard format. N(R) ⁴ and N(S) ⁴ = 7 bits each in extended format
3с	Control bits Case 3: unnumbered frame	_	First two bits (11), next 2 bits M ⁵ , next bit P/F and last 3-bit remaining bits for M. [8 bits are immaterial after M bits in extended format]
4	Data bits	Compulsory	m frame bits transmit such that each bit is at the line for time ΔT or, each frame is at the line for time m. ΔT and also there is bit stuffing. ⁶
5	FCS (Frame check sequence) bits	Compulsory	16-bits in standard format and 32 in extended format
6	Frame end flag bits	Compulsory	Flag bits at end are also (01111110)

¹Bits are given in order of their transmission or reception.

3.2.5 Serial Data Communication using the SPI, SCI and SI Ports

Microcontrollers have internal devices for SPI or SCI or SI as explained below. Each device has separate registers for control, status, serially received data bits and transmitting serial bits. Each device is programmable as described below. The device can be used in programmed IO modes or in interrupt driven reception and transmission.

Synchronous Peripheral Interface (SPI) Port Figure 3.3(a) shows an SPI port signals. Figure 3.3(b) shows SPI port in 68HC11 and 68HC12 microcontroller. It has full-duplex feature for synchronous communication. There are signals SCLK for serial clock, MOSI and MISO output from and input to master.

²P/F = 1 and P means when a primary station (Command device) is polling the secondary station (receiving device). P/F = 1 and F means when receiving device has no data to transmit. Usually it is done in last frame.

³RR, RNR, REJ and SREJ are messages to convey 'Receiver ready,' 'Receiver not ready,' 'Reject,' and 'Selective reject', REJ or SREJ is a negative acknowledgement (NACK). NACK is sent only when the frame is rejected.[A child cries only when milk is not given on need, else it remains silent!] 'Reject' means that the receiver received a frame out-of-sequence; it is rejected and a repeat transmission of all the frames from the point of frame rejection is requested using REJ. 'Selective reject' means that a frame is received out-of-sequence; it is to be rejected and a selective repeat transmission is requested for this frame using SREJ.

⁴N(R) and N(S) means received (earlier) and sending (now) frame sequence numbers. These are modulo 8 or 128 in standard or extended format frame, respectively.

⁵M five bits are for a command (or response) from a transmitter. Examples of a command are *reset*, *disconnect* or *set* a *defined mode type*; examples of a response are a message from the receiver for a disconnect mode accepted, frame rejected, command rejected, and for an unnumbered acknowledgement.

⁶When five 1s transmit for the data, one 0 is stuffed additionally. This prevents misinterpretation by receiver the data bits as flag bits (01111110).

Section 3.1]. Figure 3.3(b) shows programmable features and DDR feature of Port D. An SPI feature is programmable rates for clock bits, and therefore for the serial out of the data bits down to the interval of 1.5 µs for an 8 MHz crystal at 68HC11.

SPI is also programmable for defining the occurrence of negative and positive edges within an interval of sits at serial data *out* or *in*. It is also programmable in the open-drain or totem pole output from a master to a lave and for device selection as master or slave. This can be done by a signal to hardware input SS (slave elect when 0) pin. In the hardware the slave select pin connects to '1' at the *master* SPI device and to '0' at the *slave*. Defining SPI as slave or master can also be done by software. Programming a bit at the device ontrol register does this.

68HC12 provides SPI communication device operations at 4 Mbps. SPI device operates up to 2 Mbps in 8HC11.

Figure 3.3(c) shows an SCI port programmable features and DDR fort bits in 68HC11/12. SCI is a UART asynchronous mode port. Communication is in full-duplex mode for the sCI transmission and receiver. SCI baud rates are fixed as prescaling bits. Rate not programmable separately for adividual serial in and out lines. A baud rate can be selected among 32 possible ones by the three-rate bits and wo prescaling bits. The SCI receiver has a wake up feature and is programmable by RWU (Receiver wakeup 'navailable) bit. It is enabled if RWU (1st bit of SCC2, Serial Communication Control Register 2) is set, and is fisabled if RWU is reset. If RWU if set, then the receiver of a slave is not interrupted by the succeeding bytes. SCI has two control register bits, TB8 and RB8. RWU feature helps in inter-processor communication, and SCI is lefined for transmission and for reception using the SCC2 bits. UART communication, when programmed by control bits, is in 11-bit format. A number of processors can communicate on the bus in UART mode by RWU, when RB8 and TB8 bits are set.

There are separate hardware devices at 68HC11 for synchronous and asynchronous communications. These are SPI and SCI, respectively. 68HC12 provides two SCI communication devices that can operate at two lifterent clock rates. Standard baud rates can be set up to 38.4 kbps. There is only one SCI and standard baud rates in 68HC11 can be set up to 9.6 kbps only.

Serial Interface (SI) Port Figure 3.3(d) shows an SI port. SI is a UART mode asynchronous port interface. It also functions as USRT (universal synchronous receiver and transmitter). SI is therefore a synchronous—synchronous serial communication port called USART (universal synchronous—asynchronous receiver and transmitter) port. It is an internal serial IO device in 8051. There is an on-chip common hardware device called SI in Intel 80196. Its features are as follows: programmable-rates register after loading the 14 bits at BAUD_RATE register twice. SI operates in one of the following ways:

- (i) Half-duplex synchronous mode of operation, called mode 0. When a 12 MHz crystal is at 8051 and is attached to the processor, the clock bits are at the intervals of 1 μ s.
- (ii) Full-duplex asynchronous serial communication, called mode 1 or 2 or 3. Using a timer, the baud rate varies according to the programmed timer bits in modes 1 and 3. Using SMOD bit at SFR called PCON, when mode 2 is used, the baud rate is programmable at two rates only. It is 1/64 or 1/32 of oscillator frequency at 8051. TB8 and RB8, when using 11-bit format, provide the 10th bit for error-detection or for indicating whether the sent data byte is a command or data for the receiving SI device.

Most microcontrollers have internal serial communication SPI and SCI or SI-like devices for serial communication. The IBM personal computer has two UART chips for the two COM ports. Table 3.4 gives the features of internal serial ports in select microcontrollers.

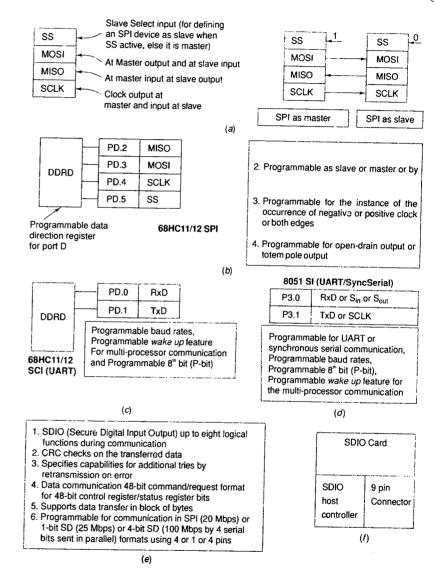


Fig. 3.3 (a) SPI port signals (b) SPI port programmable features and DDR at port D in 68HC11/12 (c) SCI port in 68HC*11/12 (d) SI port in 8051 (e) SDIO communication features (f) SDIO card structure

Table 3.4 Processor with internal serial ports in microcontrollers

Features	Intel 8051 and Intel 8751	Motorola M68MC11E2	Intel 80196
Synchronous serial port (half or full duplex)	Half	Full	Half
Asynchronous UART port (half or full duplex)	Full	Full	Ful!
Programmability for 10 as well as 11 bits per byte from UART	Yes	Yes	Yes
Separate un-multiplexed port pins for synchronous and UART serial ports	No	Yes (Separate 4 Pins)	No
Synchronous serial port as a master or slave definition by software or hardware	Software	Hardware and software	Software
UART serial port programmability as a transmitter or receiver and for additional bit for parity or RWU or control or other purpose.	Yes	Yes	Yes
Synchronous serial port registers	SCON, SBUF and TL-TH 0-1	SPCR. SPSR and SPDR	SPCON SPSTAT BAUD_RATE and SBUF
UART serial port registers	SCON, SBUF and TL-TH 0-1 (Time 2 in 8052)	BAUD, SCCI SCC2, SCSR SCIRDR and SCITDR	SPCON SPSTAT BAUD_RATE and SBUF
Uses internal timer or uses separate programmable BAUD rate generator.	Timer	Separate	Separate as well as the Timer

Microcontrollers have internal devices of three types SPI, SCI and SI. SPI is synchronous master slave mode serial full duplex communication. SCI is UART asynchronous transmitter-receiver mode serial full duplex communication. SI is synchronous half duplex and asynchronous full duplex UART serial communication.

3.2.6 Secure Digital Input Output (SDIO)

Secure Digital (SD) Association created a new flash memory card format, called SD format. It is an association of over 700 companies started from 3 companies in 1999. This SDIO card for SD format IOs [Figure 3.3(e)] has become a popular feature in handheld mobile devices, PDAs, digital cameras and handheld embedded systems. SD card size is just $0.14 \times 2.4 \times 3.2$ cm. SD card [Figure 3.3(f)] is also allowed to stick out of the handheld device open slot, which can be at the top in order to facilitate insertion of the SD card.

SDIO is an SD card with programmable IO functionalities such that it (a) can be used upto eight logical functions, (b) can provide additional memory storage in SD format, and (c) can provide IOs using protocols in systems such as IrDA adapter, UART 16550, Ethernet adapter, GPS, WiFi, Bluetooth, WLAN, digital camera, barcode or RFID code reader.

Figure 3.3(e) shows an SDIO communication device port features. It supports SPI (Section 3.2.5), 4-bit and 1-bit SD formats. Both SPI and SD formats specify that there should be interrupt handling of the IOs and also the CRC checks on transferred data, and specifies capabilities for more tries on error. SDIO card [Figure 3.3(f)] has 9 pins. Six pins are for communication using SPI or SD. A processing element function is used as SDIO host controller to process the IOs. The controller may include SPI controller to support SPI mode for the IOs and supports the needed protocol functionality internally. Maximum clock rate supported for SPI is 20 MHz for a maximum of 20 Mbps data transfers. There is an optional 4-bit SD mode, which uses 4 data lines. Maximum clock rate supported is 25 MHz for maximum I00 Mbps SD bit data transfer in 4-bit SD mode. Four serial bits simultaneously transmits at four times clock rate on 4 SD lines in this mode. Four-bit SD mode is compromise between serial and parallel bits communication to enhance serial transfer rate four times. In 1-bit SD mode, with 25 MHz clock the maximum data transfer rate is 25 Mbps and one serial bit transmits at 1 line only.

SDIO card has a control section called function 0. It necessarily uses function 1 and optionally uses functions between 2 and 7 (depending on the application in devices used such as Bluetooth, PHS, GPS or digital camera). Each function has PCMIA (Personal Computer Manufacturer Interface Adapter) defined card information structure and registers, for example, ID number, function enable bit, supported bus width (1 or 4), voltage, power needs, clock rates and interrupt enable bit. Each function's specifications for the register bits and protocols have been defined in SD standard. A standard device driver can therefore be written. A new function can also be defined.

Data communication is in 48-bit command/request format for 48-bit control register/ status register bits and supports data transfer of blocks of bytes. For single byte transactions, SDIO card may also include a UART 16550 mode communication over the SD bus.

SDIO is an SPI based 9 pin connector card, which supports SPI as well as 1-bit SD or 4-bit SD communication. SDIO supports 8 logic functions. SDIO functions include IOs with several protocols, for example, IrDA adapter, UART 16550, Ethernet adapter, GPS, WiFi. Bluetooth, WLAN, digital camera, barcode or RFID code reader.

3.3 PARALLEL DEVICE PORTS

The parallel port of devices transfers number of bits over the wires in parallel. Parallel wires capacitive effect reduces the length up to which parallel communication can be done. High capacitance results in delay for the bits at the other end undergoing transition from 0 to 1 or from 1 to 0. High capacitance can also result in noise and cross talk (induced signals) between the wires. Therefore, parallel port carries the bits upto short distances, generally within a circuit board or IC.

Figure 3.4(a) shows the parallel input, output, and bi-directional device ports. Figure also shows a device-interfacing circuit with the processor and system buses. Parallel port inputs I0 to I7 may be to a keypad controller. Parallel port outputs O0 to O7 may be output bits to LCD display output controller. BR_i and BR_0 are the input and output data buffers at bi-directional IO port.

A device port connects to the address bus signals, A_i and A_j through a port address decoder. \overline{IORD} and \overline{IOWR} are additional control signals for apportune read and write, respectively, in case of an 80x86 processor, which has IO mapped IOs. The memory read and write signals, \overline{RD} and \overline{WR} are used in the processor with memory mapped IOs [Section 2.2.2].

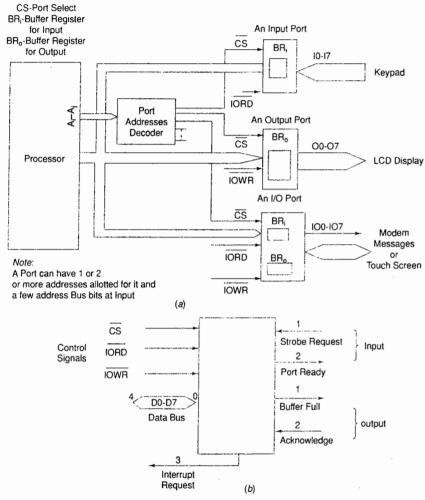


Fig. 3.4 (a) Parallel input port, output port, and a bi-directional port for connecting the device (b) The handshaking signals when used by the IO ports

Example 3.4

IBM personal computer has a parallel port with a 25 pin connector. There are 8 IO pins, 5 input pins for status signals (four active high S3 to S6, one active low $\overline{S7}$) from external device port (for example, printing device port) and 4 output pins for control signals (one active high C2 and three active low $\overline{C0}$, $\overline{C1}$ and $\overline{C3}$. The 8 pins are ground pins (Pins at 0 V). The status pins and control pins are provided for handshaking between peripheral and computer.

Figure 3.4(b) shows the handshaking signals. An external input device to the device port makes a strobe request, *STROBE*, after it is ready to send the byte and the system IO device sends the acknowledgement, *PORT READY* when BR_i (receiving buffer) is empty.

An external output receiving device sends the message ACKNOWLEDGE when the IO device port ends the BUFFER FULL signal. The processor is sent the INTERRUPT REQUEST message when BR₀ transmitting buffer is empty not full (available for next write) or when the receiving buffer is full (available for next read). This enables the processor to interrupt and retransmit next byte(s) in next cycle or receive the byte(s) from input using the appropriate service routines for output or input from the port, respectively.

Example 3.5

Intel 8255 is a programmable peripheral interface (PPI) chip. A PPI device has four addresses, three for the ports and one for the control word. There are three 8-bit ports: port A, B and C. Port C can also be programmed to function in bit set-reset mode. Each bit of this port can be set to 1 or reset to 0 by an appropriate control word. Alternatively, the ports can be grouped as Group A (Port A and Port C upper four bits) or Group B (Port B and Port C lower four bits).

- 1. In mode 0 programming for a group, each port group does not use handshaking signals.
- Mode 2 programming is used for port A as input as well as output. In mode 2 programming for the group A, port A uses handshaking signals, STROBE, PORT READY, BUFFER FULL. ACK and INTERRUPT and port A functions as a bi-directional IO port.
- Mode 1 programming is either for port as input or as output. In mode 1 programming for the group A or B, port A or B uses only one of the two handshaking signal pairs, either (STROBE, PORT READY) or (BUFFER FULL, ACK) plus one INTERRUPT signal.

The following characteristics are taken into consideration when interfacing a device port.

- A device port may have multi-byte data input buffers and data output buffers. Suppose there is an
 eight-byte buffer. Assuming that a device (as in the 80196 microcontroller) can generate three interrupts,
 one on receiving a byte, one on receiving the fourth byte and one when the buffer is full, then the
 deadline for servicing these interrupts increases up to eight times compared to the case when there is
 a single byte register instead of buffer.
- A port may have a DDR (Data Direction Register) (as in the 68HC11 microcontroller). This is an advantage since each bit of the port is now programmable. It can be set as input or output. DDR programs the port bits.
- 3. Port LSTTL-driving capability and port-loading capability are important characteristics. A port may be an OD (open drain) port. It has zero driving capability unless the drain connects the positive supply voltage. If the given port has OD gates, an appropriate pull-up resistance or transistor is connected to each port pin to provide the driving capability. The drain or collector connects to the supply voltage to provide the pull-up.
- 4. If a given port is quasi bi-directional (as in 80196), then the port pins have limited driving capability, which suffices for a period of one or a few clock cycles and drives a LSTTL gate for that period. When this device port connects to more than one LSTTL, then an appropriate pull-up circuit will be required for the port pins.
- 5. There may be multiple or alternate functionality in the port pins; for example, 80196 input port pins. Each pin of P2 has an alternative use as multi-channel analog input facility for 8 analog inputs. Another example is 8051 two ports P0 and P2. These port bits also have an alternate function in that they bring out when needed the internal multiplexed buses for the external program and memories whenever the

internal memory is insufficient. Each pin of P3 in 8051 has multiple uses. These are used during serial communication, timer/counter signals, interrupt-signals, and \overline{RD} and \overline{WR} control signals for external memories. 68HC11 ports B and C are of 8 bits each and have alternative uses for the port pins in it. One of the alternate functions is to bring out the internal address and data buses, respectively.

- 6. A port may have provision for multiplexed output to connect to multiple systems or units.
- 7. A port may have provision for demultiplexed inputs from multiple systems or units.

A parallel device port can have parallel inputs, parallel outputs, bi-directional and quasi-bi-directional IOs. A parallel device port can have handshaking pins. A parallel device port can also have control pins for control-signal outputs to external circuit and status pins for inputs of status signals to external circuits.

3.3.1 Parallel Port Interfacing with Switches and Keypad

A 16 keys keypad has many applications. A mobile smart phone device has 16 keys and four menu: select up, down, left, right keys. Assume that an IO device has two ports, A and C. The device has a processing element which functions as a keypad-controlling device (controller).

Figure 3.5(a) shows how a set of switches or a keypad of 16 keys and four menu-select keys can interface to the device. Four bits of an 8-bit input port A (A_4-A_7) can be used for the four menu select keys. Assume that the idle state logic state equals 1. The 16 keys can be considered as arranged in four rows and four columns. The other four bits of A (A_0-A_3) are inputs from sense lines from four rows. Assume that the idle state logic state is equal to 1. The four bits of output port C (C_0-C_3) are output to sense lines in four columns.

The processing element in device activates for polling the output port C ten times each second and sends C_0 - C_3 = 0000; after a wait it reads D_0 - D_7 and A_4 - A_7 . The processing element computes the code of the pressed key and generates a status signal when a key is found pressed. From the bit pattern found at A_0 - A_3 , the processing element computes 7-bit ASCII code of the pressed key at that instance and can output that code at D_0 - D_6 . It also outputs D_7 = 1 when a specific key is found pressed, else D_7 = 0. The processing element also processes the bounces when a key is pressed. This takes care of bouncing effects. The processing element is thus functioning as a keypad controller, as it is keypad specific.

Example 3.6

A mobile phone keypad is smart and is called T9 keypad. Nine keys are used to enter not only the numbers but also text of messages. The processing element is programmed as a state machine to compute the ASCII code to be sent. A state machine generates the states. For example, a key marked as number 5 is in state (0,5) in reset state, which is also its idle state. The key-state undergoes transition to state (1,5) when it is pressed first time. When it is pressed second time within 1 s, the key state becomes (1,j). This state corresponds to character j. If it is pressed third time within 1 s, the key-state becomes (1,k). The state of the key changes in a cyclic fashion. $(1,5) \rightarrow (1,j) \rightarrow (1,k) \rightarrow (1,l) \rightarrow (1,5) \rightarrow (1,j)$, The transition of a key state occurs only if it is found pressed within 1 s of the previous transition, and the appropriate action takes place as per the state. The processing element computes the ASCII code from the read value of A_0 - A_3 and key state at an instance. After processing is over or after 1s, the key-state resets to (0,5).

Two key states simultaneously or separately undergoing transitions can define a transition to another state. For example, when there is transition to (1, j) state after another key state is (1, #), then (1, j) undergoes another transition to (1, j), and when that key state is (0, #) it remains at (1, j).

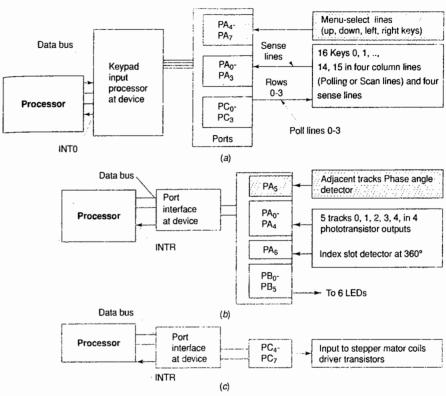


Fig. 3.5 (a) Parallel input port A and a four bit output port C used for interfacing a set of 16 keys in keypad and four menu select keys (b) Parallel input port A connected to an encoder circuit which senses the rotated or linear position of a moving shaft and port B connected to 6 LEDS (c) Four bit parallel output port C connected to a stepper motor

A parallel device having a number of input and output bits can be used to find the code of the pressed key in a matrix of keys. A keypad controller has a processing element to compute the code of the pressed key and to generate a status signal when any key is found pressed. A mobile phone keypad controller processes the states of the keys to enable application of same keypad for dialing as well as editing SMS messages.

3.3.2 Parallel Port Interfacing with Encoders

Encoder is a device that measures angular or linear position of a rotating or moving shaft. It has application in robots and industrial plants. A rotatory-angle encoder has multiple tracks on a rotating disk. Each track has half of the segments transparent and half opaque. A linear encoder has a multi-slotted plate. A set of n infrared (IR) LED and phototransistor pairs generate n-bit inputs for a port. The encoder connects to parallel port, as shown in Figure 3.5(b).

3.3.3 Parallel Port Interfacing with Stepper Motor

A stepper-motor rotates by one step angle when its four coils are given currents in a specific sequence and that sequence is altered. For example, assume that currents at an instance equal +i, 0, 0, 0 in four coils X, X', Y, Y'. The motor rotates by one step when the currents change to 0, +i, 0, 0. The sequences at intervals of T are changed as follows: 1000, 0100, 0010, 0001, 1000, 0100, [The bits in the nibble (set of 4 bits) rotate by right shift.] Here 1 corresponds to +i. The motor thus rotates n step angles in interval of (n.T). The sequences are changed to rotate the motor in the opposite direction, as follows: 0001, 00010, 0100, 1000, 0001, 0010, [The bits in the nibble (set of 4 bits) rotate by left shift.] Alternately, the coils are given the currents in the sequence of 1100, 0110, 0011, 1001, 1100, 0110, ..., or 0011, 0110, 1100, 1001, 0011, 0110, The motor rotates (n/2) steps in interval equals to (n.T/2). T is the period of clock pulses that drives the motor by change of coil currents to the next sequence.

The coils connect to parallel port 4 output pins, as shown in Figure 3.5(c). Alternatively, a processing element called stepper-motor deriver can be used. The driver is given two outputs from the port: clock pulses and a rotating direction bit r. For example, if r = 1, motor rotates clockwise and if r = 0 then motor rotates anti-clockwise. The motor rotates as long as clock pulses are given at the output PC_4 - PC_7 .

3.3.4 Parallel Port Interfacing with LCD Controller

An LCD controller has a processing element that needs three control signals as inputs and 8 input/output bits for parallel set of 8 IO bits. Eight-bit parallel output port B pins PB_0-PB_7 connect LCD controller, as shown in Figure 3.6(a). LCD controller also connects to one bit PC_0 at an output port for RS (register select) signal.

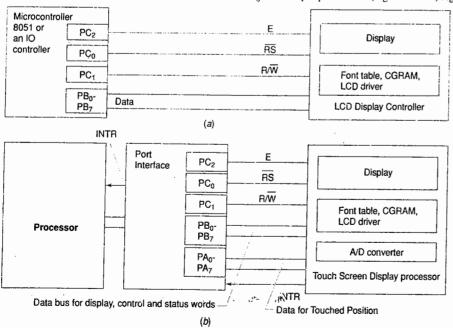


Fig. 3.6 (a) Eight bit parallel output port B connected to an LCD controller (b) 8-bit parallel output port B and 8-bit parallel input port A connected to a touch screen control circuit

When RS is reset as 0, PB₀-PB₇ communicates a control word to control register of the LCD controller. When RS is set as 1, PB₀-PB₇ communicates data to the LCD controller.

The LCD controller also connects to a one bit PC_1 at output port for R/\overline{W} (read/write). PC_1 is set to 1 when status register of LCD controller is read from PB_0-PB_7 . PC_1 is reset to 0 when writing into LCD controller the PB_0-PB_7 bits. The processing element generates all signals required for LCD displays.

The LCD controller is sent control words and data words for initialization and programming PB_0 - PB_7 bits, PC_0 and PC_1 outputs for each word to LCD controller. The controller then has to be enabled by sending 1 at E pin. It connects to one bit PC_2 at output port for E (enable). There is an interval in which the controller may be in disabled state. During this interval, it cannot accept instructions or data through the output of control word or data port pins. For example, a control instruction is to clear display. The internal processing element has to clear the bytes at all the N addresses in N characters LCD display. Assume that in a typical LCD, it is 150 μ s. When the first 1 is written at E, then 0 is written and a 150 μ s delay program is called in-between; the E output creates a negative going pulse at LCD controller. It disables sending of any control word or data for a period of 150 μ s.

LCD controller has M displayed character ROM addresses. M = 128 for 128 ASCII codes. For each distinct ASCII character, there is a 64-bit graphic. The LCD controller has an internal CGRAM (character graphic RAM). For each ASCII character, 8 bytes are sent from font table ROM to CGRAM address. CGRAM has N addresses. N = 64 when 64 characters are displayed at the LCD. An address changes by incrementing or decrementing the cursor position to the previous or next address on screen. By sending appropriate control words followed by data, the LCD controller is programmed to display up to 64 characters on the screen.

A parallel device having 8 output data and 3 bits for E, \overline{RS} and R/ \overline{W} can be used to connect to an LCD controller.

3.3.5 Parallel Port Interfacing with Touchscreen

Touchscreen is an input device cum LCD display device. It is also interfaced through IO port B functioning as data bus far display, control and status words to an LCD display device controller. The interface uses an additional input port A for a byte, which corresponds to the address of the position touched on the screen.

A touchscreen is either resistive or capacitive. On touching at a position on the screen, there is change in resistance or capacitance, which depends on the touched position. A touch can be finger or stylus. The stylus is about one-fifth thinner than a pencil and about half of the length of the pencil. The resistance or capacitance is a part of a bridge circuit that generates an analog voltage. An 8-bit ADC is given an input from a bridge circuit and the 8-bit ADC output connects to 8-bit input port A.

Eight-bit parallel IO port B pins PB_0 - PB_7 , E, \overline{RS} and R/\overline{W} and eight-bit parallel input port A connect to touch screen circuit ports as shown in Figure 3.6(b). An interrupt signal INTR is issued whenever the screen is touched.

Example 3.7

A PocketPC has a touchscreen. The touchscreen device facilitates GUIs. It can display menus as well as a virtual keypad. Using the keypad on screen and stylus, a set of characters can be entered for creating or editing SMS messages, e-mails, or other files. The stylus is held like a pencil and is used to touch the virtual keypad and then the device selects the menu and commands on the screen.

A parallel device having 8 input data bits from an ADC and 8 IO data bus and 4 bits for INTR, E, RS and R/\overline{W} can be used to connect a port interface with a processing element to a touchscreen. The ADC generates input bits for the port from the analog signal, which is as per the touched position on the screen.

SOPHISTICATED INTERFACING FFATURES IN DEVICE PORTS

A device port may not be as simple as the one for a stepper motor port or for a serial line UART. Nowadays, a complex embedded system has highly sophisticated IO devices, for example, SDIO card (Section 3.2.6), IO devices with fast serialization and de-serialization of data, fast transceiver, and real time video processing system. The following are the few sophisticated interfacing device and port features.

- 1. Let the operation voltage level expected for logic state 1 = 5 V (TTL or CMOS). The Schmitt trigger circuit has a property that when a transition from 0 to 1 occurs, only if the voltage level exceeds 2/3 of the 5 V level is there a transition to 1. Similarly, when a transition from 1 to 0 occurs, only if the voltage level lowers below 1/3 of the 5 V level is there a transition to 0. Hence, the Schmitt trigger circuit eliminates noise as large as 2/3 of 5 V, or 3.3 V, when it is superimposed at an input line to the device. One great advantage of the in-built Schmitt trigger circuit at the port is conditioning of the signal by noise elimination. Otherwise, a device port input will need an external chip for Schmitt trigger-based noise elimination. Such a device is used in transceivers for repeating systems, which are used in long distance communication.
- When a device port is waiting for instructions, power management can be done at the gates of the device. Lately, a new technology called DataGate (from Xilinx) has been developed for use at ports. DataGate is a programmable ON/OFF switch for power management; DataGate makes it possible to reduce power consumption by reducing unnecessary toggling of inputs when these are not in use. The great advantage of an inbuilt DataGate-like circuit at a device port is reduced power dissipation when the device port is operated at fast speeds. Such a device is extremely useful in systems connected to a common bus and there is a need to control unnecessary input toggling. For example, in a bus interface unit, the input signals should activate only when the input has to be passed to the circuit. As the number of bus interfaces in the system grows, the demand to prevent needless switching of input signals increases.
- 3. Earlier, port interfaces used to be either open drain CMOSs or TTLs or RS232Cs. (i) Nowadays, a system may be required to operate at a voltage lower than 5 V. [Recall Section 1.3.1.] Low Voltage TTL (LVTTL) and Low Voltage CMOS (LVCMOS) gates may be used at the device ports for 1.5 V IO. (ii) Nowadays, a system may be required to operate using advanced IO standard interfaces. Examples are High Speed Transreceiver Logic (HSTL) and Stub-series Terminated Logic (SSTL) standards. HSTL is used for high-speed operations; SSTL is used when the buses are to be isolated from relatively large stubs.
- 4. A device connects to a system bus and also to IO bus when it is networked with other devices. Device and bus-impedances during an IO should match. Else, line reflections occur. Recent developments make it feasible to match these dynamically. For example, a new technology, called KCITE (Xilinx Controlled Impedance Technology) can be used. The great advantage of an inbuilt device for dynamically matched impedances is that when resistors are replaced with digitally, dynamically controlled and matched impedances in the devices, there are no line reflections and therefore no missing bits or bus faults.

5. An IO device may consist of multiple gigabit (622 Mbps to 3.125 Gbps) transceivers (MGTs). Special support circuitry is needed for this rate. Rocker IO TM serial transreceivers are examples of circuits that provide support circuitry at this rate.

Devices and Communication Buses for Devices Network

- 6. A device for an IO may integrate a SerDes (serialization and de-serialization) subunit. SerDes is a standard subunit in a device where the bytes placed at 'transmit holding buffer' serialize on transmission, and once the bits are received these de-serialize and are placed at the 'receiver buffer'. Once the device SerDes subunit is configured, serialization and de-serialization is done automatically without the use of the processor instructions. The great advantage of the SerDes unit is that these operations are fast when compared to operations without SerDes. [A device for IO may integrate a DAA (direct access arrangement using analog IOs along with one master and seven slave CODECs) or McBSP (multi channel buffered serial port with high speed communication) subunit when serializing.
- 7. Recently, multiple IO standards have been developed for IO devices. A support to the multiple IO standards may be needed in certain embedded systems. A technology, Flexible Select IO TM -Ultra technology, supports over 20 single-ended and differential IO signaling standards. Advantages of multiple standard device ports are obvious.
- 8. An IO device may integrate a digital Physical Coding Sublayer (PCS). Analog audio and video signals can then be pulse code modulated (PCM) at the sublayer. The PCS sublayer directly provides codes from analog inputs within the device itself. The codes are then saved in the device data buffers. The advantage of an inbuilt PCS at device port is that there is then no need of external PCM coding. Besides, these operations are performed in the background as well as fast. It improves the system's performance when there are multimedia inputs at the device.
- 9. A device for IO may integrate an analog unit Physical Media Attachment (PMA) for connecting direct inputs and outputs of voice, music, video and images. The great advantage of inbuilt PMA is that the device directly connects to physical media. PMA is needed for real-time processing of video and audio inputs at the device.

Nowadays, 10 devices have sophisticated features. Schmitt trigger inputs are used for noise elimination. Devices with low voltage gates and devices using power management by preventing unnecessary toggling at the inputs are used for sophisticated applications. Dynamically controlled impedance matching is a new technology and it eliminates line reflections when interfacing the devices. The ScrDes subunit serializes and descrializes outputs and inputs in the devices. A port may have DAA, McBSP, PCS and PMA subunits for analog IOs for video and audio devices.

WIRELESS DEVICES

Wireless devices have become very common in recent years for serial transmission of bits.

Wireless devices use infrared (IR) or radio frequencies after suitable modulation of data bits. IrDA (Section 3.13.1), Bluetooth (Section 3.13.2), WiFi, 802.11 WLAN (Section 3.13.3) and ZigBee (Section 3.13.4) have become popular protocols for wireless communication of data bits from a source to the receiver.

An IR source communicates over a line of sight and the receiver phototransistor is used for detecting infrared rays. Example of applications of IR communication includes handheld TV remote controllers and robotic systems. IR devices use IrDA protocol.

Radio frequencies communicate over short and long distances. The transmitter and receiver use antennae to transmit and receive signals and modulator and demodulators to carry the data bits using RF frequencies. Mobile GSM wireless devices use 890–915 MHz, 1710–1785 MHz, or 1850–1910 MHz bands. Mobile CDMA wireless devices use 2 GHz carrier frequencies. Bluetooth and ZigBee wireless devices (Sections 3.13.2 and 3.13.4) use 2.4 GHz or 900 MHz frequencies.

The number of frequency bands is limited, while a large number of devices may need to communicate. Therefore, time and frequency division multiplexing are used. An innovative method is radio frequency hopping over a wider spectrum, as in Bluetooth devices. The transmitted carrier frequencies hop among different channels at a given hopping rate. The transmitter modulates the data bits as per protocol specifications. The receiver tunes to these hopped carrier frequencies at a given hopping rate and in the same hopping sequence as the ones used by the transmitter. The receiver demodulates and detects the data bits as per physical-layer protocol used for transmitting.

Several wireless devices network use FHSS or DSSS transmitters and receivers. Popular protocols are IrDA, Bluetooth, 802.11 and ZigBee.

3.6 TIMER AND COUNTING DEVICES

Most embedded systems need a timing device.

3.6.1 Timing Device

152

A timer device is a device that counts the regular interval (δT) clock pulses at its input. The counts are stored and incremented on each pulse. It has output bits (in a count register or at the output pins) for the period of counts. The counts multiplied by interval δT gives the time. The (counts—initial counts) $\times \delta T$ interval gives the time interval between two instances when the present count bits are read and the initial counts are read. It has an input pin (or a control bit in a control register) for resetting to make all count bits = 0. It has an output pin (or a status bit in status register) for output when all count bits equal0 after reaching the maximum value, which also means timeout on the overflow.

3.6.2 Counting Device

A counting device is a device that counts the input for events that may occur at irregular or regular intervals. The counts gives the number of input events or pulses since it was last read.

Blind Counting Synchronization A counting device may be a free running (blind counting) device with a prescaler for the clock input pulses and for comparing the counts with the ones preloaded in a compare register. The prescalar can be programmed as p=1,2,4,8,16,32,..., by programming a prescaler register. It divides the input pulses as per the programmed value of p. It has an output pin (or a status bit in the status register) for output when all count bits equal 0 after reaching the maximum value, which also means after timeout or on overflow. The counter overflows after $p \times 2^n \times \delta T$ interval. It can have an input pin (or a control bit in control register) for enabling an output when all count bits equal count preloaded in the compare register. At that instance, a status bit or output pin also sets in and an interrupt can occur for event of comparison equality. This device is useful for the alarm or processor interrupts at preset instances or after preset intervals with respect to another event from another source.

The counting device may be the free running (blind counting) device with a prescalar for the clock input pulses, for comparing the counts with the ones preloaded in a compare register as well as for capturing counts on an input event. This device functions are similar to the above, but there is an addition input pin for sensing an event and for saving the counts at the instance of that event. At this instance, a status bit can also set in and a processor interrupt can occur for the capture event.

The above device is useful for alarm generation and processor interrupts at the preset times as well as for noting the instances of occurrences of the events and processor interrupts for requesting the processor to use the captured counts on the events. Alarm generation can be synchronized with the input capture events. Writing counts into the compare register does this. Counts in the register are set equal to capture register counts plus additional counts, which define the interval after which an alarm is to be generated.

A blind counting free running counter with prescaling, compare and capture registers has a number of applications. It is useful for action or initiating a chain of actions, and processor interrupts at the preset instances as well as for noting the instances of occurrences of the events and processor interrupts for requesting the processor to use the captured counts on the events for future actions.

3.6.3 Timer cum Counting Device

A timer cum counting device is a counting device that has two functions. (1) It counts the input due to the events at irregular instances and (2) It counts the clock input pulses at regular intervals. An input or a status bit in the timing device register controls the mode as timer or counter. The counts gives the number of input events or pulses since it was last read. It has an output pin (or a status bit in status register) for output when all count bits equal 0 after reaching the maximum value, which also means timeout or overflow interrupts to the processor.

Table 3.5 lists twelve uses of a timer device. It also explains the meaning of each use.

Table 3.5 Uses of Timer Device

S.No.	Applications and Explanation		
1.	Real Time Clock Ticks (functioning as system heart beats). [Real time clock is a clock that once the system starts it, does not stop and can't be reset. Its <i>count value</i> can't be reloaded. <i>Real time endlessly flows and never returns!</i>] Real Time Clock is set for ticks using prescaling bits and rate-set bits in appropriate control registers. Section 3.8 gives the details.		
2.	Initiating an event after a preset delay time. Delay is as per count-value loaded.		
3.	Initiating an event (or a pair of events or a chain of events) after a comparison between the preset time with counted value. Preset time is loaded in a Compare Register. [It is similar to presetting an alarm.]		
4	Capturing the <i>count-value</i> at the timer on an event. The information of <i>time</i> (instance of the event) is thus stored at the <i>capture register</i> .		
5.	Finding the time interval between two events. Counts are captured at each event in the capture register and read. The intervals are thus found out. A service routine does the counts read on interrupt.		
- Em	Wait for a message from a queue or mailbox or semaphore for a preset time when using an RTOS. There is a predefined waiting period before RTOS lets a task run without waiting for the message. (Section 7.4)		

Applications and Explanation S.No. Watchdog timer. It resets the system after a defined time. Section 3.7 gives details. 7. Baud or Bit Rate Control for serial communication on a line or network. Timer timeout interrupts 8. define the time of each baud. Input pulse counting when using a timer, which is ticked by giving non-periodic inputs instead of Q the clock inputs. The timer acts as a counter if, in place of clock inputs, the inputs are given to the timer for each instance to be counted. Scheduling of various tasks. A chain of software-timer interrupts and RTOS uses these interrupts to 10. schedule the tasks. Time slicing of various tasks. A multitasking or multiprogrammed operating system presents the 11. illusion that multiple tasks or programs are running simultaneously by switching between programs very rapidly, for example, after every 16.6 ms. This process is known as context switch. RTOS switches after preset time-slice from one running task to the next. Each task can therefore run in predefined slots of time. Time division multiplexing (TDM). Timer device is used for multiplexing the input from a number 12. of channels. Each channel input is allotted a distinct and fixed-time slot to get a TDM output. [For example, multiple telephone calls are the inputs and TDM device generates the TDM output for launching it into the optical tibre.]

A timing device has number of states and Table 3.6 gives the states.

Table 3.6 States in a timer

S.No.	. States
1.	Reset State (initial count equals 0)
2.	Initial Load State (initial count loaded)
3.	Present State (counting or idle or before start or after overflow or overrun)
4.	Overflow State (count received to make count equal 0 after reaching the maximum count)
5.	Overrun State (several counts received after reaching the overflow state)
6.	Running (Active) or Stop (Blocked) state
7.	Finished (Done) state (stopped after a preset time interval or timeout)
8.	Reset enabled/disabled State (enabled resetting of count equal 0 by an input)
9.	Load enabled/disabled State (reset count equals initial count after the timeout)
10.	Auto Re-Load enabled/disabled State (enabled count equals initial count after the timeout)
11.	Service Routine Execution enable/disable State (enabled after timeout or overflow)

At least one hardware timer device is a must in a system. It is used as a system clock. Let number of system clock ticks needed before a system interrupt occurs equals numTicks. The hardware timer gets the input from a clock-out signal from the processor and activates the system clock tick as per the numTicks preset at the hardware timer. On each system clock tick, the user-mode task interrupts and the system takes control. The system enables the privileged mode actions and the CPU context switches as per the preset state of the system. The system control actions are performed by operating system (software).

Figure 3.7 shows hardware timer control bits (and signals) and status flags. Control bits are as per the hardware signals and corresponding bits at control register. Control bits (or signals) can be of nine types. These are: (i) Timer enable (to activate a timer). (ii) Timer start (to start counting at each clock input). (iii) Timer stop (to stop counting) from the next clock input. (iv) Prescaling bits (to divide the clock-out frequency signal from the processor). (v) Up count Enable (to enable counting up by incrementing the count value on each clock input). (vi) Down count Enable (to decrement on a clock input). (vii) Load enable (to enable loading of a value at a register into the timer). (viii) Timer-interrupt enable (to enable interrupt servicing when the timer outs (overflows) and reaches count value equals 0) (ix) Time out enable [to enable a signal when the timer overflows (reaches count equals 0)] to another device.

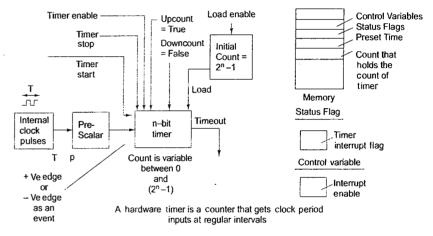


Fig. 3.7 Signals, clock-inputs, control bits and status flags at registers or memory in a hardware timer device

Status flag is as per the corresponding hardware signal time-out from the hardware timer. This flag and signal set when the timer all bits (count value) reach to 0.

Table 3.7 lists ten forms of the timers for the uses listed in Table 3.5. Software timer (SWT) is an innovative concept.

The system clock or any other hardware-timing device ticks and generates one interrupt or a chain of interrupts at periodic intervals. This interval is as per the *count-value* set. Now, the interrupt becomes a clock input to an SWT. This input is common to all the SWTs that are in the list of activated SWTs. Any number of SWTs can be made active put in a list of active SWTs. Each SWT will set a status flag on its timeout (*count-value* reaching 0). Figure 3.7 shows the control bits and status bits in an SWT. SWT *control bits* are set as per the *application*. There is no hardware input or output in an SWT. A flag sets when the SWT count-value reaches 0 after reading the maximum. Table 3.8 lists all the variables of SWT. It includes the control-bits and status flags. SWT thus has similar control variables and flags as in the hardware timer or counter.

SWT actions are analogous to that of a hardware timer. While there is physical limit (1, 2 or 3 or 4) for the number of hardware timers in a system, SWTs can be limited by the number of interrupt vectors provided by the user. Processors (microcontrollers) also define the interrupt vector addresses of two or four SWTs.

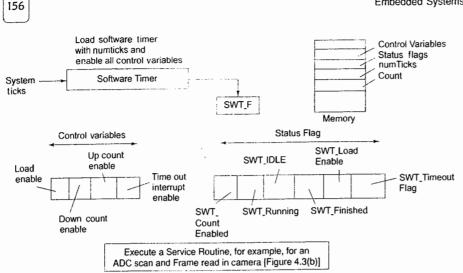


Fig. 3.8 Control bits, status flags and variables of a software timer

Table 3.7 Ten forms of a timer

S.No.	Types
1.	Hardware internal timer
2.	Software timer (SWT)
. 3.	User software-controlled hardware timer.
4.	RTOS-controlled hardware timer. An RTOS can define the clock ticks per second of a hardware timer at a system. [Refer to function OS_Ticks (N) in Section 9.2.1.]
5.	Timer with periodic time-out events (auto-reloading after overflow state). A timer may be programmable for auto-reload after each time-out.
6.	One Shot Timer. (No reload after the overflow and finished state.) It triggers on event-input for activating it to running state from its idle state. It is also used for enforcing time delays between two states or events. On the event or reaching a state one shot timer starts and after the time out another state or event occurs.
7.	Up count action Timer. It is a timer that increments on each count-input from a clock.
8.	Down count action timer. It is a timer that decrements on each count-input.
9.	Timer with its overflow status bit (flag), which auto-resets as soon as interrupt service routine starts running.
10.	Timer with overflow-flag, which does not auto reset.

Timing devices are needed for a number of uses in a system. (i) There can only be a limited number of hardware timers present in the system. A system has at least one hardware timer. The system clock is configured from this. A microcontroller may have 2, 3 or 4 hardware timers. One of the hardware timer ticks forms the inputs from the internal clock of the processor and generates the system clock. Using the systems clock or internal clock, the number of software timers can be drven. These timers are programmable by the device driver programs. (ii) A software timer is software that executes and increases or decreases a count-variable (count value) on an interrupt on a timer output or on a real-time clock interrupt. The software timer also generates interrupt on overflow of count-value or on finishing value. Software timers are used as virtual timing devices. There are a number of control bits and a time-out status flag in each timer device.

Table 3.8 Variables for control bits and status in a software timer

S.No.	32 or 16 or 8 or !-bit variables	
1.	Reset Value 32/16/8	
2.	Initial Load Value (numTicks) 32/16/8	
3.	Count-value (Preset value) 32/16/8	
4.	Maximum Value 32/16/8	
5.	Minimum Value 32/16/8	
6.	Timer run enable bit	
7.	Timer interrupt enable bit	
8.	Timer reset enable bit	
9.	Timer load enable bit	
10.	Timer reload (after finished state) enable bit	
11.	Overflow-flag .	

WATCHDOG TIMER

Watchdog timer is a timing device that can be set for a preset time interval, and an event must occur during that interval else the device will generate the timeout signal. For example, we anticipate that a set of tasks must finish within 100 ms. The watchdog timer disables and stops in case the tasks finish within 100 ms. The watchdog timer generates interrupts after 100 ms and executes a routine that runs because the tasks failed to finish in the anticipated interval. A software task can also be programmed as a watchdog timer (Section 9.3.3). A microcontroller may also provide for the watchdog timer.

The watchdog timer has a number of applications. One application in a mobile phone is that the display is turned off in case no GUI interaction takes place within a specified time. The interval is usually set at 15, 20, 25, or 30 s in a mobile phone. This saves power.

Another application in a mobile phone is that if a given menu is not selected by a click within a preset time interval, another menu can be presented or a beep can be generated to invite user's attention.

An application in a temperature controller is that if a controller takes no action to switch off the current within the preset time, the current is switched off and a warning signal raised, indicating controller failure. Failure to switch off current may cause a boiler in which water is heated to burst,

Example 3.8

68HC11 microcontroller has a watchdog timer in the hardware. There are two registers, CONFIG (system configuration control register) and COPRST (computer operating properly and processor reset on failure). They are for programming the interrupts of watchdog timer. CONFIG has a bit, NOCOP. It configures when the processor writes the configuration word at address 0x003F. NOCOP is the 2nd bit of CONFIG. If this bit is reset to 0, the COP facility is enabled. [COP means computer (68HC11) operating properly watchdog timer. The COP watchdog timer provides for keeping a watch on execution time of the user program.]

When user program takes a longer time in a routine than planned or expected the user provides for storing at desired intervals; first, the 0x55 and then the 0xAA at the computer-reset control register COPRST. By keeping a watch means that as soon as the watchdog timer overflows (time outs), the program counter is reset according to 16 bits at the lower and higher bytes that are preloaded at addresses 0xFFFA and

0xFFFB, respectively. If these 16 bits are same as the bits in 0xFFFE and 0xFFFF, then the microcontroller executes instructions, which are same as when it resets on power up or else it executes the routine at the 16-bit address fetched from 0xFFFE and 0xFFFF whenever there is failure within the watched time interval.

The 0th and 1st bit of the option register, OPTION, at the address 0x0039 are the CR_1 and CR_0 bits. If NOCOP resets (0) and CR_1 - $CR_0 = 0$ -0, the watchdog timer time out occurs after every 2^{16} pulses. As $T = 0.5 \ \mu s$ for the processor when the E clock output is 2 MHz, the WDT time-out occurs at every 16.384 ms ($2^{16} \times 0.5 \ \mu s$) unless the user software stores at desired intervals before a time out, first the 0x55 and then the 0xAA at the computer reset control register COPRST. This means user program resets the watchlog timer by itself after finishing the watched section of the program. [After 2^{15} pulses if CR_1 - $CR_0 = 0$ -1, 2^{14} pulses for 1-0, 2^{13} pulses for 1-1].

A watchdog timer has a number of applications and is a timing device such that it is set for a preset time interval and an event must occur during that interval else the device will generate a timeout signal and interrupt for the failure to get that event in the watched time interval.

3.8 REAL TIME CLOCK

Real time clock (RTC) is a clock that causes occurances of regular interval interrupts on its each tick (timcout). An interrupt service routine executes on each timeout (overflow) of this clock. This timing device once started never resets or is never reloaded with another value. Once it is set, it is not modified later. The RTC is used in a system to save the current time and date. The RTC is also used in a system to initiate return of control to the system (OS) after the preset system clock periods.

Example 3.9

- (i) Assume that a hardware timer of an RTC for calendar is programmed to interrupt after every 5.15 ms. Assume that at each tick (interrupt) a service routine runs and updates at a memory location. Within one day (86400 s) there will be 2²⁴ ticks, the memory location will reach 0x000000 after reaching the maximum value 0xFFFFFF. Within 256 days there will be 2³² ticks, the memory location will reach 0x00000000 after reaching the maximum value 0xFFFFFFFF. Note that battery must be used to protect the memory for that long period.
- (ii) Assume that an RTC has to implement using a software timer. Assume that a hardware 16-bit timer ticks from processor clock after 0.5 μ s. It will overflow and execute an overflow interrupt service routine after 2^{15} μ s = 32.768 ms. The interrupt service routine can generate a port bit output after every time it runs and can also call a software routine or sends a message for a task. If n = 30, the RTC initiated software will run every 30 × 32.768 ms, which is close to 1 s.
- (iii) A real time clock timer for interrupts at regular intervals is present in a microcontroller. 68HC11 has a register called the Pulse Accumulator Control Register, PACTL and two lowest significance bits, RT_1-RT_0 (1st and 0th). PACTL is write only. If the RT_1-RT_0 pair is 00, an interrupt can occur after 2^{13} pulses of the E clock. If the E clock pulses are of 2 MHz and thus T is 0.5 μ s, the interrupts from a real time clock occur after each 4.096 ms. If the RT_1-RT_0 pair is 01, an interrupt can occur after 2^{14} pulses of the E clock, that is, after each 8.192 ms. If the RT_1-RT_0 pair is 10, the interrupt can occur after 2^{15} pulses of the

E clock, that is after each 16.384 ms. If the RT_1 - RT_0 pair is 11, an interrupt can occur after each 2^{16} pulses of the E clock, that is, after each 32.768 ms. The real time clock is based on a free running counter in 68HC11. RT_1 - RT_0 bits control its rate of ticking.

The interrupts from a real time clock are disabled or enabled by I bit in clock control (CC) register. The interrupts from real time clocks are also locally masked by the 6th bit, RTI in timer interrupt mask register 2, TMASK 2. This bit is set to unmask and reset to mask the real time clock interrupts. If RTI and I bits permit the interrupt request for real time clock timeout then the microcontroller fetches the lower and higher bytes of the interrupt servicing routine address from the addresses 0xFFF0 for higher byte) and 0xFFF1 (for lower byte). This is the vector address for real time clock interrupts in 68HCI1. The interrupt service routine must clear (0) the RTIF, which is interrupt flag for the real time clock interrupts. The RTIF is a bit in timer interrupt flag register 2, TFLG2. The TFLAG2 is at address 0x0025. It is set by each interrupt from the real time clock interrupt and therefore it must be cleared in order to enable next interrupt before returning from the corresponding service routine and before the next real-time clock-interrupt occurs.

A real time clock (RTC) provides system clock and it has a number of applications. It is a clock that generates system interrupts at preset intervals. An interrupt service routine executes on each tick (timeout or overflow) of this clock. This timing device once started is generally never reset or never reloaded to another value.

3.9 NETWORKED EMBEDDED SYSTEMS

Each specific IO device may be connected to others using specific interfaces; for example, an IO device connects and is interfaced to an LCD controller, keyboard controller or print controller using specific interface. Bus communication simplifies the number of connections and provides a common protocol for interconnecting different or same type of IO devices.

Any device that is compatible with a system's IO bus can be added to the system (assuming an appropriate device driver program is available), and a device that is compatible with a particular IO bus can be integrated into any system that uses that type of bus. This makes systems that use IO buses very flexible, as opposed to direct interconnections between the processor and each IO device, and it allows system support to many different IO devices (depending on the needs of its users), and it also allows users to change the IO devices that are attached to system as their needs change.

The main disadvantage of an IO bus (and buses in general) is that each bus has a fixed bandwidth that must be shared by all the devices, which connect to the bus. Even worse, electrical constraints (wire length and transmission line effects) cause buses to have less bandwidth than using the same number of wires to connect just two devices. Essentially, there is a trade-off between interface simplicity and bandwidth sharing. Assume that bandwidth of a bus is 200 Mbps. If the bus communicates two devices simultaneously then it does so by 100 Mbps communication by each.

IO devices communicate with the processor through an IO bus, which is separate from the memory bus that the processor uses to communicate with the memory system. Embedded systems connected internally on the same IC or systems at very short, short and long distances, and can be netwerked using the followings types of IO buses, each functioning according to specific protocols.

Using a serial IO bus allows a computer or controller or embedded system to interface network with a
wide range of IO devices without having to implement a specific interface for each IO device. When

the IO devices in the distributed embedded systems are networked at long distances of 25 cm and above, all can communicate through a common serial bus. A serial bus has very few lines. Sections 3.10.1 to 3.10.5 describe the serial bus communication protocols.

- Using a parallel IO bus allows a computer or controller or embedded system to interface with a number
 of internal systems at very short distances without having to implement a specific interface for each IO
 device. Section 3.11 describes the parallel bus communication protocols.
- 3. Using the Internet or intranet, a computer, controller or embedded system's IO device can interface globally and can network with other systems or computers and a wide range of devices in the distributed systems. Section 3.12 describes these systems.
- 4. Using a wireless protocol allows a handheld computer, controller or embedded system IO device to interface and network with a number of handheld system IO devices at short distances up to 100 m using a wireless personal area network (WPAN) protocol, without having to implement a specific wireless interface for each IO device. Section 3.13 describes wireless bus communication protocols.

Embedded systems are distributed and networked using a serial or parallel bus or wireless protocol software and appropriate hardware.

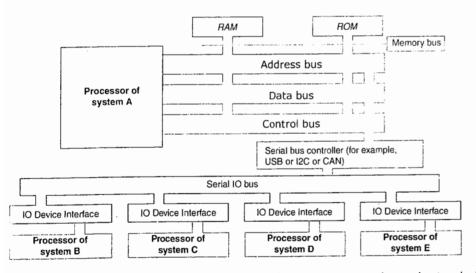


Fig. 3.9 A processor of embedded system connected to system memory bus and networked to other systems through a serial bus

3.10 SERIAL BUS COMMUNICATION PROTOCOLS

Figure 3.9 shows a processor of embedded system connected to system memory bus and networked to other systems through a serial bus. Sections 3.10.1 to 3.10.5 describe popular serial buses.

3.10.1 I²C Bus

Assume that there are number of device circuits in a number of processes in a plant, one IC each for measuring temperatures and pressures. These ICs mutually network through a common synchronous serial bus. I²C (Inter IC connect) bus is a popular bus for these circuits. There are three I²C bus standards: Industrial 100 kbps I²C, 100 kbps SM I²C, and 400 kbps I²C. The I²C was originally developed at Philips Semiconductors.

The I²C Bus has two lines that carry its signals—one line is for clock and one is for bidirectional data. There is a protocol for I²C bus. Figure 3.10(a) shows the signals during a transfer of a byte when using I²C bus.

Each device has an address using which the data transfers take place. The master can address 127 other slaves at an instance. It has a processing element functioning as a bus controller or a microcontroller with I²C bus interface circuit. Each slave can also optionally have an I²C bus controller and processing element. A number of masters can also connect to the bus. However, at any instance, there can be only one master, which is one that initiates a data transfer on SDA (serial data) line and which transmits the SCL (serial clock) pulses. From the *master* or *slave*, a data frame has fields beginning from start bit as per Table 3.9. Figure 3.10(b) shows the format of the bits at the I²C bus.

Table 3.9

Field and its length	Explanation	
First field of 1-bit	It is start bit similar to the one in a UART.	
Second field of 7 bits	It is called the address field. It defines the slave address being sent the data frame (of many bytes) by the master.	
Third field of 1 control bit	It defines whether a read or write cycle is in progress.	
Fourth field of 1 control bit	Next bit defines whether the present data is an acknowledgement (from the slave)	
Fifth field of 8 bits	It is used for IC device data bits.	
Sixth field of 1-bit	It is a negative acknowledgement bit (NACK) from the master. If active, then acknowledgement after a transfer is not needed from the slave, else acknowledgement is expected from the slave.	
Seventh field of 1-bit	It is a stop bit like in a UART.	

The disadvantage of this bus is the time taken by algorithm in the master hardware that analyses the bits through I²C in case the slave hardware does not provide for the hardware that supports it. Some ICs support the protocol and some do not. In that case, interface circuits for those ICs are also required. Also, there are open collector drivers at the master. Therefore, a pull-up resistance of 2.2 K or an active circuit for pull up of line to logic 1 for on each line is essential.

I²C is a serial bus for interconnecting ICs. It has a start bit and a stop bit like in a UART. It has seven fields for the start, 7-bit address, defining a read or write, defining a byte as an acknowledging byte, data byte, NACK and end.

3.10.2 CAN Bus

Number of devices and controllers are located and are distributed in a car. An automobile uses number of distributed embedded controllers, including those for the brakes, engine, electric power, lamps, inside temperature control, air-conditioning, gate, front dash board display, meter display panel and cruising control. Embedded controllers must network through a bus. CAN (controller area network) bus is a standard bus in distributed network. It is mainly used in automotive electronics. It is also used medical electronics and industrial plant controllers.

SDA Clock Data Clock SCL Clock Data 7T Slave Address Data Bits Start Bit Start Address Bit NACK Bit Read/Write Stop Bit Indicating Bit Acknowledgement

Fig. 3.10 (a) Signals during a transfer of a byte when using the I²C (Inter Integrated Circuit) bus (b) Format of SDA bits at the I²C bus

The CAN Bus [Figure 3.11(a)] network has a serial line, which is bi-directional. CAN bus has multimaster and multicast features. A CAN device using CAN controller receives or sends a bit at any instance by operating at the maximum rate of 1 Mbps (bit-period = 1 μ s). It employs a twisted pair connection of 120 ohm line impedence at each controller node. The pair can run up to a maximum length of 40 m.

- 1. CAN serial line is pulled to logic level 1 by a resistor (active or passive) between the line and +4.5 V to +12.3 V. Line is at logic 1 in its idle state, also called the recessive state.
- 2. Each node has a buffer-gate between an input pin and a CAN serial line. A node gets the input at any instance from the line after sensing that instant when the line is pulled down to 0. The latter is called dominant state.
- 3. Each node has a current driver circuit between output pin and serial line. The node sends a bit to line by pulling the line 0 by its driver for a bit period. An NPN transistor is used current-driving transistor, the emitter of which also connects to the line ground and collector connects to the line. Using a driver (consisting of a buffer inverter gate connected to base of the NPN transistor), the node can pull the line to 0, which is otherwise at logic 1 in its idle state. This lets other nodes sense the input.
- 4. A node sends the data bits as a data frame. Data frames always start with I and always end with seven 0s. Between two data frames, there are minimum three fields. Table 3.10 gives the details of each field in a CAN frame. Figure 3.11(b) shows the format of the bits in a CAN frame.
- 5. The CAN-bus line usually interconnects to a CAN controller between the line and host node. [A host node is one that has controller for use as bus master.] The line gives input and gets output during reception and transmission using physical and data link layers at host node. The CAN controller has a BIU (bus interface unit consisting of buffer and driver), protocol controller, status-cum-control registers, receiver-buffer and message objects. These units connect the host node through host interface circuit.

 There is an arbitration method called CSMA/AMP (Carrier Sense Multiple Access with Arbitration on Message Priority). A node stops transmitting on sensing a dominant bit, which indicates that another node is transmitting.

Table 3.10 Each field in a CAN frame

Field and its length	. Function
First field of 12 bits	This is arbitration field, which contains the packet's 11-hit destination address and RTR bit (Packet means a set of bits sent on the bus). RTR stands for 'Remote Transmission Request'. The receiving addressed device is at destination address specified in 11-bit subfield and RTR is defined on the basis of whether the data byte being sent is a data for the device or a request to the device. 11-bit address identifies the device to which data is being sent or the request being made. When an RTR bit is at 1, it means this packet is for the device at destination address. If this bit is at 0 (dominant state) it means this packet is a request for the data from the device.
Second field of 6 bits	It is control field. The first bit is identifier extension. The second bit is always 1. The last 4 bits are code for data length.
Third field of 0 to 64 bits	Its length depends on the data length code in control field.
Fourth field (third if data field has no bit present) is of 16 bits	It is CRC (Cyclic Redundancy Check) field with 15-bit CRC plus 1-bit delimiter bit. The receiver node uses it to detect errors, if any, during the transmission.
Fifth field of 2 bits	First bit is 'ACK slot'. The sender sends it as 1 and the receiver, which would send back 0 in this slot when it detects error in reception. The sender, after sensing 0 in the ACK slot, retransmits the data frame. The second bit is the 'ACK delimiter' bit. It signals the end of ACK field. If the transmitting node does not receive any acknowledgement of data frame within a specified time slot, it should retransmit.
Sixth field of 7 bits	This is the end-of-the-frame specification and has seven 0s.

CAN is a serial bus for interconnecting a central control network. It is widely used in automobiles. It has fields for bus arbitration bits, control bits for address and data length, data bits, CRC check bits, acknowledgement bits and ending bits.

3.10.3 USB Bus

Universal Serial Bus (USB) is a bus between host system and number of interconnected peripheral devices. A maximum 127 devices can connect to a host. It provides a fast (up to 12 Mbps) and as well as a low speed (up to 1.5 Mbps) serial transmission and reception between host and serial devices. A USB host, which includes controller for function as bus master can connect flash memory cards, pen-like memory devices, digital camera, printer, mice, PocketPC and video games. Thre are three standards: USB 1.1(a low speed 1.5 Mbps 3 m channel along with a high speed 12 Mbps, 25 m channel); USB 2.0 (high speed 480 Mbps 25 meter channel), and wireless USB (high speed 480 Mbps 3 m).

USB protocol has this feature—a USB device can be hot plugged (attached), configured and used, reset, reconfigured and used; it can share bandwidth with other devices, detached (while others are in operation)

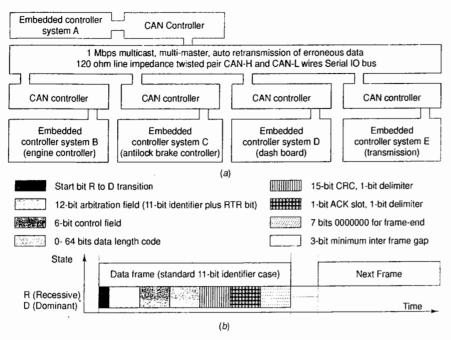


Fig. 3.11 (a) Network during a transfer of data when using the CAN (Controller Area Network) bus (b) Format of the bits at CAN bus

and reattached. Attaching and detaching can be done without rebooting. The host schedules sharing of bandwidth among the attached devices. A USB device can either be bus-powered or self-powered. In addition, there is a power management by software at host for USB ports.

USB host connects to devices or nodes using USB port-drving software and the host controller connected to a root hub. A hub is one that connects to other nodes or hubs. A tree-like topology forms as follows. The root hub connects to the hub and node at level 1. A hub at level 1 connects to the hub and node at level 2 and so on. Only the nodes are present at the last level. The root hub and each hub at a level connect in a star topology with the next level. The USB device descriptor data structure has a hierarchy, which is as follows: It has device descriptor at the root that has number of configuration descriptors and each configuration descriptor has number of interface descriptors and which has number of end point descriptors.

USB bus cable has four wires, one for +5 V, two for twisted pairs and one for ground. There are termination impedances at each end that are as per the device speed. Electromagnetic Interference (EMI)-shielded cable is used for 15 Mbps USB devices.

Serial signals are Non Return to Zero ((NRZI) and the clock is encoded by inserting a synchronous code (SYNC) field before each packet. [Refer to Table 3.2]. The receiver synchronizes its bit recovery clock continuously. The data transfer is of four types: (a) Controlled data transfer (b) Bulk data transfer (m) Interrupt driven data transfer (d) Isosynchronous transfer.

USB is a polled bus. The host controller circuit regularly polls the presence of a device as scheduled by the software. It sends a token packet. The token consists of fields for type, direction, USB device address and

device end-point number. The device does the handshaking through a handshake packet, indicating successful or unsuccessful transmission. A CRC field in a data packet enables transmission error detection at the receiver.

USB supports three types of pipes—(a) 'Stream' with no USB-defined protocol. It is used when the connection is already established and the data flow starts. (b) 'Default Control' for providing access. (c) 'Message' for the control functions of the device. The host configures each pipe for the followings: (a) data bandwidth to be used, (b) transfer service type and (c) buffer sizes.

Wireless USB is wireless extension of USB 2.0 and it operates at UWB (ultra wide band) 3.1 to 10.6 GHz frequencies. It is used for short-range personal area network (high speed 480 Mbps, 3 m or 110 Mbps, 10 m channel). FCC has recommended a host wire adapter (HWA) and a device wire adapter (DWA), which provide wireless USB solutions. Wireless USB also supports dual-role devices (DRDs). A device can be a USB device as well as a limited capability host. For example, a wireless USB digital camera uses a USB host when connected to a printer and a USB device when connected to a personal computer. A wireless USB device is used to provide Internet connectivity between laptop or computer and mobile service provider network.

USB is a serial bus that interconnects a system. It attaches and detaches a device from the network. It uses a root hub. Nodes containing the devices can be organized like a tree structure. It is mostly used in networking the IO devices like scanner in a computer system. Wireless USB is used for remote connections without wires.

3.10.4 FireWire — IEEE 1394 Bus Standard

Digital video cameras, digital camcorders, digital video disk (DVD), set-top boxes, and music systems multimedia peripherals, latest hard disk drives, and printers need a high-speed bus standard interface for communicating directly to a personal computer. FireWire (IEEE 1394b) is a standard for 800 Mbps serial isosynchronous data transfers.

A FireWire IEEE 1394 port can operate at up to 400 Mbps and the latest machines include FireWire ports that support IEEE 1394b which operate at up to 800 Mbps. Since FireWire can transfer data at a guaranteed rate, it is also used in real time devices, such as video device data transfers.

A single 1394 port can interface up to 63 external FireWire devices. It supports both plug and play and hot plugging. It also provides self-powered and bus-powered support on the bus.

FireWire is a high speed 800 Mbps serial bus for interconnecting a system with multimedia streaming devices and systems.

3.10.5 Advanced Serial High Speed Buses

Section 3.2.6 described SDIO, which is an advanced high-speed serial bus for handheld devices. An embedded system may need to connect multi gigabits per second (Gbps) transceiver (transmit and receive) serial interfaces. Exemplary products are wireless LAN, Gigabit Ethernet, SONET (OC-48, OC-192, OC-768). The following are examples of the advanced bus protocols.

- 1. IEEE 802.3-2000 [1 Gbps bandwidth Gigabit Ethernet MAC (Media Access Control)] for 125 MHz performance
- 2. IEE P802.3oe draft 4.1 [10 Gbps Ethernet MAC] for 156.25 MHz dual direction performance]
- IÉE P802.3oe draft 4.1 [12.5 Gbps Ethernet MAC] for four channel 3.125 Gbps per channel transceiver performance]
- 4. XAUI (10 Gigabit Attachment Unit)
- 5. XSBI (10 Gigabit Serial Bus Interchange)
- 6. SONET OC-48
- 7. SONET OC-192
- 8. SONET OC-768
- 9. ATM OC-12/46/192

3.11 PARALLEL BUS DEVICE PROTOCOLS—PARALLEL COMMUNICATION NETWORK USING ISA, PCI, PCI-X AND ADVANCED BUSES

A computer system connects at high speed to other subsystems having a range of IO devices at very short distances (<25 cm) using a parallel bus without having to implement a specific interface for each IO device. When the IO devices in the distributed embedded subsystems are networked, all can communicate through a common parallel bus. A parallel bus has a large number of lines as per the protocol. Figures 3.12(a) and (b) show the processor of an embedded system A connected to system memory bus and networked to other subsystems through a parallel bus PCI using PCI bridge and AMBA-APB bridge, respectively.

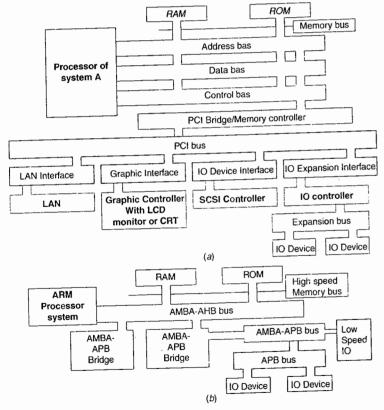


Fig. 3.12 (a) and (b) A processor of embedded system connected to system memory bus and networked to other subsystems through a parallel bus using PCI and AMBA-APB bridges

We need an interconnection bus within PC or embedded system to a number of PC-based IO cards, systems and devices. This bus needs to be separated from system-bus that connects the processor to memories. The

system bus and interconnection bus operate at different levels of speeds. Exemplary devices are display monitor, printer, character devices, network subsystems, video card, modem card, hard disk controller, thin client, digital video capture card, streaming displays, 10/100 Base T card and card using DEC 21040 PCI Ethernet LAN controller. Each of these devices, which performs a specific function, may contain a processor and drives by software. Each device has specific memory address-range, specific interrupt-vectors (pre-assigned or auto configured) and device IO port addresses. A bus of appropriate specifications and protocol interfaces these to host system or computer.

A switch, popularly called PCI bus interface, switches a processor communication with the memory bus to PCI bus. In most systems, the processor has a single data bus that connects to a switch module such as the PCI bridge found in many PC systems, although some processors integrate the switch module onto the same integrated circuit as the processor to reduce the number of chips required to build a system thereby reducing the system cost. The switch communicates with the memory through *memory bus* and dedicated set of wires that transfer data between these systems. A separate *IO bus* connects the switch to IO devices. Separate memory and IO buses are used because the IO system is generally designed for maximum flexibility, to allow as many different IO devices as possible to interface to the computer, while the memory bus is designed to provide the maximum possible bandwidth between the processor and memory system.

Two old interconnection buses for communication between the host and a device are ISA and EISA (Extended ISA). A new interconnection for the bus is either PCI or PCI/X. [A variant of it is Compact PCI (cPCI).] Sections 3.12.1 to 3.12.4 describe three parallel bus communication protocols.

Parallel bus interconnects IO devices and peripherals over very short distances and at high speed. ISA, PCI and ARM buses are examples of parallel buses. A parallel bus interfaces the system memory bus through a bridge or switching circuit.

3.11.1 ISA Bus

ISA bus (used in IBM Standard Architecture) connects only to an embedded device that has an 8086 or 80186 or 80286 processor, and in which the processor addressing and IBM PC architecture addressing limitations and interrupt vector address assignments are taken into account. There is no geographical addressing.

The limitation for memory access by a system using the ISA bus of the original IBM PC were as follows: ISA bus memory accesses can be in two ranges, 640 to 1 MB and 15 to 16 MB. The former range also overlaps with the range used by video boards and BIOS. [Note: Linux OS does not support the second range for accessing directly a device.]

The IO port address limitations for devices are as follows: The 8086 to 80286 processor has IO mapped IOs, not memory mapped IOs. Though the instruction set provides for IO instructions for 64 kB IO addresses, the IBM PC configuration ignores the address lines A_{10} to A_{15} and these are not decoded. Therefore, only 1024 IO port addresses are available. A hexadecimal addressing scheme with three nibble addressing between 000 to 3FF only can be used for a device. The A_{10} to A_{15} bits are thus immaterial. The following are the addresses allocated in IBM Standard Architecture (ISA).

- 1. Addresses allocated are 0x000-0x00F for DMA chip 8237. The addresses for other devices are as follows.
- 0x020–0x021 addresses allocated are for programmable interrupt controller 8255. Hex 0x040–0x043 for timer 8253.
- 3. 0x060-0x063 for parallel port programmable parallel interface.
- 4. The hexa-decimal addresses 080-083, 0A0-0AF, 0C0-0CF, 0E0-0EF allocated are for components on the motherboard.

- 5. Reserved addresses from peripherals are hex 220-24F, 278-27F, 2F0-2F7, 3C0-3CF and 3E0 to 3F0.
- 6. The addresses allocated are hex 2F8-2FF and 3F8-3FF for IBM COM ports.
- 7. Addresses are bex, 320-32F and 3F0-3F7 for hard disk and floppy diskette, respectively.
- 8. Only 32 addresses between 0x300 to 0x31F are available for prototype card; for example, ADC card.
- 9. Addresses allocated are between hex 380-389 and 3A0-3A9 for synchronous communication.
- 10. Synchronous Data Link Control (SDLC) addresses allocated are between hex. 380-38C.
- 11. Display monitor ports are within 380-38F (monochrome) and 3D0-3DF for (colour and graphics).

There is a limited availability of interrupt vectors in the IBM PC 80x86 family. Only 256 vectors are available. Interrupt service functions are now shared at software level: for example, SWT interrupts. Original ISA specifications did not allow that.

EISA bus is a 32-bit data and address-lines version of ISA, and devices (system using this bus for IOs) are also supported. An EISA device driver first checks the EISA bus availability on the hosting computer or system. It supports the sharing of interrupt functions, SCI (Serial Communication Interface) controller and Ethernet devices. Unix and Linux support the EISA bus-driven cards and devices.

ISA and EISA buses are compatible with IBM architecture. They are used for connecting devices following !O addresses and interrupt vectors as per IBM PC architecture. EISA is 32-bit extension of ISA. It also supports software interrupt functions and Ethernet devices.

3.11.2 PCI and PCI/X Buses

Recently, the most used synchronous parallel bus in the computer system for interfacing PC-based devices is PCI (Peripheral Component Interconnect). PCI provides a superior throughput than EISA. It is almost platform-independent, unlike the ISA, which depended on the IBM PC platform, interrupt vectors. IO addresses and memory allocations. Its clock rate is nearest to the submultiple of the system clock. PCI provides three types of synchronous parallel interfaces. Its versions are 32/33 MHz, 64/66 MHz, PCI-X 64/100 MHz, PCI Super V2.3 264/528 MBps 3.3 V (on a 64-bit bus), 132/264 (on a 32-bit bus) and PCI-X Super V1.01a for 800 MBps 64-bit bus 3.3 V.

PCI bus has 32-bit data bus extendible to 64 bits. In addition, it has 32-bit addresses extendible to 64 bits. Its protocol specifies the interaction between the different components of a computer. A specification is version 2.1. Its synchronous/asynchronous throughput is up to 132/528 MB/s [33 M x 4/66 M x 8 Byte/s]. It operates on 3.3 V signals. A typical application is an exemplary PCI Card has a 16 MB Flash ROM with a router gateway for a LAN.

A PCI driver can access hardware automatically as well as by addresses assigned by the programmer. The PCI feature of automatically detecting the interfacing systems and assigning new addresses is important for coding a device driver. The PCI bus therefore simplifies the addition and deletion (attachment and detachment) of the system peripherals. A manufacturer registers a global number for PCI device or card, just as, 68HC11 or 80386 are globally registered numbers. A 16-bit register in PCI device identifies this number to let that device auto-detected. Another 16-bit register is for a device ID number. These two numbers allow the device to carry out auto-detection by its host computer. Each device may use FIFO controller with FIFO buffer for maximum throughput.

A device or host identifies its address space by three identification numbers (i) IO port, (ii) memory locations and (iii) configuration registers of total 256 B with a 4-byte unique ID. Each PCI device has address space allocation of 256 bytes to access it by the host computer. The unique feature of PCI bus is its configuration address space. A uniquely assigned interrupt type (a number) handles an interrupt. For example, interrupt type 3 has the interrupt vector address 0x0000C and four bytes at the address specify the interrupt service

routine address. Interrupt type can be between 0x00 and 0xFF. A configuration register number 60 stores the one byte for the interrupt type n(pci). The PCI device or host when interrupted handles the interrupt of type n(pci). Figure 3.13 shows 64-byte standard configuration registers in a PCI device. Following are the abbreviations used in the figure.

VID: Vendor ID. DID: Device ID. RID: Revision ID. CR: Common Register. CC: Class Code. SR: Status Register. CL: Cache Line. LT: Latency Timer. BIST: Base Input Tick. HT: Header Type. BA: Base Address. CBCISB: Card Base CIS Pointer. SS: Sub System. ExpROM: Expansion ROM. MIN_GNT: Minimum Guaranteed time. MAX_GNT: Maximum Guaranteed Time.

VID, DID, RID, CR, SR, and HT are compulsorily configured. The rest are optional.

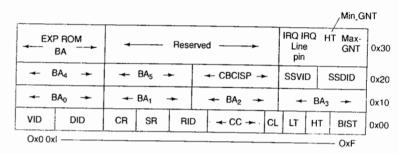


Fig. 3.13 64 bytes at standard device independent configuration registers in a PCI device or host

A PCI controller must access one device at a time. Thus, all the devices within host computer can share IO port addresses and memory locations but cannot share the configuration registers. That means that a device cannot modify other configuration registers but can access other device resources or share the work or assist the other device. If there are reasons for it doing so, a PCI driver can change the default bootup assignments on configuration transactions.

A device can initialize at booting time. This helps in avoiding any address collision. A PCI device on bootup disables its interrupt. Its address space is inaccessible and only the configuration registers space remains accessible. PCI BIOS with the device performs the configuration transactions and then memory and address spaces automatically map to the address space in host computer.

PCI parallel bus is popular in distributed embedded devices. PCI and PCI/X buses are used for parallel bus communication and these are independent from the IBM architecture. PCI/X is an extension of PCI and supports 64/100 MHz transfers. PCI bus new version support 132/528 MB/s data transfer with synchronous/asynchronous throughputs.

3.11.3 ARM Bus

ARM processor interfaces the memory, external DRAM (dynamic RAM controller and on-chip IO devices, which connect to 32-bit data and 32-bit address line at high speed using AMBA (ARM Main Memory Bus Architecture)-AHB (ARM High Performance Bus). Figure 3.12(b) shows AMBA-AHB and AMBA-APB bridges. The bridges interface the memory and external-chip IO devices, which operate at low speed using AMBA-APB. The maximum AHB bps bandwidth is sixteen times the ARM processor clock.

A switch, popularly called the AMBA-APB bridge, switches ARM CPU communication with the AMBA bus to APB bus. The ARM processor-based microcontroller has a single data bus in AMBA-AHB that connects to the bridge, which integrates the bridge onto the same integrated circuit as the processor to reduce the number of chips required to build a system. This reduces the system cost. The bridge communicates with the memory through an AMBA-AHB, a dedicated set of wires that transfer data between these two systems. A separate APB 10 bus connects the bridge to the IO devices. Separate AMBA-AHB and APB IO buses are used because the IO system is generally designed for maximum flexibility, to allow as many different IO devices as possible to interface to the computer, while the memory bus is designed to provide the maximum possible bandwidth between the processor and the memory system.

The APB can connect the I²C, touchscreen, SDIO, MMC (multimedia card), USB, CAN and other required interfaces to an ARM microcontroller.

ARM bus is of two types: AMBA-AHB and AMBA-APB. AHB connects to high speed memory. APB connects the external peripherals to the system memory bus through a bridge.

3.11.4 Advanced Parallel High Speed Buses

Many telecommunication, computer and embedded processor-based products need parallel buses for system IOs. Three versions of PCI parallel synchronous/asynchronous buses provide system-synchronous parallel interfaces. These three versions may not have sufficiently high speed, ultra high speed and large bandwidth that are required for system IOs, routers, LANs, switches and gateways, SANs (Storage Area Networks), WANs (Wide Area Networks) and other products. These do not meet the source-synchronous parallel interfacing requirements. Bandwidth needs increase exponentially in the order of audio, graphics, video, interactive video and broadband IPv6 Internet. An embedded system may need to connect IO system using gigabit parallel synchronous interfaces. The following are advanced bus standard and proprietary protocols developed recently.

- 1. GMII (Gigabit Ethernet MAC Interchange Interface).
- 2. XGMI (10 Gigabit Ethernet MAC Interchange Interface)
- 3. CSIX-1. 6.6 Gbps 32-bit HSTL with 200 MHz performance.
- RapidIOTM Interconnect Specification v1.1 at 8 Gbps with 500 MBps performance or 250 MHz dual direction registering performance using 8-bit LVDS (Low Voltage Data Bus).

3.12 INTERNET ENABLED SYSTEMS—NETWORK PROTOCOLS

Figure 3.14 shows an Internet-enabled embedded system communicating to other systems on the Internet. Internet-enabled embedded systems use html or MIME type files (Section 3.12.1), TCP (Section 3.12.2) or UDP (Section 3.12.3) transport layer protocol, and are addressed by an IP address (Section 3.12.4) and use IP protocol at network layer. An IP address is of 32 bits (four decimal numbers seperated by dots in between) or 48 bits in IPv4 or IPv6 respectively. IPv4 means IP protocol version 4 and IPv6 means version 6. A system at one IP address 1 communicates with another system at another IP address 2 or 3 or... using the physical connections on the Internet and the routers. Since the Internet is a global network, the system connects to remotely located as well as short range located system. Network connectivity is through the layers. Each layer has a protocol, which specifies the way in which the data or message from the previous layer transfers to the next layer.

There are five layers in a TCP/IP network. They are the application, transport, network, data-link and physical layers. The TCP/IP application layer protocol also specifies presentation ways. Transport layer protocol specifies session establishment and termination ways also.

Sections 3.12.1 to 3.12.5 describe the TCP/IP suite's five most used protocols.

Embedded systems are Internet enabled by using TCP/IP protocol suite protocols for networking to Internet and assigning the IP addresses to each system.

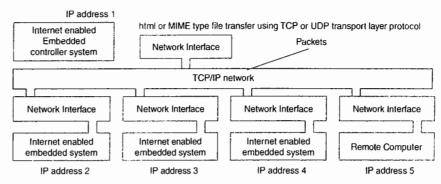


Fig. 3.14 An Internet enabled embedded system communication connected on the Internet

3.12.1 Hyper-Text Transfer Protocol (HTTP)

Devices and Communication Buses for Devices Network

An application layer protocol is as per the application. This layer accepts the data, for example, in HTML or text format and puts the header words as per the protocol and sends the application layer header plus data to the transport layer. A port number specifies the application in the header. Following are the important application layer protocols that support TCP/IP networking.

- 1. NTP (Network Time Protocol) synchronizes system clocks on a network.
- 2. MIME enables attachment of multiple types of files. The examples are:
 - txt (text file).
 - · doc (MSOFFICE Word document file),
 - · gif (graphic image format file),
 - · ipg (jpg format image file), and
 - · way voice or music file.
- 3. HTTP (Port 80) enables Internet connectivity by Hyper-Text Transfer Protocol (HTTP).
- FTP (Port 21 for control. 20 for data) enables file transfer connectivity by File Transfer Protocol.
 TFTP (Port 69) for Trivial FTP. NFS (Network File System) is used for sharing files on a network.
- 5. TELNET (Port 23) enables remote togin to remote terminals by Terminal Access Protocol.
- 6. SMTP (Port 25) enables e-mail transfer, store and forward by Simple Mail Transfer Protocol.
- 7. PoP3 (Port 110) enables e-mail retrieval.
- 8. NNTP (Port 119) (Network News Transfer Protocol) is used for news transfer port.
- 9. DNS (Port 53) for Domain Name Service.
- 10. SNMP (Port 161) Simple Network Management Protocol.
- 11. Bootps and Bootpc (Ports 67 and 68) for Bootstrap Protocol (DHCP) Server and Client, respectively.
- 12. DHCP (Dynamic Host Configuration Prote 191) used for remote booting as well as for configuring a system.

A port-assigned number supports multiple logical connections using a socket. Each socket has IP address and port number. A registered port number can be between 0 and 1023. Registration is done by IANA (Internet

Assigned Number Authority. Port number 0 means host itself. A user unregistered server can have Port number above 5000.

HTTP port 80 is an application layer protocol. The HTTP features are as follows:

- HTTP is standard protocol for requesting for a URL (universal resource locator) address, for example, http://www.mcgraw-hill.com.) An URL defines a web page resource, and is used for retrieving or sending web page file. The response from web may be with or without applying a process. An HTTP client requests an HTTP server on the Internet and the server responds by sending a response.
- 2. HTTP is a stateless protocol. For an HTTP request, the protocol assumes a fresh request. It means there is no session or sequence number field or no field that is retained in the next exchange. This makes a current exchange by an HTTP request independent of the previous exchanges. The later exchanges do not depend on the current one. An e-commerce-like application needs a state management mechanism. A Cookie is a text file created during a particular pair of exchanges of HTTP request and response. The creation is either at CGI or processing program or script or at client (Browser). A prior exchange may then depend on this cookie. By this mechanism, the stateless feature of HTTP is compensated. The cookie provides a HTTP state management mechanism.
- 3. HTTP is a file transfer-like protocol for HTML (hyper text markup language) files. This makes it easy to explore a web site URL. A request (from a client) is sent and reply (response from a server) is received.
- 4. The HTTP protocol is very light (a small format) and thus speedy as compared to other existing protocols. HTTP is able to transfer any type of data to a browser (a client) provided it is capable of handling that data.
- 5. Besides simplicity, another important feature of HTTP is its flexibility. Assume we are surfing the web and our connection breaks (or user does so); then too we can start surfing on the Net from just that point again. Being a stateless protocol, HTTP does not keep track of the state as FTP does. Each time a connection establishes between the web server and the client (browser), both these interpret this connection as a new connection. Simplicity is a must because a web page has its URL resources distributed over a number of servers.
- HTTP protocol is based on the Object Oriented Programming System (OOPS). Methods are applied
 to objects identified by URL. It means that as in the normal case of Object Oriented Program, the
 various methods apply on an object.
- 7. From HTTP 1.0 and 1.1 version onwards, the following features have been included:
 - (a) Multimedia file access is feasible due to provision or the MIME (Multipurpose Internet Mail Extension) type file definition.
 - (b) From HTTP 1.1 version onwards, there are eight specified methods and extension methods. An extension method is method added for a specific HTTP. There can be none or one or several extension methods. The HTTP specific methods are as follows. 1. GET 2. POST. 3. HEAD 4. CONNECT. 5. PUT 6. DELETE 7. TRACE. 8. OPTIONS. (Last four from 1.1). In earlier versions, GET follows a space and then document name. Server returns the documents and closes the connection. From 1.1, the POST method has permitted form processing, as using it the client transmits the form data or other information to the server. From 1.1, the server does not close the connection after response and thus response can be processed before it is sent.
- (c) A provision of user authentication exists besides the basic authentication introduced from HTTP 1.1 version onwards, Digest Access Authentication prevents the transmission of username and password as HTML or text.
- (d) A host header field adds to support those ports and virtual hosts that do not accept or send IP packets. From HTTP 1.1 version onwards, An error report to client when a HTTP request is without a host header field.

- (e) From HTTP 1.1 version onwards, an absolute URL is acceptable to the server. Earlier only proxy server accepted that.
- (f) Status codes in the response.
- (g) Caching of a resource is provided at server (and proxy).
- (h) Byte range specification helps in large response in parts.
- (i) Selection among various characteristics on retrieval by the client is feasible when a server sends response to client request. For example, two characteristics, language and encoding can be specified in server environment variables while the client sends request header for retrieving a resource. The resource then retrieves in that language and with that encoding. The contents sent to client do not change, only the way in which these are presented to the client change.
- (j) Length specification helps in presentation in chunks.
- 8. An HTTP message header during a request from a client or during a response from server consists of two parts (a) A start-line, none or several message- headers (fields) and empty line, and (b) Body of message. HTTP specifies that request message to consist of request message headers. HTTP also specifies that response message to consist of response message headers.
- HTTP provides for entity headers. These contain information about entity body contained in the message, or in case body is not present then information about the entity, not its body. For example, information of content length in bytes.
- 10. HTTP interaction scheme is that a client requests server directly or through proxy or a gateway. An HTTP message is therefore either request or response. The format of the messages called RFC 822, specifies ways of sending text messages on the Internet. The message during request from client or during response from server consists of two parts, (a) Start-line, none or several message-headers (fields) plus empty line, and (b) Body of the message. The start line is either a 'request-line' or 'status-line' for request-or response-message, respectively.

3.12.2 Transport Control Protocol (TCP)

TCP (Transport Control Protocol) is a protocol used in transport layer. This layer accepts messages from the upper layer on transmission by application or session layer. This layer also accepts a data stream from the network layer at receiving end. Before communicating a message to the next network layer, it may add a header. The message may communicate in parts or segments or fragments. The header generally has the additional bits for source and destination addresses. Also, there are bits in it for the sequence and acknowledge management, flow and error controls, etc.

There are bits for the offset, window, flags, checksum, urgent pointer, option and for padding also. TCP supports the point to point networking mode.

TCP specifies a format of byte streams at the transport layer of the TCP/IP suite. TCP is used for a full duplex acknowledged flow. Its format has a TCP header of five plus (n-5) words for options and padding and data of maximum I words. Then, $1 \ge 2^{14} - n$. Here $n \ge 5$. n equals the number of words in the header and is called data offset, which means the number of words after which data bits start in the stream. If n > 5, it means there exists words for options and padding. Padding refers to bits used for filling the remaining part of the available field. For example, the option field may indicate the application to be run by the destined node. An acknowledged flow means that the messages communicate in a point-to-point network mode and that there is an acknowledgment for first establishing a connection. Full duplex means that at a given instance, ransages go to and fro from sender to receiver, and that the receiver acknowledges receipt. A request and its response do not form a separate transmission. TCP is virtual-connection oriented. It does not permit multicasting but point-to-point virtual connection.

Field at the IP header

3.12.3 User Datagram Protocol (UDP)

TCP/IP also supports at the transport layer a simpler protocol than TCP. When a message is connectionless and stateless, then the transport layer protocol in the TCP/IP suite is User Datagram Protocol (UDP). UDP supports the broadcast networking mode. An example is application for communicating header before a data stream. The header specifies the bits for source and destination ports, total length of message including header and check sum (optional). During reception, this message to upper layer flows after deleting the header bits from the received transport layer header. Header bits add at the transmitting time in the application or session layer bytes.

3.12.4 Internet Protocol (IP)

All Internet enabled devices communicate using Internet protocol (IP). The transport layer data transmits on the network, divides into the packets at the network layer. Each packet transmits through a chain of routers on the Internet. A acket is minimum unit of data that transmits on the Internet through routers. Several pacets forming a source can reach a destination using different routes and can have different delays. The packet consists of IP header plus data or IP header plus routing protocol along with the routing messages. The packet has a maximum of 2¹⁶ bytes (2¹⁴ words, 1 word = 32 bits = 4 bytes).

Network routing is as per standard IPv4 (version 4) or IPv6 (version 6). IPv6 is a broadband protocol. Table 3.11 lists the fields in IPv4 protocol header.

Table 3.11 Various fields at IPv4 header for routing the packets through routers to destination node

Field at the IP header	Explanation	
Version	IP version bits are 0100 for IPv4 (presently in wide use) and 0110 for IPv6 (IPng II next genration for broadband Internet).	
Precedance	Precedence type is between 8th to 10th bit. Bits 111 specifies highest precedence. For example, for streaming audio or video, 000 specifies common data.	
Service	Service type is between 11th to 15th bit.	
QoS (Quality of Service)	Bits are for QoS (Quality of Service) specification in terms of security, speed, delays and cost desired or must be achieved.	
Fragment ID	Each message may have many packets fragmented through the routers. Each fragment must thus provide a unique ID for identification for re-assembly at the receiver end.	
Flags	Flags indicate whether present fragment is last one, whether fragments are permitted and whether more fragments will follow. Let $q = Number$ of header words	
	(1 word = 32-bit). Flag bit 1 indicates whether more fragments of the packet will succeed this fragment. Flag bit 2 identifies it as a test fragment or not. Flag bit 3 checks whether the fragmentation is permitted or not.	
Checksum	Header checksum checks errors in header transmission.	
Time-to-live	Time to live indicates number of retransmission hops permitted in case of failed delivery.	
Protocol type	Type indicates whether the packet is transmitting a UDP byte stream or a TCP stream from transport layer. The important routing protocols that encapsulate after the IP header in an IP packet are:	

20 bytes minimum are the IP header. Next follows the fields of 1-byte each for Type and Code, successively. Next two bytes are for Checksum. Then follows the ICMP messages the format and length of which is variable. Interior routing protocols, for example, the RIP (Routing Information Protocol) and OSPF (Open Shortest Path First) protocol. Inter-Domain (exterior routing) protocols, for example, EGP (Exterior Gateway Protocol), BGP (Border Gateway Protocol) and GGP (Gateway to Gateway Protocol). The IP header length (data offset) $p \le 2^{14} - q$. Here $q \ge 5$. q equals the number of words Header length in the header and is called the data offset [Number of words after which data bits start (data-offset) in the stream.] IP Source and destination IP addresses If q >5, there exist words for options. Source and Destination and padding. Padding refers to bits that are used for filling the remaining part of the addresses options available field. For example, option 4 will mean put time stamp at all the stoppages of the packet during transit to destination through routers. Time stamping enables packet delay measurements to calculate Network Performance Quality.

use routers that uses the IGMP.

between networked hosts.

Explanation

IGMP (Internet Group Management Protocol). IGMP is a protocol to manage data

transmission between select host groups. Several hosts join a group. Group multicasts

ICMP (Internet Control Management Protocol). ICMP is a protocol to control routing

ICMP data byte stream is inside an IP packet (datagram). Its format is as follows. First

3.12.5 Ethernet

The inventor of Ethernet LAN is Robert Metcalfe. At present, about one third of the LANs in the world are the Ethernet LANs, and in each frame, there is a header like in a packet. In Ethernet LAN standard is IEEE 802.2 (ISO 8802.2). It is a protocol for local network of computers, workstation and devices. LAN is used for sharing local computers, systems and local resources such as printers, hard disk space, software and data. Table 3.12 gives the features of the Ehernet LAN devices.

Data for transmission fragments into the frames. Each frame has a header. Firstly, the header has eight bytes, which defines a preamble. The preamble indicates the start of a frame and is used for synchronization. Then the header has six bytes of destination address. Six bytes of source address then follows the destination address. Then there are six bytes. These are for the type field. These are meaningful only for the higher network layers and the length definition. The minimum 72 bytes and maximum 1500 bytes of data follow the length definition. Lastly, there are 4 bytes for CRC check for the frame sequence check.

3.13 WIRELESS AND MOBILE SYSTEM PROTOCOLS

Figures 3.15(a), (b) and (c) show a handheld device or computer system connected to other handheld devices or computer through IrDA, Bluetooth and ZigBee wireless protocols, respectively. Sections 3.13.1 to 3.13.4 describe the IrDA, Bluetooth, WLAN (wireless LAN) 802.11 and ZigBee protocols.

Table 3.12 Ethernet LAN features

Feature	Ethernet LAN
Topology and transmission mode	Bus
Speed	10 Mbps, 100 Mbps (unshielded and shielded wires) and 4 Gbps (in twisted pair wiring mode)
Broadcast Medium	Passive. Wired connections-based. Frame format like the IEEE 802.3.
SNMP (Simple Network Management Protocol)	Yes
System	Open (therefore allows equipment of different specifications)
Operation	Each one connected to a common communication channel in the network. It listens and if the channel is idle then transmits. If not idle, waits and tries again. Multi access is like in a packet switched network
Control	Passive, connection-based
Address Resolution Protocol (ARP) for resolving 32-bits Internet protocol addresses with the 48-bit destination host media address.	Yes, There is a media access control (MAC) address for transmitting and forwarding frames on the same LAN. We can also use multicast addressing to send frames to all or few select types of Ethernet devices.
Connectivity to Internet and Intranet	Yes, Outside a LAN the Internet Protocol addresses are sent.

3.13.1 Infrared Data Association (IrDA)

Infrared (IR) is electromagnetic radiation of wavelength greater than visible red light. An infrared source consists of a gallium-arsenic-phosphorus junction-based diode. An infrared receiver consists of a galliumarsenic-phosphorus junction-based phototransistor, which conducts electric current when the IR beam falls on it and does not conduct when IR does not fall on it. The collector or drain has voltage close to 0 V when it conducts and is close to supply voltage when it does not conduct.


IrDA (Infrared Data Association) recommends a protocol suite as standard. It supports data transfer rates of up to 4 Mbps. It supports bi-directional serial communication over viewing angle between ±15° and distance of nearly 1 m. At 5 m, the IR transfer data can be up to data transfer rates of 75 kbps. There should be no obstructions or wall in between the source and receiver.

Figure 3.15(a) shows a handheld device connected to other computer through using IrDA protocol. Protocolprocessing hardware device and the protocol software embeds in the system, which support line of sight communication using infrared.

IrDA supports 5 levels of communication. Level 1 is minimum required communication. Level 2 is accessbased communication. Level 3 is index-based communication. Level 4 is synchronized communication. Synchronization software, for example, ActiveSync or HotSync is used. Level 5 is SyncML (synchronization markup language)-based communication. A SyncML protocol is used for device management and synchronization with server and client devices, which are connected by IrDA.

IrDA is used in mobile phones, digital cameras, keyboard, mouse, printers to communicate to laptop computer and for data and pictures download and synchronization. IrDA is also used for control TV, airconditioning, LCD projector, VCD devices from a distance.

IrDA supports several protocols at three layers. Lower layer is physical layer 1.0 or 1.1. It supports data transfer rates of 9.6 kbps to 115.2 kbps and 115.2 kbps to 4 Mbps in IrDA physical layer 1.0 and 1.1, respectively.

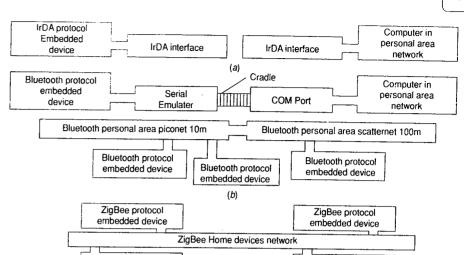

Devices and Communication Buses for Devices Network

ZigBee protocol

embedded device

(a), (b) and (c) A handheld device connected to other handheld devices or computer Fig. 3.15 through IrDA, Bluetooth and ZigBee wireless protocols, respectively

ZigBee protocol

embedded device

Intermediate layer is data-link layer. At data link layer, it specifies IrLMP (IR link management protocol) upper sublayer and IrLAP (IR link access protocol) lower sublayer. An IrLAP is HDLC synchronous communication (Section 3.2.4).

An IrDA upper layer protocol is Tiny TP (transport protocol). Another upper layer protocol is IrLMIAS (IR Link Management Information Access Service Protocol). A transport layer protocol during transmission specifies ways of flow control, segmentation of data and packetization. During reception, it assembles the segments and packets. The upper layer protocol for the session layer is IrLAN, IrBus, IrMC, IrTran, IrOBEX (Object Exchange) and standard serial port emulator protocol IrCOMM (IR communication). IrBus provides serial bus access to game ports, joysticks, mice and keyboard. Application layer protocol is for security and application and as specified by the IrDA. For example, IrDA Alliance Sync protocol is used to synchronize mobile devices personal information manager (PIM) data. It supports Object Push (PIM) or Binary File Transfer.

Windows and other operating systems support IrDA protocol-based communication devices. An infrared monitor in Windows monitors the IR port of the IR device. It detects a nearby IR source. It controls, detects and selects the IR communication activity. An IR device on command sets up connection using IrDA, and starts the IR communication. When IR communication is inactive, the monitor enables plug and play (unless disabled).

IrDA protocol overhead is between 2% to 50% of Bluetooth device overhead. The communication setup latency is just few milliseconds. The requirement of line of sight and unobstructed communication is the limitation.

3.13.2 Bluetooth

Bluetooth hardware is connected to embedded system buses and Bluetooth software embeds in the system to support WPAN using Bluetooth wireless protocol. Figure 3.15(b) shows a handheld device connected to

other computers through wireless protocol using Bluetooth. A large number of CD players and mobile devices are Bluetooth-enabled. Bluetooth is also used for handsfree listening of Bluetooth-enabled iPod or CD music player or mobile phone by using Bluetooth-enabled era buds.

Bluetooth is an IEEE standard 802.15.1 protocol. The physical layer radio communicates at carrier frequencies in 2.4 GHz band with FHSS (frequency hopping spread spectrum). Hopping interval is 625 µs and number of hopped frequencies are 79. Data transfer is between two devices or between a device and multiple devices.

It supports range up to 10 m low power and up to 100 m high power. Range depends on radio interface at physical layer. Bluetooth 1.x data transfer rate supported is 1 Mbps. Bluetooth 2.0 has enhanced maximum data rate of 3.0 Mbps over 100 m. Bluetooth protocol supports automatic self-discovery and self-organization of network in number of devices. Bluetooth device self discovers nearby devices (<10 m) and they synchronize and form a WPAN (wireless personal area network). Bluetooth protocol supports power control so that the devices communicate at minimum required power level. This prevents drowning of signals by superimpositions of high power signals with lower level signals.

The physical layer has three sublayers: radio, baseband and link manager or host controller interface. There are two types of links: best effort traffic links and real-time voice traffic links. The real-time traffic uses reserved bandwidth. A packet is of about 350 bytes. The link manager sublayer manages the master and slave link. It specifies data encryption and device authentication handling, and formation of device pairs for Bluetooth communication. It gives specifications for state transmission-mode, supervision, power level monitoring, synchronization, and exchange of capability, packet flow latency, peak data rate, average data rate and maximum burst size parameters from lower and higher layers.

The Host Controller Interface (HCI) interface is a hardware abstraction sublayer. It is used in place of the link manager sublayer. It provides for emulation of serial port, for example, 3-wire UART emulation. A Bluetooth device can thus interface to the COM port of a computer.

Its communication latency is 3s. It has large protocol stack overhead of 250 kB. Provision of encrypted secure communication, self-discovery and self-organization and radio-based communication between tiny antennae are three main features of Bluetooth.

3.13.3 802.11

Wireless LAN uses IEEE standards 802.11a to 802.11g. Data transfer rates are 1 and 2 Mbps. The 802.11b is called wireless fidelity (WiFi). 802.11b support data rates of 5.5 Mbps by mapping 4 bits and 11 Mbps mapping 8 bits simultaneously during modulation.

A given set of the LAN-station access-points network together and the set is called extended service set (ESS). It is a backbone distribution system. A backbone set may network through the Internet. ESS supports fixed infrastructure network.

There are two types of wireless service sets.

- 1. One service set has one wireless station, which communicates to an access point, also called a hotspot. The service set is called basic service set (BSS). WLAN supports ad-hoc network, which, as and when a nodes come nearby in range, it forms the network. BSS supports ad-hoc network which, when nodes come nearby with in range of the access point, forms the network through ESS. A node can move from one BSS to another.
- 2. The other service set has several stations. It is called independent basic service set (IBSS). It has no access point. It does not connect to the distribution system. It may have multible stations, which also cannot communicate among themselves. IBSS supports ad-hoc network.

802.11 provides specifications for physical layer and data link layers.

The data link layer specifies a MAC layer. The MAC layer uses carrier sense multiple access and collision avoidance (CSMA/CA) protocol. A station listening to the presence of the carrier during a time interval is

called distributed inter-frame spacing (DIFS) interval. If the carrier is not sensed (detected) during DIFS, then the station backs off for a random time interval to avoid collision and retries after that interval. A receiver always acknowledges within a short interframe spacing (SIFS). Acknowledgment is made after successful CRC (cyclic redundancy check). If there is no acknowledgement within SIFS, then the transmitter retransmits and upto 7 retransmission attempts are made.

Devices and Communication Buses for Devices Network

There is a packet called request to send (RTS), which is first sent. If the other end responses by the packet call clear to send (CTS), then the data is transmitted. MAC layer specifies power management, handover and registration of roaming mobile node within the backbone network at a new BSS within the ESS.

There are three communication methods at the physical layer. WLAN can use FHSS or DSSS or Infrared 250 ns pulses. The physical layer has two sublayers. 802.11b has three sublayers: one is Physical Medium Dependent (PMD) protocol which specifies the modulation and coding methods; the second is the Physical Layer Convergence Protocol (PLCP), which specifies the header and payload for transmission. It specifies the sensing of the carrier at receiver and how packet formation takes place at the transmitter and packets assemble at the receiver. It specifies ways to converge MAC (Medium Access Control) to PMD at transmitter and separate MAC (Medium Access Control) from PMD at the receiver. An additional sublayer in 802.11b specifies Complementary Code Keying (CCK).

3.13.4 ZigBee

ZigBee is an IEEE standard 802.15.4 protocol. The physical layer radio operates at 2.4 GHz band carrier frequencies with DSSS (direct sequence spread spectrum). It supports a range up to 70 m. Data transfer rate supported is 250 kbps. It supports sixteen channels. Figure 3.15(c) shows a handheld device connected to other devices through wireless protocol using ZigBee.

The ZigBee network is self-organizing and supports peer-to-peer and mesh networks. Self-organizing means that it detects nearby ZigBee devices and establishes communication and network. Peer-to-peer network means the each node at network functions as a requesting device as well as a responding device. Mesh network means that each network functions as a mesh. A node can connect to another directly or through mutually interconnected intermediate nodes. Data transfer is between two devices in peer-to-peer or between a device and multiple devices in the mesh network.

ZigBee protocol supports a large number of sensors, lighting devices, air conditioning, industrial controller and other devices for home and office automation and their remote control and formation of WPAN (wireless personal area network). ZigBee network has a ZigBee router, end devices and coordinator. ZigBee router transfers packets from a neighboring source to a nearby node in the path to destination. The coordinator connects one ZigBee network with another, or connects to WLAN or cellular network. ZigBee end devices are transceivers of data.

Its communication latency is 30 ms. Protocol stack overhead is 28 kB.



Summary

Important points dealt with in this chapter are as follows.

- · IO ports, IO devices and timing devices are essential in any system.
- An embedded system connects to the devices like keypad, touchscreen, multiline display unit, printer or modem or motors through ports. During a read or write operation, the processor accesses that address in a memorymapped IO, as if it accesses a memory address. A decoder takes the system memory or IO address bus signals as the input and generates a port or device select signal, CS and selects the port or device.

- There are two types of IO ports and devices, serial and parallel. Serial communication is in synchronous (master-slave) mode or asynchronous mode.
- A device connects and accesses from and to the system-processor through either a parallel or serial IO port. A
 device port may be full duplex or half-duplex.
- A device or port has an assigned port address using which the processor accesses the device port control register
 or status register or data. A device can use the handshaking signals before storing the bits at the port buffer or
 before accepting the bits from the port buffer.
- Serial communication bits are received at the receiver according to the clock phases of the transmitter. Synchronous
 serial communication bits from the master carry the clock information also to slave. Asynchronous serial
 communication bits from a device do not carry the clock information to receiver. Receiver clock phase is independent
 of the transmitter clock. However, the receiver clock adjusts its phase according to the received bits, for example,
 the start bit.
- · HDLC is protocol for a synchronous communication data link network between the devices.
- A popular asynchronous serial communication mode is UART. Bits are received at the receiver independent of
 the clock phases at the UART (asynchronous serial input and output port) transmitter. UART in microcontrollers
 usually sends and receives a byte in a 10-bit format or 11-bit format.
- Another popular asynchronous serial communication mode is RS232C, which is based on UART and is used to
 connect the data communication equipment such as modem with a data terminal equipment such as computer.
- UART and RS232C can also use handshaking signal DCD and a pair of handshaking signals, (DSR, DTR) and (RTS, CTS).
- . Other popular serial ports in the devices are SPI, SCI, SI and SDIO.
- Parallel communication is without or with handshaking signals. The number of embedded systems parallel port
 or device interfaces to switches, keypad, encoders, motors, LCD controllers and touchscreen. Special purpose
 ports exist at microcontroller for their interfacing. On-chip peripheral devices internally interface with the processor
 in microcontroller.
- A timer is essentially a counter getting the count-inputs (ticks) at regular time intervals. Timing and counting
 devices have a large number of uses in a system. There has to be at least one hardware timer in a system. Software
 timer is a virtual timing device. A program can use number of software timers in a system.
- Internal programmable timing devices with a processor (microcontroller) unit can be used for many applications
 and to generate interrupts for the ticks for software timers.
- Watchdog timer is special timer which timeouts and generates interrupts in case certain specified event does not
 occur during the preset interval. The watchdog timer is used to take care of a system stuck in a certain section of
 a task for an unnecessarily long time due to some error or hardware failure.
- · Real-time clock generates ticks and interrupts the system at regular intervals.
- The use of buses simplifies the interfacing to multiple devices. Several devices can be placed on a common serial
 bus. Popular serial buses are I²C, CAN, USB and FireWire. Each device has an assigned device address or set of
 addresses. Using the device addresses of the receiver or slave, a master-processor accesses the remote devices.
- I²C bus is used between multiple ICs for inter Integrated Circuit communication. A device, which initiates the communication and sends the clock pulses, is the master at an instance. A master can communicate to maximum 127 slaves.
- · The CAN bus is popularly used in centrally controlled network in automobile electronics.
- USB (Universal Serial Bus) is standard for serial bus communication between the system and devices like scanner, keyboard, printer and mouse. There is a root-hub and all nodes have a tree-like structure.
- Several devices can be placed on a common parallel bus. Popular parallel buses are ISA, PCI and ARM buses.
- Very short distance devices interconnect to a PC or embedded system main bus through the ISA or PCI or ARM bus can be used. These buses connect to main memory bus through a bridge (switch).
- Internet-enabled embedded systems network through protocols in a TCP/IP protocol suite. Popularly used protocols are HTTP, TCP, UDP, IP and Ethernet.
- · Wireless communication is used for networking handheld devices over wireless personal area network.
- Embedded systems can interconnect and network without wires using IrDA, Bluetooth, 802.11 or ZigBee protocol
 compatible hardware and software support.



Keywords and their Definitions

Asynchronous Communication

: A communication in which a constant phase difference between the transmitter clock and bit recovery clock at the receiver need not be maintained and the clocks that guide the transmitter and receiver are not synchronized. Time interval between which a set or frame of bytes transmits is not pre-fixed and is indeterminate. Asynchronous communication also provides for exchange of handshaking signals before and during the communication.

Bluetooth

: A self-discovery and self-organizing network protocol for the wireless personal area network and popularly used in mobile handheld devices.

CAN bus

: A standard bus used at the control area network generally in automotive and industrial electronics.

COM port

: A port at the computer where a mice, modem or serial printer or mobile smart phone cradle connects for serial IOs in UART mode and there are handshaking signals for exchange of signals before UART mode communication.

Control register

: A register for bits, which controls or programs the actions of a device. It is used for a write operation only.

Control cum Status register

: A register at a port address that saves control and status bits and functions as a control register during write of commands and status register address during read of the status.

Counter

: Unit for getting the count-inputs on the occurrence of events that may be at irregular intervals. It functions as timer when given count-input at regular intervals.

Debouncing

: When a key is pressed, due to spring action, the key vibrates and thus makes and breaks the contacts. This causes multiple 0s and 1s before the switch pressed state is accounted for. Debouncing by hardware or software removes the signals due to bounces.

Delay

: An action or communication or execution of codes or occurrence of an event after blocking for a certain pre-defined period.

Demultiplexing

: A way to separate a multiplexed input and direct the messages to one of the multiple channels at an instance.

Device

: A unit that has a processing element and that connects to the processor of embedded system internally or through the port or bus. It has fixed pre-assigned port addresses (device addresses) according to its interfacing or bus controller circuit. A device may not provide for bus controller in it for enabling it to function in bus master mode and thus can function in slave mode only.

Device Decoder

: A circuit to take the system address bus signals as the input and generate a device select signal, CS, for the port address selection during the device read or write instructions of the system processor.

Event

: A change of present condition, which gives an electric signal at input or output pin or which changes a status bit or which interrupts the processor to enable some action by switching the context and running can ISR.

Event flag

: A Boolean variable to indicate the event occurrence when it is true; it can be a status register bit. An event register may store the event flag. A flag auto-resets on response to the event in most systems.

Real Time Clock (RTC)

(SWTs).

Free Running Counter	 A counter that starts on power-up, which is driven by an internal clock (system clock) directly or through a prescaler or rate control bits and which can neither be stopped nor be reset.
FSK modulation	: Frequency Shifted Keying. The 0 and 1 logic states are at different frequency levels. For example, 0 at 1050 Hz and 1 at 1250 Hz on a telephone line. It permits use of a channel or a line such as telephone line for serial bit transmission and reception.
Full duplex	: A serial port having two distinct IO lines or communication channels. For example, a modem connection to the computer COM port. There are two lines TxD and RxD at 9 pins or 25 pins connector. Message flows both ways at an instance.
Half duplex	: A serial port having one common IO line or channel. For example, a telephone line. Message flows one way at an instance.
Handshaking signals	: The signals before storing the bits at the port buffer or before accepting the bits from the port buffer or the signals to setup or end the communication between two source and destination.
Hardware timer	: A timer present in the system as hardware which gets the inputs from the internal clock with the processor or which enables the system clock ticks (interrupts). A device driver program programs it like any other physical device.
HDLC	: High Level Data Link Control Protocol. It is for synchronous communication between primary (master) and secondary (slave) as per standard defined. It is a bit-oriented protocol.
Host	: A controller node using a protocol and a circuit for enabling the system to connect the number of devices or peripherals and for providing bus master mode functioning as well as receiving signals and bits from other hosts or devices.
IO Port	: A port for input or output operation at an instant. Handshake input and handshake output ports are also known as IO ports. For example, a keypad is said to connect to an IO port.
l ² C bus	: A standard bus that follows a communication protocol and is used between multiple ICs. It permits a system to get data and send data to multiple compatible ICs connected on this bus.
Input Buffer	: A buffer where an input device puts a byte(s) and the processor read that later.
IrDA	: Infrared Data Association recommended protocol for IR remote control and communication over short distance to device or system in line of sight.
ISA bus	: A standard bus based on 'IBM Standard Architecture' Bus.
Isosynchronous Communication	: Communication in which a constant phase difference is not maintained between the frames but maintained within a frame. Clocks that guide the transmitter and receiver are not separate. Only the maximum time interval is not prefixed between which a frame of bytes transmits that is, it can be variable. Between the frames, there is handshaking between the two ends or there may be a pause. Uses are for transmission on a LAN or between two processors.
Keypad and Keyboard Controller	s: The controllers for interfacing with keypads and keyboard such that they do debouncing of keys, buffer the input characters and interrupt the processor on each input or at end of the line character and send ASCII code(s) as input(s) to the processor for further processing and interpretation as data or command.

the processor for further processing and interpretation as data or command.

LCD controller	: A controller for LCD displays with internal CGRAM (character graphic RAM) and ROM for fonts of the characters and which gets the commands and data for display from the system port.
Master slave communication	: A communication between two processors or devices when one processor guides the other using a clock the transmission of the bits to a slave after or before receiving acknowledgement or reply from the addressed slave. A slave can also function as master or vice versa by an appropriate program bit or hardware control.
Multiplexing	: A way to direct the messages to output channel from the multiple source channels.
On-chip ports and devices	: The ports and devices along with the processor unit, for example, in microcontrollers, which communicate using system internal buses.
Open drain output	: A gate with an internally missing connection between its drain and supply. The advantage is that it pulls up the required circuit voltage and current levels when interfacing. An external pull up circuit is needed when using the output.
Output huffer	: A register buffer from where an output device receives the byte(s) after a processor-write operation.
Parallel port	: A port for read and write operations on multiple bits simultaneously at an instance.
PCI bus	: A standard bus used as a 'Peripheral Component Interconnect' bus.
PCI/X bus	: A standard bus used as a 'PCI Extended 'bus'.
PISO	: A shift register for a Parallel Input and Serial Output. It is used for serial bit reception in synchronous mode.
Plug and play	: A device on a bus can be automatically detected when it is attached to the bus and the device can be used directly without resetting or restarting the system.
Protocol	: A way of transmitting messages on a network by using software that adds additional bits such as the starting bits, headers, addresses of source and destination, error control and ending bits. A protocol suite may have multiple layers and each layer or sublayer uses its protocol before a message transmits on a network.
PSK modulation	: Phase Shifted Keying modulation. The 0 and 1 logic have different phases in a high frequency signal. PSK modulation permits use of a channel or line such as telephone line for serial bit transmission and reception.
QPSK	: Quadrature Phase Shifted Keying. An example is the pair of bits 00, 01, 10 and 11, which are sent at different quadrant phase differences of a voice frequency signal. It perinits use of the telephone line for serial bit transmission and reception at double the rate. It permits the 56 kbps modem to show a performance equivalent to 112 kbps. QPSK and its enhancements are also used in wireless communication extensively.
Quasi bi-directional port	: A port with the dual advantage of using a pull-up circuit as per the voltage and current levels required when interfacing it and using no pull-up circuit for a short period sufficient to drive an LSTTL circuit.
Real Time	: A time that always increments at constant intervals without stopping or resetting and that is used as a reference by the system at all times.

: A clock that continuously generates interrupts at regular intervals endlessly. An RTC interrupt ticks the other timers of the system, for example, software timers

RS232C port

: A standard for UART transmission and reception in which TxD and RxD are at different voltage levels (+12 V for '0' and -12 V for '1') and handshaking signals, CTS, RTS, DTR, DCD and RI are at the TTL levels. The RS232C standard is used at the COM ports.

RxD

: A line used for reception of UART serial bits. The 0 and 1 signals are at TTL or RS232C levels and are similar to that for a TxD line.

Serial Port

: A port for read and write operations with one bit at an instance and where each bit of the message is separated by constant time intervals.

SIPO

: A shift register for Serial Parallel Input and Parallel Output. It is used for serial bits transmission in synchronous mode.

Software timer

: Software (a service routine) that executes and increases or decreases a count-variable on an interrupt from a timer output or from a real-time clock interrupt. A software timer also generates interrupt on overflow of count-value or on finishing value of the count-variable (reaching the predefined value) or generating a message for a task. The interrupts can generate by using software interrupt instruction such as SWI.

Status register

: A register for bits, which reflects the status at the port buffer. It is for a *read* operation only. The status register bit or bits may or may not auto-reset on device servicing after the read.

Synchronous Communication

: Communication in which a constant phase difference is maintained between the clocks that guide the transmitter and receiver. A maximum time interval is prefixed between which a frame of bytes transmits.

System Clock

: A clock scaled to the processor clock and which always increments without stopping or resetting and generates interrupts at preset time intervals.

Time division multiplexing

: A way by which messages from different channels can be sent in different time slots.

Timer Finish

: A state after the timer acquired the preset count-value and stopped. An interrupt generates on finishing.

Timer Overflow or Time-Out

: A state in which the number of count-inputs exceeded the last acquirable value and on reaching overflow state, an interrupt can be generated.

Timer Reset

: A state in which the timer shows all bits as 0s or 1s. A reset can also be after overflow in case a timer is programmed for continuous running.

Timer Reload

: State in which timer shows all bits as 0s or 1s. A reload can also take place after finishing in case a timer is programmed for auto reload and start again.

Touch Screen

: A GUI device for displaying icons, pictograms, menus and virtual keyboard on an LCD screen and giving input commands or selecting menus or keying in the data using finger or stylus for touching at appropriate screen-position.

TxD

: A line used for transmission of UART serial bits. The 0 and 1 signals are at RS232C voltage levels when RS232C COM port is used, or at the TTL levels in microcontrollers.

UART

: A standard Asynchronous Serial Input and output port for serial bits. UART (in microcontrollers) usually sends a byte in 10-bit format or 11-bit format. The

10-bit format is used when a start bit precedes the 8-bit message (character) and a stop bit succeeds the message. An 11-bit format is used when a special bit also precedes the stop bit

USB bus

: A standard plug and play bus for fast serial transmission and reception.

Watchdog timer

: A timing device in a system that resets or executes a watchdog timer service routine (WDT routine) after fetching the interrupt vector address at the system after a predefined timeout in case a watched event does not happen. When the watched event occurs, it is restarted so that it does not timeout and does not execute WDT routine

WLAN

: A wireless LAN for networking mobile and wireless devices with a fixed infrastructure and which enables access of devices through access points. The device functions according to IEEE 802.11 standards specified protocols.

ZigBee

: A new wireless network protocol for short-range communication among number of sensors and devices and has self-discovery and self-organizing features.



Review Questions

- (a) What is the advantage of a processor that maps the addresses of IO ports and devices like a memory-device?
 (b) Give a diagram to interface the port devices with the system buses.
- 2. Compare the advantages and disadvantages of data transfers using serial and parallel ports/devices.
- (a) Explain three modes of serial communication, 'asynchronous' 'isosynchronous' and 'asynchronous' using serial devices with one example each, (b) Describe and compare UART, RS232C and SDIO devices.
- 4. How do the following indicate the start and end of a byte or data frames? (a) UART (b) HDLC (c) CAN
- 5. What are the internal serial-communication devices in (a) 8051 and (b) 68HC11? Compare the modes of working of each of these.
- 6. A device port may have multibyte data input buffer(s) and data output buffer(s). What are the advantages of these?
- 7. Explain the advantages of Internet-enabled systems. How is the Internet-enabled device incorporated in the embedded system?
- 8. Explain the advantages of wireless devices. How do wireless devices network using different protocols?
- 9. What do you mean by buses for networking of serial devices? What do you mean by buses for networking of parallel devices?
- 10. Explain use of each control bit of I2C bus protocol.
- 11. What do you mean by plug and play devices? What are bus protocols of buses UART, RS232C, USB, Bluetooth, CAN and PCI that support plug and play devices?
- 12. What do you mean by hot attachment and detachment? What are bus protocols of buses Bluetooth, UART, CAN, PCI, and USB that support hot attachment and detachment?
- 13. What is a timer? How does a counter perform (a) timer functions (b) prefixed time inititated events generation and (c) time capture functions?
- 14. Why do you need at least one timer device in an embedded system?



Practice Exercises

- 15. How do the following device features help in embedded systems? (a) Schmitt trigger input (b) low voltage 3.3 V IOs (c) Dynamically controlled impedance matching (c) PCS subunit (d) PMA subunit and (e) SerDes. Give one exemplary application of each.
- 16. PPP protocol for point to point networking has 8 starting flag bits, 8 address bits, 8 protocol specification bits, variable number of data bits, 16-bit CRC and 8 ending flag bits. The maximum number of bits per PPP frame can be 12064. How many maximum number of bytes can be transferred per PPP frame? What is the minimum percentage of overhead in the payload (frame)?
- 17. List the applications of the free running counter, periodically interrupting timer and pulse accumulator counter (PACT). How do you get PWM output from a PACT? How do you get DAC output from a PWM device?
- 18. A 16-bit counter is getting inputs from an internal clock of 12 MHz. There is a prescaling circuit, which prescales by a factor of 16. What are the time intervals at which overflow interrupts occur from this timer? What will be period before which these interrupts must be serviced?
- 19. What do you mean by a software timer (SWT)? How do the SWTs help in scheduling multiple tasks in real time? Suppose three SWTs are programmed to timeout after 1024, 2048 and 4096 times from the overflow interrupts from the timer. What will be rate of timeout interrupts from each SWT?
- 20. What are the advantages and disadvantages of negative acknowledgement bit?
- 21. A new generation automobile has about 100 embedded systems. How do the bus arbitration bits, control bits for address and data length, data bits, CRC check bits, acknowledgement bits and ending bits in CAN bus help the networking of devices distributed in an automobile system.
- 22. How does the USB protocol provide for the device attachment, configuration, reset, reconfiguration, bandwidth sharing with other devices, device detachment (while others are in operation) and reattachment?
- 23. Design a table that compares the maximum operational speeds and bus lengths and give two example of the uses of each of the following serial devices: (a) UART (b) 1-wire CAN (c) Industrial I²C (d) SM I²C Bus (e) SPI of 68 Series Motorola Microcontrollers (f) Fault tolerant CAN (g) Standard Serial Port (h) FireWire (i) I²C (j) High Speed CAN (k) IEEE 1284 (l) High Speed I²C (m) USB 1.1 Low Speed Channel and High Speed Channel (n) SCS1 parallel (o) Fast SCSI (p) Ultra SCSI-3 (q) FireWire/IEEE 1394 (r) High Speed USB 2.0.
- 24. Use web search. Design a table that compares the maximum operational speeds and bus lengths and give two example of the uses of each of the following parallel devices: (a) ISA (b) EISA (c) PCI (d) PCI-X (e) COMPACT PCI (f)_GMII (Gigabit Ethernet MAC Interchange Interface) (g) XGMI (10 Gigabit Ethernet MAC Interchange Interface) (h) CSIX-1. 6.6 Gbps 32-bit HSTL with 200 MHz performance (i) RapidIO^{1M} Interconnect Specification v1.1 at 8 Gbps with 500 MBps performance or 250 MHz dual direction registering performance using 8-bit LVDS (Low Voltage Data Bus).
- 25. Use web search and design a table that gives the features of the following latest generation serial buses. (a) IEEE 802.3-2000 [1 Gbps bandwidth Gigabit Ethernet MAC (Media Access Control)] for 125 MHz performance (b) IEE P802.3oe draft 4.1 [10 Gbps Ethernet MAC] for 156.25 MHz dual direction performance] (c) IEE P802.3oe draft 4.1 [12.5 Gbps Ethernet MAC] for four channel 3.125 Gbps per channel transreceiver performance] (d) XAUI (10 Gigabit Attachment Unit) (e) XSBI (10 Gigabit Serial Bus Interchange) (f) SONET OC-48, OC-192 and OC-768 (g) ATM OC-12/46/192.
- 26. Take a mobile smart phone with a T9 keypad. Write a table for the states of each key. Write another table for the new states generated by a combination of two keys.
- 27. Compare the parallel ports interfaces for the keypad, printer, LCD-controller and touchscreen.
- 28. Show the use of USB devices in the digital camera, printer and computer for downloading a picture from camera to computer, printing the pictures in camera and saving in flash memory. What is the difference between USB host and USB device in a system?
- 29. Compare different serial buses.
- 30. Compare different wireless protocols.

Device Drivers and Interrupts Service Mechanism

a

 \mathcal{R} We have learnt the following in previous chapter:

- Embedded system hardware has devices which communicate through serial and parallel ports and buses. There may also be ports for realtime voice and video I/Os.
- A microcontroller has serial communication and timing devices. It may have keypad, stepper motor, LCD and touch screen controllers.
- Serial or parallel buses interconnect the distributed ports and devices.
- I²C bus is used for inter-IC communication. It interconnects multiple distributed ICs.
- CAN bus is used at control network of the distributed devices. It is used in automobiles and industrial systems.
- USB is used for the fast serial transmission and reception between the embedded-system and serial devices such as the keyboard, printer and scanner.
- FireWire (IEEE 1394) is bus used for the highspeed interfacing of 800 Mbps multimedia devices.



