
Chapter 5 Link Layer and LANs

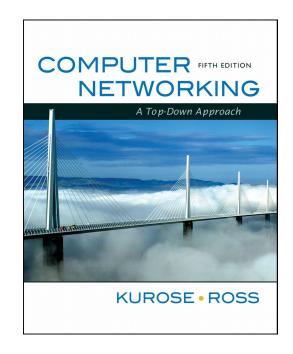

A note on the use of these ppt slides:

We're making these slides freely available to all (faculty, students, readers). They're in PowerPoint form so you can add, modify, and delete slides (including this one) and slide content to suit your needs. They obviously represent a *lot* of work on our part. In return for use, we only ask the following:

☐ If you use these slides (e.g., in a class) in substantially unaltered form, that you mention their source (after all, we'd like people to use our book!) ☐ If you post any slides in substantially unaltered form on a www site, that you note that they are adapted from (or perhaps identical to) our slides, and note our copyright of this material.

Thanks and enjoy! JFK/KWR

All material copyright 1996-2009

J.F Kurose and K.W. Ross, All Rights Reserved

Computer Networking: A Top Down Approach 5th edition. Jim Kurose, Keith Ross Addison-Wesley, April 2009.

Chapter 5: The Data Link Layer

<u>Our goals:</u>

- understand principles behind data link layer services:
 - error detection, correction
 - sharing a broadcast channel: multiple access
 - link layer addressing
 - reliable data transfer, flow control: done!
- instantiation and implementation of various link layer technologies

Link Layer

- 5.1 Introduction and services
- 5.2 Error detection and correction
- 5.3Multiple access protocols
- 5.4 Link-layerAddressing
- □ 5.5 Ethernet


- □ 5.6 Link-layer switches
- □ 5.7 PPP
- 5.8 Link virtualization:
 ATM, MPLS

Link Layer: Introduction

Some terminology:

- hosts and routers are nodes
- communication channels that connect adjacent nodes along communication path are links
 - wired links
 - wireless links
 - LANs
- layer-2 packet is a frame, encapsulates datagram

data-link layer has responsibility of transferring datagram from one node to adjacent node over a link

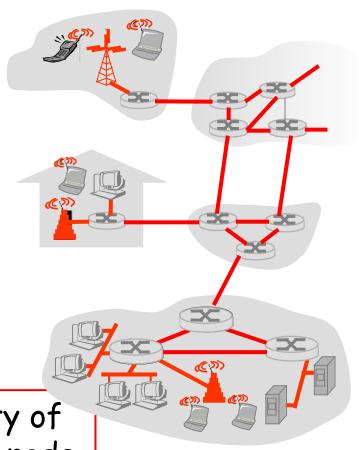

Link layer: context

- datagram transferred by different link protocols over different links:
 - e.g., Ethernet on first link, frame relay on intermediate links, 802.11 on last link
- each link protocol provides different services
 - e.g., may or may not provide rdt over link

transportation analogy

- trip from Princeton to Lausanne
 - limo: Princeton to JFK
 - oplane: JFK to Geneva
 - train: Geneva to Lausanne
- tourist = datagram
- transport segment = communication link
- transportation mode = link layer protocol
- travel agent = routing
 algorithm

Link Layer Services


- framing, link access:
 - o encapsulate datagram into frame, adding header, trailer
 - channel access if shared medium
 - "MAC" addresses used in frame headers to identify source, dest
 - · different from IP address!
- reliable delivery between adjacent nodes
 - we learned how to do this already (chapter 3)!
 - seldom used on low bit-error link (fiber, some twisted pair)
 - wireless links: high error rates
 - Q: why both link-level and end-end reliability?

Link Layer Services (more)


- flow control:
 - pacing between adjacent sending and receiving nodes
- error detection:
 - errors caused by signal attenuation, noise.
 - receiver detects presence of errors:
 - signals sender for retransmission or drops frame
- error correction:
 - oreceiver identifies and corrects bit error(s) without resorting to retransmission
- half-duplex and full-duplex
 - with half duplex, nodes at both ends of link can transmit, but not at same time

Where is the link layer implemented?

- in each and every host
- link layer implemented in "adaptor" (aka network interface card NIC)
 - Ethernet card, PCMCI card, 802.11 card
 - implements link, physical layer
- attaches into host's system buses
- combination of hardware, software, firmware

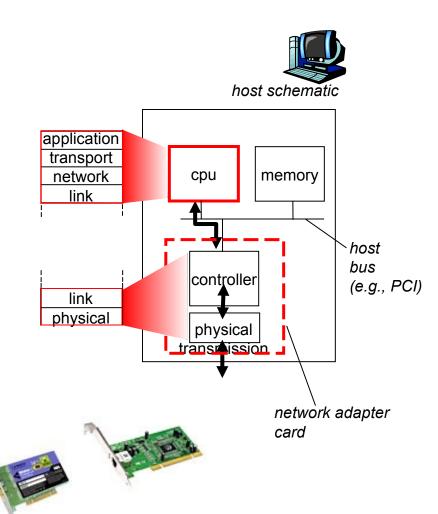

Adaptors Communicating

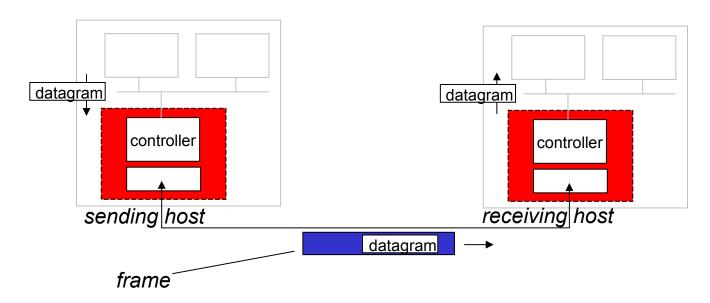

- sending side:
 - encapsulates datagram in frame
 - adds error checking bits, rdt, flow control, etc.

- receiving side
 - looks for errors, rdt, flow control, etc
 - extracts datagram, passes to upper layer at receiving side

Link Layer


- 5.1 Introduction and services
- 5.2 Error detection and correction
- 5.3Multiple access protocols
- 5.4 Link-layerAddressing
- □ 5.5 Ethernet

- □ 5.6 Link-layer switches
- □ 5.7 PPP
- 5.8 Link Virtualization:
 ATM. MPLS

Error Detection

EDC= Error Detection and Correction bits (redundancy)


- = Data protected by error checking, may include header fields
- Error detection not 100% reliable!
 - protocol may miss some errors, but rarely
 - larger EDC field yields better detection and correction

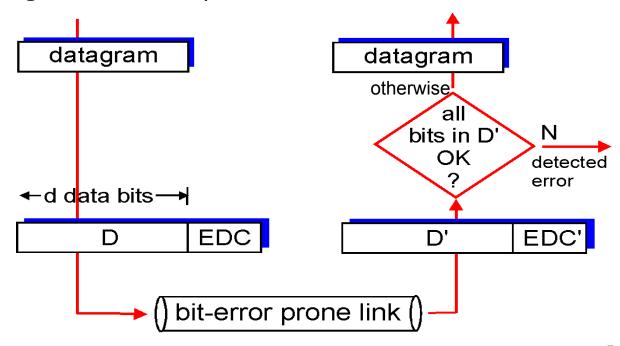

Parity Checking


Single Bit Parity:

Detect single bit errors



Two Dimensional Bit Parity:

Detect and correct single bit errors

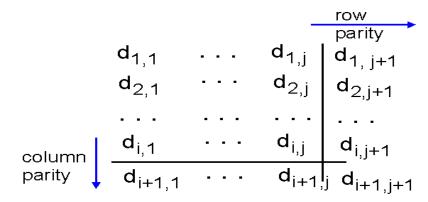

Internet checksum (review)

Goal: detect "errors" (e.g., flipped bits) in transmitted packet (note: used at transport layer only)

Sender:


- treat segment contents as sequence of 16-bit integers
- checksum: addition (1's complement sum) of segment contents
- sender puts checksum value into UDP checksum field

Receiver:

- compute checksum of received segment
- check if computed checksum equals checksum field value:
 - NO error detected
 - YES no error detected. But maybe errors nonetheless?

Checksumming: Cyclic Redundancy Check

- view data bits, D, as a binary number
- choose r+1 bit pattern (generator), G
- goal: choose r CRC bits, R, such that
 - <D,R> exactly divisible by G (modulo 2)
 - receiver knows G, divides <D,R> by G. If non-zero remainder: error detected!
 - can detect all burst errors less than r+1 bits
- widely used in practice (Ethernet, 802.11 WiFi, ATM)

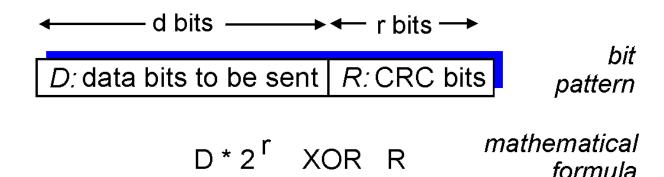

CRC Example

Want:

D.2r XOR R = nG


equivalently:

D.2r = nG XOR R

equivalently:

if we divide D.2° by G, want remainder R

R = remainder
$$\left[\frac{D \cdot 2^r}{G}\right]$$

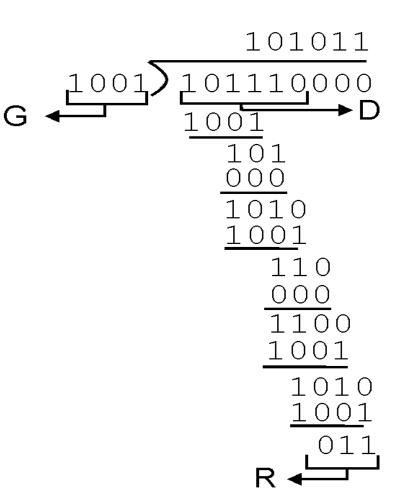

Link Layer


- 5.1 Introduction and services
- 5.2 Error detection and correction
- 5.3Multiple access protocols
- 5.4 Link-layerAddressing
- □ 5.5 Ethernet

- □ 5.6 Link-layer switches
- □ 5.7 PPP
- 5.8 Link Virtualization: ATM, MPLS

Multiple Access Links and Protocols

Two types of "links":

- point-to-point
 - PPP for dial-up access
 - opoint-to-point link between Ethernet switch and host
- broadcast (shared wire or medium)
 - old-fashioned Ethernet
 - o upstream HFC
 - 802.11 wireless LAN

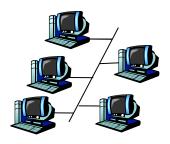

shared wire (e.g., cabled Ethernet)



shared RF (e.g., 802.11 WiFi)



shared RF (satellite)



humans at a cocktail party (shared air, acoustical)

Multiple Access protocols

- single shared broadcast channel
- two or more simultaneous transmissions by nodes: interference
- collision if node receives two or more signals at the same time multiple access protocol
- distributed algorithm that determines how nodes share channel, i.e., determine when node can transmit
- communication about channel sharing must use channel itself!
 - no out-of-band channel for coordination

Ideal Multiple Access Protocol

Broadcast channel of rate R bps

- 1. when one node wants to transmit, it can send at rate R.
- 2. when M nodes want to transmit, each can send at average rate R/M
- 3. fully decentralized:
 - ono special node to coordinate transmissions
 - ono synchronization of clocks, slots
- 4. simple

MAC Protocols: a taxonomy


Three broad classes:

- Channel Partitioning
 - odivide channel into smaller "pieces" (time slots, frequency, code)
 - allocate piece to node for exclusive use
- Random Access
 - channel not divided, allow collisions
 - "recover" from collisions
- "Taking turns"
 - onodes take turns, but nodes with more to send can take longer turns

Channel Partitioning MAC protocols: TDMA

TDMA: time division multiple access


- access to channel in "rounds"
- each station gets fixed length slot (length = pkt trans time) in each round
- unused slots go idle
- example: 6-station LAN, 1,3,4 have pkt, slots 2,5,6 idle




Channel Partitioning MAC protocols: FDMA

FDMA: frequency division multiple access

- channel spectrum divided into frequency bands
- each station assigned fixed frequency band
- unused transmission time in frequency bands go idle
- example: 6-station LAN, 1,3,4 have pkt, frequency bands 2,5,6 idle

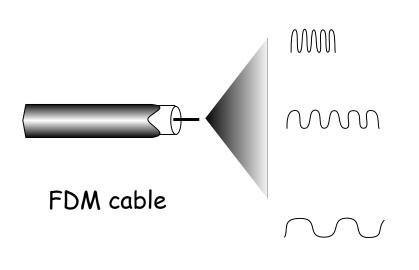

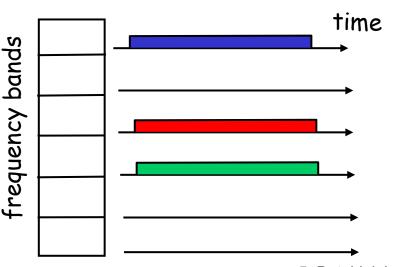

Random Access Protocols

- When node has packet to send
 - transmit at full channel data rate R.
 - on a priori coordination among nodes
- two or more transmitting nodes → "collision",
- random access MAC protocol specifies:
 - how to detect collisions
 - how to recover from collisions (e.g., via delayed retransmissions)
- Examples of random access MAC protocols:
 - slotted ALOHA
 - ALOHA
 - O CSMA, CSMA/CD, CSMA/CA

Slotted ALOHA


Assumptions:

- □ all frames same size
- time divided into equal size slots (time to transmit 1 frame)
- nodes start to transmit only slot beginning
- nodes are synchronized
- if 2 or more nodes transmit in slot, all nodes detect collision

Operation:

- when node obtains fresh frame, transmits in next slot
 - if no collision: node can send new frame in next slot
 - o if collision: node retransmits frame in each subsequent slot with prob. p until success

Slotted ALOHA

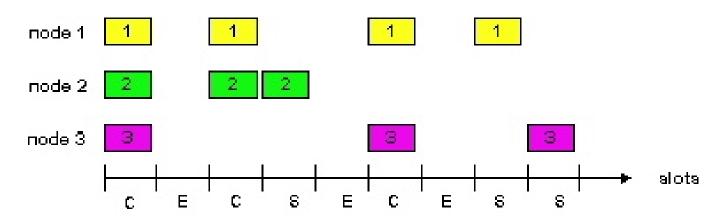

<u>Pros</u>

- single active node can continuously transmit at full rate of channel
- highly decentralized: only slots in nodes need to be in sync
- □ simple

Cons

- collisions, wasting slots
- □ idle slots
- nodes may be able to detect collision in less than time to transmit packet
- clock synchronization

Slotted Aloha efficiency

Efficiency: long-run fraction of successful slots

(many nodes, all with many frames to send)

- suppose: N nodes with many frames to send, each transmits in slot with probability p
- prob that given node has success in a slot = $p(1-p)^{N-1}$
- prob that any node has a $SUCCESS = Np(1-p)^{N-1}$


- max efficiency: find p* that maximizes $Np(1-p)^{N-1}$
- for many nodes, take limit of Np*(1-p*)N-1 as N goes to infinity, gives:

Max efficiency = 1/e = .37

At best: channel used for useful transmissions 37% of time!

Pure (unslotted) ALOHA

- unslotted Aloha: simpler, no synchronization
- when frame first arrives
 - transmit immediately
- collision probability increases:
 - frame sent at t_0 collides with other frames sent in $[t_0-1,t_0+1]$

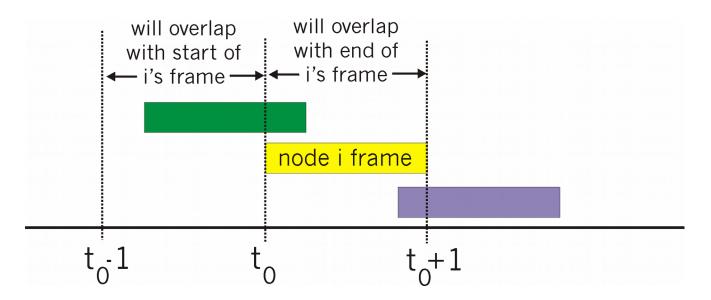

Pure Aloha efficiency

```
P(success by given node) = P(node transmits).
                                P(no other node transmits in [p_0-1,p_0].
                                P(no other node transmits in [p_0-1,p_0]
                              = p \cdot (1-p)^{N-1} \cdot (1-p)^{N-1}
                          = p \cdot (1-p)^{2(N-1)}
```

... choosing optimum p and then letting n -> infty ...

$$= 1/(2e) = .18$$

even worse than slotted Aloha!

<u>CSMA (Carrier Sense Multiple Access)</u>

CSMA: listen before transmit:

If channel sensed idle: transmit entire frame

If channel sensed busy, defer transmission

human analogy: don't interrupt others!

CSMA collisions

collisions can still occur:

propagation delay means two nodes may not hear each other's transmission


collision:

entire packet transmission time wasted

note:

role of distance & propagation delay in determining collision probability

spatial layout of nodes

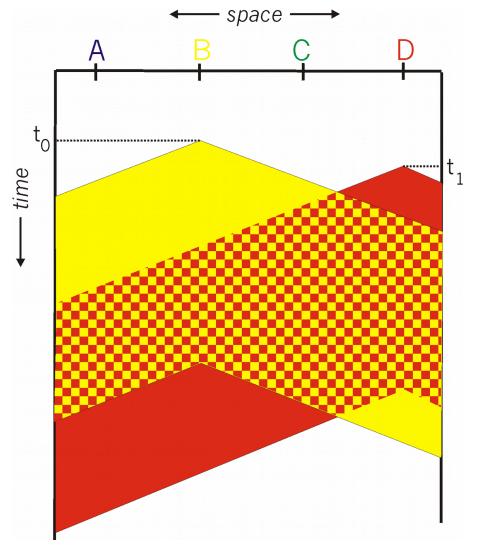


CSMA/CD (Collision Detection)

CSMA/CD: carrier sensing, deferral as in CSMA

- ocollisions detected within short time
- colliding transmissions aborted, reducing channel wastage
- collision detection:
 - easy in wired LANs: measure signal strengths, compare transmitted, received signals
 - difficult in wireless LANs: received signal strength overwhelmed by local transmission strength
- human analogy: the polite conversationalist

CSMA/CD collision detection

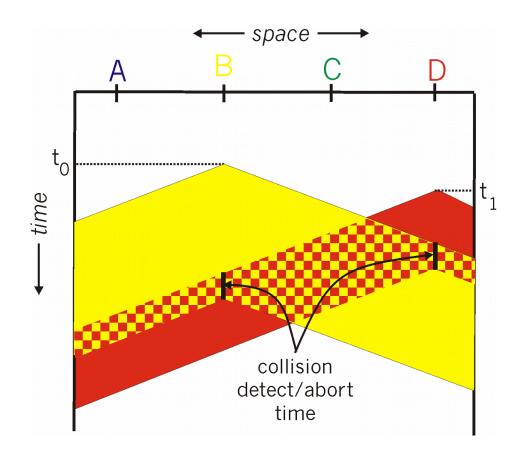

"Taking Turns" MAC protocols

channel partitioning MAC protocols:

- oshare channel efficiently and fairly at high load
- inefficient at low load: delay in channel access, 1/N bandwidth allocated even if only 1 active node!

Random access MAC protocols

- efficient at low load: single node can fully utilize channel
- high load: collision overhead


"taking turns" protocols

look for best of both worlds!

"Taking Turns" MAC protocols

Polling:

- master node "invites" slave nodes to transmit in turn
- typically used with "dumb" slave devices
- concerns:
 - opolling overhead
 - latency
 - single point of failure (master)

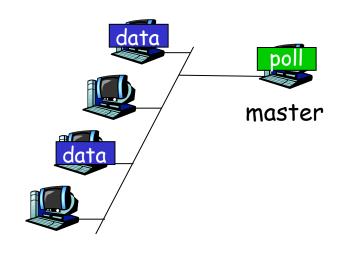


slaves

"Taking Turns" MAC protocols

Token passing:

- control token passed from one node to next sequentially.
- token message
- concerns:
 - token overhead
 - latency
 - single point of failure (token)

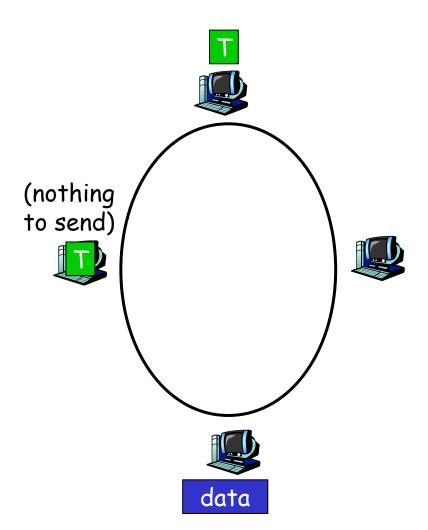

Summary of MAC protocols

- channel partitioning, by time, frequency or code
 - Time Division, Frequency Division
- random access (dynamic),
 - ALOHA, S-ALOHA, CSMA, CSMA/CD
 - carrier sensing: easy in some technologies (wire), hard in others (wireless)
 - CSMA/CD used in Ethernet
 - CSMA/CA used in 802.11
- taking turns
 - polling from central site, token passing
 - Bluetooth, FDDI, IBM Token Ring

Link Layer

- 5.1 Introduction and services
- 5.2 Error detection and correction
- 5.3Multiple access protocols
- 5.4 Link-LayerAddressing
- □ 5.5 Ethernet


- □ 5.6 Link-layer switches
- □ 5.7 PPP
- 5.8 Link Virtualization: ATM, MPLS

MAC Addresses and ARP

- □32-bit IP address:
 - onetwork-layer address
 - used to get datagram to destination IP subnet
- MAC (or LAN or physical or Ethernet) address:
 - function: get frame from one interface to another physically-connected interface (same network)
 - 48 bit MAC address (for most LANs)
 - burned in NIC ROM, also sometimes software settable

LAN Addresses and ARP

Each adapter on LAN has unique LAN address

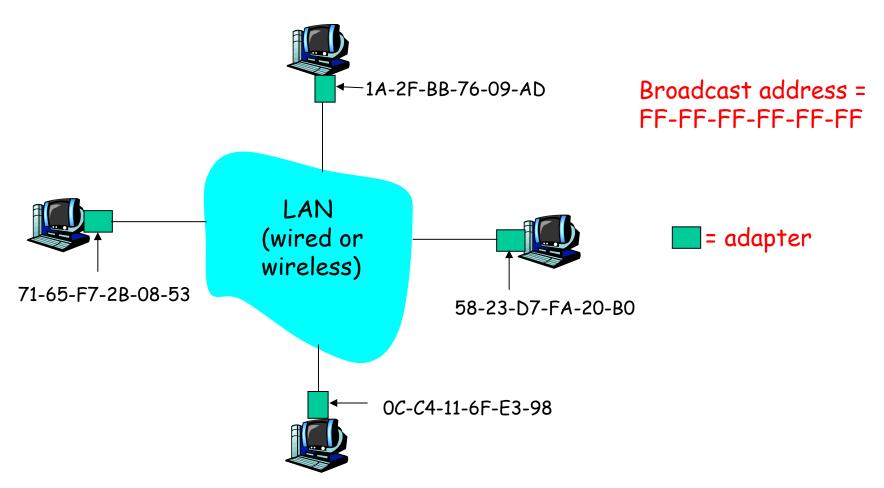


LAN Address (more)

- MAC address allocation administered by IEEE
- manufacturer buys portion of MAC address space (to assure uniqueness)
- analogy:
 - (a) MAC address: like Social Security Number
 - (b) IP address: like postal address
- MAC flat address → portability
 - o can move LAN card from one LAN to another
- □ IP hierarchical address NOT portable
 - o address depends on IP subnet to which node is attached

ARP: Address Resolution Protocol

Question: how to determine MAC address of B knowing B's IP address?

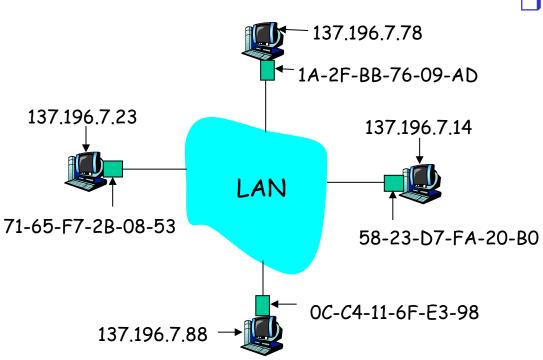

- Each IP node (host, router) on LAN has ARP table
- ☐ ARP table: IP/MAC address mappings for some LAN nodes
 - < IP address; MAC address; TTL>
 - TTL (Time To Live): time after which address mapping will be forgotten (typically 20 min)


ARP protocol: Same LAN (network)

- A wants to send datagram to B, and B's MAC address not in A's ARP table.
- A broadcasts ARP query packet, containing B's IP address
 - dest MAC address = FF-FF-FF-FF-FF
 - all machines on LAN receive ARP query
- B receives ARP packet, replies to A with its (B's) MAC address
 - frame sent to A's MAC address (unicast)

- A caches (saves) IP-to-MAC address pair in its ARP table until information becomes old (times out)
 - soft state: information that times out (goes away) unless refreshed
- ARP is "plug-and-play":
 - nodes create their ARP tables without intervention from net administrator


Addressing: routing to another LAN

walkthrough: send datagram from A to B via R assume A knows B's IP address

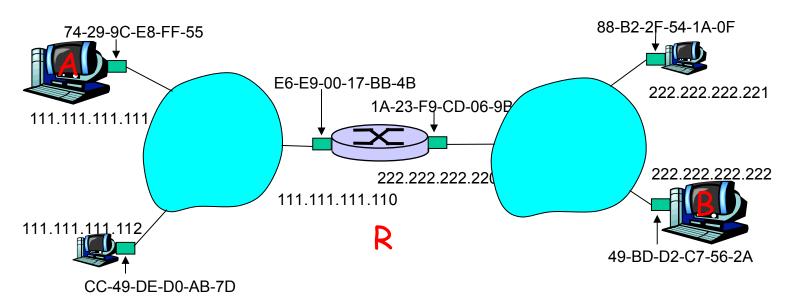

two ARP tables in router R, one for each IP network (LAN)

- A creates IP datagram with source A, destination B
- A uses ARP to get R's MAC address for 111.111.110
- A creates link-layer frame with R's MAC address as dest, frame contains A-to-B IP datagram This is a really important
- A's NIC sends frame
- R's NIC receives frame
- R removes IP datagram from Ethernet frame, sees its destined to B
- R uses ARP to get B's MAC address
- R creates frame containing A-to-B IP datagram sends to B

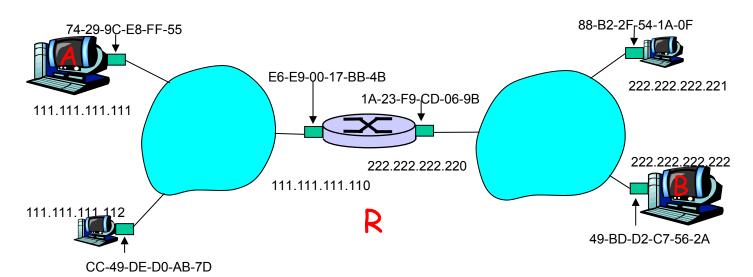

example - make sure you

understand!


Link Layer

- 5.1 Introduction and services
- 5.2 Error detection and correction
- 5.3Multiple access protocols
- 5.4 Link-LayerAddressing
- 5.5 Ethernet

- □ 5.6 Link-layer switches
- □ 5.7 PPP
- 5.8 Link Virtualization:ATM and MPLS

Ethernet


- "dominant" wired LAN technology:
- cheap \$20 for NIC
- first widely used LAN technology
- simpler, cheaper than token LANs and ATM
- kept up with speed race: 10 Mbps 10 Gbps

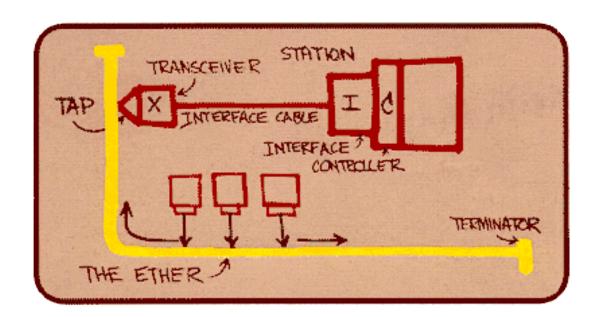

Metcalfe's Ethernet sketch


Star topology

- bus topology popular through mid 90s
 - o all nodes in same collision domain (can collide with each other)
- today: star topology prevails
 - o active *switch* in center
 - each "spoke" runs a (separate) Ethernet protocol (nodes do not collide with each other)

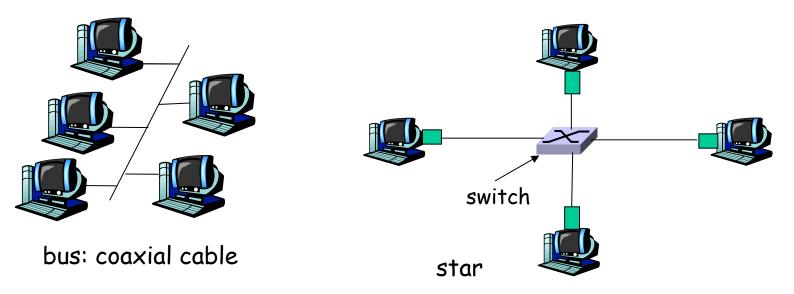

Ethernet Frame Structure

Sending adapter encapsulates IP datagram (or other network layer protocol packet) in Ethernet frame




Preamble:

- 7 bytes with pattern 10101010 followed by one byte with pattern 10101011
- used to synchronize receiver, sender clock rates

Ethernet Frame Structure (more)

- Addresses: 6 bytes
 - if adapter receives frame with matching destination address, or with broadcast address (eg ARP packet), it passes data in frame to network layer protocol
 - otherwise, adapter discards frame
- Type: indicates higher layer protocol (mostly IP but others possible, e.g., Novell IPX, AppleTalk)
- CRC: checked at receiver, if error is detected, frame is dropped

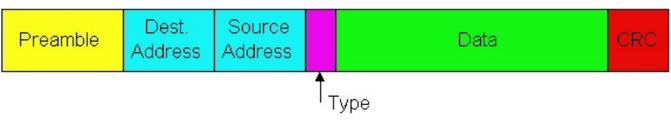

Ethernet: Unreliable, connectionless

- connectionless: No handshaking between sending and receiving NICs
- unreliable: receiving NIC doesn't send acks or nacks to sending NIC
 - stream of datagrams passed to network layer can have gaps (missing datagrams)
 - gaps will be filled if app is using TCP
 - otherwise, app will see gaps
- Ethernet's MAC protocol: unslotted CSMA/CD

Ethernet CSMA/CD algorithm

- 1. NIC receives datagram from network layer, creates frame
- 2. If NIC senses channel idle, starts frame transmission If NIC senses channel busy, waits until channel idle, then transmits
- 3. If NIC transmits entire frame without detecting another transmission, NIC is done with frame!

- 4. If NIC detects another transmission while transmitting, aborts and sends jam signal
- 5. After aborting, NIC enters exponential backoff: after mth collision, NIC chooses K at random from {0,1,2,...,2m-1}. NIC waits K·512 bit times, returns to Step 2

Ethernet's CSMA/CD (more)

Jam Signal: make sure all other transmitters are aware of collision; 48 bits

Bit time: .1 microsec for 10 Mbps Ethernet; for K=1023, wait time is about 50 msec

See/interact with Java applet on AWL Web site: highly recommended!

Exponential Backoff:


- Goal: adapt retransmission attempts to estimated current load
 - heavy load: random wait will be longer
- first collision: choose K from {0,1}; delay is K. 512 bit transmission times
- after second collision: choose K from $\{0,1,2,3\}$...
- after ten collisions, choose K from {0,1,2,3,4,...,1023}

CSMA/CD efficiency


- □ T_{prop} = max prop delay between 2 nodes in LAN
- □ t_{trans} = time to transmit max-size frame
- efficiency goes to 1
 - o as t_{prop} goes to 0
 - \circ as t_{trans} goes to infinity
- better performance than ALOHA: and simple, cheap, decentralized! efficiency = $\frac{1}{1 + 5t_{prop}/t_{trans}}$

802.3 Ethernet Standards: Link & Physical Layers

- many different Ethernet standards
 - common MAC protocol and frame format
 - different speeds: 2 Mbps, 10 Mbps, 100 Mbps, 1Gbps, 10G bps
 - O different physical layer media: fiber, cable

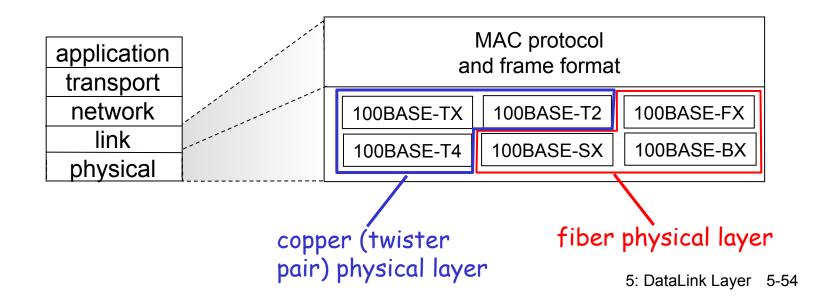

Manchester encoding

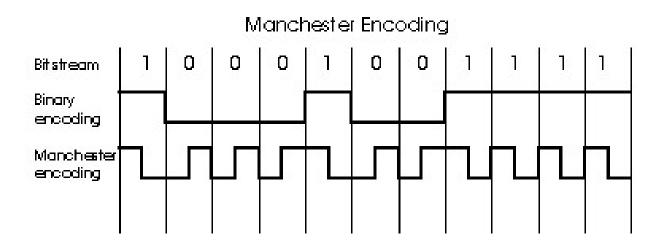

- used in 10BaseT
- each bit has a transition
- allows clocks in sending and receiving nodes to synchronize to each other
 - ono need for a centralized, global clock among nodes!
- Hey, this is physical-layer stuff!


Link Layer

- 5.1 Introduction and services
- 5.2 Error detection and correction
- □ 5.3 Multiple access protocols
- □ 5.4 Link-layer Addressing
- 5.5 Ethernet

- 5.6 Link-layer switches
- □ 5.7 PPP
- 5.8 Link Virtualization: ATM, MPLS

Hubs

- ... physical-layer ("dumb") repeaters:
 - obits coming in one link go out all other links at same rate
 - o all nodes connected to hub can collide with one another
 - ono frame buffering
 - ono CSMA/CD at hub: host NICs detect collisions

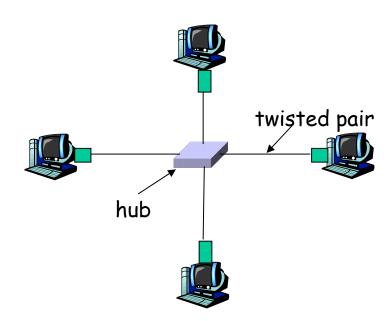


Switch

- link-layer device: smarter than hubs, take active role
 - store, forward Ethernet frames
 - examine incoming frame's MAC address, selectively forward frame to one-or-more outgoing links when frame is to be forwarded on segment, uses CSMA/CD to access segment
- □ transparent
 - hosts are unaware of presence of switches
- plug-and-play, self-learning
 - switches do not need to be configured

Switch: allows multiple simultaneous transmissions


- hosts have dedicated, direct connection to switch
- switches buffer packets
- Ethernet protocol used on each incoming link, but no collisions; full duplex
 - each link is its own collision domain
- switching: A-to-A' and Bto-B' simultaneously, without collisions
 - not possible with dumb hub

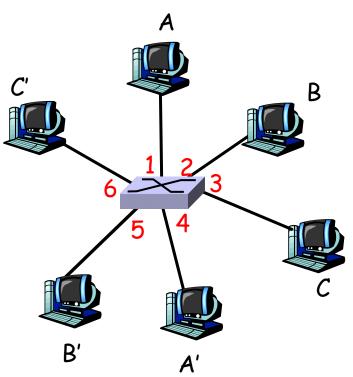

switch with six interfaces (1,2,3,4,5,6)

Switch Table


- \square Q: how does switch know that A' reachable via interface 4, B' reachable via interface 5?
- A: each switch has a switch table, each entry:
 - (MAC address of host, interface) to reach host, time stamp)
- looks like a routing table!
- \(\overline{Q}\): how are entries created, maintained in switch table?
 - something like a routing protocol?

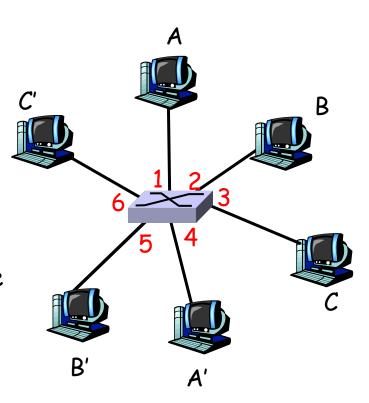

switch with six interfaces (1,2,3,4,5,6)

Switch: self-learning

- switch learns which hosts can be reached through which interfaces
 - when frame received, switch "learns" location of sender: incoming LAN segment
 - records sender/location pair in switch table

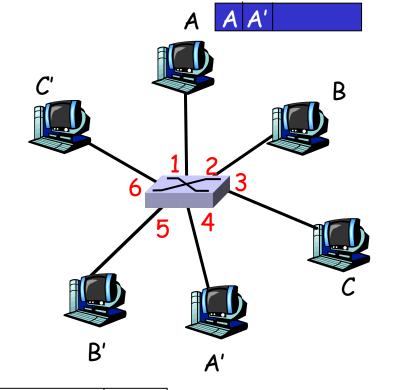

MAC addr	interface	TTL
A	1	60

Switch table (initially empty)

Source: A

Dest: A'

Switch: frame filtering/forwarding


When frame received:

```
    record link associated with sending host
    index switch table using MAC dest address
    if entry found for destination
        then {
        if dest on segment from which frame arrived
            then drop the frame
        else forward the frame on interface indicated
        }
        else flood
```

forward on all but the interface on which the frame arrived

Self-learning, forwarding: example

- frame destination unknown: flood
- destination A location known: selective send

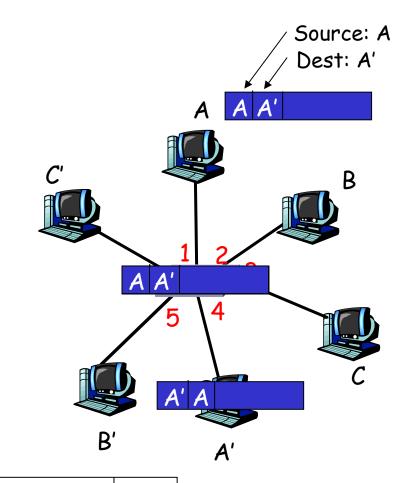


MAC addr	interface	TTL
A	1	60
A'	4	60

Switch table (initially empty)

Interconnecting switches


switches can be connected together

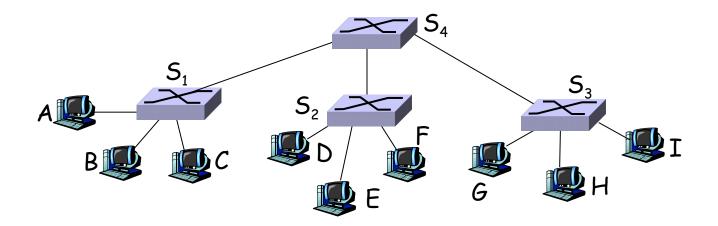

- \square Q: sending from A to G how does S_1 know to forward frame destined to F via S_4 and S_3 ?
- A: self learning! (works exactly the same as in single-switch case!)


Self-learning multi-switch example

Suppose C sends frame to I, I responds to C

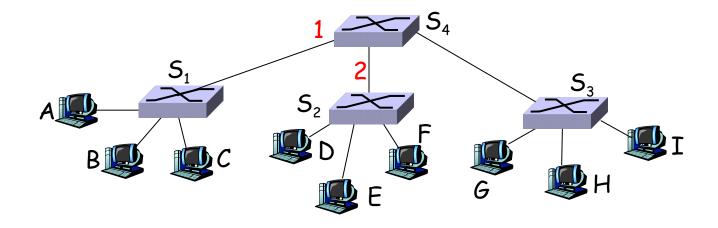


 \square Q: show switch tables and packet forwarding in S_1 , S_2 , S_3 , S_4

Institutional network

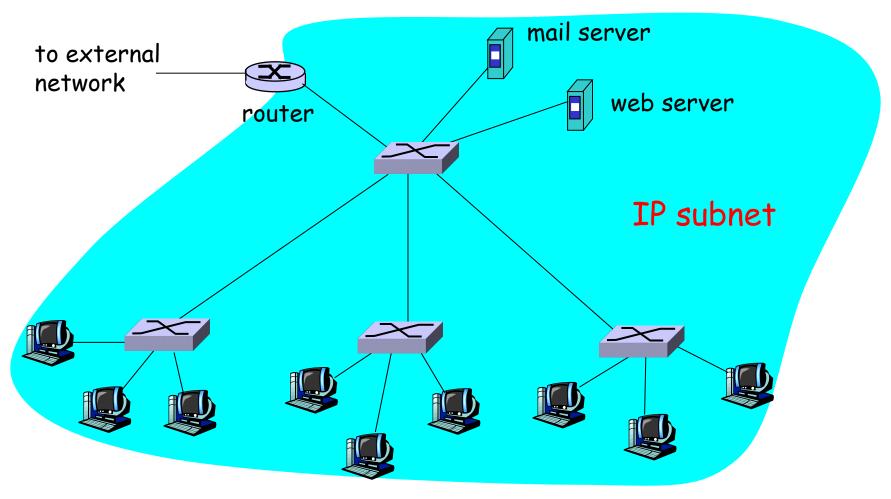

Switches vs. Routers

- both store-and-forward devices
 - orouters: network layer devices (examine network layer headers)
 - switches are link layer devices
- routers maintain routing tables, implement routing algorithms
- switches maintain switch tables, implement filtering, learning algorithms

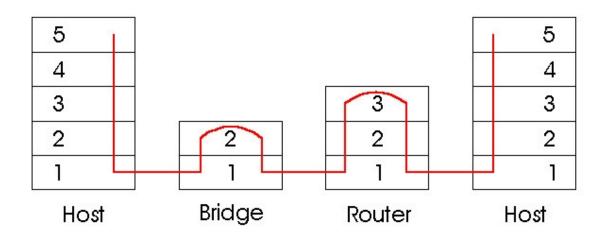

Link Layer

- 5.1 Introduction and services
- 5.2 Error detection and correction
- 5.3Multiple access protocols
- 5.4 Link-LayerAddressing
- □ 5.5 Ethernet

- □ 5.6 Hubs and switches
- □ 5.7 PPP
- 5.8 Link Virtualization:ATM

Point to Point Data Link Control

- one sender, one receiver, one link: easier than broadcast link:
 - ono Media Access Control
 - ono need for explicit MAC addressing
 - e.g., dialup link, ISDN line
- popular point-to-point DLC protocols:
 - PPP (point-to-point protocol)
 - HDLC: High level data link control (Data link used to be considered "high layer" in protocol stack!

PPP Design Requirements [RFC 1557]

- packet framing: encapsulation of network-layer datagram in data link frame
 - carry network layer data of any network layer protocol (not just IP) at same time
 - ability to demultiplex upwards
- bit transparency: must carry any bit pattern in the data field
- error detection (no correction)
- connection liveness: detect, signal link failure to network layer
- network layer address negotiation: endpoint can learn/configure each other's network address


PPP non-requirements

- no error correction/recovery
- no flow control
- out of order delivery OK
- no need to support multipoint links (e.g., polling)

Error recovery, flow control, data re-ordering all relegated to higher layers!


PPP Data Frame

- Flag: delimiter (framing)
- Address: does nothing (only one option)
- Control: does nothing; in the future possible multiple control fields
- Protocol: upper layer protocol to which frame delivered (eg, PPP-LCP, IP, IPCP, etc)

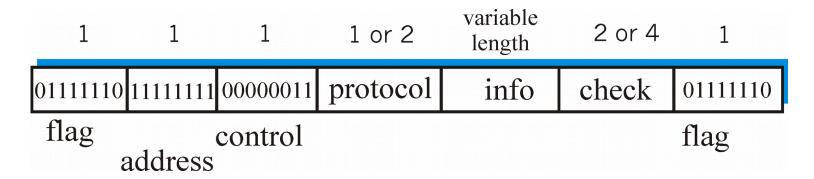

PPP Data Frame

- info: upper layer data being carried
- check: cyclic redundancy check for error detection

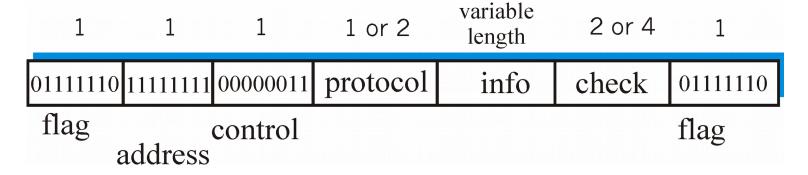


Byte Stuffing

- "data transparency" requirement: data field must be allowed to include flag pattern <01111110>
 - Q: is received <01111110> data or flag?

- Sender: adds ("stuffs") extra < 01111110> byte after each < 01111110> data byte
- □ Receiver:
 - two 01111110 bytes in a row: discard first byte, continue data reception
 - osingle 01111110: flag byte


Byte Stuffing

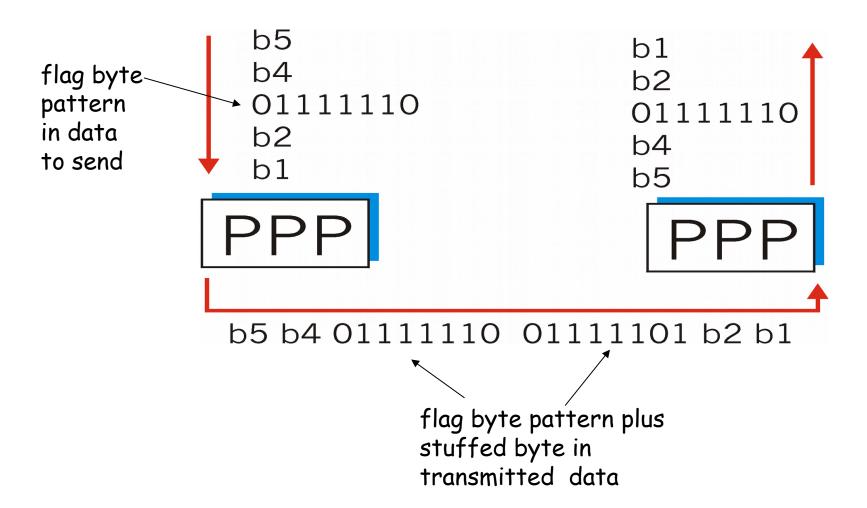

PPP Data Control Protocol

Before exchanging networklayer data, data link peers must

- configure PPP link (max. frame length, authentication)
- learn/configure network layer information
 - ofor IP: carry IP Control Protocol (IPCP) msgs (protocol field: 8021) to configure/learn IP address

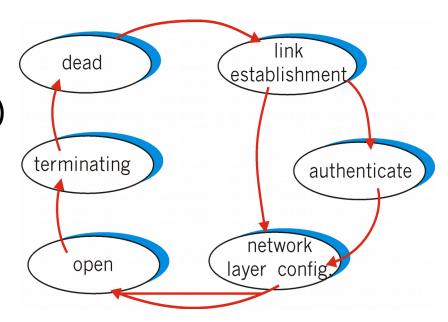

Link Layer

- 5.1 Introduction and services
- 5.2 Error detection and correction
- 5.3Multiple access protocols
- 5.4 Link-LayerAddressing
- □ 5.5 Ethernet

- □ 5.6 Hubs and switches
- □ 5.7 PPP
- 5.8 Link Virtualization: ATM and MPLS

<u>Virtualization of networks</u>

- Virtualization of resources: powerful abstraction in systems engineering:
- computing examples: virtual memory, virtual devices
 - Virtual machines: e.g., java
 - IBM VM os from 1960's/70's
- layering of abstractions: don't sweat the details of the lower layer, only deal with lower layers abstractly


The Internet: virtualizing networks

1974: multiple unconnected nets


- ARPAnet
- data-over-cable networks
- opacket satellite network (Aloha)
- packet radio network

... differing in:

- addressing conventions
- opacket formats
- o error recovery
- routing

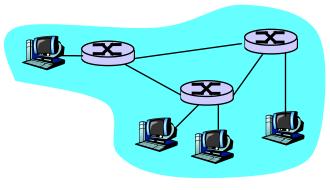

ARPAnet

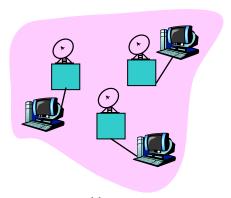

satellite net

"A Protocol for Packet Network Intercommunication", V. Cerf, R. Kahn, IEEE Transactions on Communications, May, 1974, pp. 637-648.


The Internet: virtualizing networks

Internetwork layer (IP):

- addressing: internetwork appears as single, uniform entity, despite underlying local network heterogeneity
- network of networks

Gateway:

- "embed internetwork packets in local packet format or extract them
- route (at internetwork level) to next gateway

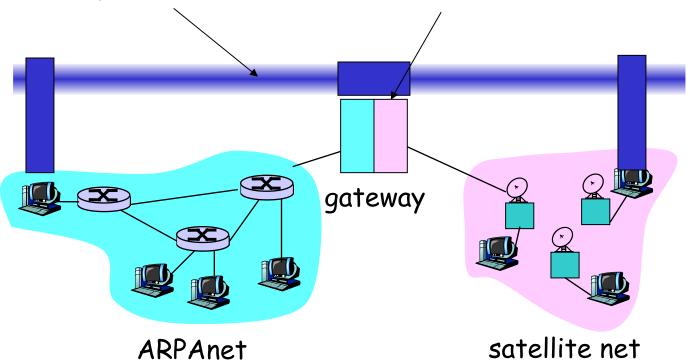

Cerf & Kahn's Internetwork Architecture

What is virtualized?

- two layers of addressing: internetwork and local network
- new layer (IP) makes everything homogeneous at internetwork layer
- underlying local network technology
 - o cable
 - satellite
 - 56K telephone modem
 - otoday: ATM, MPLS
 - ... "invisible" at internetwork layer. Looks like a link layer technology to IP!


ATM and MPLS

- ATM, MPLS separate networks in their own right
 - different service models, addressing, routing from Internet
- viewed by Internet as logical link connecting IP routers
 - just like dialup link is really part of separate network (telephone network)
- ATM, MPLS: of technical interest in their own right

Asynchronous Transfer Mode: ATM

- 1990's/00 standard for high-speed (155Mbps to 622 Mbps and higher) Broadband Integrated Service Digital Network architecture
- Goal: integrated, end-end transport of carry voice, video, data
 - meeting timing/QoS requirements of voice, video (versus Internet best-effort model)
 - "next generation" telephony: technical roots in telephone world
 - opacket-switching (fixed length packets, called "cells") using virtual circuits

ATM architecture

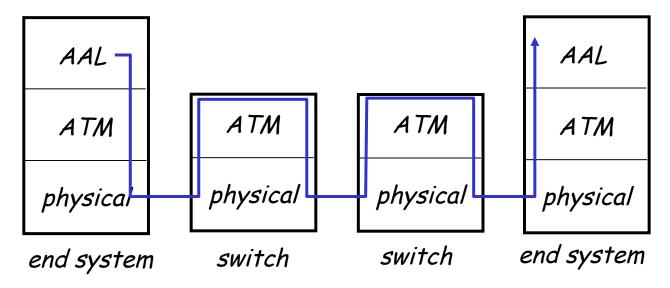

- adaptation layer: only at edge of ATM network
 - data segmentation/reassembly
 - oroughly analogous to Internet transport layer
- ATM layer: "network" layer
 - ocell switching, routing
- physical layer


ATM: network or link layer?

Vision: end-to-end transport: "ATM from desktop to desktop"

> ATM is a network technology


Reality: used to connect IP backbone routers

- "IP over ATM"
- ATM as switched link layer, connecting IP routers

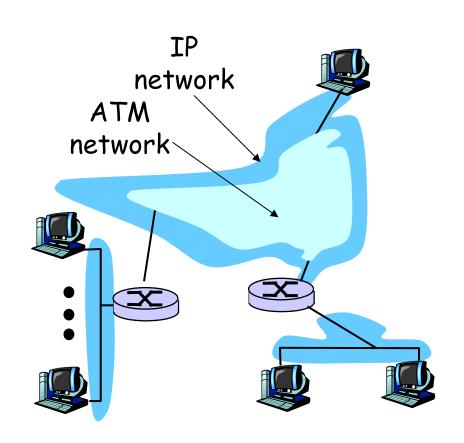

ATM Adaptation Layer (AAL)


- ATM Adaptation Layer (AAL): "adapts" upper layers (IP or native ATM applications) to ATM layer below
- AAL present only in end systems, not in switches
- AAL layer segment (header/trailer fields, data) fragmented across multiple ATM cells
 - o analogy: TCP segment in many IP packets

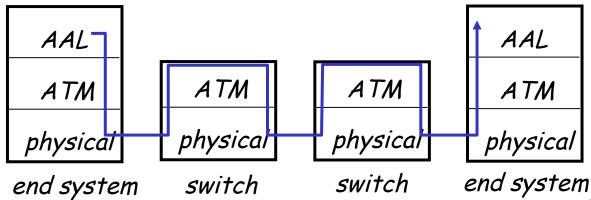

ATM Adaptation Layer (AAL) [more]

Different versions of AAL layers, depending on ATM service class:

- AAL1: for CBR (Constant Bit Rate) services, e.g. circuit emulation
- AAL2: for VBR (Variable Bit Rate) services, e.g., MPEG video
- AAL5: for data (eg, IP datagrams)

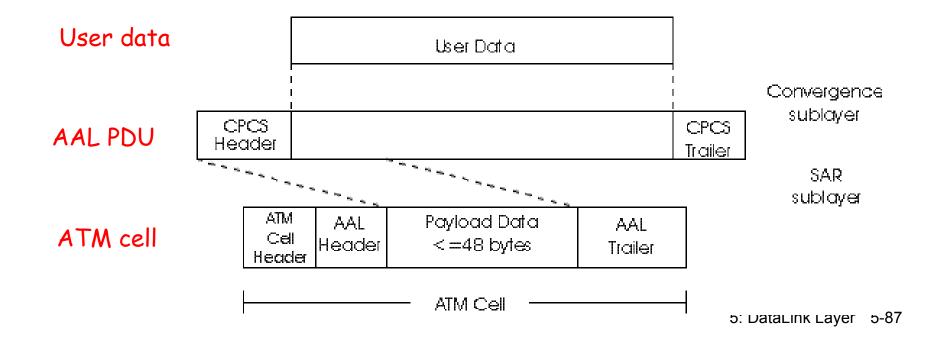

ATM Layer

Service: transport cells across ATM network

- analogous to IP network layer
- very different services than IP network layer

	Network Architecture	Service Model	Guarantees ?				Congestion
A			Bandwidth	Loss	Order	Timing	feedback
	Internet	best effort	none	no	no	no	no (inferred via loss)
	ATM	CBR	constant rate	yes	yes	yes	no congestion
	ATM	VBR	guaranteed rate	yes	yes	yes	no congestion
	ATM	ABR	guaranteed minimum	no	yes	no	yes
	ATM	UBR	none	no	yes	no	no

ATM Layer: Virtual Circuits


- VC transport: cells carried on VC from source to dest
 - ocall setup, teardown for each call before data can flow
 - each packet carries VC identifier (not destination ID)
 - every switch on source-dest path maintain "state" for each passing connection
 - link,switch resources (bandwidth, buffers) may be allocated to VC: to get circuit-like perf.
- Permanent VCs (PVCs)
 - long lasting connections
 - typically: "permanent" route between to IP routers
- Switched VCs (SVC):
 - Odynamically set up on per-call basis

ATM VCs

- Advantages of ATM VC approach:
 - QoS performance guarantee for connection mapped to VC (bandwidth, delay, delay jitter)
- Drawbacks of ATM VC approach:
 - Inefficient support of datagram traffic
 - one PVC between each source/dest pair) does not scale (N*2 connections needed)
 - SVC introduces call setup latency, processing overhead for short lived connections


ATM Layer: ATM cell

- 5-byte ATM cell header
- 48-byte payload
 - Why?: small payload -> short cell-creation delay for digitized voice
 - halfway between 32 and 64 (compromise!)

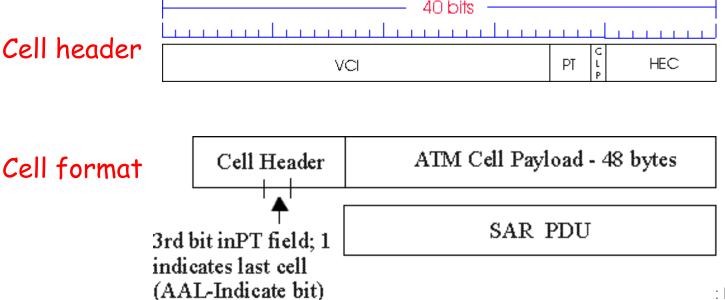

ATM cell header

- VCI: virtual channel ID
 - owill change from link to link thru net
- PT: Payload type (e.g. RM cell versus data cell)
- CLP: Cell Loss Priority bit
 - CLP = 1 implies low priority cell, can be discarded if congestion
- □ HEC: Header Error Checksum
 - o cyclic redundancy check



ATM Physical Layer (more)

Two pieces (sublayers) of physical layer:

- Transmission Convergence Sublayer (TCS): adapts ATM layer above to PMD sublayer below
- Physical Medium Dependent: depends on physical medium being used

TCS Functions:

- Header checksum generation: 8 bits CRC
- O Cell delineation
- With "unstructured" PMD sublayer, transmission of idle cells when no data cells to send

ATM Physical Layer


Physical Medium Dependent (PMD) sublayer

- SONET/SDH: transmission frame structure (like a container carrying bits);
 - bit synchronization;
 - bandwidth partitions (TDM);
 - several speeds: OC3 = 155.52 Mbps; OC12 = 622.08 Mbps; OC48 = 2.45 Gbps, OC192 = 9.6 Gbps
- □ TI/T3: transmission frame structure (old telephone hierarchy): 1.5 Mbps/ 45 Mbps
- unstructured: just cells (busy/idle)

IP-Over-ATM


Classic IP only

- □ 3 "networks" (e.g., LAN segments)
- MAC (802.3) and IP addresses

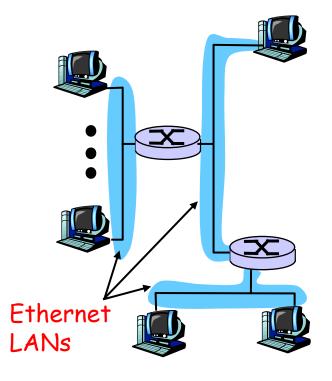


IP over ATM

- replace "network" (e.g., LAN segment) with ATM network
- ATM addresses, IP addresses

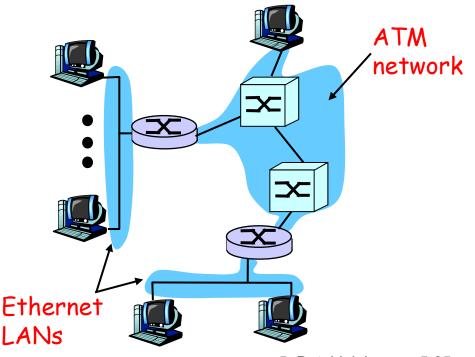

IP-Over-ATM

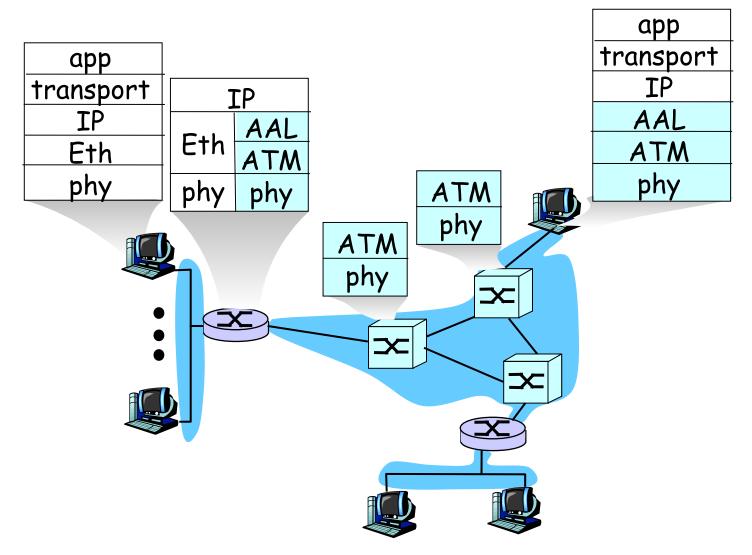


Datagram Journey in IP-over-ATM Network

- □ at Source Host:
 - IP layer maps between IP, ATM dest address (using ARP)
 - passes datagram to AAL5
 - AAL5 encapsulates data, segments cells, passes to ATM layer
- ATM network: moves cell along VC to destination
- □ at Destination Host:
 - AAL5 reassembles cells into original datagram
 - o if CRC OK, datagram is passed to IP

IP-Over-ATM


Issues:

- □ IP datagrams into ATM AAL5 PDUs
- from IP addresses to ATM addresses
 - just like IP addresses to 802.3 MAC addresses!

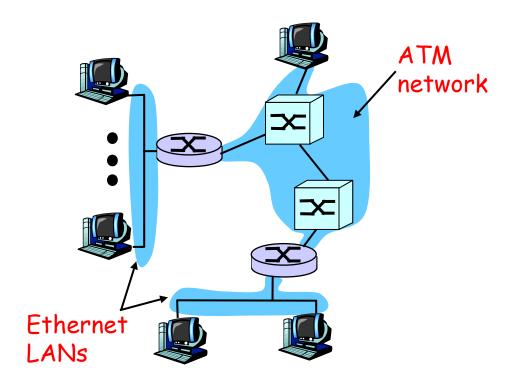

Multiprotocol label switching (MPLS)

- initial goal: speed up IP forwarding by using fixed length label (instead of IP address) to do forwarding
 - borrowing ideas from Virtual Circuit (VC) approach
 - but IP datagram still keeps IP address!

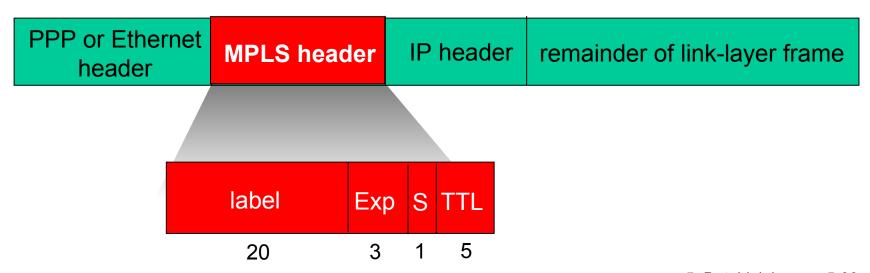


MPLS capable routers

- a.k.a. label-switched router
- forwards packets to outgoing interface based only on label value (don't inspect IP address)
 - MPLS forwarding table distinct from IP forwarding tables
- signaling protocol needed to set up forwarding
 - ORSVP-TE
 - of forwarding possible along paths that IP alone would not allow (e.g., source-specific routing)!!
 - use MPLS for traffic engineering
- must co-exist with IP-only routers

MPLS forwarding tables

Α

0

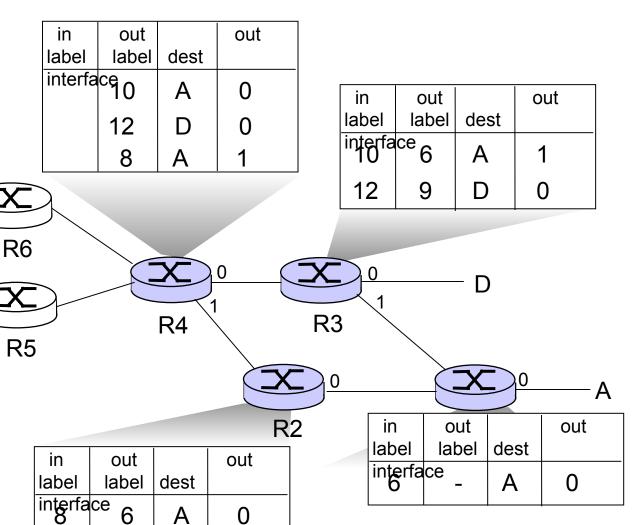

Chapter 5: Summary

- principles behind data link layer services:
 - error detection, correction
 - sharing a broadcast channel: multiple access
 - link layer addressing
- instantiation and implementation of various link layer technologies
 - Ethernet
 - switched LANS
 - PPP
 - ovirtualized networks as a link layer: ATM, MPLS

Chapter 5: let's take a breath

- journey down protocol stack complete (except PHY)
- solid understanding of networking principles, practice
- could stop here ... but lots of interesting topics!
 - wireless
 - multimedia
 - security
 - onetwork management