


BUILDING HEIGHT MAP WITH LAND USE

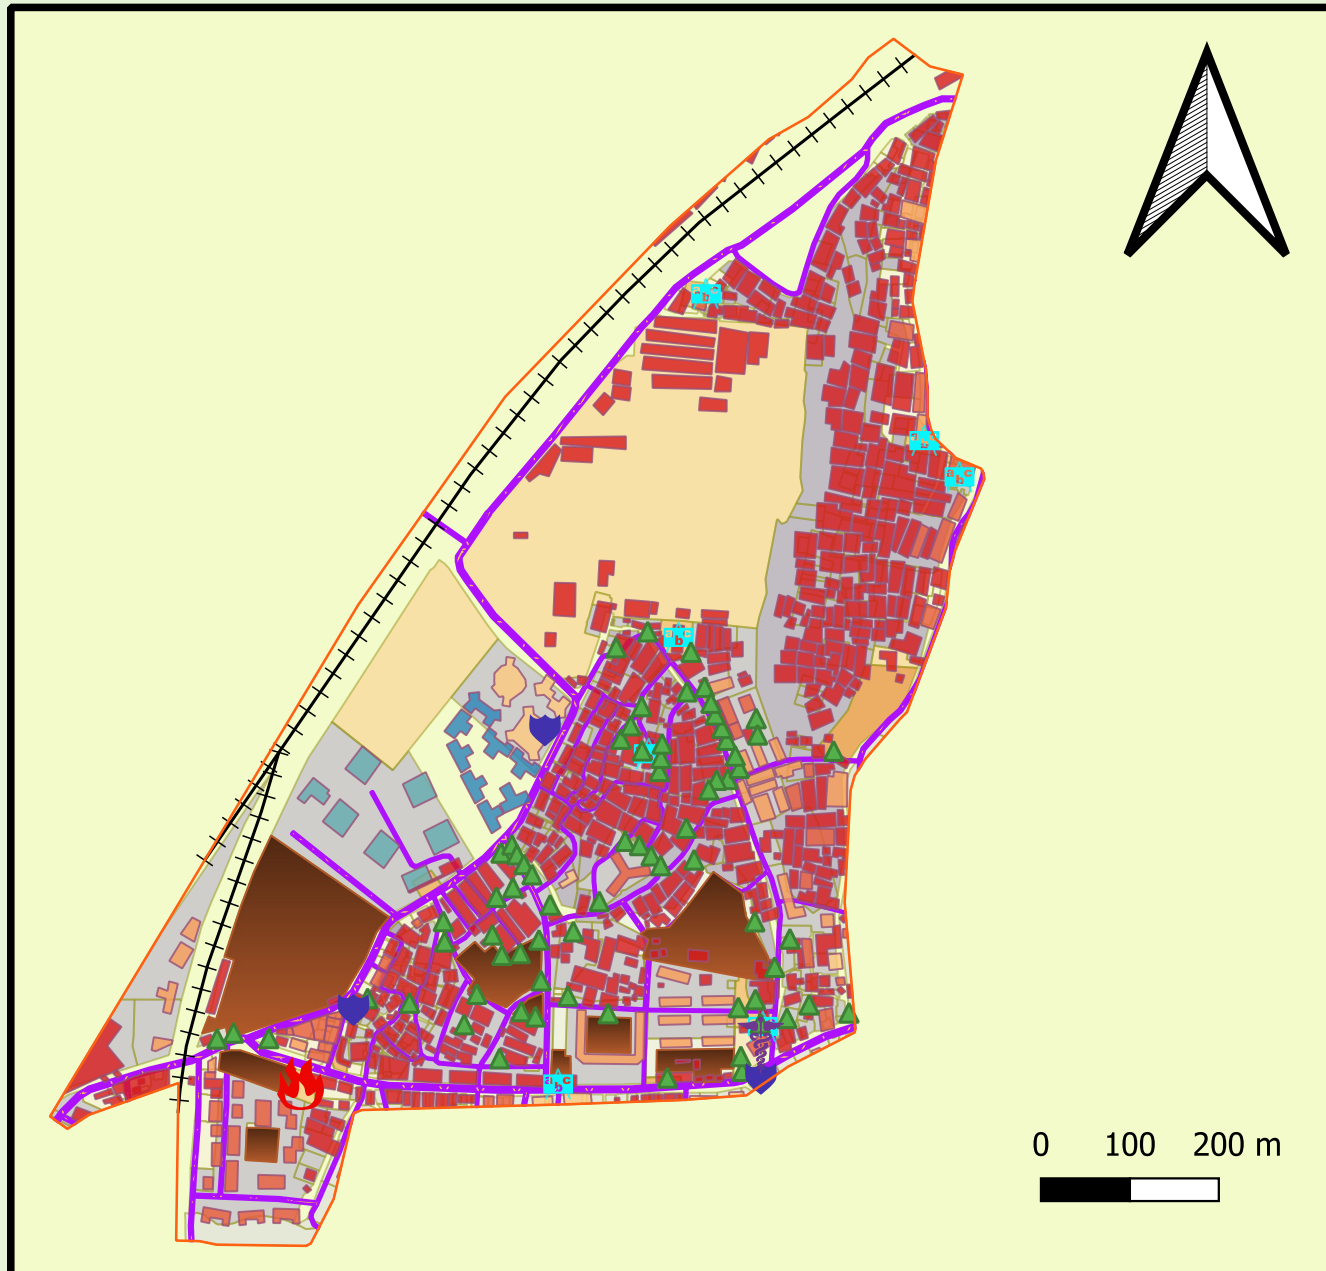

Most buildings inside the ward are low-rise (0–4 m), mainly residential. Medium to tall structures appear around commercial, mixed-use, and institutional zones. Industrial pockets show moderate heights, while open spaces and utilities have minimal built-up presence.

