

Basics of Verilog HDL and Modelsim

Basics of Verilog HDL

HDL – Hardware Description Language

Two Competing HDL's

VHDL – VHSIC HDL

VHSIC – Very High Speed Integrated Circuit

Verilog HDL

Verilog HDL is most widely used HDL – IEEE industry standard HDL used to describe a digital system.

Provides comprehensive support for low level design.

Verilog was designed primarily for digital H/W designers developing FPGA's/ASICs

Terminologies

Simulation => check if design works fine

Synthesis => Conversion of RTL to gate level (implement the design on real hardware)

History of Verilog HDL

- Originated in 1983 @ Gateway Design Automation.
- In 1989 Cadence design systems, purchased Gateway and made Verilog language to be available to the public.
- Verilog language then became IEEE standard 1364, referred to as Verilog-95.
- Extension to Verilog-95 were introduced in 2001 referred to as Verilog - 2001 and minor revisions introduced in 2005.
- In 2009, the SystemVerilog and Verilog language standards were merged.
- The current version is IEEE standard 1800-2017

Verilog Module

- In verilog, the basic unit of hardware is called module.
- Modules cannot contain the definitions of other module
- A Module can, however, be instantiated within another module.
- Allows the creation of a hierarchy in a Verilog description.
- Semicolon : Statement terminator
- `//` - Single line comment
- `/* */` - Multi-line comment
- Case sensitive

Module Structure

```
module name(portlist);  
    port declarations;  
    parameter declarations;
```

```
    wire declarations;  
    reg declarations;  
    variable declarations;
```

```
    module instantiations;  
    dataflow statements;  
    always blocks;  
    initial blocks;
```

```
    tasks and functions;
```

```
endmodule
```

Example 1 :: simple XOR Gate

```
module simplexor (f,a,b);  
    input a, b;  
    output f;  
    assign f = a^b;  
endmodule
```

Identifier & Keywords

Identifier

User-provided names for Verilog objects in the descriptions

Legal characters are “a-z”, “A-Z”, “0-9”, “_”, and “\$”

First character has to be a letter or an “_”

Example: Count, _R2D2, FIVE\$

Keywords

Predefined identifiers to define the language constructs

All keywords are defined in lower case

Cannot be used as identifiers

Example: **initial, assign, module, always....**

Ports

Three types of ports

- Input (keyword - **input**)
- Output (keyword – **output**)
- Inout (keyword – **inout**)

Port declarations example

input a;

input a, b;

input [3:0] c, d;

output [4:0] y;

inout x;

Data Types

Two basic data types

- Nets and
- Registers

Nets represent physical wires in the design. (**wire**, **tri**)

- Default initial value for a wire is “Z”

Registers represent storage in the Verilog model. (**reg**, **integer**, **real**, **time**)

- Register data type may or may not result in physical registers.
- Registers are manipulated within procedural blocks (***always*** and ***initial***) only.
- Default initial value for a reg is “X”

Data Types - Examples

`reg a; // a scalar register`

`reg [3:0] v; // a 4-bit vector register from msb to lsb`

`reg [7:0] m, n; // two 8-bit register m and n`

`tri [15:0] busa; // a 16-bit tri-state bus`

`wire [31:0] w1, w2;`

`// Two 32-bit wires w1 and w2 with msb being the 31st bit`

Register Types

reg

any size, unsigned

integer (not synthesizable)

integer a,b; // declaration(a = 10, b = -10)

real (not synthesizable)

real a,b; // declaration(a = 3.14, b = 3e6)

time (not synthesizable)

64-bit unsigned, behaves like a 64-bit reg

Numbers & Negative Numbers

A number may be **sized** or **unsized**

Ex: `h12_unsized = 'h12;` `h12_sized = 6'h12;`

Ex: `PA = -12,` `PB = -'d12,` `PC= -32'd12;`

Sized numbers are written as **width 'radix value**

The **radix** indicates the type of number

Decimal (d or D)

Hex (h or H)


Octal (o or O)

Binary (b or B)

Unsized numbers are written as **'radix value**


Levels of Abstraction

Module can be implemented in terms of design algorithm without concern for the hardware implementation (similar to C programming)

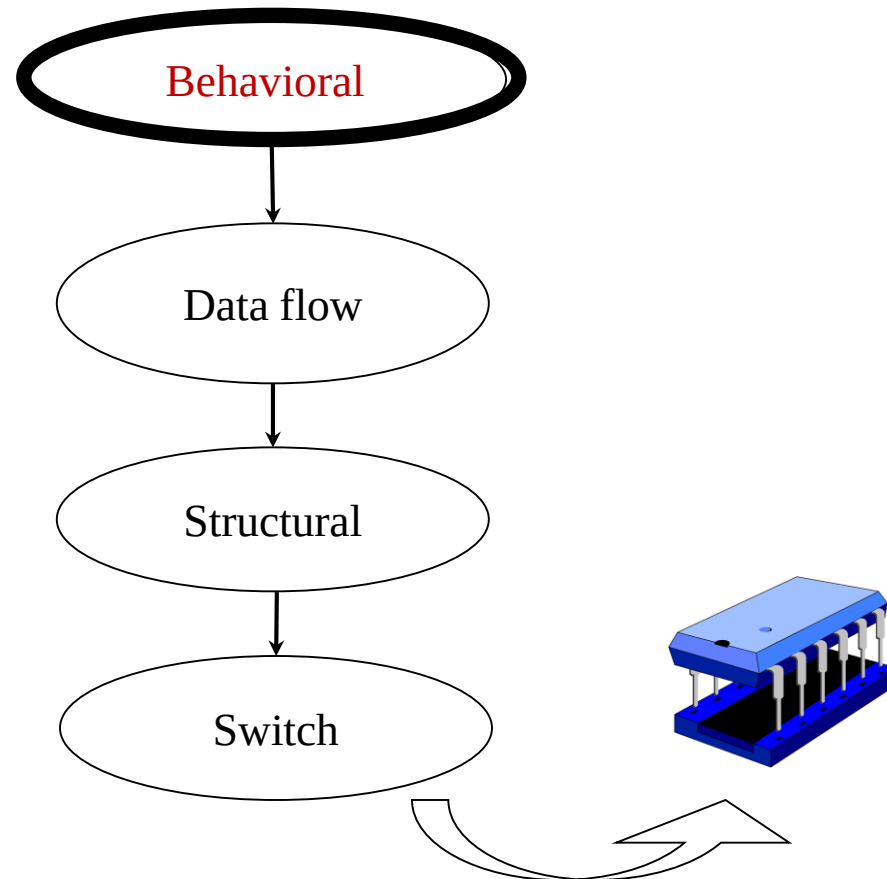


Levels of Abstraction

Module is designed by specifying the data flow. Designer is aware on how the data flows between different nodes and how it is processed.

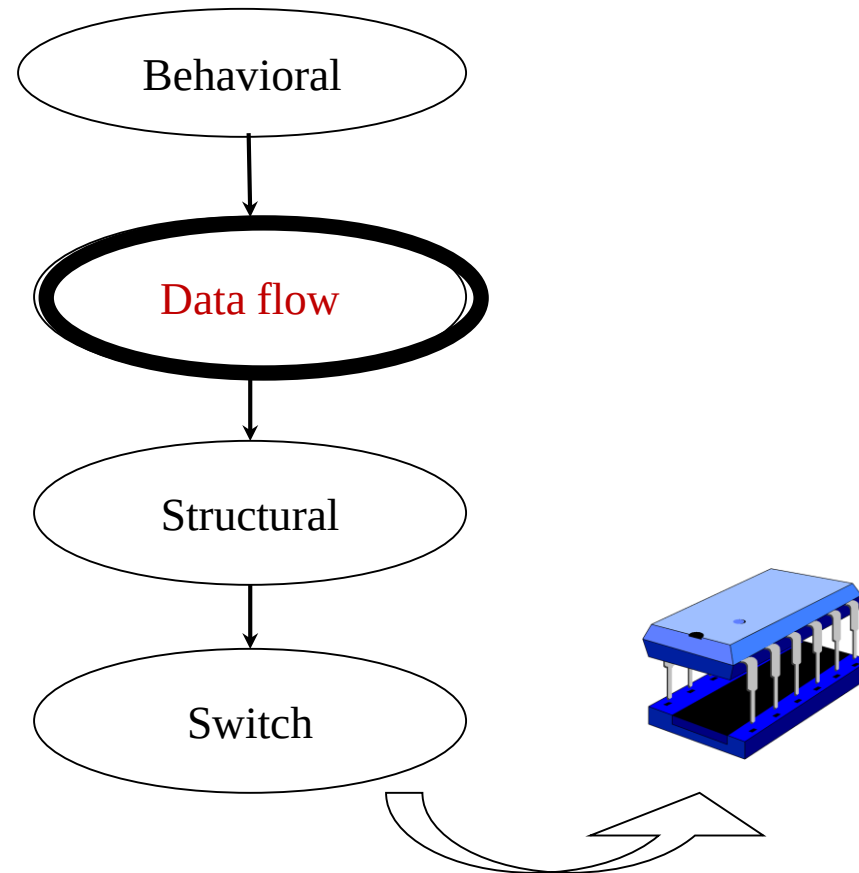


Levels of Abstraction

Also called as Gate level modeling. Module is designed in terms of logic gates/predefined verilog modules and interconnections between the gates/modules.

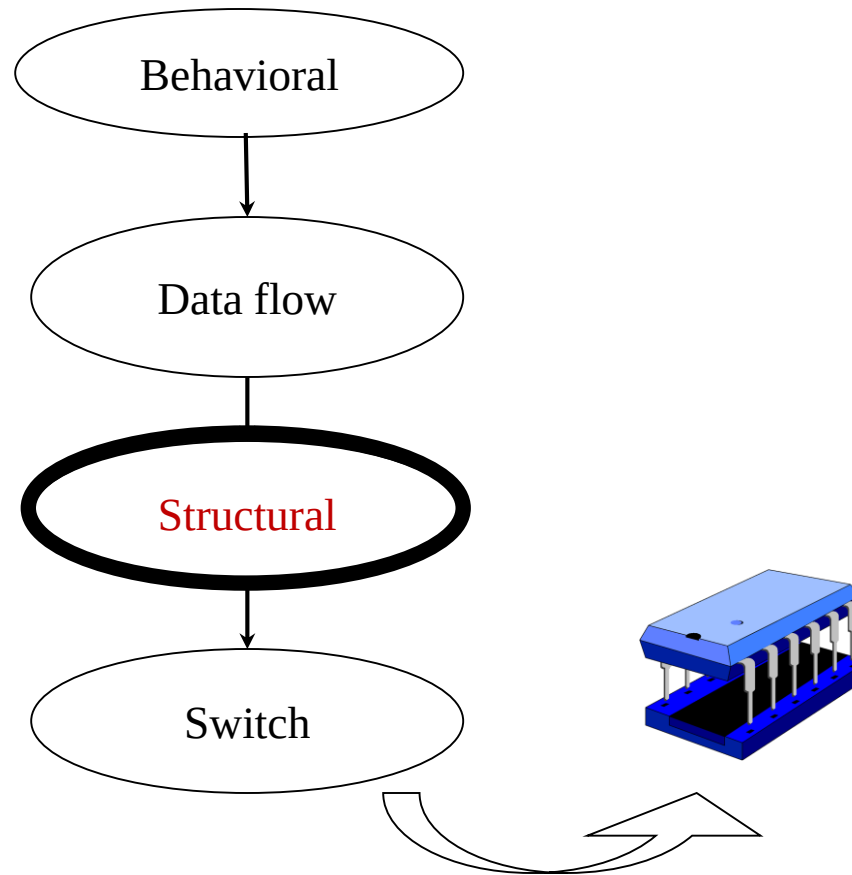

Levels of Abstraction

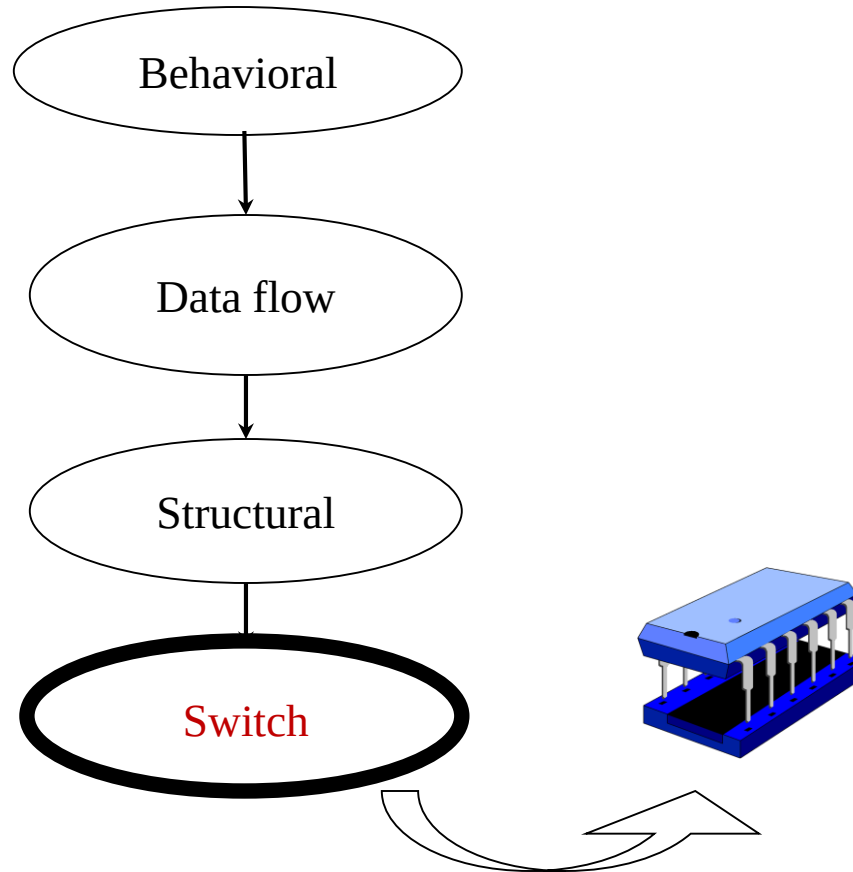

Low level of abstraction. Module is designed in terms of switches/transistors and hence the designer needs to know about the switch level implementation details.

Gate Level Modeling

- A Gate level description is based on the structure of the logic circuit.
- A gate level description uses the verilog primitive gates to produce the desired output

Verilog Primitive Gates

- `and(f,a,b,...)` $f = (a \cdot b \dots)$
- `or(f,a,b,...)` $f = (a + b + \dots)$
- `not(f,a)` $f = a'$
- `nand(f,a,b,...)` $f = (a \cdot b \dots)'$
- `nor(f,a,b,...)` $f = (a + b + \dots)'$
- `xor(f,a,b,...)` $f = (a \oplus b \oplus \dots)$
- `xnor(f,a,b,...)` $f = (a \odot b \odot \dots)$

- You can also “name” the gates if you like ...
 - `and And1(z1,x,y);` // this gate is named And1

Gate Level Modeling – Half Adder

//Half Adder : Structural Verilog Description

```
module ha_gate_level (x,y,s,c);
```


```
  input x,y;
```

```
  output s,c;
```

```
  xor x1(s, x, y);
```

```
  and a1(c, x, y);
```

```
endmodule
```

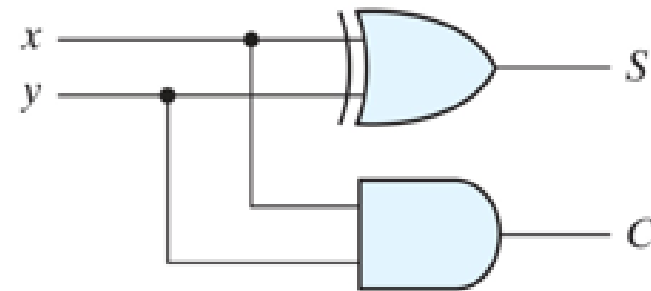

$$S = x \oplus y$$

$$C = xy$$

Gate Level Modeling – Full Adder

//Full Adder : Structural Description

```
module fa_gate_level(x,y,z,s,c);
```

```
  input x,y,z;
```

```
  output s,c;
```

```
  wire w1,w2,w3;
```

```
  xor xor1(w1,x,y);
```


```
  xor xor2(s,w1,z);
```

```
  and A1(w2, x,y);
```

```
  and A2(w3,w1,z);
```

```
  or O1(c, w3,w2);
```

```
endmodule
```

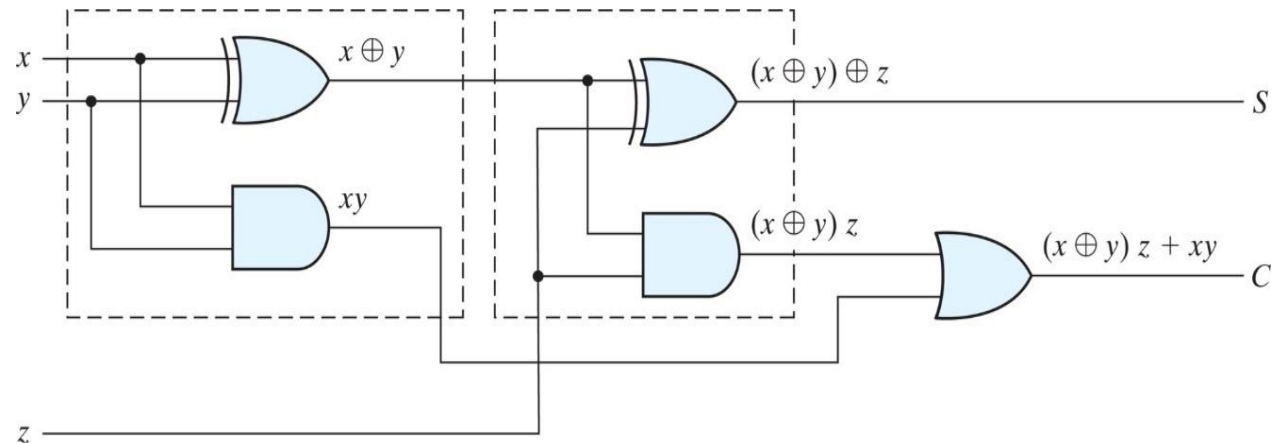

Gate Level Modeling – Full Adder using Half adder

//Full Adder using 2 Half Adder : Structural Description

```
module fa_gate_level(x,y,z,s,c);
```

```
input x,y,z;
```

```
output s,c;
```

```
wire s_ha1,c_ha1,c_ha2;
```

```
//port mapping by order
```

```
ha_gate_level HA1(x,y,s_ha1,c_ha1);
```


```
//port mapping by name
```

```
//ha_gate_level HA1( .a(a), .b(b), .s(s_ha1), .c(c_ha1) );
```

```
ha_gate_level HA2(z, s_ha1, s, c_ha2);
```

```
or O1(c, c_ha1, c_ha2);
```

```
endmodule
```

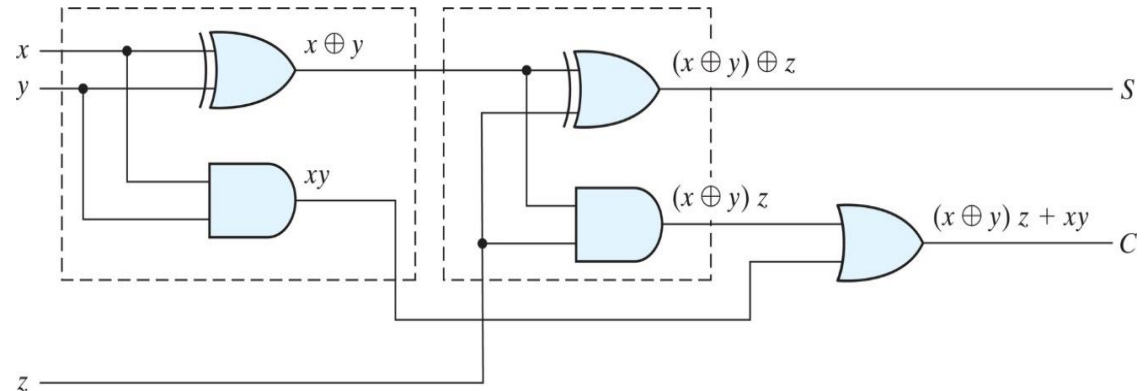

//Half Adder : Structural Verilog Description

```
module ha_gate_level (x,y,s,c);
```

```
input x,y;
```

```
output s,c;
```

```
xor x1(s, x, y);
```

```
and a1(c, x, y);
```

```
endmodule
```

Dataflow Modeling

- A dataflow description is based on function rather than structure.
- A dataflow uses a number of operators that act on operands to produce the desired function
- Boolean equations are used in place of logic schematics.
- Continuous assignment(**assign**) is the most basic statement used in dataflow modeling

Dataflow Modeling – Half Adder

```
//Half Adder : Dataflow description
module ha_df (x,y,s,c);
  input x,y;
  output s,c;

  assign s = x^y;
  assign c = x & y;

  //assign {c,s} = x + y; //Alternate Method

endmodule
```

Operators

Types of Operators	Symbols
Arithmetic Operators	+, -, *, /, %
Relational Operators	<, <=, >, >=
Logical Equality Operators	==, !=
Case Equality Operators	===, !==
Logical Operators	!, &&,
Bit-wise Operators	~, &, , ^, ~^
Unary Reduction Operators	&, ~&, , ~ , ^, ~^
Shift Operators	<<, >>
Conditional Operators	? :
Concatenation Operators	{ }
Replication Operator	{ { } }

Continuous Assignment Examples

```
wire [3:0] X,Y,R;  
wire [7:0] P;  
wire r, a, cout, cin;
```

```
assign R = X | (Y & ~Z);
```

```
assign r = &X;
```

example
reduction
operator

use of bit-wise Boolean operators

```
assign R = (a == 1'b0) ? X : Y;
```

conditional operator

```
assign P = 8'hff;
```

example constants

```
assign P = X * Y;
```

arithmetic operators (use with care!)

```
assign P[7:0] = {4{X[3]}, X[3:0]};
```

(ex: sign-extension)

```
assign {cout, R} = X + Y + cin;
```

bit field concatenation

```
assign Y = A << 2;
```

bit shift operator

```
assign Y = {A[1], A[0], 1'b0, 1'b0};
```

equivalent bit shift

Ripple Carry Adder


```

module FullAdder(a, b, ci, r, co);
    input a, b, ci;
    output r, co;

    assign r = a ^ b ^ ci;
    assign co = a&ci + a&b + b&cin;

endmodule

```

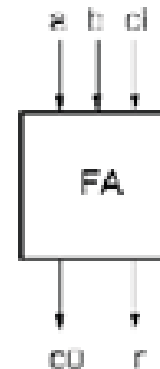


```

module Adder(A, B, R);
    input [3:0] A;
    input [3:0] B;
    output [4:0] R;

    wire c1, c2, c3;
    FullAdder
        add0(.a(A[0]), .b(B[0]), .ci(1'b0), .co(c1), .r(R[0]) ),
        add1(.a(A[1]), .b(B[1]), .ci(c1), .co(c2), .r(R[1]) ),
        add2(.a(A[2]), .b(B[2]), .ci(c2), .co(c3), .r(R[2]) ),
        add3(.a(A[3]), .b(B[3]), .ci(c3), .co(R[4]), .r(R[3]) );
endmodule

```

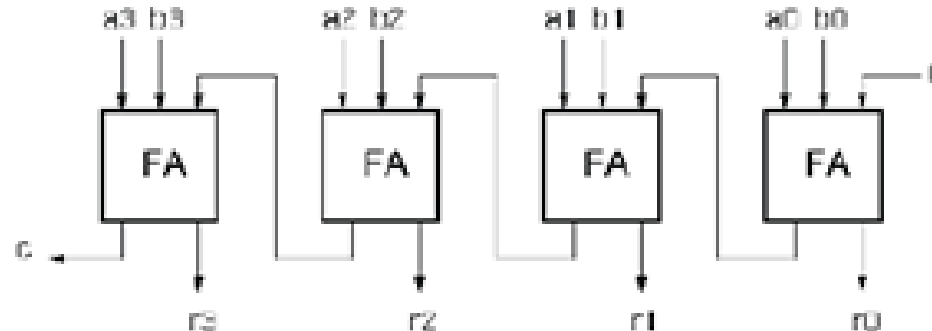

Behavioral Modeling

- Specifies how a particular design should respond to a given set of input.
- Behavioral modeling uses structured procedures to specify the behaviour of the circuit.
- May be specified by
 - Boolean expressions
 - Algorithms written in standard HLL like C

Ex : {Carry,Sum} = a+b+c;

Structured Procedures

- Two basic structured procedure statements or procedural blocks are
 - **always** (synthesizable)
 - **initial** (non-synthesizable)
- All behavioral statements can appear only inside these blocks
- Each always or initial block has a separate activity flow (concurrency)
- There can be multiple always and initial blocks in a module
- All procedural blocks start from simulation time 0
- Cannot be nested

Structured Procedures: `always` statement

- Starts at time 0
- Execute the statements in a looping fashion
- Multiple `always` blocks, execute in parallel
All start at time 0

Syntax:

```
always @(sensitivity list)
begin
    // behavioral statements
end
```

Behavioral Modeling – Half Adder

//Half Adder : Behavioral description

```
module ha_beh (x,y,s,c);
```

```
    input x,y;
```

```
    output s,c;
```

```
    reg s, c;
```

```
    always @(a or b)
```

```
    begin
```

```
        s = x ^ y;
```

```
        c = x & y;
```

```
        //{c,s} = x + y;
```

```
    end
```

```
endmodule
```

Behavioral Modeling

"always" block example:

```
module and_or_gate (out, in1, in2, in3);
```

```
    input    in1, in2, in3;
```

```
    output   out;
```

```
    reg      out;
```

"reg" type declaration. Not really a register in this case. Just a Verilog rule.

```
    always @(in1 or in2 or in3) begin
```

```
        out = (in1 & in2) | in3;
```

```
    end
```

"sensitivity" list, triggers the action in the body.

keyword

brackets multiple statements (not necessary in this example).

```
endmodule
```

Books


- Samir Palnitkar, “Verilog HDL: A Guide to Digital Design and Synthesis”, 2009, 2nd edition, Prentice Hall of India Pvt. Ltd.
- Stuart Sutherland, “Verilog® HDL Quick Reference Guide” based on the Verilog-2001 standard

Modelsim

- ModelSim is a simulation verification and simulation tool by Siemens (previously developed by Mentor Graphics) for designs developed using the hardware description languages such as VHDL, Verilog, System Verilog
- ModelSim can be used independently, or in conjunction with Intel Quartus Prime.
- Simulation is performed using the graphical user interface (GUI), or automatically using scripts
- **Tool: <https://tinyurl.com/modelsimtool>**


Simulation Flow

- Though you don't have to use projects in ModelSim, they may ease interaction with the tool and are useful for organizing files and specifying simulation settings

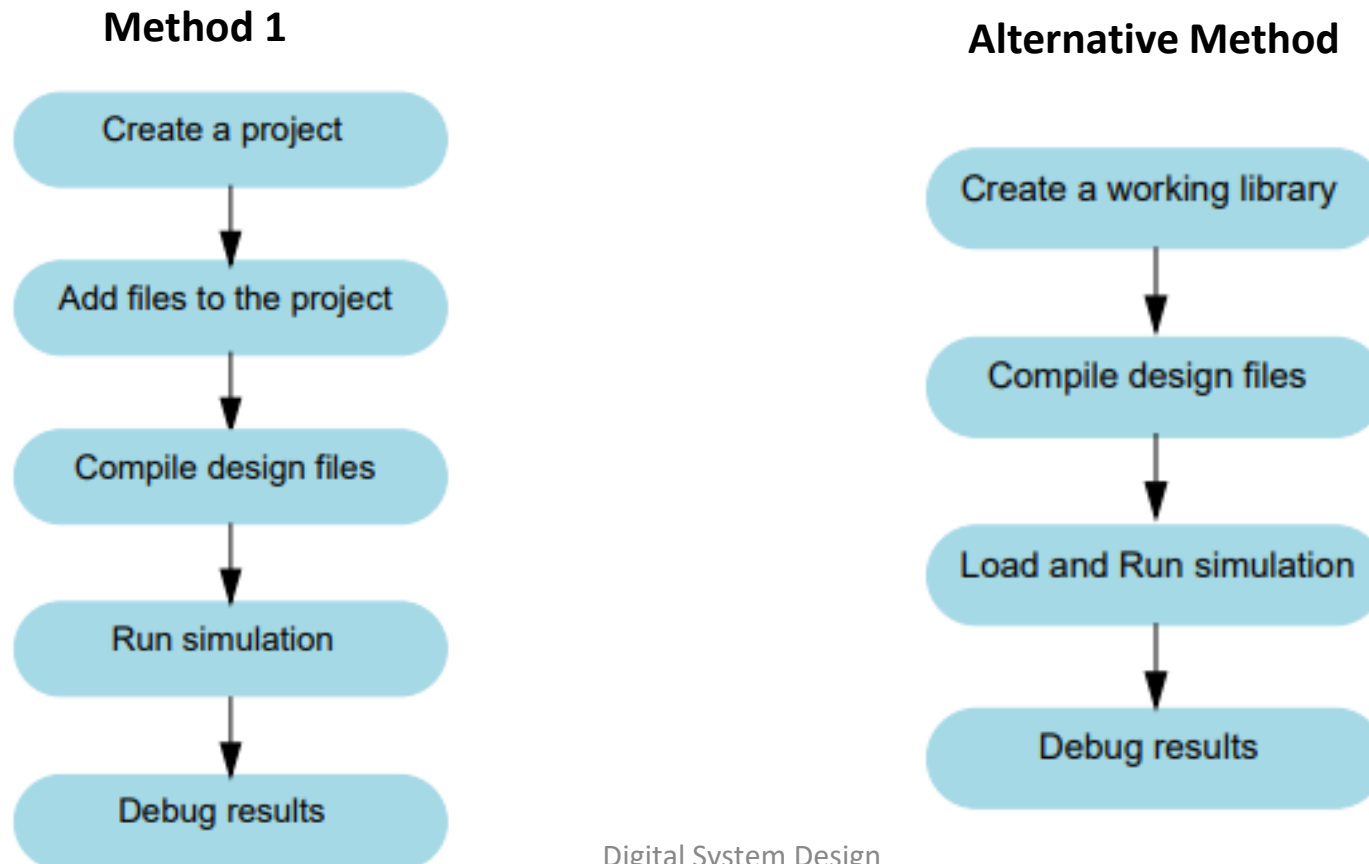

Create a New Project

- Select **File > New > Project** (Main window) from the menu bar.\
- This opens the Create Project dialog where you can enter a Project Name, Project Location (i.e., directory), and Default Library Name

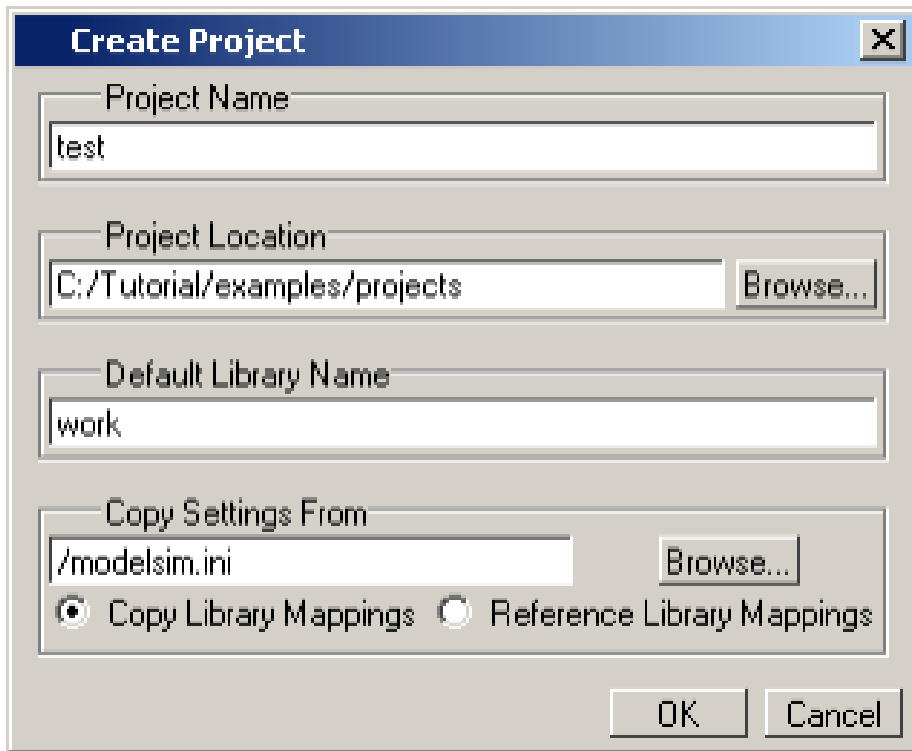


The screenshot shows the 'Create Project' dialog box. It has a title bar with the text 'Create Project' and a close button. The dialog contains the following fields and controls:

- Project Name:** A text field containing the text 'test'.
- Project Location:** A text field containing the path 'C:/Tutorial/examples/projects' and a 'Browse...' button to its right.
- Default Library Name:** A text field containing the text 'work'.
- Copy Settings From:** A text field containing the path '/modelsim.ini' and a 'Browse...' button to its right.
- Radio Buttons:** Two radio buttons are located below the 'Copy Settings From' field. The first is labeled 'Copy Library Mappings' and is selected (indicated by a filled circle). The second is labeled 'Reference Library Mappings' and is not selected (indicated by an empty circle).
- Buttons:** At the bottom of the dialog are two buttons: 'OK' and 'Cancel'.

- Type the Project Name
- Click the Browse button for the Project Location field to select a directory where the project file will be stored
- Leave the Default Library Name set to work.
- Click OK.

Add Objects to the Project


- Once you click OK to accept the new project settings, a blank Project window and the “Add items to the Project” dialog will appear

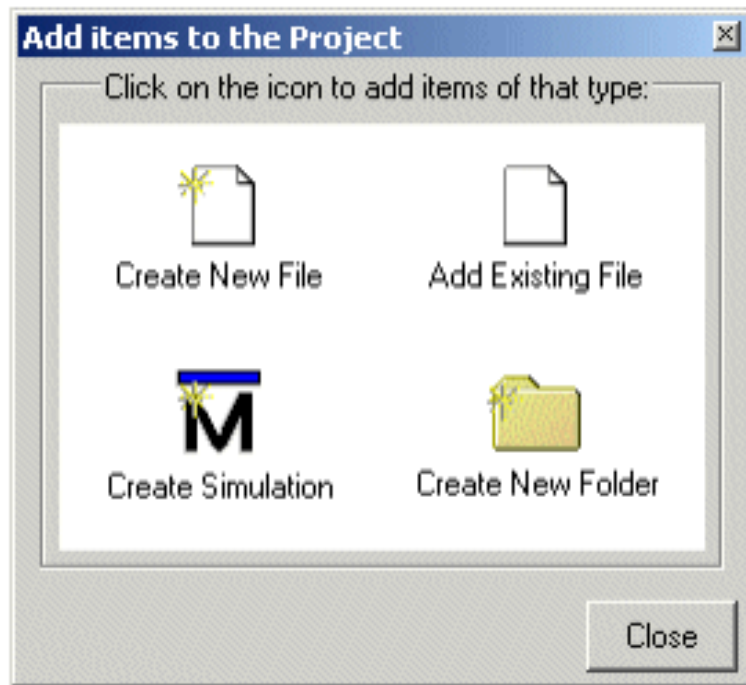

- Click Create New File if file has to be created or click Add Existing File if the file is available.

Create New File

- Once you click Create New File, Create Project File dialog will appear.

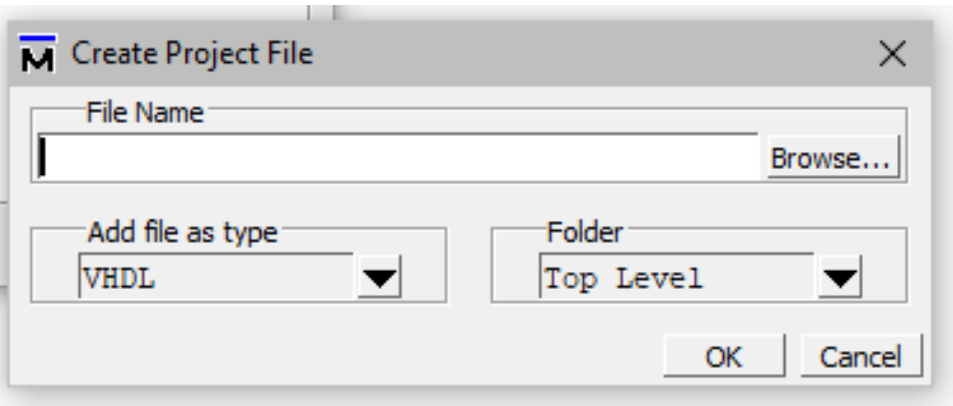


- Type the File name to be created
- Select Add file as type as **Verilog** from the drop down menu (By default it will be VHDL).
- Click OK.

- The new file will be added to the project. It can be selected and the design can be typed in the editor.

Compilation and Simulation

- New files show the status as ?

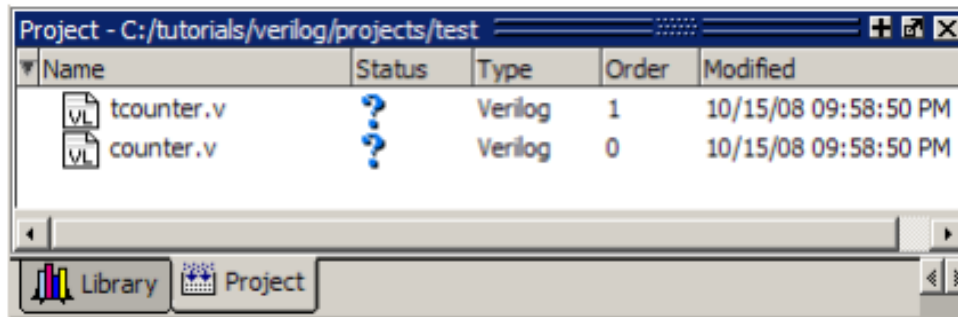

- Select the file, right click – compile – Compile selected.
- If compilation is successful, status changes to green colour tick mark.
- Go to work library, select the module to be simulated, right click and select simulate.
- Force the inputs and check the outputs in the wave window.

BACKGROUND

- Verilog is also an IEEE standard HDL (1364 – 1995).
- It was introduced in 1985 by Gateway Design Systems as a proprietary language for their simulator verilog-XL.. Cadence acquired Verilog-XL in 1989. It was put on public domain in 1990.
- Verilog is now maintained by Open Verilog international (OVI).
- Verilog is more like C, while VHDL is more like ADA.
- Verilog supports different levels of abstraction, the hardware can be described in terms of switches, gates, RTL or behavior.
- Verilog is case sensitive and all reserve words is in lower case letters.

LEVELS OF ABSTRACTION

In Verilog the hardware can be defined in four levels of abstraction depending on the needs of the design.


- 1) Behavioral or Algorithmic Level
- 2) Dataflow
- 3) Gate Level
- 4) Switch Level

This is the lowest level of abstraction available in Verilog. Here the module is implemented in terms of switches, storage nodes and interconnections between them. Design at this level requires the knowledge of switching theory and other switch level implementation details.

MODULE

Building Blocks

Module is the basic building block of verilog. It provides the port interfaces and the functionality of the hardware. It can be compared with VHDL entity-architecture combined.

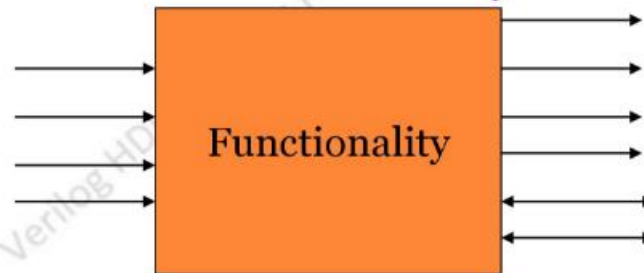

MODULE

In verilog it is illegal to nest modules i.e. one module definition cannot contain another module definition within the module and endmodule statement.



Verilog Operators

{ }	concatenation		
+ - * / **	arithmetic		
%	modulus		
> >= < <=	relational		
!	logical NOT		
&&	logical AND		
	logical OR		
==	logical equality		
!=	logical inequality		
===	case equality		
!==	case inequality		
? :	conditional		

Used in comparing two variables (relational or logic comparisons)

~	bit-wise NOT		
&	bit-wise AND		
	bit-wise OR		
^	bit-wise XOR		
^~ ~^	bit-wise XNOR		
&	reduction AND		
	reduction OR		
~&	reduction NAND		
~	reduction NOR		
^	reduction XOR		
~^ ^~	reduction XNOR		
>>	shift left		
>>>	shift right		

Used in Boolean functions

VERILOG BITWISE OPERATORS

~ Negation

& AND

| OR

^ XOR

~& NAND

~| NOR

~^ XNOR

VERILOG DESIGN

Module <module_name> <port list>

[Port list] [port declarations (wire, reg)]
[parameters]






Data flow statements
assign

Behavioral statements
always and initial blocks

Instantiation of lower
level modules

Tasks and
Functions

Endmodule

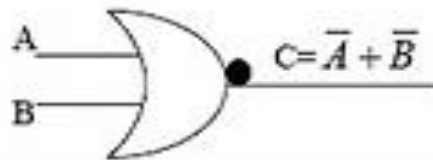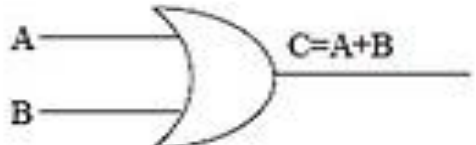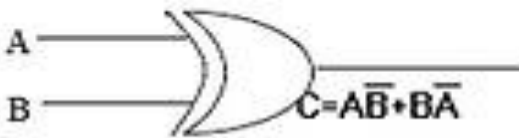S.NO	GATE	SYMBOL	INPUTS		OUTPUT
			A	B	
1.	NAND IC 7400		0	0	1
			0	1	1
			1	0	1
			1	1	0
2.	NOR IC 7402		0	0	1
			0	1	0
			1	0	0
			1	1	0
3.	AND IC 7408		0	0	0
			0	1	0
			1	0	0
			1	1	1
4.	OR IC 7432		0	0	0
			0	1	1
			1	0	1
			1	1	1
5.	NOT IC 7404		1	-	0
			0	-	1
6.	EX-OR IC 7486		0	0	0
			0	1	1
			1	0	1
			1	1	0

ModelSim Simulation of Basic Gates

ModelSim PE Student Edition 10.4a interface showing the Library and Transcript windows.

Library Window:

Name	Type	Path
work	Library	C:/Modeltech_pe_edu_10.4a/example...
floatfixlib	Library	\$MODEL_TECH/./floatfixlib
ieee_env (empty)	Library	\$MODEL_TECH/./ieee_env
infact	Library	\$MODEL_TECH/./infact
mc2_lib (empty)	Library	\$MODEL_TECH/./mc2_lib
mgc_ams (empty)	Library	\$MODEL_TECH/./mgc_ams
mtbAvm	Library	\$MODEL_TECH/./avm
mtbOvm	Library	\$MODEL_TECH/./ovm-2.1.2
mtbPA	Library	\$MODEL_TECH/./pa_lib
mtbRnm	Library	\$MODEL_TECH/./rnm
mtbUPF	Library	\$MODEL_TECH/./upf_lib
mtbUvm	Library	\$MODEL_TECH/./uvm-1.1d
osvvm	Library	\$MODEL_TECH/./osvvm
sv_std	Library	\$MODEL_TECH/./sv_std
vhdlopt_lib	Library	\$MODEL_TECH/./vhdlopt_lib
vital2000	Library	\$MODEL_TECH/./vital2000
ieee	Library	\$MODEL_TECH/./ieee
modelsim_lib	Library	\$MODEL_TECH/./modelsim_lib
std	Library	\$MODEL_TECH/./std
std developerskit	Library	\$MODEL_TECH/./std developerskit

Transcript Window:

```

# //
# // NOT FOR CORPORATE OR PRODUCTION USE.
# // THE ModelSim PE Student Edition IS NOT A SUPPORTED PRODUCT.
# // FOR HIGHER EDUCATION PURPOSES ONLY
# //
# vsim -gui
# Start time: 19:54:42 on Sep 27, 2020
# Loading work.and_gate_0001
add wave -position insertpoint sim:/and_gate_0001/*
VSIM 3> quit -sim
ModelSim>
  
```

Project : Digital_Design_Lab <No Design Loaded> <No Context>

New Folder Source Project... Library... Debug Archive...

Open... Load Close Import Export Save Ctrl+S Save As... Report... Change Directory... Use Source... Source Directory... Datasets... Environment Page Setup... Print... Print Postscript... Recent Directories Recent Projects Close Window Quit


C:/Modeltech_pe_edu_10.4a/example...
 \$MODEL_TECH/./floatfixlib
 \$MODEL_TECH/./ieee_env
 \$MODEL_TECH/./infact
 \$MODEL_TECH/./inc2_lib
 \$MODEL_TECH/./mgc_ams
 \$MODEL_TECH/./avm
 \$MODEL_TECH/./lvm-2.1.2
 \$MODEL_TECH/./pa_lib
 \$MODEL_TECH/./lrm
 \$MODEL_TECH/./upf_lib
 \$MODEL_TECH/./lvm-1.1d
 \$MODEL_TECH/./osvmm
 \$MODEL_TECH/./sv_std
 \$MODEL_TECH/./vhdl_opt_lib
 \$MODEL_TECH/./vital2000
 \$MODEL_TECH/./ieee
 \$MODEL_TECH/./modelsim_lib
 \$MODEL_TECH/./std
 \$MODEL_TECH/./std_developerskit

Library Project


Transcript

```
//
// NOT FOR CORPORATE OR PRODUCTION USE.
// THE ModelSim PE Student Edition IS NOT A SUPPORTED PRODUCT.
// FOR HIGHER EDUCATION PURPOSES ONLY
//
vsim -gui
Start time: 19:54:42 on Sep 27, 2020
Loading work.and_gate_0001
add wave -position insertpoint sim:/and_gate_0001/*
VSIM 3> quit -sim
ModelSim>
```

Project : Digital_Design_Lab <No Design Loaded> work



Name	Type	Path
work	Library	C:/Modeltech_pe_edu_10.4a/example...
floatfixlib	Library	\$MODEL_TECH/./floatfixlib
ieee_env (empty)	Library	\$MODEL_TECH/./ieee_env
infact	Library	\$MODEL_TECH/./infact
mc2_lib (empty)	Library	\$MODEL_TECH/./mc2_lib
mgc_ams (empty)	Library	\$MODEL_TECH/./mgc_ams
mbAvm	Library	\$MODEL_TECH/./avm
mbOvm	Library	\$MODEL_TECH/./ovm-2.1.2
mbPA	Library	\$MODEL_TECH/./pa_lib
mbRnm	Library	\$MODEL_TECH/./rnm
mbUPF	Library	\$MODEL_TECH/./upf_lib
mbUvm	Library	\$MODEL_TECH/./uvm-1.1d
osvrm	Library	\$MODEL_TECH/./osvrm
sv_std	Library	\$MODEL_TECH/./sv_std
vhdopt_lib	Library	\$MODEL_TECH/./vhdopt_lib
vital2000	Library	\$MODEL_TECH/./vital2000
ieee	Library	\$MODEL_TECH/./ieee
modelsim_lib	Library	\$MODEL_TECH/./modelsim_lib
std	Library	\$MODEL_TECH/./std
std developerskit	Library	\$MODEL_TECH/./std developerskit

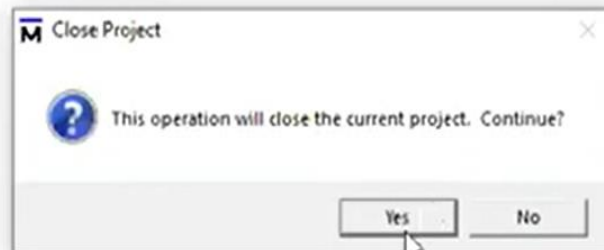


```


//
// NOT FOR CORPORATE OR PRODUCTION USE.
// THE ModelSim PE Student Edition IS NOT A SUPPORTED PRODUCT.
// FOR HIGHER EDUCATION PURPOSES ONLY
//
vsim -gui
Start time: 19:54:42 on Sep 27, 2020
Loading work.and_gate_0001
add wave -position insertpoint sim:/and_gate_0001/*
VSIM 3> quit -sim
ModelSim>

```


Project : Digital_Design_Lab <No Design Loaded>

work

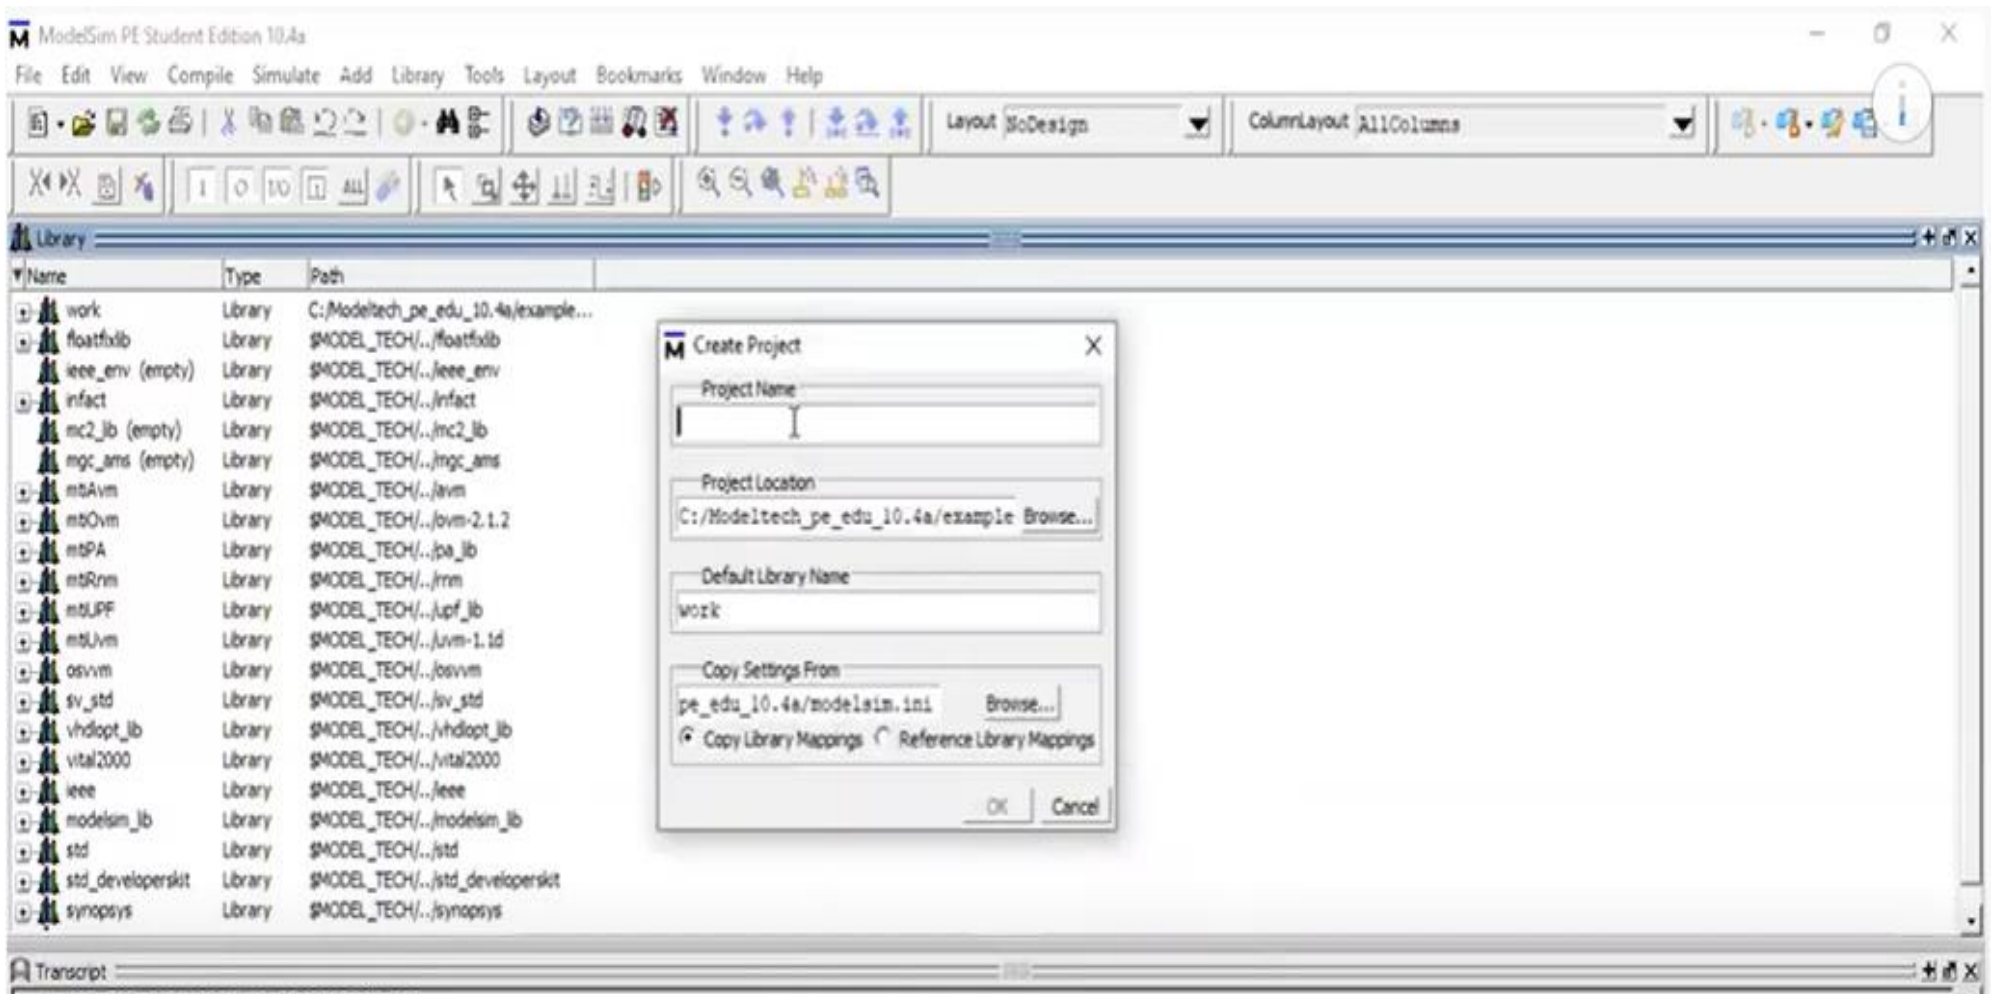





Project - C:/Modeltech_pe_edu_10.4a/examples/20191CSE0002_DDLab

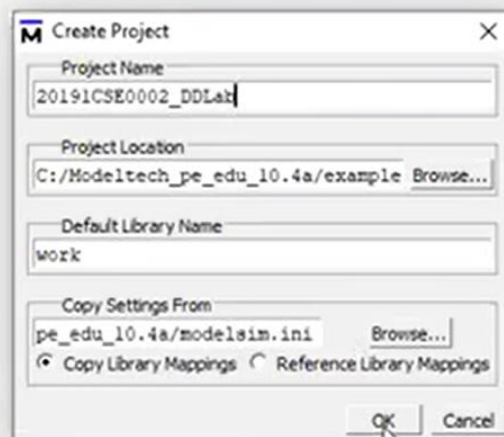

```
Transcript
// THE ModelSim PE Student Edition IS NOT A SUPPORTED PRODUCT.
// FOR HIGHER EDUCATION PURPOSES ONLY
//
vsim -gui
Start time: 19:54:42 on Sep 27, 2020
Loading work.and_gate_0001
add wave -position insertpoint sim:/and_gate_0001/*
VSI3M3> quit -sim
reading C:/Modeltech_pe_edu_10.4a/win32pe_edu/./modelsim.ini
Loading project 20191CSE0002_DDLab
ModelSim>
```


<No Design Loaded>

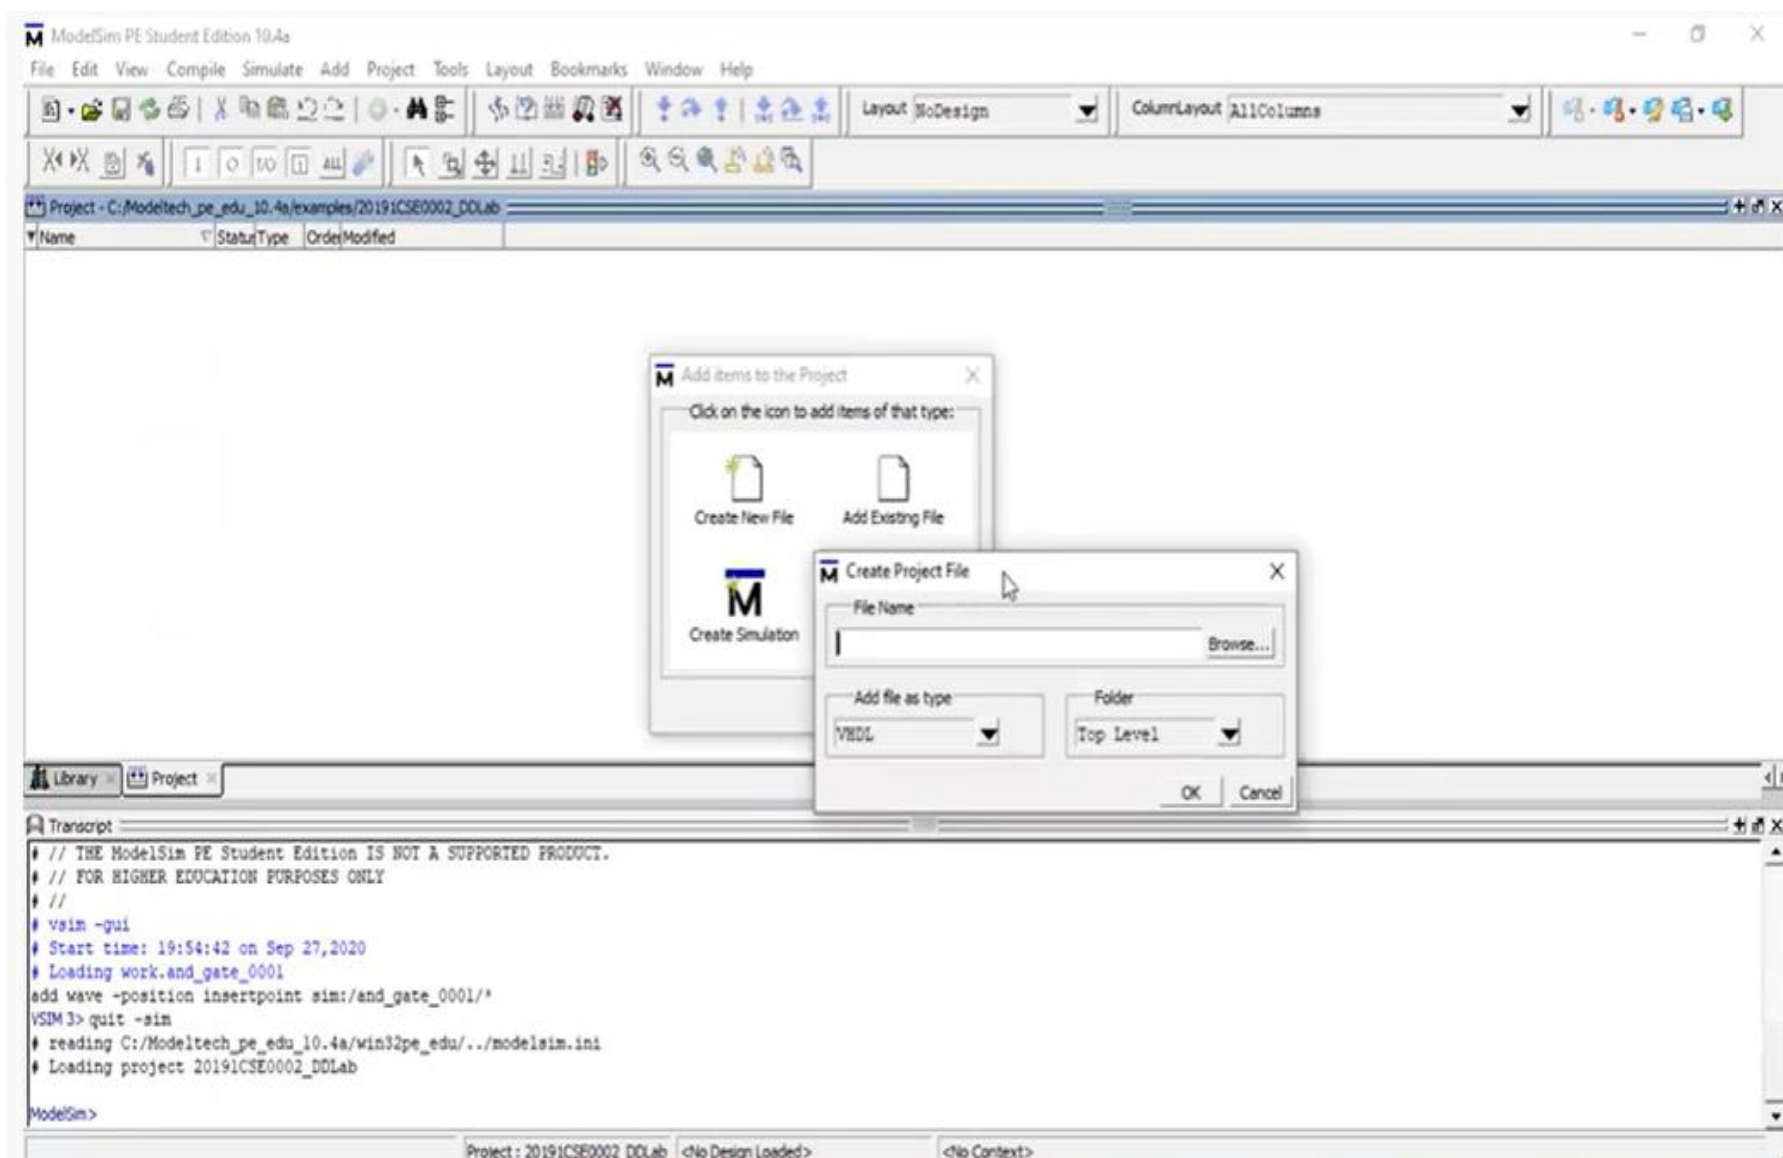



Project - C:/Modeltech_pe_edu_10.4a/examples/20191CSE0002_DDLab

Name Status Type Order Modified

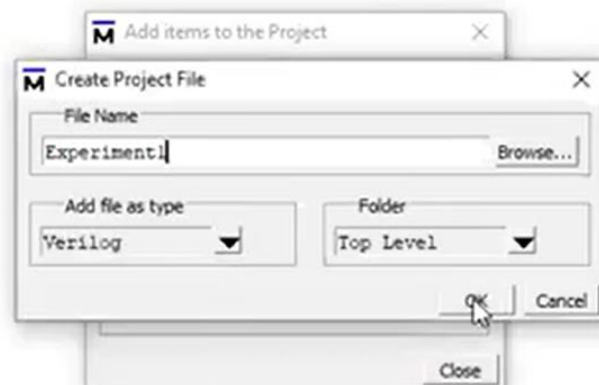

Library Project


Transcript

```
# // THE ModelSim PE Student Edition IS NOT A SUPPORTED PRODUCT.
# // FOR HIGHER EDUCATION PURPOSES ONLY
# //
# vsim -gui
# Start time: 19:54:42 on Sep 27, 2020
# Loading work.and_gate_0001
add wave -position insertpoint sim:/and_gate_0001/*
VSI3M3> quit -sim
# reading C:/Modeltech_pe_edu_10.4a/win32pe_edu/./modelsim.ini
# Loading project 20191CSE0002_DDLab
ModelSim>
```

Project : 20191CSE0002_DDLab


<No Design Loaded>

<No Context>



Project - C:/Modeltech_pe_edu_10.4a/examples/20191CSE0002_DDLab

Name	Status	Type	Order	Modified
Experiment1.v	?	Verilog	0	09/27/2020 08:12:37 ...

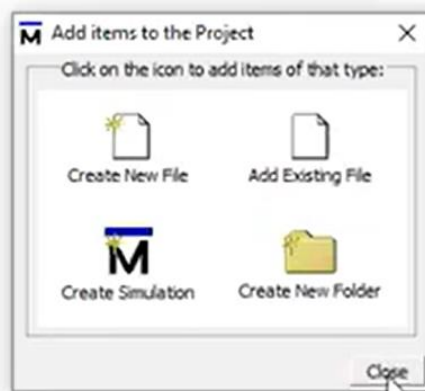

Library Project

Transcript

```
// THE ModelSim PE Student Edition IS NOT A SUPPORTED PRODUCT.  
// FOR HIGHER EDUCATION PURPOSES ONLY  
//  
vsim -gui  
Start time: 19:54:42 on Sep 27, 2020  
Loading work.and_gate_0001  
add wave -position insertpoint sim:/and_gate_0001/*  
VSI3M3> quit -sim  
reading C:/Modeltech_pe_edu_10.4a/win32pe_edu/./modelsim.ini  
Loading project 20191CSE0002_DDLab  
ModelSim>
```

Project : 20191CSE0002_DDLab

<No Design Loaded>

<No Context>

Preliminary Verilog Codes

Basic Gates – AND Gate

```
module and_gate(a,b,y);  
input a,b;  
output y;  
assign y = a & b;  
endmodule
```

AND Gate using Gate level Modeling

```
module and_g(a,b,c);
```

```
input a, b;
```

```
output c;
```

```
and (c, a,b);
```

```
endmodule
```

Basic NAND Gate

```
module nandg (in1,in2,out);  
input in1, in2;  
output out;  
assign out = ~ (in1 & in2);  
endmodule
```