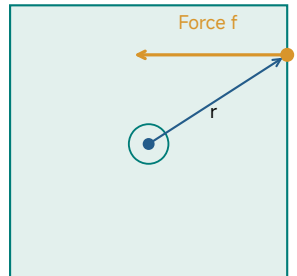

Cube center O

Moment: $\tau = r \times f$

Here, the moment points out of the page.

Lever arm and force must use the same frame.