
Agar mini

Custom ZMK Layout
Key Function Manual

ZMK FIRMWARE

Quick tip: a key with a **grey tag** types its legend when tapped and acts as the tag when held. Blank keys pass through to Layer 0.

Layer 0 BASE

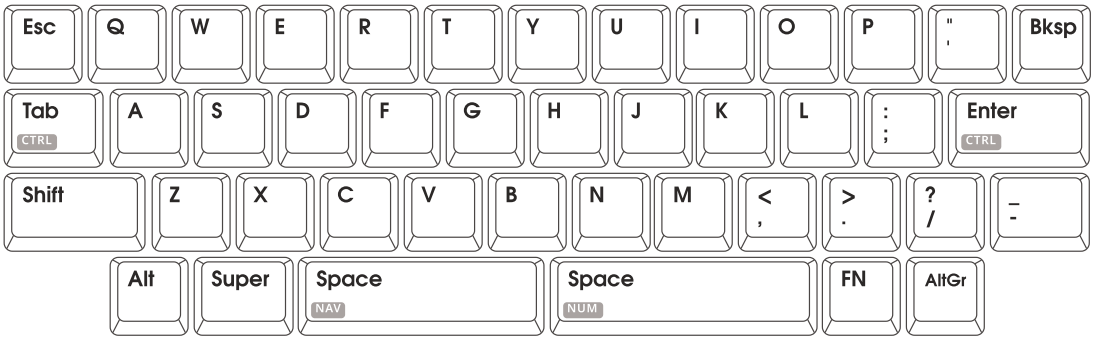

CTRL **Hold for Ctrl** on Tab and Enter


NUM **Hold for Layer 1** right Space

NAV **Hold for Layer 2** left Space

FN **Hold for Layer 3**

Super **Plain key**, no hold-tap

Layer 1 NUM

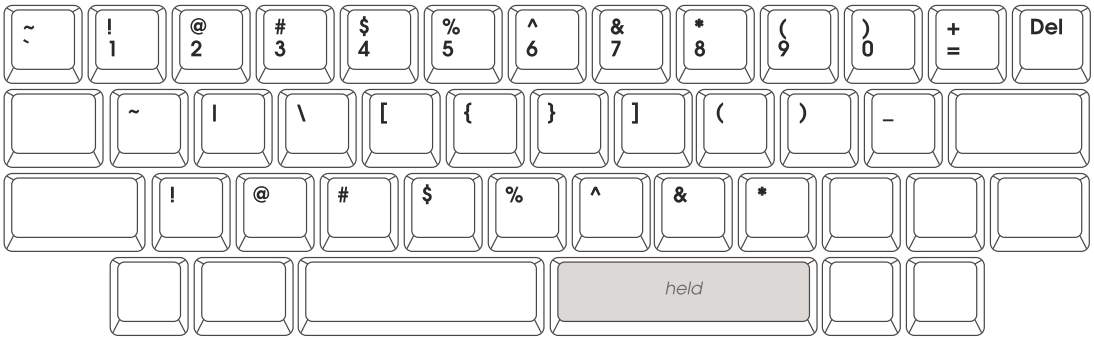


Hold right Space

1–0 **Super + number** switches mango workspace

. / - **Pass through** for `~/`, `1.5`, IPs

Layer 2 NAV

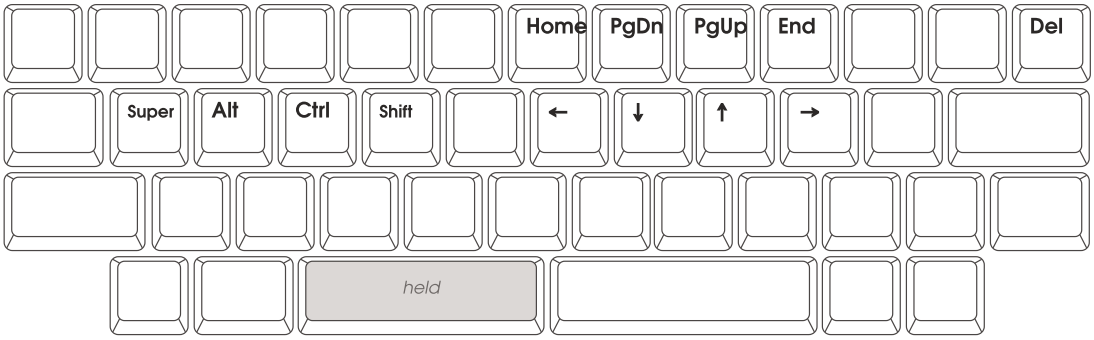


Hold left Space

← ↓ ↑ → **Arrows on hjkl**

Ctrl **Left home row:** plain modifiers for modified arrows

Home **Home, PgDn, PgUp, End** sit above the arrows

Layer 3 FN

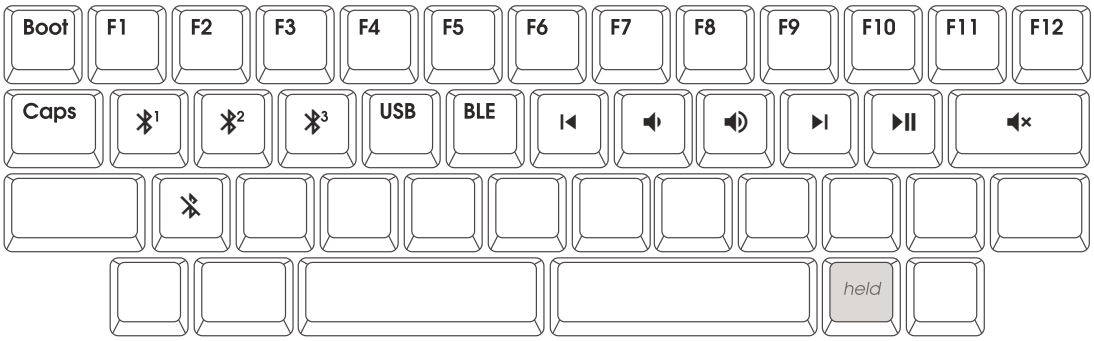

Hold FN

BT1 **Select Bluetooth profile 1–3**

BT **Clear pairing** of the current profile

USB **Switch output** to USB or BLE

Boot **Bootloader** for flashing

⏮ ⏯ ⏭ **Media** previous, play/pause, next

🔉 🔊 🔇 **Volume** down, up, mute

Everyday shortcuts

ACTION	SENDS	KEYS
Switch workspace	`Super+3`	Super + hold R Space + E
Move window to workspace	`Super+Shift+3`	Super + Shift + hold R Space + E
Workspaces 6–0	`Super+6 … Super+0`	Same chord with Y U I O P, nothing pinned
Terminal / kill / overview	`Super+Return, Super+q, Super+e`	Super + one key
Move / resize window	`Super+drag`	Super + left or right mouse drag
Focus direction	`Super+Left`	hold L Space + A + H
Swap window	`Super+Shift+Left`	hold L Space + A + F + H
Kitty tab	`Alt+3`	Alt + hold R Space + E
Terminal Ctrl, tmux prefix	`Ctrl+C, Ctrl+R, Ctrl+P`	hold Tab + letter
Kitty copy / paste	`Ctrl+Shift+C / V`	hold Enter + Shift + C / V
Accept fish autosuggestion	`Right / Ctrl+F`	hold L Space + L, or hold Tab + F

No mango config changes are needed: every chord sends exactly what a full-size keyboard would.

Hold-tap tuning

KEY	FLAVOR	TAPPING-TERM-MS	QUICK-TAP-MS	REQUIRE-PRIOR-IDLE-MS
Space / NAV	balanced	200	175	150
Space / NUM	balanced	200	175	—
Tab / Ctrl, Enter / Ctrl	balanced	200	175	150

- `quick-tap-ms`: tap then hold repeats the tap key, e.g. hold Space for repeated spaces.
- `require-prior-idle-ms`: pressed mid-word, the key is a plain tap, which prevents misfires.
- Space / NUM has no `require-prior-idle-ms`; otherwise typing `port 8080` quickly would give letters instead of digits.
- Super and Alt are plain keys with no hold-tap, so typing can never fire `Super+q` or `Super+n`.

Design

1. **Super is a plain key** under the left thumb, on the stock Alt position.
2. **One layer per thumb.** Left Space holds NAV, right Space holds NUM; both type a space when tapped.
3. **Ctrl on the home row:** hold Tab or hold Enter.
4. **No arrow cluster.** Arrows live on hjkl in NAV; the freed keys hold `' / -`.

Optional extras

- **Combo J+K = Esc**, popular with Helix users.
- **xkb variant `altgr-intl`**: `us intl` makes `' " ` ~ ^` dead keys; `altgr-intl` keeps accents behind AltGr.

Dropped from stock

Mouse keys (trackpad available), Win+V, Print Screen (mango uses Super+Shift+S), Insert, Pause, Scroll Lock.