NOTICE OF INTENT

This document provides information concerning Gas Turbine reference materials and hyperlinks to tools that should be used to assist the Gas Turbine Field Engineer in performing his or her duties.

This document does not purport to cover all aspects of tools or sources of information currently available to Field Engineers. Unit-specific details are not provided in this document. All sketches and descriptions are to be considered “Typical” within this document unless otherwise specified. This document is property of General Electric and is considered Company Proprietary Information.

HEALTH AND SAFETY REQUIREMENTS

The GI&FS Environmental Health & Safety Manual (EHSM) outlines the requirements that must be followed on the job site during an installation or maintenance outage.

Safety, health, and protection of the environment must be an integral part of all business operations, design, construction and start-up, and includes EHS planning prior to and during work to anticipate and minimize hazards and incidents. Every reasonable effort must be made to create and maintain a safe and healthy work environment at each customer site.

Where working conditions are not covered by these safety requirements and procedures, or when a requirement or a procedure is not completely understood, obtain specific instructions or clarification from manager, supervisor or EHS before proceeding with the work.

INTRODUCTION

This article provides information regarding historical Gas Turbine information, useful Web sites and various information that may assist a TA to perform an installation or maintenance based job efficiently.

SECTION 1. GAS TURBINE MODEL LIST NOMENCLATURE

Each Gas Turbine is identified by a Model List number. A typical Model List number is formatted by arranging abbreviations in a certain pattern. This pattern defines characteristics for each Gas Turbine. Reference Table 1 for the possible abbreviation nomenclature that may be used within the ML number.

Example:

ML-7A1WFA112-2

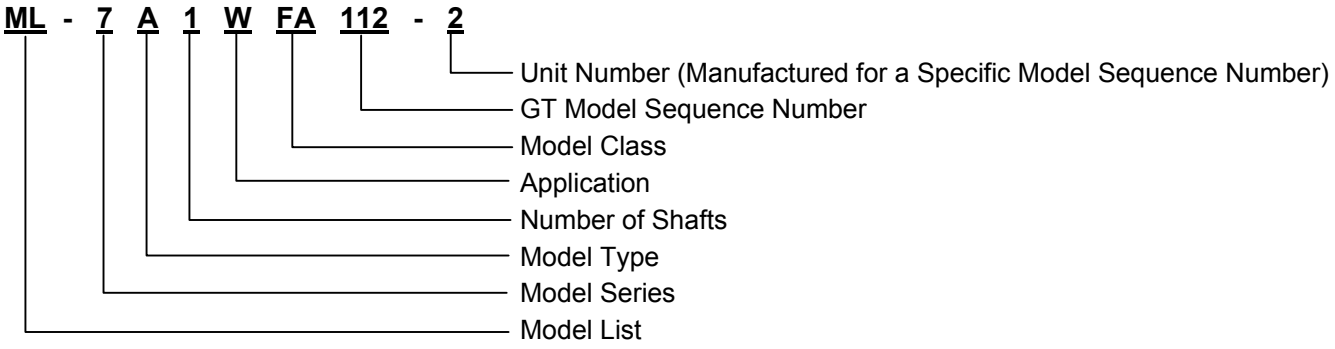


Figure 1. ML Number Nomenclature Key

By following the key in Figure 1 and the ML Abbreviation Nomenclature found in Table 1, the Gas turbine identified as ML-7A1WFA112-2 can be described as a Frame 7FA, simple cycle, single shaft Gas Turbine manufactured with a snowflake compressor case for a package power plant utility. Additionally, this is the 112th 7FA set manufactured, and this specific turbine is the second Gas Turbine within this set for a specific customer.

Table 1.ML Abbreviation Nomenclature

Model Series	Model Type	Number of Shafts	Application	Model Class	GT Model Sequence Number	Unit Number
3 = MS3000	A = Simple Cycle, Single Shaft	1	B = Power Block, Utility	B	0 to X **	1 to X **
5 = MS5000	B = Regenerative Cycle, 2 Shaft	2	C = Mechanical Drive, Pipeline	C		
6 = MS6000	C = Compound Cycle, 2 Shaft		D = Boiler, Supercharger	E		
7 = MS7000	D = Non-Regenerative, 2 Shaft		E = Locomotive	EA		
9 = MS9000	E = Regenerative Cycle, Single Shaft		F = Air Compressor	EC		
	F = Air Compressor		G = Generator Drive, Utility	F		
	Z = Undefined		H = Generator Drive, Industrial	FA		
			J = Generator Drive, Marine	FB		
			K = Generator Drive, Pipeline	H		
			M = Mechanical Drive, Industrial	N		
			N = Mechanical Drive, Marine	P		
			P = Package Power Plant, Utility			
			Q = Central Station			
			R = Synchronous Condenser			
			S = Ship Propulsion, Marine			
			T – STAG-Mechanical Drive, Industrial			
			V = Stag-Generator Drive, Industrial			
			W = Snowflake Compressor Casing – Package Power Plant, Utility			
			X = STAG-Mechanical Drive, Pipeline			
			Y = STAG-Generator Drive, Utility			
			Z = Undefined			

** “X” designates the last number in the series.

SECTION 2. SALEM AND PPSD DOCUMENTS

For over 30 years, GE has used a numbering scheme to help identify the **type** of document (publication). These numbers include a 3-letter alphabetic prefix, a numerical base number for that particular prefix, and alphabetic suffixes to identify revision and language, as shown in the following figure.

Example

GEH-0000A(F)

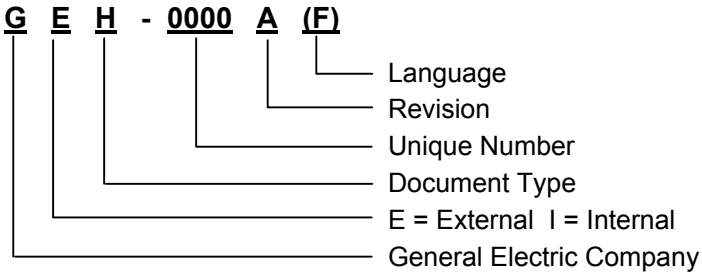


Figure 2 – Salem and PPSD Document Number Key

Document Type Prefix

GEH Complete instructions (for example, installation, operation, and maintenance) covering standard equipment normally built in large quantities.

GEI Partial instructions on a standard piece of equipment. Also, complete instructions covering special equipment or for very limited distribution.

GEJ Instruction material in nonstandard sizes, such as publications, tags, and stickers.

GEK Complete instructions covering special equipment or for very limited distribution, such as requisition specific equipment or systems.

GEA Standard 8 1/2 by 11 in. sales promotion publication. It is primarily intended to promote the use of a GE product or specific product design. A GEA stresses the advantages of various features and their applications. It can include ordering, buying, and pricing information.

GEB Binders and covers used in quantity, stocked, and likely to be reordered with the same lettering.

GECD Compact discs, usually containing existing documents.

GED Non-standard size sales promotion publication with the same purpose and content as a GEA.

GEE Renewal parts photographs; since 1998, external electronic media for GE Industrial Systems marketing communications.

GEF Renewal Parts information covering standard equipment built in large quantities.

GEG Renewal Parts information covering either standard equipment built in limited quantities or special equipment for one customer.

GEL Merchandising displays, such as posters, wall charts, and product exhibits.

GEM Dimension or connection diagrams for standard equipment.

GEN Novelties, useful articles, special marketing devices to advance a selling idea (such as a calculator), intended for customers or prospects to advance good will and create publicity.

GEO Periodicals.

GEP Catalogs and Information from handbooks.

GER Reprints of published articles.

GES Time characteristic curves.

GET Original technical discussions (as opposed to GERs), such as those on industrial processes or on the design, characteristics, and application of GE equipment.

GEX Renewal parts catalogs for individual customers.

GEZ Miscellaneous printed matter that cannot logically carry another number.

The following numbers are used for documents for GE internal use only, which includes Agents and Distributors as well as customers:

GIA Market and sales information intended to aid or inform GE sales personnel.

GID Same as a GIA, but not 8 1/2 by 11.

GIT GE engineering application data that is not for distribution to customers or general publication.

GIZ Reference manuals and indexes, special stationery, special forms, folders, and other miscellaneous items.

Revision Suffix

When a document is revised, its publication number must include an alphabetic suffix that identifies the revision. For example, the number *GEH-5834A* indicates first published revision of GEH-5834. On the front cover and title page, the document should also include *Supersedes GEH-5834* underneath the new document number.

SECTION 3. MODEL LIST ITEM (MLI) LIST

MLI	DESCRIPTION
0000	UNDEFINED
0001	UNDEFINED
0002	UNDEFINED
0003	UNDEFINED
0004	UNDEFINED
0005	UNDEFINED
0006	UNDEFINED
0007	UNDEFINED
0008	UNDEFINED
0009	UNDEFINED
0010	UNDEFINED
0011	UNDEFINED
0012	UNDEFINED
0013	UNDEFINED
0014	UNDEFINED
0015	UNDEFINED
0016	UNDEFINED
0017	SERVICE MANUAL-VOL 1,2,3
0018	SERVICE MANUAL-PL&D VOL
0019	UNDEFINED
0020	SEISMIC REPORT
0021	SHIM,ROTOR,COMPRESSOR,ASM
0022	ROTOR BOLT
0023	NUT CLINCH
0024	FMI
0025	POWER SYSTEM STUDY
0026	CM&U BOM CPT
0027	AS-BUILTS
0029	TIL
0030	PLUG O-RING
0040	MS/SCHEMATICS
0041	MS/ SCHENECTADY SCHEMATICS
0042	MS/ GREENVILLE SCHEMATICS
0043	GT INSTALLATION PPG PACKAGE
0044	GT INSTALLATION CONDUIT PKG
0050	MS/M&I DRAWINGS
0053	VNDR DWGS,MSD ELEC ELEM
0054	VNDR,DWGS, MSD ELEC O/L
0060	DESIGN REPORT
0061	Motor Data Sheets
0062	Pump Data Sheets
0063	Acoustics Data Sheets
0064	INSTRUMENT DATA SHEETS
0065	DESIGN REVIEWS
0066	RCA CORRECTIVE ACTION CPT
0067	MODEL, 3D PLANT
0069	REPORTS
0070	Elementary Diagrams
0071	UNDEFINED
	RAPID DEPLOYMENT DRAWING
0100	OPENING LETTER
0101	CHECK-OFF LIST
0102	STAMPING,IDENTIFICATION&ASSY
0103	SHIPPING ATTACHMENT ARR
0104	TOOL KIT
0105	INSTRUCTION,TOOL USE
0106	INSTALLATION&START-UP EXTRAS
0107	PLATE,LIFTING,CONTROL COMPT
0108	INSTRUCTION,CLEANING&PAINTING
0109	INSTRUCTION,CLEAN&PAINTING,MSD
0110	INSTL&START-UP EXTRAS,STATION
0111	INSTRUCTION,PKG,MKG&SHIPPING
0112	PROJECT SPECIFICATION
0113	INSTRUCTIONS,TEST-FIRE PROT
0114	MATRIX,CUSTOMER DRAWINGS
0115	DFM AGENDA/CHECKLIST
0116	GE/CUST TASK FORCE AGREE
0118	EC CERTIFICATION,ACCY
0119	EC CERTIFICATION,TURB
012	INLET CASING-MODS
0120	EC CERTIFICATION,SUMM
0121	MITI DATA SHEETS
0122	DATA BLOCKS & OPER. CASES
0123	CANADIAN REGISTRATION NO (CRN)
0124	SAFETY REVIEWS
0125	CFD ANALYSIS REQUIREMENTS
0180	PED TECH SUMMARY
0197	CEE STANDARD
0199	DESIGN QUALITY PLAN
0201	INSTRUCTION,TEST-GENERAL
0202	INSTRUCTION,TEST-ACCESSORIES
0203	INSTRUCTION,TEST-CONTROL
0204	INSTRUCTION,TEST-PIPING
0205	INSTRUCTION,TEST-ELECTRICAL
0206	CONTROL ARR,TEST
0207	FUEL NOZZLE ASSY,TEST
0208	CAP&LINER ASSY,COMBUSTION-TEST
0209	SLEEVE ASSY,FUEL NOZZLE-TEST
0210	PLUG,FALSE START DRAIN-TEST
0211	INSTRUMENTATION ARR,UNIT
0212	INSTRUMENTATION,TEST-SPECIAL
0213	INSTM,TEST-INLET CASE PRESS
0214	INSTM,TEST-VIBRATION SENSORS
0215	INSTRUMENTATION,TURBINE CASE
0216	INSTM,MACH,TURBINE CASE
0217	TUBE ASSY,IMPACT
0218	THERMOCOUPLE ARR,TURB WHL-1STG
0219	INSTM ARR,CPRSR DISCHARGE CASE
0220	INSTM,CPRSR INLET CASE&1BRG
0221	THERMOCOUPLE,CPRSR-INLET FLG
0222	TRANSITION PC ASSY,COMB-TEST
0223	TUBE ASSY,AIR,WHEEL-1STG,FWD
0224	ORIFICE,TEST-LUBE OIL
0225	CHAMBER ARR,COMBUSTION-TEST

0226 INSTRUCTION,TEST-UNIT
0227 INSTR,TEST-SPECIAL REQN REQT
0228 INSTM,TEST-INLET CASE&1BRG
0229 INSTM,TURBINE LUBE SYSTEM
0230 ORIFICE,TEST-LUBO LOAD FILTER
0231 ORIFICE,TEST-LUBO HYDR PUMP
0232 THERMOCOUPLE ASSY,BRG-2,3&4
0233 ORIFICE,TEST-LUBO HEAT EXCH
0234 INSTRUCTION,TEST-FIELD
0235 INSTRUMENTATION ARR,BEARING
0236 PARTS LIST,SPECIAL EQUIPTMENT
0237 CASING FLANGES
0238 TEST REQUIREMENTS -COMBUSTION
0239 OUTLINE, MECH. INTERFACES
0301 OUTLINE,GT PACKAGE CONN-ELEC
0302 OUTLINE,PURCH MOUNTED DEVICES
0303 OUTLINE,TEMP XMTR&BULB-SUGG
0304 OUTLINE,EXH TC&DETECTOR-SUGG
0305 OUTLINE,MECHANICAL
0306 OUTLINE,MECH-GT&LOAD
0307 NOTES,MECH OUTLINE-GT&LOAD
0308 OUTLINE,SOLE PLATES
0309 OUTLINE,SUB-SOLE PLATES-SUGG
0310 OUTLINE,UNIT FIELD ASSY
0311 SPEC,TURBINE INSULATION
0312 INSULATION,COMB AIR PP-SUGG
0313 OUTLINE,GT PACKAGE CONN-PIPING
0314 NOTES,GT PKG CONN OUTLINE-PP
0315 OUTLINE,BASE INSULATION-SUGG
0316 OUTLINE,PURCHASER CONN-STA AIR
0317 ENCLOSURE,TURB TO BLDG-SUGG
0318 OUTLINE,LUBE PACKAGE
0319 NOTES,SPECIAL INSTRUCTIONS
0320 OUTLINE,ELECTRICAL-CONT PANEL
0321 OUTLINE,HEAT EXCH UNIT-LUBO
0322 OUTLINE,PUMPING UNIT-LUBO
0323 PL,FOUNDATION INTERFACE OTLN
0324 OUTLINE,OFF-BASE EQUIPMENT
0325 OUTLINE,FILTERING UNIT-LD LUBO
0326 OTLN,FDN INTFC,OFF-BASE,MECH
0327 INSULATION,FLD INSTALLED-SUGG
0328 OUTLINE,EXH END-REQD CLEARANCE
0329 INTERFACE,TURBINE
0330 OTLN,FDN INTFC,OFF-BASE,ELEC
0331 HAZARDOUS AREA MAP
0363 MAIN FND COND/CABLE ASIGN
0399 CUSTOMER INTERCONNECTIONN PACKAG
0401 DIAGRAM,CONNECTION-TURBINE
0402 DIAGRAM,CONNECTION-PACKAGE
0403 DIAGRAM,ELEMENTARY
0404 DIAGRAM,CLEARANCE-UNIT ASSY
0405 DIAGRAM,SHAFT TORSIONAL DATA
0406 GAS TURBINE ARR
0407 WT&CG,GAS TURBINE UNIT
0408 WT&CG,GAS TURBINE PACKAGE
0409 DIAGRAM,ALIGNMENT
0410 INSTRUCTION,ALIGNMENT-FACTORY
0411 INSTRUCTION,ALIGN-FIELD,BASIC
0412 DATA,TEMP&HEAT RADIATION
0413 VENT ARR,OIL TANK-SUGG
0414 DEVICE SUMMARY
0415 DIAGRAM,CONT DEVICES-TURBINE
0416 DIAGRAM,SCHEM PP-LUBE OIL
0417 DIAGRAM,SCHEM PP-CLG&SLG AIR
0418 DIAGRAM,SCHEM PP-TRIP OIL
0419 DIAGRAM,SCHEM PP-CONTROL AIR
0420 DIAGRAM,SCHEM PP-COOLING WATER
0421 DIAG,SCHEM PP-STARTING MEANS
0422 DIAGRAM,SCHEM PP-FUEL GAS
0423 DIAGRAM,SCHEM PP-DISTILLATE FO
0424 DIAGRAM,SCHEM PP-LIQ FUEL
0425 DIAGRAM,SCHEM PP-ATOMIZING AIR
0426 DIAGRAM,SCHEM PP-FIRE PROTECT
0427 DIAGRAM,SCHEM PP-LIQ FUEL FWD
0428 DIAGRAM,SCHEM PP-STATION AIR
0429 DIAG,SCHEM PP-STEAM TURB CONT
0430 DIAG,SCHEM PP-ST TURB ST SYS
0431 DIAGRAM,SCHEM PP-ST INJECTION
0432 DIAGRAM,SCHEM PP-INLET AIR HTG
0433 DIAGRAM,SCHEM PP-HUMID CONTROL
0434 DIAGRAM,SCHEM PP-HYDR SUPPLY
0435 CABLE INSTL DATA,SPEEDTRONIC
0436 DIAGRAM,FLOW-HEATING&VENT
0437 DIAG,SCHEM CONT-SPEEDTRONIC
0438 DOCUMENT LIST,GTD TO CUSTOMER
0439 DIAGRAM,SCHEM PP-HYDR FAN DR
0440 DIAGRAM,SCHEMATIC,LOAD EQUIP
0441 DIAG,SCHEM PP-TURB&CPRSR CLN
0442 DIAG,SCHEM PP-TURB&CPRSR WSHG
0443 DIAGRAM,SCHEM PP-CPRSR CLN
0444 DIAGRAM,ONE LINE
0445 DIAGRAM,INTERCONNECTION
0446 STARTING SYSTEM
0447 LIQUID FUEL SYSTEM
0448 FUEL GAS SYSTEM
0449 ATOMIZING AIR SYSTEM
0450 CONTROL OIL SYSTEM
0451 RATCHET STARTING SYSTEM
0452 HYDRAULIC SUPPLY SYSTEM
0453 COOLING WATER UNIT
0454 LUBE OIL SYSTEM
0455 COOLING&SEALING AIR SYSTEM
0456 FUEL PROCESSING SYSTEM
0457 FIRE PROTECTION SYSTEM
0458 HEATING&VENTILATION SYSTEM
0459 INLET GUIDE VANE SYSTEM
0460 DIAG,SCHEM PP-HYDR BRAKE SYS
0461 DIAG,SCHEM PP-WATER WASH UNIT
0462 DIAG,SCHEM PP-WATER INJ SYS
0463 DIAGRAM,BLOCK,CABLE

0464 DIAG,SCHEM PP-HYDROGEN SERVICE
0465 INSTRUCTION,LUBE OIL SELECTION
0466 WIRE LIST,TURBINE COMPT
0467 WIRE LIST,ACCESSORY COMPT
0468 DIAG,SCHEM PP-MULTIFUEL SELECT
0469 DIAGRAM,SCHEM PP-IGV
0470 WIRE LIST,FIELD
0471 DIAGRAM,FLOW-INLET&EXHAUST
0472 TIMER SETTINGS,DISCH-C02 SYS
0473 DIAG,SCHEM-ATTEMPERATOR CONT
0474 DIAG,SCHEM PP-HAZ GAS DETECTOR
0475 INSTRUCTION,CONDUIT SEALING
0476 DIAGRAM,BLOCK-SEQUENCE
0477 DIAGRAM,SCHEM PP-FUEL PURGE
0478 DIAG,SCHEM PP-LUBRICATION UNIT
0479 DIAG,SCHEM PP-HEAVY FUEL UNIT
0480 DIAG,SCHEM PP-FUEL FLTR UNIT
0481 DIAGRAM,SCHEM PP-LIQ FUEL PRCS
0482 DIAG,SCHEM PP-FUEL GAS
0483 DIAG,SCHEM PP-GAS METER MODULE
0484 DIAG,SCHEM PP-DRY SCRUBBER
0485 DIAG,SCHEM PP-GAS HEATER
0486 DIAG,SCHEM PP-CPRSR BOOSTER
0487 DIAG,SCHEM PP-PRESS REDUCING
0488 DIAG,SCHEM PP-FILTER SEPARATOR
0489 DIAGRAM,SCHEM PP-LO&CTL INTCON
0490 DIAG,SCHEM PP-FUEL GAS SELECT
0491 SCHEM PP-NITROGEN INJ
0492 DIAG,SCHEM PERF MONITOR
0493 DIAG,SCH COOLING STEAM
0494 SCHEMATIC-VANADIUM INHIB
0495 DIAG,SCHEM LOAD GEAR
0497 DIAG,SCHEM CLEARANCE CONTROL
0498 DIAG,SCHEM COOLING AIR MODULE
0499 DIAG,SCHEM LF HP FILTER OFF-BASE
0501 CONTROL ARR
0502 CONTROL ARR,ACCESS SYSTEMS
0503 OVERSPEED TRIP ASSY,HP
0504 OVERSPEED TRIP ASSY,LP
0505 PANEL ASSY,CONTROL AIR
0506 PANEL ASSY,EXHAUST TEMP CONT
0507 VALVE,STOP-FUEL GAS
0508 FLOW DIVIDER&MAG PICKUP ARR
0509 VALVE ASSY,CONTROL-FUEL GAS
0510 PUMP ARR,FUEL
0511 VALVE,STOP-FUEL OIL
0512 FUEL NOZZLE ASSY,DUAL FUEL
0513 FUEL NOZZLE ASSY,GAS
0514 FUEL NOZZLE ASSY,OIL
0515 ADAPTER ASSY,GOVERNOR GEN
0516 VALVE ASSY,BYPASS-FUEL OIL
0517 REGULATOR ASSY,FUEL
0518 PUMP&SERVO ASSY,CONTROL
0519 SERVO ASSY,HYDR POSITIONING
0520 VENT ASSY,GAS COMPARTMENT
0521 CONTROL ASSY,TEMP-EXH PLENUM
0522 RATCHET GEAR,HYDRAULIC
0523 DIVIDER,VCO PRESSURE
0524 PRESSURE XMTR&CONTROLLER ASSY
0525 FUEL GAS COMPARTMENT
0526 SERVO ARR,NOZ CONT-2STG
0527 INSTR,NOZ CONT-STG 2
0528 RHEOSTAT&CASE ASSY,NOZZLE STAB
0529 GOVERNOR GENERATOR,LOW PRESS
0530 VALVE,DUMP-NCO&VCO
0531 SHIELD ASSY,RADIATION-EXHAUST
0532 SERVO ARR,STOP VALVE
0533 SERVO ARR,BYPASS VALVE
0534 VALVE,STOP,RATIO&CONT-HI BTU
0535 BOLT ASSY,OVERSPEED-HP
0536 BOLT ASSY,OVERSPEED-LP
0537 ACTUATOR&RHEO ASSY,NOZ CONT
0538 STARTING MEANS ARR
0539 GEAR&COUPLING,RADIATOR FAN DR
0540 SERVO ARR,IGV
0541 SERVO ARR,STOP R&CONT V-GAS
0542 ALTERNATOR,INDUCTOR
0543 PICKUP ARR,MAGNETIC-LP
0544 VALVE,STOP,RATIO&CONT-MASTER
0545 HOLDER,JCT BOX-MAGNETIC PU,HP
0546 PICKUP ARR,MAGNETIC-HP
0547 NOZZLE ARR,CONTROL-2STG
0548 ACCUATOR ARR,IGV
0549 PUMP ASSY,OIL-HYDR RATCHET
0550 VALVE,CONTROL-WATER INJECTION
0551 ACTUATOR ASSY,HYDRAULIC-FLAP
0552 ACTUATOR ASSY,HYDRAULIC-ASTERN
0553 SERVOVALVE,HYDR-LIQ FUEL PUMP
0554 TRANSITION PC ASSY,FUEL NOZZLE
0555 TIP,FUEL NOZZLE-GAS,SWIRL
0556 CONTROLLER ASSY,HYDRAULIC
0557 PRESSURE TRANSDUCER ARR,UNIT
0558 MONITOR,PERFORMANCE-DATATRONIC
0559 SENSOR ARR,INLET/EXHAUST
0560 VALVE,CONTROL-FUEL OIL
0561 SERVO ARR,STEAM INJECTION CONT
0562 CONTROL,DETECTOR,FIRE-UV
0563 SERVO ARR,FUEL OIL CONTROL
0564 VALVE,SPLITTER,GAS FUEL
0565 SERVO ARR,SPLITTER VALVE-GAS
0566 FUEL NOZZ,SEC DLN
0567 VALVE,TRANSFER FG
0568 SERVO ARR,TRANS VALVE-FG
0569 STOP VALVE,DLN,GAS PREMIX
0570 VALVE,LF NOZZLE ISOLATION
0571 VALVE,WI STAGING
0572 FG EMERGENCY STOP VALVE
0573 SERVO ARRANGEMENT,PREMIX STOP
0574 ACTUATOR ARR VGV
0575 SERVO ARR, VGV

0576	CONTROL VLV, N2 INJECTION
0577	STOP VLV, N2 INJECTION
0578	VALVE,ARR.SPLITER VALVE LIQ
0579	SERVO ARR,SPLITER VALVE LIQ
0581	VALVE, AUX STOP- SYNGAS
0582	VALVE, STOP RATIO -SYNGAS
0583	VALVE, CONTROL -SYNGAS
0601	DRIVE,ACCESSORY
0602	ENGINE,DIESEL-STARTING
0603	MOTOR,STARTING
0604	TURBINE,EXPANSION-STARTING
0605	TORQUE CONVERTER
0606	DRIVE,ACCESSORY-FINAL
0607	COMPRESSOR,AIR,ATMG
0608	FAN,RADIATOR
0609	DRIVE,RADIATOR FAN
0610	COMPRESSOR,AIR-CONTROL
0611	PUMP,FUEL OIL
0612	PUMP,CONTROL
0613	FLOW DIVIDER,LIQUID FUEL
0614	MOTOR,HYDRAULIC
0615	CPLG,ACCESS DR TO RDTR FAN DR
0616	COUPLING,RDTR FAN DR TO FAN
0617	COUPLING,ACCESS GR TO AUX GEN
0618	DEVICE,OVER TEMPERATURE TRIP
0619	VALVE,OVER TEMPERATURE TRIP
0620	PNEUMATIC POSITIONER
0621	TRANSDUCER,PNEUMATIC-POSITION
0622	RHEOSTAT,CONTROLLER
0623	THERMOCOUPLE,EXHAUST
0624	MUFFLER,DIESEL ENGINE
0625	TEMPERATURE SYSTEM
0626	MOTOR,DIESEL START
0627	PUMP,HYDRAULIC-HP
0628	PUMP,HYDRAULIC-AUX,HP
0629	VALVE,HYDR TRIP RELAY-OLT/OHT
0630	VALVE,HYDR TRIP RELAY-LOW
0631	THERMOCOUPLE,EXH-ALARM&TRIP
0632	VALVE,HYDR TRIP RELAY-LOW LUBO
0633	GEAR,REVERSING
0634	CLUTCH,ELECTRO-MECHANICAL
0635	DRIVE ASSY,CHAIN-STARTING
0636	PUMP,ROTARY-PROP PITCH CONTROL
0637	THERMOCOUPLE ARR,REMOVABLE
0638	PUMP,FUEL INHIBITING
0639	FUEL GAS FLOW MEASUREMENT SYS
0640	COMPUTER,FLOW MEASUREMENT
0641	GEAR,TURNING
0642	MOTOR,ACCESS DRIVE
0643	PYROMETERS, TURBINE CASING
0644	EXHAUST T/C RAKE
0701	CHAMBER ARR,COMBUSTION
0702	TRANSITION PC ASSY,COMBUSTION
0703	CAP&LINER ASSY,COMBUSTION
0704	FRM & BRG ARR TB
0705	CASE ARR,TURBINE
0706	FRAME ASSY,EXHAUST
0707	SKIN ASSY,EXHAUST
0708	CASE,COMBUSTION-OUTER
0709	CASE,MACH,TURBINE
0710	CASE&SHROUD ASSY,TURBINE
0711	EXPANSION JY,GTRB TO EXH DUCT
0712	CASE,COMBUSTION-OUTER WRAPPER
0713	VANE, GUIDE-EXHAUST
0714	CASE ASSY,COMB-INTERMEDIATE
0715	SUPPORT ASSY,BEARING-4
0716	ELBOW,MACH,COMB CASE-OUTER
0717	TRANSITION PC ARR,COMBUSTION
0718	FRAME ASSY,EXHAUST&3 BEARING
0719	CASE ARR,COMBUSTION-OUTER
0720	LATER
0721	DUCT,TRANSITION
0722	CAP ASSEMBLY,COMBUSTION
0723	ORIFICE,STEAM INJ,NOX
0724	CASE TB INNER
0725	ARR,STEAM DEL SYSTEM
0726	TUBING-COMB TUNING
0727	INNER TO OUTER T/S ARR
0728	ANNULUS ASSY, AXIAL VENT
0729	CASING, PRE MIXER
0730	ASSY, MVT
0731	ASSY, CATALYST/PCL
0732	PCC
0797	SHROUD SET TURBINE STAGE 1
0798	SHROUD SET TURBINE STAGE 2
0799	SHROUD SET TURBINE STAGE 3
0801	CASE ASSY,CPRSR INLET&1 BRG
0802	CASE ASSY,COMPRESSOR-FWD
0803	CASE ASSY,COMPRESSOR-AFT
0804	CASE ASSY,CPRSR DISCH&FRAME
0805	CASE ASSY,COMPRESSOR DISCHARGE
0806	INSULATION,COMPRESSOR DISCH
0807	HOLDER ASSY,SEAL&HP PKG-DISCH
0808	SHIM ASSY,SEAL&HP PKG-DISCH
0809	SKIN ASSY,INLET
0810	CASE,CPRSR-INL TO DISCH,OUTER
0811	VANE ARR,INLET GUIDE-VARIABLE
0812	CASE,CPRSR INLET&1 BEARING
0813	CASE,COMPRESSOR INLET
0814	ROTOR COOLING BOX
0815	INSULATION,F TO F CASINGS
0891	VANES INLET GUIDE VARIABLE
0901	BASE,FAB&MACH,UNIT-FINAL
0902	PIPE FITTINGS ASSY,UNIT BASE
0903	PIPING ARR,OIL TANK-INTERNAL
0904	PIPING ARR,OIL TANK-EXTERNAL
0905	PIPING ARR,LUBO FEED&DR-BASE
0906	PIPING ARR,LUBO FEED&DR-LOAD
0907	PIPING ARR,LUBO FEED&DR-2 BRG
0908	PIPING ARR,CONTROL OIL-INTL

0909 PIPING ARR,COOLING&SEALING AIR
0910 PIPING ARR,FUEL OIL
0911 PIPING ARR,FUEL GAS
0912 PIPING ARR,FUEL GAS-HI BTU
0913 PIPING ARR,CONTROL AIR
0914 PIPING ARR,COOLING WATER-LUBO
0915 PIPING ARR,COOLING WATER-TURB
0916 PIPING ARR,STARTING MEANS
0917 PIPING ARR,FIRE PROTECTION
0918 PIPING ARR,FUEL NOZZLE PURGE
0919 PIPING ARR,HYDR RATCHET SYS
0920 PIPING ARR,FALSE START DRAIN
0921 PIPING ARR,CPRSR DISCH BLEED
0922 PIPING ARR,ATOMIZING AIR
0923 PIPING ARR,ATMG AIR-BOOSTER
0924 PIPING ARR,AIR EXTRACTION
0925 PIPING ARR,ENGINE GEN SET
0926 CABINET ASSY,GAUGE
0927 HEAT EXCH&HEADER,CW-RH
0928 HEAT EXCH&HEADER,CW-LH
0929 STRAINER ASSY,FUEL GAS
0930 STRAINER ASSY,FUEL GAS-HI BTU
0931 SEPARATOR,AIR
0932 CLEANER,ATOMIZING AIR-RH
0933 CLEANER,ATOMIZING AIR-LH
0934 VALVE,RGLT,PRESSURE-LUBO,VPR-1
0935 PLUG,TURBINE CASE
0936 PIPING ARR,TB CASE,AIR DISCH
0937 PIPING ARR, COOLING WATER ACCY
0938 INSTL,IMMERSION HEATERS-LUBO
0939 PANEL,CONT-CPRSR DISCH BLEED
0940 HEAT EXCH&FLT ARR,LUBE OIL
0941 PIPING ARR,STEAM INJECTION
0942 PIPING ARR,VENT,TB&ACC COMPT
0943 PIPING ARR,STATION AIR
0944 TUBING ARR,CPRSR PRESS RATIO
0945 PIPING ARR,JET GAS TURBINE
0946 LUBE PACKAGE ASSY
0947 MANIFOLD ASSY,HYDRAULIC
0948 BASE,FAB&MACH,ACCESS-FINAL
0949 TUBING ARR,HUMIDIFIER CONTROL
0950 PIPING ARR,TURBINE CLEANING
0951 PIPING ARR,TURBINE WASHING
0952 PIPING ARR,COMPRESSOR CLEANING
0953 PIPING ARR,COMPRESSOR WASHING
0954 HEAT EXCHANGER UNIT,LUBE OIL
0955 PUMPING UNIT,LUBE OIL
0956 PIPING ARR,COOLING WATER-AA
0957 PIPING ARR,OIL TANK VENT-INTL
0958 PIPING ARR,ACCESSORY COMPONENT
0959 FILTERING UNIT,LOAD GEAR-LUBO
0960 DRAIN ARR,TURB&CPRSR WASHING
0961 PIPING ARR,FUEL OIL-TURBINE
0962 PIPING ARR,GAS-TURBINE
0963 PIPING ARR,CLG WTR&LUBO-TURB
0964 PIPING ARR,FIRE PROT-TB COMPT
0965 PIPING ARR,ATMG AIR-TURBINE
0966 PIPING ARR,OIL TANK VENT-TURB
0967 PIPING ARR,DIESEL EXHAUST
0968 PIPING ARR,WATER INJECTION
0969 PIPING ARR,BASE INTCON
0970 PIPING ARR,FAN CONTROL-HYDR
0971 PIPING ARR,FUEL GAS-MED BTU
0972 PIPING ARR,COOLING AIR-EXH FR
0973 PIPING ARR,COOLING WATER-DENG
0974 TUBING ARR,GAUGE CAB TO BASE
0975 ACCESSORY MODULE ARR
0976 PIPING ARR,EXH PLENUM DRAIN
0977 PANEL ASSY,CONTROL-STARTER
0978 PIPING ARR,FIRE PROTECTION-WTR
0979 PIPING ARR,INLET PLENUM DRAIN
0980 BASE,EXHAUST PLENUM&LOAD COMPT
0981 PIPING ARR,FIRE PROT-LD COMPT
0982 PIPING ARR,CLG&SLG AIR-LOWER
0983 PIPING ARR,ATMG AIR-TURB,LOWER
0984 PIPING ARR,LUBO FEED&DR-3 BRG
0985 MODULE ASSY,LUBE&CONTROL OIL
0986 PP ARR, CLG STEAM-STATOR
0987 TUBING ARR,PRFM MONITORING SYS
0988 BASE,FAB&MACH,LIQUID FUEL
0989 BASE,FAB&MACH,STARTING
0990 LUBE OIL MODULE
0991 GAS FUEL MODULE
0992 LIQUID FUEL MODULE
0993 PIPING ARR,ACCESSORY MODULE
0994 TURBINE INTERFACE MODULE
0995 PIPING ARR,FIRE PROT-EXH COMPT
0996 PIPING ARR,HAZARDOUS DETECTOR
0997 STARTING MEANS MODULE
0998 PPG ARR, N2 INJ TURB
1001 HEAT EXCHANGER,LUBE OIL
1002 HEAT EXCHANGER,WATER
1003 HEAT EXCHANGER,AA PRECOOLER
1004 HEAT EXCHANGER,AA AFTERCOOLER
1005 PUMP,LUBE OIL-MAIN
1006 PUMP,LUBE OIL-AUXILIARY
1007 PUMP,LUBE OIL-EMERGENCY
1008 PUMP,COOLING WATER-MAIN
1009 PUMP,COOLING WATER-AUXILIARY
1010 FILTER,FLUID PRESS-LUBO,MAIN
1011 FILTER,FLUID PRESS-CONTROL OIL
1012 FILTER,FLUID PRESS-CONTROL AIR
1013 FILTER,FLUID PRESS-FO,MAIN
1014 FILTER,FLUID PRESS-FO,SEC
1015 FILTER,FLUID PRESS-GAS,PURGE
1016 VALVE,RELIEF,PRESS-LUBO,VR-1
1017 VALVE,PRESSURE&RATIO-FUEL&GASG
1018 VALVE,PNEU,PRESS R-FG,HI BTU
1019 VALVE,SOLENOID-20FL,20FG
1020 VALVE,RGLT,PRESS-SEALING OIL

1021	VALVE,PLUG-MANUAL TRIP
1022	VALVE,CONT-4&10 STG EXTRACTION
1023	VALVE,RGLT,PRESSURE-LUBO,VPR-2
1024	VALVE,PNEUMATIC TRIP-TEMP
1025	VALVE,PNEUMATIC TRIP-LUBE OIL
1026	VALVE,RGLT-FALSE START DRAIN
1027	VALVE,TEMP ACTE-CW,AA PRECLR
1028	VALVE,TRANSFER-FUEL OIL
1029	VALVE,TRANSFER-LUBO HEAT EXCH
1030	VALVE,TRANSFER-LUBO FILTER
1031	VALVE,RGLT-TURB DR LUBO PUMP
1032	VALVE,RGLT-TURB DR WATER PUMP
1033	VALVE,STOP-STARTING TURBINE
1034	VALVE,PUFF STARTING TURBINE
1035	VALVE,TEMP ACTE-CLG WATER,LUBO
1036	INDICATOR,LIQUID LEVEL-LUBO
1037	INDICATOR,LIQUID LEVEL-WATER
1038	SWITCH,LIQUID LEVEL-LUBE OIL
1039	SWITCH,LIQUID LEVEL-WATER
103A	CONDUIT ARR,TURBINE COMPT
103B	CONDUIT ARR,TURBINE COMPT
103C	CONDUIT ARR,TURBINE COMPT
103T	SHIPPING ATTACHEMENT ARR
1040	DRYER,AIR
1041	CLEANER,AIR-DIESEL ENGINE
1042	HEATER,CALROD-LUBE OIL
1043	ORIFICE,PRESSURE RGLT-LUBEOIL
1044	VALVE,SEALING AIR-BEARING
1045	DAMPENER,FLUID PRESS-ATMG AIR
1046	DISPERSATOR
1047	COMPRESSOR,AIR,ATMG-STARTING
1048	HEAT EXCHANGER,LUBE OIL
1049	DRYER,AIR-DESICCANT
104A	CONDUIT ARR,ACCESSORY COM
104B	CONDUIT ARR,ACCESSORY COM
104C	CONDUIT ARR,ACCESSORY COMPT
104D	CONDUIT ARR,ACCESSORY COMPT
104E	CONDUIT ARR,ACCESSORY COMPT
1050	FILTER,FLUID PRESS-FO,RESID,MN
1051	FILTER,FLUID PRESS-HYDR SUPPLY
1052	VALVE,TRANSFER-HYDRAULIC
1053	CARTRIDGE,FILTER-MAIN LO
1054	PUMP,LUBE OIL-LOAD
1055	ACCUMULATOR,HYDO PNEUMATIC
1056	STRAINER,LUBE OIL
1057	VALVE,TEMP ACTE-LUBO,TURBINE
1058	VALVE,TEMP ACTE-LUBO,LOAD
1059	PUMP,DC,EMERGENCY-SEALING OIL
1060	VALVE,TEMP ACTE-CW,AA AFTCLR
1061	VALVE,TEMP ACTE-CW,AIR CPRSR
1062	SWITCH,PRESSURE-FUEL GAS
1063	VALVE,BACK PRESS-LUBO,VR-2
1064	FILTER,WATER REMOVAL-LUBE OIL
1065	FILTER,ACID REMOVAL-LUBE OIL
1066	VALVE,RGLT PRESS-LUBO,VPR-35
1067	VALVE,AIR SHUTOFF-CO2 OPERATED
1068	VALVE,RELIEF PRESS-STG TURB
1069	FILTER,FLUID PRESS-LUBO,CPLG
106A	CONDUIT ARR,EXHAUST AREA
106B	CONDUIT ARR,EXHAUST AREA
1070	VALVE,BYPASS-ATMG AIR CPRSR
1071	VALVE,SOLENOID-CPRSR BLEED
1072	FILTER,FLUID PRESS-LUBO SEC
1073	CARTRIDGE,FILTER-SCAVENGER
1074	CARTRIDGE,FILTER-HYDRAULIC
1075	CARTRIDGE,FILTER-MAIN FUEL OIL
1076	CARTRIDGE,FILTER-SEC FUEL OIL
1077	PUMP,LUBE OIL-AUX,TURNING GEAR
1078	ACCUMULATOR,LUBE OIL
1079	PUMP,BRG LIFT
1080	PUMP,AC-SEALING OIL
1081	FILTER,FLUID-BRG LIFT SUPPLY
1082	VALVE,FUEL GAS PURGE
1083	VALVE,ISOLATION,DEHUMIDIFER
1084	VALVES, GAS TUNING
1085	ACTUATION SYSTEM TUNING VLV
1088	VALVE,PRESS CONT-STG 3/4
1089	VLV, PRESS COMPENSATED FLOW DIVI
109A	(1109) CONDUIT ARR, LUBO TEMP DE
109B	(1109) CONDUIT ARR, LUBO TEMP DE
0110	EPE TESTING NEEDS NAME
1101	CONTROL COMPARTMENT ASSY
1102	CONDUIT ARR,BASIC
1103	CONDUIT ARR,TURBINE COMPT
1104	CONDUIT ARR,ACCESS COMPT
1105	CONDUIT ARR,FIELD WIRING
1106	CONDUIT ARR,EXHAUST AREA
1107	CONDUIT ARR,TURBINE HEATING
1108	CONDUIT ARR,CONTROL COMPT HTG
1109	CONDUIT ARR,LUBO TEMP DEVICES
1110	CONDUIT ARR,STARTING MEANS
1111	CONDUIT ARR,CONTROL AIR PANEL
1112	CONDUIT ARR,GAUGE CABINET
1113	CONDUIT ARR,TURBINE LIGHTING
1114	CONDUIT ARR,HYDR RATCHET GEAR
1115	CONDUIT ARR,FUEL TNK LVL CONT
1116	CONDUIT ARR,AIR COMPRESSOR
1117	CONDUIT ARR,AUX GENERATOR
1118	CONDUIT ARR,WHEEL SPACE TC
1119	FIRE PROTECTION SYSTEM,CO2
1120	INSTALLATION,BATTERY
1121	DETECTOR,FLAME
1122	PRESSURIZATION&FILTER ASSY
1123	CONDUIT ARR,LUBE OIL PUMPS
1124	CONDUIT ARR,POWER CONT COMPT
1125	CONDUIT ARR,FUEL HANDLING EQPT
1126	CONDUIT ARR,DUAL FUEL SYSTEM
1127	CONDUIT ARR,FLAME DETECTORS
1128	JUCTION BOX&CABLE ASSY,#6
1129	CONDUIT ARR,EXH TEMP CONT SYS

1130	CONDUIT ARR,BOOSTER COMPRESSOR
1131	CONDUIT ARR,ATMG AIR CPRSR
1132	CONDUIT ARR,CO2 FIRE ALARM
1133	CONDUIT ARR,CO2 COMPARTMENT
1134	CONDUIT ARR,PRESSURE RATIO SYS
1135	JUNCTION BOX ASSY,1&2
1136	CONDUIT ARR,INLET PLENUM HTR
1137	CONDUIT ARR,ACCESS COMPT LTG
1138	JUNCTION BOX ASSY,1
1139	JUNCTION BOX ASSY,2
1140	CONDUIT ARR FIRE DET
1141	CONDUIT ARR,LUBO HEAT EXCH
1142	CONDUIT ARR,LUBO PUMPING UNIT
1143	CONDUIT ARR,CLN&WASH CONT V
1144	CONDUIT ARR,TN CPRSR PLSN CONT
1145	CONDUIT ARR,ACCESS COMPT HTG
1146	CONDUIT ARR,LUBO LIQ LEVEL SW
1147	CONDUIT ARR,BRKR-WTR CLG MDL
1148	CONDUIT ARR, LOAD COMPRESSOR
1149	POWER CONTROL COMPT ARR
1150	CONDUIT ARR,JUNCTION BOX 1&2
1151	CONDUIT ARR,WATER CLG MODULE
1152	CONDUIT ARR,BASE LIGHTING
1153	CONDUIT ARR,ACCESS COMPT-LL
1154	CONDUIT ARR,TURBINE BASE
1155	JUNCTION BOX ASSY,19
1156	JUNCTION BOX ASSY,20
1157	CONDUIT ARR,TURB CONTROL PANEL
1158	CONDUIT ARR,ACCESS COMPT-HL
1159	CONDUIT ARR,TURBINE COMPT-LL
1160	CABLE ARR,EXHAUST AREA
1161	BUSHING ARR,STRAIN RELIEF-CABL
1162	CABLE TRAY ARR,INTERCONNECTING
1163	CONDUIT ARR,SPCL REQN REQT
1164	CONDUIT ARR,HTG FIELD MTG
1197	ARRANGEMENT FIRE PROTECTION RESI
1198	JUNCTION BOX FILLING
1199	GROUND ARRANGEMENT
1201	PANEL,STARTER-STARTING MOTOR
1202	RESISTORS,STARTING MOTOR
1203	CABINET,THERMOCOUPLE
1204	TRANSDUCER,ELECTRO-PNEUMATIC
1205	AMPLIFIER,MAGNETIC-POWER
1206	PANEL,BATTERY CHARGING
1207	BATTERY&ACCESSORIES
1208	GENERATOR,AUX-SHAFT DRIVEN
1209	MOTOR GENERATOR SET
1210	AIR CONDITIONER
1211	BLOWER,PRSRZ-CONTROL COMPT
1212	TRANSFORMER,PWR DISTR-LIGHTING
1213	TRANSFORMER,PWR STEP-UP,IGN
1214	SPARK PLUG,SPRING POSITIONING
1215	LEAD,SPARK PLUG
1216	LEAD,SPARK PLUG
1217	LEAD,EXTENSION-SPARK PLUG
1218	SENSOR ARR,VIBRATION-TURBINE
1219	SENSOR,VIBRATION
1220	TC,REGENERATOR-EXH GAS DISCH
1221	DEVICE,CONTROL-REMOTE MOUNTED
1222	THERMOCOUPLE,COMBUSTOR-INL FLG
1223	TC,COMPRESSOR-DISCH ANNULUS
1224	TRANSMITTER&PRGM,TEMP CONTROL
1225	TRANSMITTER,TEMPERATURE-CONT
1226	REGULATOR,HOUSE GENERATOR
1227	DEVICE,CONTROL,AUTO-HUMIDIFIER
1228	RESISTOR,NEUTRAL GROUNDING
1229	RACK,BATTERY
1230	COMPUTER,CONT DATA ACQUISITION
1231	TORQUEMETER
1232	LEAD,SPARK PLUG
1233	BLOWER,EXHAUST FRAME-COOLING
1234	THERMOCOUPLE,REGEN-AIR DISCH
1235	PANEL,CONTROL-MOTOR
1236	COMPUTER,COMBUSTION MONITOR
1237	TRANSFORMER,NEUTRAL GROUNDING
1238	REACTOR,NEUTRAL GROUNDING
1239	POWER SUPPLY,ES PRECIPITATOR
1240	ANAL,EXH GAS
1241	INDICATOR,FIRING TEMP
1242	CAPACITIVE DISCHARGE IGN SYS
124A	-1124
124B	-1124
124C	-1124
124D	-1124
1301	VANE ARR,COMPRESSOR STATOR
1302	ROTOR ASSY,COMPRESSOR&TURBINE
1303	ROTOR ASSY,COMPRESSOR
1304	SHIM ASSY,COMPRESSOR ROTOR
1305	ROTOR ASSY,TURBINE
1306	COUPLING ASSY,FLEXIBLE-OUTPUT
1307	ROTOR ASSY,TURBINE-1STG
1308	ROTOR ASSY,TURBINE-2STG
1309	HARDWARE,LOAD COUPLING
1310	COUPLING,FLEXIBLE-OUTPUT
1311	GUARD,COUPLING-OUTPUT
1312	EXPANSION JT,CPLG GD-LOAD
1313	COUPLING,ACCESSORY GEAR
1314	GUARD,COUPLING-ACCESSORY GEAR
1315	COUPLING,STG MNS TO ACCESS GR
1316	GUARD,CPLGL-STG MNS TO ACC
1317	COUPLING,STARTING TURBINE
1318	GUARD,COUPLING-STARTING TURB
1319	COUPLING,OUTPUT
131G	VANE ARRGT CPR STATOR-G
131V	VANE KIT CPR STATOR-V
1320	COUPLING ASSY,STARTING TURBINE
1321	ADAPTER,FORWARD,MACH
1322	VANE ARR,VGV
1331	BUCKET, STG 1
1332	BUCKET, STG 2

1333	BUCKET, STG 3
1334	BUCKET, STG 4
1335	ASSY, POWER TURBINE SHAFT, LMX
137A	CONDUIT ARR,ACCESSORY COM
137B	CONDUIT ARR,ACCESSORY COM
138F	JUNCTION BOX ASSY,AA/LIQ FUEL SK
1401	NOZZLE ARR,TURBINE-1STG
1402	NOZZLE ARR,TURBINE-2STG
1403	RING ASSY,SUPPORT-1STG
1404	DIAPHRAGM ASSY,TURBINE-2STG
1405	PARTITION&LEVER ASSY,NOZ-2STG
1406	SHROUD ASSY,TURBINE OUTER 2STG
1407	SHROUD ASSY,TURBINE-INNER
1408	GAS PATH ARR,INTERSTAGE
1409	NOZZLE ARR,TURBINE-3STG
140A	CONDUIT ARR FIRE DETECTION
140B	CONDUIT ARR FIRE DETECTION
1410	NOZZLE ARR,TURBINE-4STG
1411	SHROUD ASSY,TURBINE STAGE 1
1412	SHROUD ASSY,TURBINE STAGE 2
1413	SHROUD ASSY,TURBINE STAGE 3
1414	SHROUD ASSY,TURBINE STAGE 4
1421	INDUCER, NOZZLE 1ST STAGE
1499	ROTOR ASSY,LO OIL
1501	BEARING ASSY,#1
1502	BEARING ASSY,#2
1503	BEARING ASSY,#3
1504	BEARING ASSY,#4
1505	BEARING ASSY,#5
1506	HOUSING,BEARING #3
1507	BEARING ARR,THRUST-HP
1508	BEARING ARR,THRUST-LP
1509	HOUSING,BEARING #4
1510	HOUSING,BEARING #1
152G	NO 2. BRG ASSY-G
152V	NO 2. BRG MACH & HDWR-V
153A	CONDUIT ARR,ACCESS COMP-LL
153B	CONDUIT ARR,ACCESS COMP-LL
154A	CONDUIT ARR TURB BASE
154B	CONDUIT ARR TURB BASE
154C	CONDUIT ARR TURB BASE
155A	JUNCTION BOX NO.19A ASSY
155B	JUNCTION BOX NO.19B ASSY
155C	JUNCTION BOXES
156A	JUNCTION BOX NO.20A ASSY
156B	JUNCTION BOX NO.20B ASSY
156C	JUNCTION BOX ASSY,JB20C
156E	CONDUIT ARR LTG&FD
157G	BRG ARRGT,THRUST-G
157V	BRG HDWG,THRUST-V
158A	COND ARR ACCY HL
158B	COND ARR ACCY HL
159A	CONDUIT ARR TURB LL
159B	CONDUIT ARR TURB LL
159C	CONDUIT ARR, TURB -LL
159D	CONDUIT ARR, TURB -LL
0160	EPE TESTING NEEDS NAME
1601	GAS TURBINE&BASE ARR
1602	WALKWAY ARR,UNIT
1603	FOUNDATION BOLTING ARR
1604	BOLTING&DOWELING ARR
1605	ENCLOSURE TO BASE ARR
1606	ENCLOSURE ASSY,CONTROL COMPT
1607	COVER ASSY,CONTROL COMPT
1608	PANEL&FRAME ASSY,CONT COMPT
1609	ENCLOSURE ASSY,ACCESS COMPT
160A	CONDIUT ARR, EXH AREA
160B	CONDUIT ARR, NO 2 BRG INST.
160C	COND ARR EXH FIRE DET
160D	COND ARR, NO 2 BRG DR TC
1610	WATER COOLING MODULE
1611	PANEL&FRAME ASSY,ACCESS COMPT
1612	PLENUM ASSY,INLET
1613	PANEL,INLET SKIN
1614	ENCLOSURE ASSY,TURBINE COMPT
1615	COVER ASSY,TURBINE COMPT
1616	PANEL&FRAME ASSY,TURB COMPT
1617	ENCLOSURE ASSY,LOAD COMPT
1618	COVER ASSY,LOAD COMPARTMENT
1619	PANEL&FRAME ASSY,LOAD COMPT
1620	SILENCER ASSY,EDUCTOR
1621	SILENCER,FAN-RADIATOR MOUNTED
1622	ENCLOSURE ASSY,WTHPRF ENTRANCE
1623	DUCT ARR,AIR-COMPARTMENT PRSRZ
1624	PANEL ASSY,EXH PLENUM-INSUL
1625	PLENUM ASSY,EXHAUST
1626	INSTALLATION,ENCLOSURE
1627	BARRIER,ACOUSTICAL
1628	FRAME ASSY,TURBINE COMPARTMENT
1629	ENCLOSURE ASSY,TB COMPT-OFF BS
1630	ENCLOSURE ASSY,COMB COMPY
1631	COVER ASSY,COMBUSTION COMPY
1632	PANEL&FRAME ASSY
1633	DEFLECTOR,AIR-ACCESSORY COMPT
1634	ENCLOSURE,POWER PLANT
1635	DUCT ASSY,EXTERNAL-CLG&SLG AIR
1636	FAN,VENT-ENCLOSURE
1637	NAMEPLATE ARR,CORP SIGNATURE
1638	ENCLOSURE ASSY,LOAD DR COMPT
1639	DUCT ARR,VENT-TURBINE
1641	COMPARTMENT PRESSURIZATION ARR
1642	PLENUM,COMPARTMENT PRSRZ
1643	FAN,VENT,ENCLOSURE-MSD
1644	BASE,EXHAUST PLENUM&LOAD COMPT
1645	GRATING ARR,FLOOR-UNIT
1646	LADDER&RAIL ARR,AIR FILTER-GEN
1647	DAMPER,INLET DUCT
1648	CRANE,OVERHEAD-TRAVELING
1649	ROOF ASSY-TURB COMPT HTG
164G	BOLT & DOWEL ARRGT-G

164V	BOLT & DOWEL HDWR-V
1650	ENCLOSURE ASSY, AA/LIQ FUEL SKID
1651	LABELS, COMPONENT
1652	LADDER, T/C ACCESS
1653	CAP,STUD THREAD PROTECTOR
1654	SCROLL, BOOSTER EXIT
1655	SCROLL, HPC INLET
1656	CONTAINER, SHIPPING, LMX
165A	CONDUIT ARR.BASIC
165B	CONDUIT ARR.LIQ FUEL
165C	CONDUIT ARR,XDUCERS
165D	CONDUIT ARR.MTR HTRS
165E	CONDUIT ARR.COMPT HTG
165F	CONDUIT ARR.LIG&FD
165G	CONDUIT ARR.STG MOTOR
165H	CONDUIT ARR, TC'S
165J	CONDUIT ARR, HAZ GAS DET
165X	CONDUIT ARR.C OPTIONS
167A	CONDUIT ARR, BASIC-AA/LIQ FUEL S
167C	CONDUIT ARR, TDUCERS-AA/LIQ FUEL
167D	CONDUIT ARR,MTR HTRS-AA/LIQ FUEL
167E	CONDUIT ARR,COMPT HTG-AA/LIQ FUE
167F	CONDUIT ARR,LIG&FD-AA/LIQ FUEL S
167J	CONDUIT ARR,HAZ GAS DET-AA/LIQ F
167K	CONDUIT ARR, AA/LIQ FUEL SKID
167X	CONDUIT ARR,OPTIONS-AA/LIQ FUEL
1700	BASE,FAB&MACH,INTERCONN
1702	PIPING ARR,LUBO FEED INT
1704	PIPING ARR,LUBO DRAIN INT
1706	PIPING ARR,HYD SUPPLY INT
1708	PIPING ARR,FUEL OIL INT
1710	PIPING ARR,FUEL GAS INT
1712	PIPING ARR,ATOM AIR INT
1714	PIPING ARR,FUEL NOZZLE PUR INT
1716	PIPING ARR,FIRE PROT INT
1718	PIPING ARR,WATER INJ INT
1720	CABINET ASSY GAGE FG INT
1722	CABINET ASSY GAGE FL INT
1730	ENCLOSURE
1740	JB LOW LEVEL INT
1742	JB HIGH LEVEL INT
1744	COND ARR,BASIC INT
1746	COND ARR,GAUGE CAB FG INT
1748	COND ARR,GAUGE CAB FL INT
1750	COND ARR,LIGHTING INT
1752	COND ARR,HEATING INT
1754	COND ARR,LV INT
1756	COND ARR,HL INT
1760	COND ARR,FIRE PROT INT
1762	COND ARR,GAS DETECT INT
1790	WIRE LIST INT
197A	ARR FIRE PROTECTION RESISTAN AUX
197T	ARR FIRE PROTECTION RESISTAN TG
202F	INSTRUCTION TEST-AA/LIQ FUEL SKI
213A	(1213) TRANSFORMER, IGN
213B	(1213) TRANSFORMER, IGN
218A	SENSOR ARR,VIBRATION-TURBINE
218B	SENSOR ARR,VIBRATION-TURBINE
218C	SENSOR ARR,VIBRATION-TURBINE
235A	INSTR ARR,BRG NO.1
235B	INSTR ARR,BRG NO.2
235C	INSTR ARR,BRG NO.3
235D	INSTR ARR, BRG NO.4
2733	PRIMER,BEIGE
301A	OUTLINE ACC. CONN. ELEC.
301T	OUTLINE TG. CONN.ELEC.
3322	LOCK PLATE
3326	LATER
3330	LATER
4001	DIAG,SCHEM PP-STEAM SEAL
4002	DIAG, SCH-FG HEAT, IP WTR EXCHAN
4003	DIAG,SCHEM FG HEATER,HOT WATER
4004	DIAG,SCHEM FG HEATER, ELECT FUL
4005	DIAG,SCHEM FG PARTICULE FILTER
4006	DIAG,SCHEM,FG COALESCING FILTER
4007	DIAG,SCHEM,FGABSOLUTE SEPARATOR
4008	DIAG,SCHEM,NAPHTHA FWD UNIT
4009	DIAG,SCHEM,RESIDUAL FWD UNIT
4010	DIAG,SCHEM,DIST FUEL HEATER
4011	DIAG,SCHEM, VI SOLUBIZING UNIT
4012	DIAG,SCHEM.LUBRICITY INJ UNIT
4013	SCH, FUEL GAS KNOCKOUT DRUM
4014	SCH,FG PRESSURE REGULATION
4015	SCH,FUEL GAS COMPRESSOR
4018	DIAG. SCHEM, WATER TO WATER CW M
4019	DIAG SCHEM, FM200 FIRE PROT
401A	DIAGRAM CONNECTION AUX
401G	DIAGRAM CONNECTION GAS MODULE
401H	DIAGRAM CONNECTION OIL MODULE
401T	DIAGRAM CONNECTION TG
4020	DIAG, SCHEM RESIDUAL FUEL HTG
4021	DIAG, SCHEM-GEN PURGE SUPPLY SYS
4022	P&ID, GAS HTG FEED WATER VENT TA
4023	DIAG, SCHEM-LCI COOLING LOOP
4024	DIAG,SCH COMB PRESS SYS.
4025	CLEANLINESS REQMTS,PP SYS
4026	SCH FG ABS SEP/2 SU ELECT HEATER
4027	DIAG,SCHEM-GEN H2 ACCESSORIES
4028	DIAG,SCHEM-GEN H2 GAS CONTROLS
4029	DO NOT USE ASSIGNED TO POHL
4030	SCH, FG HEATER STATION
4031	DO NOT USE ASSIGNED TO POHL
4032	SCH FG MOISTURIZER/IP HEATER
4033	DIAG, SCHEM SPRITS
4035	SCH, FG CHROMATOGRAPH
4036	DIAG SCHEM,COMB DYN MONITOR
4037	DO NOT USE ASSIGNED TO POHL
4038	SCH, LF MNGT SPOOL PIECE
4039	P&ID DIST FUEL WASH
4040	P&ID CONSOLID FG HEAT SYS

4041	P&ID CONSOLID FG CND/HTG SYS
4042	P&ID FG CUSTODY XFER MET STA
4043	DIG SCHEM, HPP SMART SEAL
4044	SCHM, LP H2O FG HEAT BOOST PUMP
4108	DIAG, NETWORK TOPOLOGY
414A	DEVICE-FACTORY CALIBRATED
414F	DEVICE-FACTORY CALIBRATED AA/LIQ
414T	DEVICE-FACTORY CALIBRATED
414U	DEVICE-FACTORY CALIBRATED
466A	WIRE LIST TURBINE COMPT
466B	WIRE LIST TURBINE COMPT
467A	WIRE LIST ACCESSORY COMPT
467B	WIRE LIST ACCESSORY COMPT
467C	WIRE LIST ACCESSORY COMPT
5072	TUBE TEE,UNION
5124	TUBE REDUC
5144	TUBE CONN
557A	PRESSURE TRANSDUCER ARR,ACCY
557B	PRESSURE TRANSDUCER ARR,TURB
557F	PRESSURE TRANSDUCER ARR, AA/LIQ
557T	PRESSURE TRANSDUCER ARR,TURB
559A	TRNASDUER INLET/EXHAUST
599A	TRANSDUCER INLET/EXHAUST
603A	ANCHOR BOLT ARRANGEMENT
603T	TG FOUNDATION BOLTING ARR
609A	ENCL ASSY ACCESS COM
609B	ENCL ASSY ACCESS COM
6114	SCREW, CAP HEX HD
637A	THERMOCOUPLE ARR,REMOVABLE
637B	THERMOCOUPLE ARR,REMOVABLE
637C	THERMOCOUPLE ARR,REMOVABLE
637E	THERMOCOUPLE ARR,REMOVABLE
637T	REMOVABLE THERMO ASSY
650A	ENCL ASSY AA/LIQ FUEL SKID
650B	ENCL ASSY AA/LIQ FUEL SKID
706A	FRAME ASSEMBLY, EXHAUST
706B	DOWNSTREAM EXHAUST DIFFUSER
706G	EXH & FWD DIFF ARRGT-G
706V	EXH & FWD DIFF ASSY-V
725A	ARR STAT STM DEL SYS STG1
725B	ARR STAT STM DEL SYS STG2
801G	NO 1. BRG & LIFT ASSY-G
801V	NO 1. BRG HDWG & LIFT-V
805G	CASE ARRGT.COMP DISCH-G
805V	CASE ASSY.COMP DISCH-V
814G	STEAM GLAND ARRGT-G
814V	STEAM GLAND MACH-V
9001	PP ARR CL CONTROL-TURBINE
9002	PP, ARR STEAM SEAL
9003	MANIFOLD ASSY, BRG LIFT PUMP
9004	PP ARR, CLG STEAM-ROTOR
9005	PP ARR, STG 2 NOZZ COOLING
9006	PP ARR,COOLED CLG AIR-RTR
9007	PP ARR,CL CONTROL-CPRSR
9008	STRAINER, SYNGAS
9009	STRAINER, NITROGEN
9010	SUPPORT, TURBINE PIPING
9012	PP ARR, AIR EXT-15TH STAGE
9013	PP ARR, AFT W/S HEATING
902A	AUXILIARY BASE FINISHING
902T	PACK.ON BASE OPTION
903A	PIPING ARR,OIL TANK-INTERNAL
903B	PIPING ARR,OIL TANK-INTERNAL
905A	-905
905B	-905
908A	908
908B	908
908C	908
908F	PIPING ARR,TRIP/HYD/LO-AA/LIQ FU
909A	PPG,AIR CLG & SLG
909B	PPG AIR CLG & SLG
909F	PIPING ARR,COOLING&SEALING AIR-A
914A	ORICICE PLATE , BRASS
914B	ORIFCIE PLATE , BRASS
914C	ORIFICE PLATE, BRASS
914D	ORIFICE RET AA PRECOOLER
916A	PIPING,ARR STARTING MEANS
916B	PIPING,ARR STARTING MEANS
917F	PIPING ARR FIRE PROT AA/LIQ FUEL
918A	PIP. AIR PURGE
918T	AIR PIPING OUTSIDE DRAINING
920A	PPG, FALSE START DRAIN (TURB SH
920B	PPG, FALSE START DRAIN (MSD)
922F	PIPING ARR, ATOMS AIR-AA/LIQ FUE
926F	CABINET,ASSY,GAUGE-AA/LIQ FUEL S
940A	HEAT EXCH&FLT ARR,LUBE OIL
940B	HEAT EXCH&FLT ARR,LUBE OIL
941A	PIPING ARR,STEAM INJECTION
941B	PIPING ARR,STEAM INJECTION
948G	ACCY BASE-GE SUPPLY MATL
963A	ORIFCE PLATE, CLG WTR&LO
964A	PIPING ARR,FIRE PROT-TB COMPT
964B	PIPING ARR,FIRE PROT-TB COMPT
969A	INTC PPG, LUBE OIL
969B	INTC PPG, LUBE OIL # 1 BRG
969C	INTC PPG, FUEL OIL
969D	INTC PPG, ATOMIZING AIR
969E	INTC PPG, WATER
969F	INTC PPG, AIR EJECT TUBING
969G	INTC PPG, GAS FUEL
969H	INTC PPG, COMP HEATING TUBING
969J	INTC PPG, FIRE PROTECTION
969K	INTC PPG, HP LF FILTER OFF-BASE
969L	INTC PPG, LIQUID FUEL PURGE
969M	INTC PPG, CONTROL OIL
969U	INTC PPG, CLEANING
985A	CND ASSY,LUBE&CONT MDL
985B	WRG,LUBE&CONT MDL
985C	PIPING ARR,HYD MODULE
985D	BSE HYD SUPPLY MODULE

992A	TBG ASSY,LIQ FL MDL
992B	JB 384 ASSY,LIQ FL MDL
992C	JB 385 ASSY,LIQ FL MDL
992D	JB 384 MTG,LIQ FL MDL
992E	JB 385 MTG,LIQ FL MDL
992F	CND ASSY,LIQ FL MDL
992G	WIRE HARN,LIQ FL MDL
992H	DVC WRG,LIQ FL MDL
992J	MAIN JB WRG,LIQ FL MDL
992K	BASE,LIQUID FUEL MODULE
992L	PPG ARR,LQ FUEL MOD
992M	PIPING,ARR FLOW DIVIDER
997A	CMPNT ASSY,STG MNS MDL
997B	PP ASSY,STG MNS MDL
997C	PP ASSY,TC-STG MNS MDL
997D	FOP TBG,STG MNS MDL
997E	TC TBG,STG MNS MDL
997F	WIRE HARN,STG MNS MDL
997G	JB 122 ASSY,STG MNS MDL
997H	JB 119 MTG,STG MNS MDL
997J	JB 122 MTG,STG MNS MDL
997K	JB CND ASSY,STG MNS MDL
997L	CND ASSY,STG MNS MDL
997M	DVC WRG,STG MNS MDL
997N	MAIN JB WRG,STG MNS MDL
997R	GAS EXPANDER ASSY
997S	PP ASSY,STG MNS MDL
A000	SIMILAR TO MODEL LIST
A001	COMPRESSOR,LOAD
A002	PARTS LIST,ADVANCE ORDERING
A003	PARTS LIST,POWER PLANT EQPT
A004	NAMEPLATE,UNIT RATING
A005	NAMEPLATE,UNIT RATING
A006	NAMEPLATE ARR
A007	DATA,FIELD ALIGNMENT
A008	HUMIDIFIER,AIR-INLET
A009	FUEL NOZZLE,PRESS ATMG-SPARE
A010	SPEC,CONTROL-CONT SYS SETTINGS
A011	ENGINE,GAS TURBINE
A012	LOAD GEAR
A013	LOAD PACKAGE
A014	PANEL,CONTROL-TURBINE,OFF BASE
A015	PANEL,CONTROL-TURBINE,ON BASE
A016	PANEL,CONTROL-GENERATOR
A017	PANEL,RELAY-GENERATOR
A018	PANEL,CONTROL-SUPERVISORY
A019	MOTOR CONTROL CENTER
A020	PANEL,CONTROL-MASTER
A021	CO2 SYSTEM,PURGING-H CLD GEN
A022	ELEMENT,CIRCUIT BREAKER
A023	SWITCHGEAR,METALCLAD
A024	BUS DUCT,NON-SEGREGATED
A025	TRANSFORMER,PWR DISTR-AUX
A026	BREAKER,CIRCUIT-POWER
A027	HUB,RIGID-LOAD COUPLING
A028	COUPLING,LOAD GEAR TO LD CPRSR
A029	GUARD,CPLG-LD GR TO LOAD CPRSR
A030	CABLE DUCT,NON-SEGREGATED
A031	DAMPER,BYPASS-EXHAUST
A032	INSTRUCTION,HDLG&SHPNG-SPECIAL
A033	TOOL KIT,MAJOR DISASSEMBLY
A034	PARTS LIST,SUPPL MATL-MA
A035	WATER INJ UNIT,NOX RDCN SYS
A036	GENERATOR AUXILIARIES COMPT
A037	CONTROL ARR,INLET HEATING
A038	PIPING ARR,COMBUSTION AIR
A039	MOTOR STARTER,LIMITAMP
A040	INLET COMPARTMENT ARR,AIR
A041	DUCT ARR,INLET
A042	EXHAUST SYSTEM
A043	SILENCER,FAN-RADIATOR
A044	PIPING ARR,OIL TANK VENT
A045	FUEL HANDLING EQUIPMENT
A046	PUMP,FUEL FORWARDING-OIL
A047	FLOWMETER,FUEL OIL
A048	FLOWMETER,FUEL GAS
A049	OUTLINE,FUEL FWD PUMP-OIL
A050	HEAT EXCH,ANTIICING-INLET AIR
A051	INSTL,FLOWMETER-FUEL GAS
A052	NAMEPLATE,DEVICE-FOREIGN LANG
A053	PIPING ARR,INTCON-FIELD
A054	SILENCER,INLET
A055	TRANSFORMER,SATURABLE CUR-EXC
A056	ATOMIZING AIR SYSTEM,OFF BASE
A057	NAMEPLATE,LOAD COMPRESSOR
A058	LOAD CENTER,LOW VOLTAGE SECT
A059	CONTROL CENTER PKG,OFF BASE
A060	CONTROL ARR,FIELD
A061	CABLE ARR,UNIT INTERCOMPT
A062	CABLE ARR,STATION
A063	LOAD CENTER,TRANS&HV SECTION
A064	SIDING,ARCHITECTURAL
A065	PANEL,CONTROL-AUXILIRY
A066	OUTLINE,EXHAUST SILENCER
A067	OUTLINE,INLET SILENCER
A068	FIRE PROTECTION SYSTEM,CO2
A069	CYLINDER,CO2
A070	FILTER ELEMENT, AIR INLET
A071	SUPPORT STRUCTURE,EXHAUST
A072	TUBE,METER-FUEL GAS FLOWMETER
A073	GEAR,TURNING
A074	OUTLINE,SUB-SOLE PLATES-SUGG
A075	PIPING ARR,INLET ANTIICING
A076	WATER COOLING UNIT
A077	SEPARATOR,MOISTURE-INLET AIR
A078	CONSOLE,BRIDGE-MARINE
A079	CONSOLE,TURBINE-MARINE
A080	CONSOLE,PROPULSION-MARINE
A081	HOPPER ASSY,TURBINE CLEANING
A082	HYDROGEN COMPT,GEN COOLING

A083	BATTERY UNIT
A084	OUTLINE,GT PACKAGE-CO2 UNIT
A085	NOTES,GT PKG,CO2 UNIT-OUTLINE
A086	SILENCER,EXHAUST
A087	TRANSFORMER,PWR DISTR-CRK MOT
A088	ENCLOSURE ASSY,COLLECTOR
A089	GENERATOR EXCITATION COMPARTMENT
A090	ENCLOSURE ARR,FUEL FWD UNIT
A091	PANEL&FRAME ASSY,FUEL FWD UNIT
A092	LUBRICATION UNIT
A093	COMPARTMENT,CO2
A094	DUCT,TRANSITION,EXH-HI TEMP
A095	PANEL,CONTROL-LOAD COMPRESSOR
A096	EXHAUST-DUCT,SILENCER,STACK
A097	EXPANSION JOINT,EXHAUST
A098	VENT SYSTEM COMPONENT,LUBE OIL
A099	EXTENSION,PLENUM
A100	PARTS LIST,SPARES,REGULARATORY
A101	CLOSURE,INLET
A102	ENCLOSURE,EXHAUST
A103	ACCESSORY KIT,OFF ENGINE
A104	COOLER,OIL MIST
A105	PARTS LIST,STEAM INJ CMPNT-FLD
A106	INTEGRAL DISTR CENTER
A107	FILTER,AIR-GENERATOR
A108	DATA ANALYZER&PROCESSOR SYSTEM
A109	DIESEL GENERATING SET
A110	FILTERING UNIT,FUEL OIL-DSTLT
A111	GENERATOR TERMINAL ENCLOSURE
A112	GAS TURBINE INFO&CONTROL SYS
A113	STAIRWAY ARR,INLET COMPARTMENT
A114	FREQUENCY CONVERTER,STATIC
A115	COMPRESSOR UNIT,PURGE
A116	VALVE UNIT,FUEL GAS
A117	JUNCTION BOX ASSY,1,ZENER BARR
A118	JUNCTION BOX ASSY,2,ZENER BARR
A119	CONTROL ARR,NOZZLE CLG WATER
A120	CONTROL ARR,BUCKET CLG WATER
A121	PL,ATTEMPERATOR CONTROL CMPNT
A122	SENSOR,HUMIDITY
A123	COOLING UNIT,OIL TO AIR
A124	PANEL,CONTROL UNIT-TURB&LOAD
A125	PIPING,LUBE OIL-FLUSH,FIELD
A126	CATALYTIC CONVERTER,EXHAUST-GT
A127	CLUTCH ASSY,SYNCHRONOUS COND
A128	COUPLING,GEN TO STARTUP COMPT
A129	COMPARTMENT,STARTUP
A130	AIR PROCESSING UNIT
A131	POWER TURBINE
A132	COOLING FAN MODULE
A133	DUCT,AIR INLET/DISCH-GENERATOR
A134	GUARD,COUPLING-ST TURB TO GEN
A135	STEAM INJECTION CONTROL MODULE
A136	STRUCTURE,ST INJ CONT MODULE
A137	WATER HEATING MODULE
A138	MONITOR,VIBRATION,REMOTE
A139	MONITOR,HAZARDOUS GAS,ALARM
A140	STATIC START SYSTEM, LCI
A141	TRANSFORMER,ISOLATION,STAT STR
A142	PANEL,UNIT SELECTION,STAT STR
A143	SWITCH,CROSS-TEE,STATIC START
A144	ENCLOSURE,GAS SPLITTER VALVE
A145	PANEL,SMART REMOTE
A146	MONITOR,SHAFT-VOLTAGE
A147	MODULE,HYDRAULIC SUPPLY-MSD
A148	AUX TURBINE CONTROL EQUIPMENT
A149	TRANSFORMER,POTENTIAL-OFF BASE
A150	XFORMER,PWR POTENTIAL-OFF BASE
A151	INSULATION,TURB/DUCT-EXTERNAL
A152	HISTORIAN,SPEEDTRONIC
A153	BAC,BUS ACCESSORY COMPT
A154	MONITOR,EXHAUST GAS ANALYSIS
A155	STATIC VOLTAGE REGULATOR,GT
A156	POWER SYS STABILIZER,GT
A157	LCI COMPARTMENT
A158	CHILLER COIL-INLET AIR
A159	ANALYSER, FUEL GAS
A160	ACCESSORY MODULE
A161	BUS DUCT GEN FIELD
A162	SKID,LIQ FUEL & ATOM AIR
A163	PURGE BOX,COMB TUNNING
A164	COMPUTER, COMB TUNING
A165	ACCY,TANK INTERNAL SPEC
A166	TB-COOLING STEAM MODULE
A167	VALVE,CONTROL TB COOLING STEAM
A168	CLEARANCE CONTROL MODULE
A169	VALVE,CONTROL CLEARANCE CONTRO
A170	TB-AIR COOLING MODULE
A171	VALVE,CONTROL TB COOLING AIR
A172	VALVE,CONTROL FUEL GAS TEMP
A173	GLAC
A174	GNAC
A175	EMISSIONS MONITORING SYSTEM
A177	NAMEPLATE ARR, ACCY
A179	STRAINER FIELD TEMPORARY
A181	FLOW METER,STEAM COOLING
A182	FUEL GAS CONDENSATE SYSTEM EQUIP
A184	INTC PPG, INLET HEATING
A185	PPC CONN , MATING FLANGES
A186	INTC PPG, EXH FRM CLG
A187	INLET AIR HEATING SPEC.
A188	INTC PPG, FP DAMPER LATCH
A189	CW MODULE, WATER TO WATER
A190	AFT WHEELSPACE HEATER MOD
A191	GENERATOR PURGE SUPPLY SYSTEM
A192	LCI/EX2000 COMPT w/out HV
A193	EXCITATION COMPARTMENT
A194	STARTUP PPT
A195	LCI/EX2000 COMPT w/HV
A196	SW,89SS LCI DISC-FREESTANDING IN

A197	SPRITS, INLET AIR
A199	PPG,STM COOLING-FLUSH,FLD HYDRU
A201	PPG,PURGE-FLUSH,FIELD
A202	PPG,GAS FUEL-FLUSH,FIELD
A203	VAR FREQ DRIVE,VENT FAN
A204	PANEL,GAS AUX MONITOR
A205	ARGON PANEL
A207	FILTER ELEMENT,AIR GENERATOR
A208	SPRITS CONTROLS
A209	UNIVERSAL ON SITE MONITORING
A210	SOFTWARE -GT CONTROL PNL
A212	LIQ FUEL VFD MODULE
A213	HEATER, CLG STEAM FILTER
A214	INSUL, CLG STEAM FILTER
A216	DGP SETTINGS
A217	SKID, SPRITS DUCT DRAIN
A218	SKID, SPRITS PLENUM DRAIN
A220	FIXTURE, LIFTING TB COMPT
A221	KIT, LUBE OIL ANALYSIS
A235	-235
A239	HAZ.GAS DETECT-VENT DUCT
A245	DO NOT USE ASSIGNED TO POHL
A246	LF MNGT SPOOL PIECE
A262	LF/AA WI SKID
A267	CLG STEAM BLOW TRIM KITS
A950	(INACTIVE) GEN CONTROL PANEL
A951	(INACTIVE) STATIC EXCITATION
A952	(INACTIVE) AUX PANEL
A953	(INACTIVE) VIBRATION MONITORING
A954	(INACTIVE)COMMON FRAME(SPLIT TCC
A980	INLET SUPPORTING STRUCTURES
A990	LUBE OIL FIRST FILL
A999	NAMEPLATE ARRANGEMENT
AALF	ATOM AIR/LIQUID FUEL SKID
AB01	COMPONENT ASSY,HYD MDL
AB02	MODULE,HYDRAULIC
AB03	
AB04	
AB05	HEAT EXCH&FILTER, INST
AB06	
AB07	PA,OIL TANK-EXTERNAL
AB08	
AB09	WID PIPING BUILDING-UP
AB10	CMPNT ASSY,LIQ FL MDL
AB11	FILTER&VALVE ASSY LFM
AB12	LIQ FL MDL
AB13	
AB14	
AB15	
AB16	
AB17	
AB18	
AB19	
AB20	COMPONET ASSY,SMM
AB21	CPRSR ASSY,MAIN-ATOM AIR
AB22	CPRSR ASSY,BSTR-ATOM AIR
AB23	PUMP ASSY,LIQ FUEL
AB24	MTR STRT&TORQ CONV ASSY
AB25	DSL ENG&TORQ CONV ASSY
AB26	CONTROLLER,ASSY
AB27	MODULE,STARTING MNS
AB28	
AB29	
AB30	BASE,ACC MODULE ARR
AB31	CONDUIT ARR,BASE-ACC
AB32	FILTER, MANIFOLD BUILD-UP
AB33	BEFORE FLUSH BUILD-UP
AB34	BASE,ACC-FLUSHED
AB35	MDL,STG MEANS TO BASE
AB36	CMPNT ASSY,ACC MDL-INTL
AB37	PIPING ARR, LO FILT&HTEXCH
AB38	CMMPT ASSY,ACC MDL PUR
AB39	
AB40	AFTER FLUSH PUILD-UP
AB41	CABINET,GAGE TO BASE
AB42	COMPONENT ASSY,LIQ FUEL
AB43	PUMP ASSY,LUBE OIL
AB44	PUMP ASSY,HYDRUALIC-AUX
AB45	WATER PUMP AFT
AB46	BASE ACC,READY FOR TEST
AB47	
AB48	
AB49	FUEL PP, TUBING AFTER FLUSH
AB50	WATER PUMP FWD
AB51	BSTR, ATOM AIR PIPING
AB52	PUMP, MAIN LUBE OIL
AB53	
AB54	HP FUEL FILTER, ASSY
AB55	
AB56	HYDRAULIC MANIFOLD ASSY
AB57	
AB58	MODULE,HYD-ASSY TO BASE
AB59	MODULE,LIQ FUEL TO BASE
AB60	
AB69	ATOMIZING AIR MODULE
AB70	ATOMIZING AIR MODULE
AB80	GAS FUEL MODULE ON BASE
AB81	GAS MODULE, SUB ASSEMBLY
ACCY	BASE ACCESSORY
ACYF	ACCY BASE-FARMOUT MATL
AF10	aalf later
AF11	aalf later
AF1O	aalf later
AF31	aalf later
AF44	ATOM AIR/LIQ FUEL SKID OFF TEST
AF46	ATOM AIR/LIQ FUEL SKID READY FOR
AF55	aalf later
AONO	AO BOM MODEL NUMBER
ARBS	COPICS STRUCTURE
AT15	TO TEST ASSEMBLY

AT16	TO TEST PIPING
AT17	GENERAL PREPERATION
AT18	STANDSTILL CHECKS
AT19	CRANKING CHECKS
AT20	INTERIAL FIRE-100% SP CHKS
AT21	PERFORMANCE CHECKS
AT22	LP RTR 100% SP CHKS-3002
AT23	GIG&DEFECT CLEARANCE
AT24	FINAL FIRE&CERTIFICATION
AT25	STRIP OUT
AT26	OFF TEST PIPING
AT27	OFF TEST ASSYEMBLY
AT30	BASE,ACC-OFF TEST
AT44	ACCESSORY BASE OFF TEST
B001	CORROSION PROTECTION SYSTEM
B002	COUPLING
B003	FIRE DETECTION&PROTECTION SYS
B004	POWER PLANT ENCLOSURE SYSTEM
B005	LUBRICATING SYSTEM
B006	STARTING SYSTEM
B007	HYDRAULIC&CONTROL OIL SYSTEM
B008	UNIT BASE SYSTEM
B009	EMISSIONS CONTROL SYS,COMB
B010	CPRSR&TURBINE CLEANING SYSTEM
B011	AIR EXTRACTION SYSTEM
B012	EXPLOSION PROOFING SYSTEM
B013	SINGLE GAS FUEL SYSTEM
B014	SINGLE LIQUID FUEL SYSTEM
B015	MULTIPLE FUEL SYSTEM
B016	FUEL HANDLING&TREATING SYSTEM
B017	EQUIPMENT,COOLING SYSTEM
B018	INLET AIR SYSTEM
B019	EXHAUST AIR SYSTEM
B020	HT RCVY,REGEN&PWR AUGMENT SYS
B021	CONTROL SYSTEM,ELECTRICAL
B022	SPACE HTG,CLG&VENTILATING SYS
B023	ROTOR&BEARING MONITOR SYSTEM
B024	POWER SYSTEM,50 HERTZ
B025	LOAD EQUIPMENT
B026	STATION&AUXILIARY POWER SYSTEM
B027	CUSTOMER REQD SERVICE&ANALYSES
B04A	B004.1 COMPT PRESSURIZATION
B05D	B005.4 DUAL LO COOLERS&FILTERS
B05E	B005.5 SINGLE LO FILTER
B05F	B005.6 DUAL LUBE OIL FILTERS
B05H	B005.8 AUX LO&HP HYD PUMPS
B05J	B005.9 SEP AUX&EMERG LO PUMPS
B05L	B005.11 SS LO FEED PIPING
B06B	B006.2 ELECTRIC MOTOR START
B07C	B007.3 ROTOR TURNING DEVICE
B09A	B009.1 WATER INJECTION-LOW NOX
B10D	B010.4 COMPRESSOR WATER WASH
B10E	B010.5 TURB&CPRSR WATER WASH
B10F	B010.6 TURB&CPRSR CLEANING
B10K	B010.10 DELETE TURB&CPRSR WASH
B12B	B012.2 EXPLOSION PROOF DIV 2
B13A	B013.1 GAS FUEL ONLY
B14A	B014.1 DIST FUEL ONLY-LPAA
B14F	B014.6 MECH ATOMIZATION,DIST
B15B	B015.2 CRUDE OIL FUEL,HPAA
B15C	B015.3 DUAL LIQUID FUEL,HPAA
B15D	B015.4 DUAL FUEL,GAS/DISTLT
B15J	B015.9 MECH ATOMIZATION,G/D
B15K	B015.3.2 DUAL LIQ,HPAA,AFT CLR
B16E	B016.5 FUEL SELECTION UNIT
B16H	B016.8 DUPLEX FO FILTERS
B17C	B017.3 H1 AMB ONBASE CW MODULE
B18C	B018.3.4 2STG INLET FILTRATION
B20E	B020.5 MODULATING IGV
B23D	B023.4 BEARING DRAIN T/C
B25A	B025.1 AIR COOLED GENERATOR
B25B	B025.2.1 WATER COOLED GEN
B25D	B025.4 HYDROGEN COOLED GEN
B99A	FOUNDATION EMBEDMENTS
BA1A	NATURAL GAS ONLY
BA2A	DISTILLATE FUEL ONLY,LPAA
BA2B	HEAVY FUEL,HPAA ON-BASE
BA2F	DISTILLATE FUEL,MECH ATOMIZ
BA3C	DUAL LIQ FUEL,HPAA,PRECLR ONLY
BA3F	DUAL FUEL,GAS/DIST,LPAA
BA3N	DUAL FUEL,GAS/DIST,MECH ATOMIZ
BA6E	FILTER,DUPLEX,LP FUEL,OFF-BASE
BB1E	PUMP,AUX LUBE OIL&HYDRAULIC
BB2A	FILTER,SINGLE,LUBE OIL
BB2K	DUAL COOLERS,STEEL TUBES
BBBB	GE REUTER STOKES INSTR.
BC2A	MOTOR START,ELECTRIC
BD1P	COOLING SYSTEM,ON-BASE,HI AMB
BF2B	FILTER,INLET,TWO STAGE,IS&HE
BG5A	COMPARTMENT PRESSURIZATION
BK1A	WATER INJECTION,LOW NOX
BK1B	STEAM INJECTION,LOW NOX CONT
BK1C	WATER INJECTION,LOW NOX LIQ
BK1F	STEAM INJECTION,LOW NOX LIQ
BK1M	WATER INJECTION,LOW NOX DUAL
BK1N	STEAM INJECTION,LOW NOX DUAL
BL1A	COMPRESSOR WATER WASH
BL1B	COMPRESSOR WATER WASH,ON LINE
BL1C	TURB&COMPRESSOR WATER WASH
BL2C	TURB&COMPRESSOR CLEANING
BM1B	CLASS I,GROUP D,DIVISION 2
BMDV	UNIT RECORD
BN5A	MODULATING IGV
BT1G	TURB PROXIMITY PROBES
BT2A	TURB&GEN BEARING DRAIN T/C
BT2E	TURB BEARING METAL T/C,ALL BRG
BT2G	TURB BEARING METAL RTD,ALL BRG
BU1A	GENERATOR,OPEN VENT,AIR-COOLED
BU3A	GENERATOR,HYDROGEN COOLED
BU6F	GENERATOR MODEL,7A4-1/FF

BU6G	GENERATOR MODEL,7H2-1/FF
BY7C	TOOL CART,MAINTENANCE SUPPORT
C001	EXHAUST SYSTEM
C002	STEAM GENERATOR,HEAT RECOVERY
C003	STEAM GENERATOR,AUXILIARIES
C004	PUMP,CIRCULATING-HRSG
C005	DAMPER&MOTOR,BYPASS
C006	DAMPER&MOTOR,ISOLATION
C007	SUPPORT STRUCTURE
C008	CONTROL SYSTEM,HRSG
C009	EXPANSION JOINT,EXHAUST
C010	PIPING,CIRC PUMP-ST GEN
C011	VALVE,CONTROL-HP FEEDWATER
C012	PUMP,BOILER FEED
C013	ENCLOSURE&SPRT ASSY,CRCLT PUMP
C014	TRANSMITTER,STEAM PRESS
C015	CONDENSER
C016	VALVE,CONTROL-CONDENSATE DISCH
C017	VALVE,CONTROL-CONDENSATE MKUP
C018	PUMP,CONDENSATE
C019	TURBINE,STEAM
C020	VALVE,CONTROL-HP STEAM
C021	VALVE,CONTROL-LP STEAM
C022	VALVE,CONTROL-HP ST BYPASS
C023	VALVE,CONTROL-LP ST BYPASS
C024	DESUPERHEATERS
C025	VALVE,WATER-DESUPERHEATER
C026	CONDENSER&HOTWELL,CONTROL
C027	DIAGRAM,SCHEM PP-FW&CONDENSER
C028	PUMP,VACUUM
C029	HEATER ARR,FEEDWATER
C030	HEATER,FEEDWATER
C031	SWITCH,VACUUM
C032	PUMP,CONDENSATE MAKEUP
C033	DEMINERALIZER
C034	CHEMICAL FEED EQUIPMENT
C035	THERMOCOUPLE ARR,HRSG
C036	VALVE,CONTROL-LP FEEDWATER
C037	VALVE,CONTROL-DSUPHTR WATER,BP
C038	VALVE,RGLT,BP-CONDENSER DISCH
C039	PIPING ARR,COMB AIR-REGEN
C040	NAMEPLATE,STATION-STAG
C041	VALVE,REGULATING-STEAM
C042	TRANSMITTER,TEMPERATURE-FWH
C043	OUTLINE,TEMP XMTR-FWH,SUGG
C044	DEVICE,TEMP CONT SYS-FWH DISCH
C045	REGENERATOR
C046	HEATER,DEAERATING
C047	STACK ARR,REGENERATOR
C048	DAMPER&MOTOR,STACK CLOSURE
C049	DIAGRAM,SCHEM PP-PLANT ST SYS
C050	CONDENSER&VACUUM PUMP,ACCESS
C051	ECONOMIZER,RECIRC CONTROL SYS
C052	CONTROL SYSTEM,DEAERATOR
C053	DUCT,TRANSITION,EXH-LOW TEMP
C054	VALVE,CONTROL-BLOWDOWN,HP
C055	VALVE,CONTROL-BFP RECIRC
C056	PIPING ARR,WATER
C057	PIPING ARR,STEAM
C058	PIPING ARR,CONTROL AIR
C059	DIAGRAM,SCHEM PP-STEAM&WATER
C060	DIAGRAM,SCHEM PP-CONTROL AIR
C061	SPEC,CONTROL
C062	DIAGRAM,SCHEM BLOCK-ST INJ SYS
C063	PANEL,CONTROL-HEAT RCVY ST GEN
C064	SUPPORT ASSY,ST STOP&CONT V
C065	MOTOR,DAMPER
C066	COMPRESSOR ARR,AIR-STATION
C067	CONDUIT ARR,ST INJECTION SYS
C068	DIAGRAM,SCHEM PP-COMB AIR
C069	VALVE,BLOW-OFF-REGEN COMB AIR
C070	DEVICE INTERFACE LIST,STATION
C071	DIAG,SCHEM,CONT-FDW&STEAM SYS
C072	PL,STATION CONTROL EQUIP-MISC
C073	SOOT BLOWER SYSTEM
C074	VALVE,BLOW-OFF,COMBUSTION AIR
C075	VALVE,BYPASS-COMBUSTION AIR
C076	VALVE,CONTROL-ECON RECIRC
C077	CONTROL DEVICES INSTAL,RECM
C078	SILENCER,BLOW-OFF VALVE
C079	TURBIDIMETER
C080	NITROGEN BLANKETING SYSTEM
C081	COOLING TOWER
C082	HEATER,CONDENSATE
C083	STEAM TURBINE LO MGT TANK
C084	VALVE,CONTROL-BLOWDOWN,LP
C085	VALVE,CONTROL-CNDS PUMP,RECIRC
C086	PANEL,CONTROL-GEN ST TURB DR
C087	AUX COMPT,ST TURB GEN
C088	GENERATOR,ST TURB DRIVEN
C089	EXCITATION COMPT,ST TURB GEN
C090	DIAG,TORSIONAL-ST TURB GEN
C091	DIVERTER,DAMPER&MOTOR
C092	CLEANING SYSTEM,CONDENSER
C093	VALVE,STEAM BLOW-OFF
C094	SAMPLING COOLERS,STEAM&WATER
C095	BURNER SYSTEM,HRSG
C096	PUMP,CIRCULATING-LP HRSG
C097	TANK,BLOWDOWN-CONTINUOUS
C098	TANK,BLOWDOWN-INTERMITTENT
C099	PUMP,DEMINERALIZED WATER
C100	PUMP,BOOSTER-DESUPERHEATER
C101	VALVE,CONTROL-HRSG STEAM TEMP
C102	DRYER,INSTRUMENT AIR
C103	GENERATOR TERMINAL ENCLOSURE
C104	CONTROL PANEL,GEN PROTECTION
C105	TANK,CONDENSATE RECEIVER
C106	TANK CONTROLS,CNDS RCVR
C107	VALVE,LEVEL CONTROL-CNDS RCVR
C108	VALVE,DUMP-CNDS RCVR

C109	VALVE,CONT-RECIRC,MIN FLOW
C110	PUMPS,LP BOILER FEED
C111	VALVE,CONTROL-PROCESS ATTEMP
C112	VALVE,CONTROL-DA WTR DUMP
C113	VALVE,CONT-SM TURB LUBO TEMP
C114	MONITOR,CO
C115	VALVE,CONTROL-EXTRACT SM
C116	VALVE,CONTROL-DSUPHTR SPARG SM
C117	BUS DUCT,ST TURB GEN
C118	STATIC VOLTAGE REGULATOR,ST
C119	COLLECT ENCLOSURE,ST
C120	BREAKER,ELEMENT,ST
C121	POWER SYS STABLIZER,ST
C122	RESIS,NEU,GND ST-GEN
C123	BAC COMPT ST-GEN
C124	PANEL,CONT-UNIT ST-TB-LD
C125	CONTROL-CENTER PKG ST-TB
C126	TRANSFORMER,NEUT. GND
C127	REACTOR,NEUT GRD ST-GEN
C128	ENCL,POWER CT ST-GEN
C129	BATTERIES&ACCESSORIES ST-TB
C149	PPT OFFBASE, STM TURB
C150	XFMR,PWR POTENL OFF BASE STM.
C161	BUS DUCT GEN FIELD ST-GEN
C162	SWITCHGEAR, METALCLAD - STM
C163	GEN STATOR CLG WATER SYS
C164	GEN H2/CO2 GAS CTRL SYS
C165	GEN SEAL OIL SYSTEM
C166	GLAND CONDENSER/STM SYS
C167	ADMISSIONS STRAINER
C168	ADMISSIONS STOP VALVE
C169	ADMISSION CONTROL VALVE
C170	MOTOR OPER FOR PV01 VALVE
C171	MOTOR OPER FOR PV02 VALVE
C172	MAN OPER FOR PV03 RLF VLV
C173	HP/IP EVAC VLV FOR PV03
C174	SEAL-MISC COMPON FOR PS13
C175	SEAL-PNLS&INDIC FOR PS41
C178	NEUTRAL GRD EQPT w/89ND
C179	PANEL, STM TURBINE CONTROL
C181	SPEC,CONT-ST SYS SETTINGS
C182	SOFTWARE-ST CONTROL PNL
C183	DGP SETTINGS -ST-GEN
C193	EXCITATION COMPARTMENT- ST-GEN
C194	PANEL, AUX STM TURB
C445	DIAGRAM,INTERCONNECTION - STM
C463	DIAGRAM,BLOCK CABLE - STM
CB03	FILTER ASSY,HYDRAULIC
CB05	CPRSR&MTR ASSY,ATOM AIR
CB07	VALVE,STOP,RATIO&CONT-MA
CB10	HYDRAULIC MANIFOLD ASSY
CB11	DEVICES,ACCY BASE
CB12	ASSY,GAGE CABINET
CB15	DEVICES,TB BASE
CB20	ACCUATOR ASSY,IGV
CB29	FLOW DIVIDER&MAG PU ASSY
CB30	FLOW DIVIDER,LIQUID FUEL
CF11	aalf later
CF12	ACCY GAUGE CABINET-AA/LIQ FUEL S
CM01	CASE ARR
CM02	VANE; BLADE & BUCKETS
CM03	NOZZLE ARR & SUPPORT RING
CM04	BEARING ASSY
D001	INSTRUCTION,HDLG&SHIP-CONT&CO2
D002	NAMEPLATE,STATION RATING
D003	OUTLINE,MECHANICAL-STATION
D004	CONTROL COMPARTMENT,STATION
D005	PANEL 1,CONTROL-STATION
D006	PANEL 2,CONTROL-STATION
D007	PANEL,CONTROL-TURBINE,UNIT 1
D008	PANEL,CONTROL-TURBINE,UNIT 2
D009	PANEL,CONTROL-TURBINE,UNIT 3
D010	PANEL,CONTROL-TURBINE,UNIT 4
D011	PANEL,CONTROL-TURBINE,UNIT 5
D012	PANEL,CONTROL-TURBINE,UNIT 6
D013	PANEL,CONTROL-TURBINE,UNIT 7
D014	PANEL,CONTROL-TURBINE,UNIT 8
D015	PANEL,CONTROL-GENERATOR,UNIT 1
D016	PANEL,CONTROL-GENERATOR,UNIT 2
D017	PANEL,CONTROL-GENERATOR,UNIT 3
D018	PANEL,CONTROL-GENERATOR,UNIT 4
D019	PANEL,CONTROL-GENERATOR,UNIT 5
D020	PANEL,CONTROL-GENERATOR,UNIT 6
D021	PANEL,CONTROL-GENERATOR,UNIT 7
D022	PANEL,CONTROL-GENERATOR,UNIT 8
D023	PANEL,CONTROL-SUPERVISORY
D024	MOTOR CONTROL CENTER-UNIT 1
D025	MOTOR CONTROL CENTER-UNIT 2
D026	MOTOR CONTROL CENTER-UNIT 3
D027	MOTOR CONTROL CENTER-UNIT 4
D028	MOTOR CONTROL CENTER-UNIT 5
D029	MOTOR CONTROL CENTER-UNIT 6
D030	MOTOR CONTROL CENTER-UNIT 7
D031	MOTOR CONTROL CENTER-UNIT 8
D032	PANEL,CONTROL-MASTER
D033	PANEL,CARRIER EQUIPMENT
D034	MOTOR GENERATOR SET
D035	AIR CONDITIONER
D036	BATTERY&ACCESSORIES
D037	RACK,BATTERY
D038	PANEL,BATTERY CHARGING
D039	TRANSFORMER,PWR DISTR-LIGHTING
D040	BASE,FAB&MACH,CONT COMPT
D041	ENCLOSURE,STATION-CONT COMPT
D042	COVER ASSY,CONTROL COMPT
D043	PANEL&FRAME ASSY,CONT COMPT
D044	CABINET,THERMOCOUPLE
D045	UNIT SUBSTATION,LOW VOLT SECT
D046	UNIT SUBSTATION,TRANS&HV SECT
D047	WT&CG,STATION CONTROL COMPT

D048	OUTLINE,ELECTRICAL-STATION
D049	CABLE ARR,STATION
D050	ENCLOSURE ASSY,CO2 COMPARTMENT
D051	COVER ASSY,CO2 COMPARTMENT
D052	PANEL&FRAME ASSY,CO2 COMPT
D053	OTLN,GT PKG,CO2 COMP CONN-PP
D054	NOTES,CO2 COMPT CONN OTL-PP
D055	PIPING ARR,CO2 SYSTEM-STATION
D056	COMPRESSOR,AIR-STATION
D057	TANK,RECEIVER-AIR,STATION
D058	CONDUIT ARR,CO2 FIRE ALARM
D059	CONDUIT ARR,CO2 COMPARTMENT
D060	CYLINDER,CO2
D061	WT&CG,CO2 COMPARTMENT
D062	PANEL,SUPERVISORY-BLANK DOOR
D063	DRYER,AIR-STATION
D064	OTLN,MECH ST/GT/GEN
D065	OTLN,ELECT ST/GT/GEN
D066	FDN INTERFACE/ST/GT/GEN
D067	WT&CG ST/GE/GEN
D068	OTLN,OFF-BASE MECH
D069	OTLN,OFF-BASE ELECT
D070	CABLE LIST, ST/GT/GEN
D071	DIAG, INTERCONNECTION ST/GT/GEN
D072	DEVICE LIST, ST/GT/GEN
DIES	L KIT
DLN1	DLN PIN FOR SPECIAL NEEDS
DLND	DLN DIRECT SHIP BOM
DMNO	DESIGN MEMO NUMBER
DOCS	
E001	HEAVY FUEL WASH UNIT,CNTFGL
E002	NAPHTHA FWD UNIT
E003	RESIDUAL FWD UNIT
E004	HEAVY FUEL FWD UNIT
E005	HEAVY FUEL INHIBITING UNIT
E006	DISTILLATE FUEL FWD UNIT
E007	FUEL FILTERING UNIT
E008	FUEL ANALYSIS UNIT
E009	PANEL,CONTROL-FUEL PRCS UNIT
E010	PANEL,CONTROL-WASHING&CLN SYS
E011	CPRSR&TURB WSHG&CLN SYSTEM
E012	DIAGRAM,SCHEM PP-LIQ FUEL PRCS
E013	CONTROL VALVE UNIT,WSHG&CLN
E014	DEVICE SUMMARY
E015	PIPING ARR,CLN&WASH CONT VALVE
E016	CONDUIT ARR,TURB WASH V UNIT
E017	DAY TANK TRANSFER UNIT
E019	FUEL BLENDING UNIT
E020	DISTILLATE FUEL WASH UNIT-ES
E021	SKID INHIBITION (VANADIUM)
E023	SCAVENGING UNIT ASSY
E024	TRANSFORMER,AUX-FUEL FWD UNIT
E025	COMPRESSOR&TURB WASHING SYSTEM
E026	COMPRESSOR&TURB CLEANING SYS
E027	PANEL,ALARM FUEL PRCS-RMT MTD
E028	EFFLUENT WATER TREATMENT UNIT
E029	BENCH,TEST-RESIDUAL FUEL
E030	DETECTOR,WATER IN OIL
E031	FUEL SELECTION UNIT
E032	FUEL SPLIT UNIT,LIQUID
E033	NOZZLE,COOLING WATER SYSTEM
E034	BUCKET,COOLING WATER SYSTEM
E035	WATER TREATMENT&SUPPLY SYSTEM
E036	TANK,STORAGE-CLG WATER
E037	FUEL SYS COMPONENTS-OFF BASE
E038	PUMPING UNIT,COOLING WATER
E039	PRESSURE FLOW DIVISION SKID
E040	SKID,LF HP FILTER OFF/B
E041	DISTILITE FUEL HEATER
E042	V INHIBITION SOLUBILIZING UNIT
E043	LUBRICITY INIJECTION UNIT
E044	RESIDUAL FUEL HEATING
E045	DO NOT USE ASSIGNED TO POHL
E046	DO NOT USE ASSIGNED TO POHL
E550	OUTLINE,OFFBASE ELEC
E551	OFFBASE ELEC OUTLINE -PPE
EG01	DRAWING,CUSTOMER
EG02	INSTRUCTIONS,ENGINEERING
EG03	CUST DWG INSTALLATION
EG4G	SCHEMATICS-GREENVILLE
EG4S	SCHEMATICS-SCHENECTADY
F000	EXTENDED SCOPE COORDINATION
F001	TRANSFORMER,AUXILIARY
F002	SWITCHGEAR,MEDIUM VOLTAGE
F003	MOTOR STARTER,LIMITAMP
F004	SPEC,CONTROL-STATION
F005	DIAG,SCHEM,FLUID SYS CONT-STA
F006	DIAG,SCHEM,CONT-FDW&STEAM SYS
F007	DIAG,SCHEM,CONT-HRSG FUEL SYS
F008	DIAG,SEQUENCE-STA SIGNAL FLOW
F009	PLANT MASTER CONTROL CONSOLE
F010	OUTLINE,CONTROL CONSOLE-STA
F011	COMPONENTS,CONTROL CONSOLE STA
F012	DIAG,SCHEM PP-STATION FUEL SYS
F013	DIAG,LOGIC-STATION PROTECTION
F014	RESISTOR,NEUTRAL GND-AUX XFMR
F015	CONTROL COMPT ARR,STATION-SUGG
F016	DEVICE INTERFACE LIST,STATION
F017	PANEL,CONT-STATION MTD DEVICES
F018	PANEL,CONTROL-GTRB&HRSG
F019	OUTLINE,CONT PANEL-GTRB&HRSG
F020	COMPONENTS,CONT PNL-GTRB&HRSG
F021	PANEL,CONTROL-STATION
F022	OUTLINE,CONTROL PANEL-STATION
F023	COMPONENTS,CONT PANEL-STATION
F024	PANEL,CONTROL,SEQUENCE-STATION
F025	OUTLINE,SEQ CONT PANEL-STATION
F026	INVERTER,STATIC-STATION
F027	TRANSFORMER,STANDBY
F028	RESISTOR,NEUTRAL GND-STBY XMER

F029 PANEL,DISTRIBUTION-DC
F030 BATTERY,STATION
F031 CHARGER,BATTERY-STATION
F032 MOTOR CONT CENTER,UNIT SUBSTA
F033 TRANSFORMER,UNIT SUBSTATION
F034 RECORDER,EVENT
F035 DATA LOGGER
F036 DIAGRAM,SCHEM,STA CONTROL-STAG
F037 CABLE ARR,STAG CONT EQUIPMENT
F038 TURBINE GENERATOR SET,STATION
F039 SWITCHGEAR,LOW VOLTAGE,STATION
F040 MOTOR CONTROL CENTER,STATION
F041 INSTALLATION MATL,ELEC-STATION
F042 DETECTION SYSTEM,FIRE-STATION
F043 DETECTION SYSTEM,GAS-STATION
F044 TRANSFORMER,STATION
F045 GAS METERING SYSTEM,STATION
F046 INSTL&MAINT MATERIAL,STATION
F047 DRYER,GAS-STATION
F048 PLOT PLAN,STATION
F049 DIAGRAM,ONE LINE,STATION
F050 EMERGENCY SHUT-DOWN SYSTEM,STA
F051 CAPACITOR,PF CORRECTION
F052 MOTOR CONT CENTER,ST TURBINE
F053 SWITCHGEAR,REMOTE PANEL
F054 PANEL,CONTROL-SYNCHRONIZING
F055 MOTOR CONT CTR,TB&CPRSR BLDG
F056 LUBE OIL PURIFICATION SYSTEM
F057 PUMP,CONTAMINATED LUBE OIL
F058 LOAD CENTER,AFTERCOOLER
F059 DIAGRAM,INTERCONNECTION-STA
F060 LIGHTING ARR,STATION
F061 GROUNDING ARR,STATION
F062 CONDUIT ARR,STATION
F063 MASTER CONTROL EQPT,PLANT
F064 PIPING ARR,STATION
F065 DIAGRAM,SCHEM PP-STATION
F066 TOOL KIT,INSTL&MAINT-STATION
F067 TRANSFORMER,POWER
F068 TANK,FUEL-STATION
F069 ELECTRICAL INTCON ARR,STATION
F070 FOUNDATION,GAS TURBINE
F071 FOUNDATION,AUXILIARY EQPT
F072 PARTS LIST,STATION EQUIPTMENT
F073 BREAKER,CIRCUIT-STATION
F074 LOAD CONTROL EQUIPMENT,PLANT
F075 CABLE,STATION-MISCELLANEOUS
F076 BOLT ARR,ANCHOR
F077 CABINET,TERMINATION-GTRB&HRSG
F078 CONTROL EQPT INTERFACE,STAG
F079 PARTS LIST,INSTL MATERIAL-MECH
F080 PARTS LIST,INSTL MATERIAL-ELEC
F081 PL,INSTL MATERIAL,STRUCTURAL
F082 PL,MOTORIZED VALVE
F083 LIST OF CABLES
F084 INSTALLATION DRAWINGS
F085 TRANSFORMER,STEP UP
F086 CUSTOMER CONTROL INTERFACE DOC
F087 FLOW DIAGRAMS
F088 CABLE INSTALLATION DATA-STAG
F089 DIAGRAM,CONTROL-STATION
F090 DIAGRAM,DATA BLOCKS
F091 MECHANICAL EQUIPMENT,MAJOR
F092 ELECTRICAL EQUIPMENT,MAJOR
F093 CIVIL/BUILDINGS/STRUCTURAL
F094 TEST STAND,FUEL NOZZLE
F095 OUTLINE,GT PKG,STATION CONN-PP
F096 TANK,GAS TURBINE DRAINS
F097 PARTS LIST,STRING TEST EQUIP
F098 ANTI-SURGE SYSTEM
F099 EMERGENCY TREATMENT EQUIPMENT
F100 COMMUNICATION SYSTEM
F101 WATER TREATMENT SYSTEM
F102 APPLIED FINISH,BOP EQUIPMENT
F103 SAMPLING EQUIPMENT,STEAM&WATER
F104 SIDING,ARCHITECTURAL-BOP
F105 START-UP MATERIALS
F106 PUMP,TRANSFER-TREATED WATER
F107 MANUAL,OPERATIONS DATA
F108 MANUAL,STARTUP PROCEDURE
F109 INSTRUCTION,TEST-PERFORMANCE
F110 INSTRUCTION,TEST-EMISSIONS
F111 INSTRUCTION,TEST-ACOUSTICS
F112 EQUIPMENT LAYDOWN,CC
F113 SENSOR/ACTUATOR,CC
F114 SETTING JUSTFCN,CC
F115 CTRL ALGORITHM,CC
F116 PROTECTION RELAY PANEL SPEC,CC
F117 AUXILILARY MOTOR LIST,CC
F118 EMERGENCY AC LOAD LIST,CC
F119 DC LOAD LIST,CC
F121 CTRL METHOD DESCRIPTION
F122 STEAM PIPING CLNG PROC
F123 CUSTOMER DWG LIST,CC
F124 STD STARTUP/SHUTDOWN CURVES
F125 DESCRIPTION OF VIBRATION MGMT
F126 TB SUPERVISORY INSTR
F127 OVERSPEED PROTECTION SYSTEM,CC
F128 HEAT BALANCES,CC
F129 MAX CAP VS AMB TEMP,CC
F130 HEAT REAT VS STA OUTPUT,CC
F131 GT NOX VS STA OUTPUT,CC
F132 HRSG NOX VS STA OUTPUT,CC
F133 DENOX EFF VS STA OUTPUT,CC
F134 O2-CO-UHC VS STA OUTPUT,CC
F135 GT INLET/EXHAUST LOSS,CC
F136 GT ATMOSPH PRESS CORRECTION,CC
F137 GT COMTPRESS/EXPANS DIAG,CC
F138 DYNAMIC SIMULATION,CC
F139 LCI SPEED VS TIME,CC

F140	PROJ ENGR SCHEDULE,CC
F141	POWER TRAIN MECH OUTLINE,CC
F142	DEVICE SUMMARY, PWR TRAIN,CC
F143	P&ID GEN STAT CLG WTR SYS
F144	P&ID,H2/CO2 GAS CTRL SYS
F145	P&ID,GEN SEAL OIL SYSTEM
F302	STEAM SYS HDWR OUTLINES
F907	GNAC
F908	GLAC
F913	GNAC -STM TURB
F914	GLAC - STM TURB
F926	LCI FUSE COMPT
G001	METERING MODULE,FUEL GAS
G002	INLET GAS SCRUBBER
G003	CONDITIONING MODULE,FUEL GAS
G004	HEATER,FUEL GAS
G005	COMPRESSOR,BOOSTER-GAS
G006	PRESSURE REDUCING MODULE,FG
G007	FILTER SEPARATOR,FUEL GAS
G008	FUEL GAS SELECTION UNIT
G009	SKID-NITROGEN INJ
G010	HEATER,FG IP HOT WATER EXCHANGER
G011	HEATER,FUEL GAS VIA HOT WATER
G012	HEATER FG-ELECTRIC, STARTUP
G013	SKID,FUEL GAS, PARTICULE FILTER
G014	SKID, FG S, COALESCING FILTER
G015	SKID,FUEL GAS, ABSOLUTE SEPARATO
G016	FUEL GAS KNOCKOUT DRUM
G017	FUEL GAS PRESSURE REGULATION
G018	FUEL GAS COMPRESSOR
G019	SKID, GAS HTG FEED WATER TANK VE
G020	FG, ABS SEP/2 W/ELECT SU HEATER
G021	FG, HEATER STATION
G022	FG, MOISTURIZER/IP HEATER
G023	FG, CHROMATOGRAPH
G024	CONSOLIDATED FG HTG SYS
G025	CONSOLID FG CND/HTG SYS
G026	FG CUSTODY XFER METER STA
G1BW	BARRIER WALL, STM TURB
H001	COMPRESSOR MODULE,SUCTION
H002	COMPRESSOR MODULE,DISCHARGE
H003	INSTM,PROCESS-TURBINE/CPRSR
H004	SUPPORT STRUCTURE,TURB ACCESS
H005	FOUNDATION MATERIAL
H006	INSTALLATION MATERIAL,ELEC
H007	TANK,TURBINE DRAIN
HS01	BA SUPPLEMENTARY DRWG DOC
IGCC	IGGC SPECIAL MSD BOM
IS06	INSTALLATION & STARUP EXTRAS
LB10	PIPING ARR,ATOM AIR-LWR
LB11	DEVICE-FACTORY CALIBRATED
LB12	VALVE,SOL CPRSR BLEED
LB13	PP ARR,CLG&SLG AIR-LWR
LB14	JCT BOX ASSY,19&20
LB15	??
LB16	VALVE,FALSE START DRAIN
LB17	??
LB18	INLET&EXH PLENUM ACCUM
LB20	CABLE ARR,TURB EXH-LWR
LB22	PLENUM&BASE ASSY
LB26	CONDUIT ARR,TURB BASE-LWR
LB28	
LB30	INSTALL INLET PLENUM & TC
LB40	INSTALL LOAD COMPT CONDUIT
LB50	BASE ASSY,TURBINE-LWR
M195	COMM. BLOCK DIAG. AUX ELEC&CONT
M940	OUTLINE, MECH & ELECT OUTLINES
M996	GEAR MODULE
M997	LIQUID FUEL & ATOMIZING AIR MODU
M998	LUBE OIL & GAS FUEL MODULE
M999	AUXILIARY MODULE
MNQC	MNQC SHIP DIRECT
MS01	MODULE GAS FUEL COMPLETE
MS02	
MS03	GAC&BREAKER FROM VENDOR
MS04	CONTROL CAB SHIPPED
MS05	LUBE OIL MODULE, COMPLETE
MS06	LUBE OIL MODULE, VENDOR
MS07	LIQUID FUEL MODULE, COMPLETE
MS08	LIQUID FUEL MODULE, VENDOR
MS09	SENSORARR IN/EX COMPLETE
MS10	ACCESSORY SYSTEM,COMPLETE
MS11	ACCESSORY SYSTEM,VENDOR
MS12	INTERCONNECTION MODULE,COMPLET
MS13	INTERCONNECTION MODULE,VENDOR
MS14	COOLING WATER PIPING -MSD
MS16	SKID,LF&AA,COMPLETE
MS17	SKID,LF&AA,VENDOR
MS18	ACCY BASE TANK-INTERNAL,VENDOR
MS19	MODULE,TB-COOLING STEAM
MS20	MODULE,TB-COOLING STEAM VENDOR
MS21	MODULE CLEARANCE CONTROL
MS22	MODULE CLEARANCE CONTROL VENDO
MS23	MODULE TB COOLING AIR
MS24	MODULE TB COOLING AIR VENDOR
MS25	MODULE,GAS FUEL HEATING
MS26	MODULE,GAS FUEL HEATING VENDOR
MSDD	REFERENCE SPEC FOR CUSTOMER
MSDL	MSD LOCAL SOURCED
MSDM	MATERIAL SHIP DIRECT TO SITE
MSDP	PPE PROVIDED EQUIP & DOCS
MSDS	MSD -FOR STM SUPPLIED BT GT
MSDV	MSD-VENDOR TO VENDOR
MSDX	MSD EXTRA MATERIAL
MSG2	MSD-SPECIAL GAS SYSTEM HARDWARE
N195	SPEC, AUX ELEC &CONT SYS EQUIP
N307	BARRIER WALL,ACOUSTIC STM TURB G
N313	CLEAN AGENT FM200-FP SYS
PA01	BASE,ACCESS-PAINT BOTTOM
PA02	BASE,ACCESS

PA03	BASE,ACCESS-COVER ASSY
PA04	BASE,ACCESS-MASK&PAINT
PA05	BASE,ACCESS-INSUL MANF
PA06	BASE,ACCESS
PA07	BASE,ACCESS-PANEL ASSY
PA08	BASE,ACCESS-SEAL BASE AFT
PA09	BASE,ACCESS-SIDE PNL ASSY
PA10	BASE,ACCESS-ASM SHOCK IND
PA11	BASE,ACCESS-PREP&LOAD
PA12	BASE,ACCESS-INSTL FWD COV
PA20	TURB EXP INSTALLATION
PF02	BASE, ATOM AIR LIQUID FUEL SKID
PF03	BASE, ATOM AIR LIQUID FUEL SKID
PF04	BASE, ATOM AIR LIQUID FUEL SKID
PF06	BASE, ATOM AIR LIQUID FUEL SKID
PF07	BASE, ATOM AIR LIQUID FUEL SKID
PF08	BASE,ATOM AIR LIQUID FUEL SKID
PF09	BASE, ATOM AIR LIQUID FUEL SKID
PF10	BASE, ATOM AIR LIQUID FUEL SKID
PF11	BASE, ATOM AIR LIQUID FUEL SKID
PF12	BASE, ATOM AIR LIQUID FUEL SKID
PS10	LUBE OIL FILTER , ASSY
PS11	HEAT EXCH FLTR, ASSY
PT00	UNIT TO PREP
PT01	BASE,TURB
PT02	BASE,TURB-INLET
PT03	BASE,TURB-CLG&SEG AIR
PT04	BASE,TURB-NAMEPLATE ARR
PT05	BASE,TURB-PREP FOR PAINT
PT06	BASE,TURB-PAINT INTL
PT07	BASE,TURB-ROOF&PANELS
PT08	BASE,TURB
PT09	BASE,TURB-EXH&LD COMPT
PT10	BASE,TURB-PAINT&PRESERVE
PT11	BASE,TURB-PREP&LOAD
PT13	
PT14	
PT15	
PT17	
PT19	
PT21	
PT23	
REFD	
S200	
SC01	MATERIAL SPEC
SPEC0	MATERIAL SPECS
STDP	STANDARD PROJECT SPECS
SUM1	
SUM2	SUMMARY SHEET FND BOLTING
SUMK	SUMMARY SHEET (BUY) MATL
SUMM	SUMMARY SHEET
SUMP	SUMMARY SHEET, PIPING
SUMS	SUMMARY SHEET, SPECIAL
SUMX	PART REMOVED TO SHIP
TA14	CDC ARRANGEMENT
TA15	EXH FRAME ARR
TB01	CASE&NOZZLE ARR,TURB
TB02	INLET ARR,COMPRESSOR
TB03	CASE&BEARING 1 ARR
TB04	CASE ASSY,STATOR
TB05	CASE ARR,UNIT
TB06	GAS TURBINE ASSY,UNIT
TB07	BEARING 1 ARR
TB08	CASE ARR,CPRSR DISCH
TB09	BRG #4 ARR
TB10	ASSY,INNER TB SHELL
TB11	ASSY,COMP CASE&VGV
TB12	UNIT ASSY, COMB TEST
TB13	ASSY OUTER TB SHELL
TB14	DO NOT USE -SEE TA14
TB15	DO NOT USE -SEE TA15
TB17	ASSY,INLET CASE & IGV
TB18	ASSY,COMP CASE&VGV-PURCH
TB19	IGV ARRANGEMENT
TE01	UNIT ASSY COMB TEST
TSNO	TURBINE SERIAL NUMBER
TT28	TO TEST ASSEMBLY
TT29	TO TEST PIPING
TT30	GENERAL PREPERATION
TT31	STANDSTILL CHECKS
TT32	CRANKING CHECKS
TT33	INITIAL FIRE-100% SP CHKS
TT34	PERFORMANCE CHECKS
TT35	LP RTR 100% SP CHKS-5002
TT36	GIG&DEFLECT CLEARANCE
TT37	FINAL FIRE&CERTIFICATION
TT38	STRIP OUT
TT39	OFF TEST PIPING
TT40	OFF TEST ASSEMBLY
TT45	TURBINE BASE OFF TEST
TURB	BASE,TURBINE
UA10	CASE ASSY-STATOR
UA12	TURBINE/BASE ASSY
UA20	ALIGNMENT,INITIAL-STATOR
UA30	ALIGNMENT,FINAL-STATOR
UA40	ROTOR INSTALLATION,UNIT
UA50	CLEARANCES,TURBINE
UA60	UNIT ASSY,STATOR
UA70	UNIT ASSY,COMBUSTION
UA71	ASSY, PRE BURNER
UA72	ASSY, PRE MIXER
UA73	ASSY, CATAYST & PCL/PCC
UA80	COMBUSTION HDW,CUSTOMER
UA90	UNIT ASSY,TURBINE
UB10	TURBINE&BASE ASSY
UB11	ARRG'T VGV
UB12	IGV ARRANGEMENT
UB14	PP ARR,INLET PLENUM DRAIN
UB15	RADIATION,TEES EXHAUST-TC
UB16	CONDUIT ARR,TURB BASE-UPR

UB17	CONDUIT ARR,BRG INSTR-LL
UB18	CONDUIT ARR,TURB BASE-LL
UB19	INLET&EXH,PLENUM-ACC
UB20	PP ARR,EXH PLENUM DRAIN
UB22	THERMOCOUPLE ARR,EXHAUST
UB23	CONDUIT ARR,FLAME DET
UB24	PP ARR,LUBO FEED&DR BASE
UB25	
UB26	PP ARR,CLG&SLG AIR-UPR
UB28	PP ARR,FUEL NOZZLE PURGE
UB29	
UB30	PP ARR,FALSE START DRAIN
UB31	ENCLOUSE TO BASE
UB32	CONDUIT ARR,WHL SPACE TC
UB33	PP ARR CLG&SLG AIR-UPPER
UB34	BASE TURB,READY FOR TEST
UB35	CONTROL ARR,2ND STG NOZ
UB36	GAS FUEL SYSTEM
UB37	VGV ARR, FINAL ASSEMBLY
UB40	
UB45	
UB50	
UB56	ACC/TURB READY FOR TEST
UB57	NOZZLE CONTROL ASSY 2ND STAGE
UB60	
UB70	
UB80	
UB85	
UB90	UNIT READY FOR TEST
VDOC	VENDOR DRAWINGS (VDOC)
ZB05	
ZB06	

The above information can also be downloaded by going to the following Website:

http://inside-ep.ps.ge.com/communities/engineering/gas/config/HTML-MLI-LIST.shtml



Since this Webpage can only display a portion of the complete list, the TA will have to page through the list and copy the information several times to obtain the complete list shown above. At the time of printing, this list was correct and complete.

SECTION 4. UNIT RECORD SHEET

The Unit Record Sheet (URS) is an invaluable source of information which identifies all original drawings, modifications and uprates for any Gas Turbine. The URS can be found on the Services Portal within the Energy Services Applications hyperlink area. The link is identified as **"COPICS – Unit Record Sheet"**. Once this page has loaded, select the "ML Comparator" (BMMC) to open the URS main screen. When using the URS, input the unit serial number preceded by "DEV-" in the top left data field identified by **"SERIAL # (DEV-XXXXXX)"**. The other option is to place the unit ML number into the URS ML ITEM COMPARATOR "**Item No**" field. The format for this field, by example, for a 7FA unit would read: ML-7A1WFA112-2 as described in Section 1.

To bypass the first page and go directly to the Search page (URS ML ITEM COMPARATOR), click on the following link.

http://nyschi52psge.sch.ge.com/eng/Projects/copicsURS/choice.cfm?lnkchoice=3

Once the specific URS is loaded, review the headings of the list and find the column identified as "Pin". This column is the MLI number. It is important to verify the "Opened" date to understand which drawing is applicable. There may be multiple MLI numbers found on the unit record sheet. The "Opened" column will identify when new drawings were implemented.

SECTION 5. ADDITIONAL HYPERLINKS

Web Site Hyperlink	Description
Services Portal	The Services Portal contains links to several different GI&FS Web sites. Various P&L centers are represented within this site to provide Field Engineers with shortcuts to many of the tools needed to successfully complete installation, maintenance, or uprate activities.
GI&FS Methods	GI&FS Methods Web page contains links to all gas turbine, steam turbine and generator Engineering Manual (EM) articles, Installation (DN) Guides, and Inspection Forms. Additional information pertaining to the FE CD Packs and FSR Auto can be found on this Website as well.
EHS	I&FS Environmental Health and Safety (EHS)
GE Energy Products (PPSD)	Maintains and publishes GEK documents on the Web, including Inspection and Maintenance manuals.
Product Service Portal	The Product Service home page has been structured as a user configurable Web page. Each TA can add or remove specific portals to customize their screen. Some of the available choices include the MLI Number and Description search engine, 12 Month Installation Schedule, TIL Affected Units search engine, and the Problem Resolution Center to name a few.
Product Service Tech. Library	The Product Service Technical Library contains links to technical documents including TIL's, ETC's, FCL's, and more.
Online Device Summary	Provides device nomenclature and identifies the settings of a particular device where applicable.
DART	The Document Archive and Retrieval Tool (DART) is a Web based application that allows drawings to be viewed on-line as well as downloading the drawings to a printer or hard drive.
Global Sourcing MSD/BOP	Site contains information regarding vendor supplied parts can be identified from within this web page. This page will help to reconcile parts issues that arise in the field. This page can be used to verify quantities ordered and quantities shipped to the customer site. Additionally, buyers are listed along with the shipping case number(s) assigned to a particular purchase order. This page may load slowly.

Web Site Hyperlink	Description
FRMT - Field Engineer	All Field Engineers **must** use FRMT to update job status and personal availability. This is not an option.
Parts On-Site Tracking (POST)	This Web site is similar to the Global Sourcing MSD/BOP Web site described above. This site provides information regarding part orders placed for a particular turbine number or order number. The line number, description, part number, case number, request date, promised date, quantity ordered, shipping status, ship date, and carrier can be tracked by the Field Engineer.
QPTS	Create and track Quality projects using DMAIC or DFSS methodology.
Gas Turbine COE	This site is similar to the Services Portal Web Site however, it is driven by gas turbine technology. The Web site included links found in this document plus additional technical information that is not covered in this document.
F-Technology Inspection Limits Manual	This manual covers the inspection limits for F-Technology gas turbines.

SECTION 6. HYTORC, RIVERHAWK, AND ITH CONTACT INFORMATION

Hytorc

www.hytorc.com

1-800-FOR-HYTORC

Riverhawk

www.riverhawk.com

315-768-4855

ITH

www.ith.com

847-550-8165

SECTION 7. GAS TURBINE GLOSSARY

– A –

Abrasive Cleaning	This is a turbine cleaning method where an abrasive cleaner such as nutshells are injected into the turbine during operation under load. The nutshells remove harmful deposits and restore 10 to 50% of a turbine's performance losses.
Absolute Separators	Fuel cleaning devices that are configured in a vertical arrangement where the gas fuel first enters vane sections to separate the larger droplets, then passes on to the coalescing filters where the smaller liquid particles are removed. The coalesced droplets form on the outside of the filter and are drained by gravity to a collection tank. It is the similar to the Combination Separator except that the method of separation is reversed. (See also Combination Separators.)
Accessory Package	Where the generator and accessories are all in-line resulting in lower installation costs and faster commissioning. Usually consists of the lube oil system and reservoir, hydraulic oil system, fuel oil system, atomizing air system, gage cabinet, torque converter and rotor turning device.
Accessory Compartment	A sheet metal house with access doors. The Accessory Compartment may be on the same base as the turbine or located on a separate base. It contains mechanical elements necessary to support prime-mover operation.
Accessory Coupling	Consists of several gears which drive most gas turbine accessories at proper speeds, which connect the turbine to the starting device. The gear is driven first by the starting device, then by the turbine when the unit reaches self-sufficient speed. This gear drives the liquid fuel pump, water pump, main lube pump, main hydraulic pump and main atomizing air compressor.
Accessory Gear Box	This term refers to the casing for the turbine-driven accessory gear or to the actual gear assembly.
Accumulator	A hydro-pneumatic device designed to absorb a hydraulic shock and to deliver a regulated force (in the form of pressure and fluid) during transient demands on a system.
Actuator	A self-contained device designed to deliver a controlled or regulated force in order to put some other device in action, or to place another device at a required position.
Advanced Seals	Found on the new H model gas turbine units, these seals have built-in brushes to reduce leakage of air between the stationary and rotating sections of the turbine. Also know as brush seals. (See Brush Seals.)
Alloy 706	This alloy is used to manufacture modern turbine wheels. It is extremely strong and allows tighter tip clearances.
Ambient Temperature	This is the temperature of the environment surrounding the turbine. It can be used to calculate the turbine firing temperature.

Annular Combustor	Shape and configuration-round and horizontal.
Annunciator	The signaling apparatus of the protection system which annunciates (visually or audibly) when a fault condition to the turbine and load device is sensed.
Air Extraction	Process of taking air from the compressor discharge casing for other applications. This results in a loss of power calculated to be 2 percent for every 1 percent of air extraction. In general, up to 5% of the compressor airflow can be extracted from the compressor discharge casing without modification to casings or on-base piping. However, air extraction between 6 and 20% may be possible depending upon the type of unit and the combustor configuration. In these cases, some modifications to casings, piping and controls are in order. Any air extraction above 20% will require extensive modification to the turbine casing and unit configuration.
Aircraft Derivative	Gas Turbines that have their base design derived from the aircraft engines designed and built in conjunction with GE Aircraft Engines, with headquarters in Cincinnati, Ohio.
Airfoil Shape	Bucket shape designed to facilitate the most efficient use of energized air to spin the turbine and create power.
Air Temperature	One of the primary factors affecting gas turbine performance, ambient air temperature affects the output, heat rate, heat consumption and exhaust flow. Each turbine model has its own temperature effect curve which depends on the cycle parameters and component efficiencies as well as air mass flow.
Annular Space	The ring-like space between the combustion liner and the flow shield.
Atomizing Air	Atomizing air is air separated into tiny fragments by high pressure and then delivered to each fuel nozzle to finely atomize the fuel for complete, smoke-free combustion. The system supplies air at a pressure higher than that in the combustor. The pressure drop across the fuel nozzle sweeps the fuel into the air stream in a finely atomized spray pattern. The major equipment in an atomizing air system are a compressor and pre-cooler. In general, this system provides improved inlet temperature distribution, which reduces maintenance of hot-gas path components.
Autoignition Temperatures (AIT)	The temperatures required for spontaneous combustion of gas fuels when there is no ignition source. Autoignition is an instantaneous ignition of liquid droplets in fuel causing, in many cases, premature ignition of the pre-mixed gases in the turbine, which is called "flashback." Due to this serious problem, GE specifies that no liquids be in the gas fuel.

– B –

Base Load	Defined as operation at 8,000 hours per year with 800 hours per start; or the maximum temperature control set point above which the turbine cannot be operated with out sacrificing turbine life expectancy.
Bellmouth	A flared, bell-shaped inlet which provides an even air-flow distribution through the inlet compressor through the inlet guide vanes.

Bearing Seal	The general term used to identify the means of preventing oil leakage from a bearing area. There are several types of seals; close tolerance and mechanical seals, plus a pressure source to contain the oil after it is used to lubricate and prevent it from leaking.
Bearings	Bearings are machine parts in which another part (journal or pin) turns or slides. Several types of bearings are used to support gas turbine rotors. These include journal elliptical, journal tilting pad, thrust tapered land, journal cylindrical, ball bearings and roller bearings. Bearings are pressure-lubricated by oil supplied by the main lubricating oil system.
Black Start	The capability to bring a "cold iron" machine on-line when a source of outside electrical power is unavailable. The unit must be equipped with a diesel engine starting device. A dc battery-powered turning device is used for rotor cool down to ensure integrity of the black start capability.
Blade	The rotating or stationery airfoils of an axial compressor. (See also Buckets.)
Borescope Inspection	An optical borescope is used to visually inspect sections of the turbine flow path area and compressor for gas-path damage. An effective borescope inspection program, conducted at recommended intervals, can result in the removal of casings and shells from a turbine unit only when necessary to repair or replace parts.
Brayton Cycle	This is the thermodynamic cycle, named after George Brayton who discovered it, upon which all gas turbines operate, characterized by two significant parameters: pressure ratio and firing temperature. The pressure ratio is the compressor discharge pressure divided by the pressure at the inlet. The firing temperature is thought to be the highest temperature reached in the cycle. It is defined by GE as the mass-flow mean total temperature at the first-stage nozzle trailing edge.
Brittle	Term describing loss of resiliency in parent metal due to aging, extreme cold or chemical exposure.
Broad-Frequency Banded-N	Acoustical characteristics of the combustor volume.
Brush Seals	These are advanced seals now available in industrial gas turbines to provide a tight, rub-tolerant seal which experiences minimal degradation over time. The brush seal is a bristle-like bundle of metal that bounces back to its original configuration after a rub. They are attached to the inner barrel. These are used in the compressor discharge (or high pressure packing) and the outer air seal on the number 2 bearing of certain gas turbine models.
Buckets	Also known as blades, these are curved vane elements mounted on the rotor and encased in a shell or shroud. They are the interface with the hot gas path that transfers the energy to the generator.

Bucket Coatings	Coatings protect the bucket from corrosion, oxidation and mechanical property degradation. They provide a surface reservoir of elements that form protective and adherent oxide layers to protect the underlying base material from oxidation and corrosion attack, and general degradation. There are several kinds of coatings used by GE that have been divided into two basic types: *diffusion-style* called Platinum Aluminide (PtAl) and an *over-lay* style such as PLASAMGUARD™ GT-29 IN-PLUS.
Bucket Cooling	This cooling is achieved by air cooling holes drilled or cast into the buckets.
By Pass Valve	The mechanical device that regulates the flow of fuel or air in either one of 2 processes: 1) as a fuel by pass on a liquid fuel system using a positive displacement pump; or 2) as an air control valve used in pulsation protection systems.

– C –

<C>	Designation for the Common Data Processor module, which is the communicator between the operator interface and the turbine control processors (<R> <S> <T>) in the SPEEDTRONIC™ Control System.
Can Assembly	There are 3 main components in the can assembly: 1) combustion can cover; 2) flow sleeve; 3) transition piece.
Cap and Centerbody	The liner cap and centerbody contain the cups that accept the primary fuel nozzles which are mounted on the can cover. The centerbody portion accepts the secondary fuel nozzle. The area inside the centerbody is where the secondary fuel is pre-mixed with combustion air.
Casing	This is the protective tube surrounding the gas turbine rotor and is composed of a series of cast-iron castings bolted together end-to-end. The two castings at the forward-end are the inlet and compressor castings and are made of gray iron, while the two at the aft-end are the discharge and turbine shell castings. These latter are generally made of ductile iron, or steel castings, or fabrications.
Changeover Under Load	The automatic changeover from one fuel to another while the unit is in operation.
Check Valve	A valve that allows fluid to flow in one direction, but restricts or completely cuts off flow in the opposite direction.
Centrifugal Pump	This is a pump designed to use a rotating impeller in an enclosure to move liquid from place to place.
CO2	Carbon Dioxide; used as a fire-extinguishing medium in a gas turbine.
Coalescing Filter	These filters are used in conjunction with dry scrubbers when removal of practically all liquid fuel droplets is required. The filter unit is comprised of a vertical pressure vessel that contains a number of parallel tubular filter cartridges. The wet gas containing small droplets flows through the filter where the droplets are collected and removed from the filter by gravity, and flow into the sump.

Cogeneration	Defined as the sequential production of necessary heat and power (electrical or mechanical) or the recovery of low-level energy for power production, cogeneration is an economical means of providing plant energy. Sequential energy production yields fuel savings relative to separate production facilities. Cogeneration power is frequently generated prior to the delivery of the thermal energy to the process, when, for example, gas turbine exhaust energy is ultimately used for process requirements.
Combination Separators	Fuel cleaning units that combine changeable filter elements with vane mist eliminators in a single vessel. The gas passes through the filter elements where liquid particles are coalesced and solids removed. Due to the coalescing effect, the vane is able to efficiently remove more free liquid particles than either the dry scrubber of the vertical gas separator alone. Often used instead of coalescing filters when high liquid rates are anticipated. They are configured horizontally. (See also Absolute Separators.)
Combined Cycle	One or more gas turbines with heat-recovery steam generators in the exhaust sequence that produce steam for a steam turbine generator, heat-to-process, or a combination thereof.
Combustion Liner	The chamber in which chemical energy is released and added to the gas flow. (Modern combustion liners are slot-cooled rather than cooled through use of the older louver system.)
Combustion System	In the gas turbine, this system consists of a multiple-chamber assembly composed of three basic parts: the fuel injection system, the cylindrical combustion liner and the transition piece.
Combustor	The gas turbine section where large quantities of fuel and air are mixed and burned. It is comprised of a fuel injector(s) and walls to contain the flame.
Compressor	Gas Turbine section where air is compressed to appropriate pressure before entering the combustor where it is mixed with fuel and ignited.
Compressor Blades	These are the individual air foils on the compressor wheels and casings, attached to the rotor or casings by dovetails. There are two kinds of compressor blades, inlet guide vanes and variable guide vanes.
Compressor Discharge Casing	The keystone of the gas turbine, the casing contains the last stages of the compressor stator blades. The discharge casing supports a bearing, joins the compressor and turbine stator; supports the forward-end of the combustion wrapper and provides inner support for the first-stage turbine nozzles.
Compressor Rotor	This is the rotating section of the compressor which consists of blades and disks.
Compressor Stator	The section of the compressor that is comprised of a casing and stationary blading.
Control System	The mechanical and electrical equipment designed to provide safe start-up and shut-down of the gas turbine and load.

Cool Down Period	This is the period of time that the turbine rotor needs to slow or stop after shutdown. Normal cool-down periods vary from five hours on the smaller units to up to 48 hours on the largest ones. The cool-down can be interrupted at any point to restart the turbine.
Cranking of Turbine	Term used to describe the slow turning of the turbine rotor at start-up or cool-down period, generally at a maximum of 20% speed.
Crossfire Tubes	The pipes that connect combustion chambers on multiple combustion turbines. The tubes allow flame propagation from the two spark-plug ignited combustors to the other chambers.
Cooling & Sealing Air	A system which provides air pressure necessary for cooling and sealing various turbine components.
Cooling Water System	A system that provides a supply of water necessary to cool certain gas turbine components.
Crude Fuels	Unrefined fuels such as petroleum.

– D –

Dedendum	The distance of a gear tooth from the pitch line to the bottom of the tooth.
Diaphragm	Located between the turbine wheels and attached to the inner diameter of the nozzle assemblies, these barrel-like structures prevent the working medium from escaping past the inner side walls of the nozzles and rotor. They are used in all stages except Stage #1.
Dilutent Injection	Water or steam injected into the combustion liner to assure the desired level of NOx.
Dovetail	Bottom part of the bucket or blade that attaches it to the compressor or turbine wheel; of various shapes designed to hold through tremendous centrifugal forces.
Dry Acid Deposits	Deposits of sulfates and nitrates that travel, often hundreds of miles, before landing on the ground.
Dry Low NOx (DLN)	A system of nitrogen oxide emission control that utilizes combustion techniques based upon multiple combustion staging to optimize fuel/air ratios. The combustor design allows fuel and air to be "lean-premixed" in various combinations to achieve the desired operating temperature to meet needed emission levels. Two additional ways to control nitrogen oxide emissions are through catalytic clean-up of NOx and CO from the gas turbine exhaust, and steam or water injection. (Also see NOx, steam injection, and water injection.)
Dry Scrubbers	See Scrubbers, Dry

– E –

Electrostatic Precipitation	This process uses charged particles to remove oil particles from an air and oil mixture.
Emergency Lube Oil Pump	This is a back-up pump to be used if the main lube oil pump fails or ac power is unavailable for startup or shutdown. It uses a dc battery motor.
Emissions Control	There are three primary methods for controlling gas turbine emissions: 1) injection of water or steam into the burning zone of a conventional combustor; 2) Catalytic clean up of NOx and CO from the gas turbine exhaust; 3) design of the combustor to limit the formation of pollutants in the burning zone utilizing by utilizing "lean-premixed" technology.
Evaporative Cooler	Best used in hot, low humidity climates, evaporative cooling decreases the compressor inlet temperature to improve output and heat rate in a gas turbine. Effectiveness is a measure of how close the cooler exit temperature comes to approaching the ambient wet bulb temperature.
Exhaust Air System	The network that directs the used air aft of the last stage to the atmosphere. This system also incorporates a silencing module to reduce the sound level of the released gas. The two air systems most commonly used are the straight-up and the switch-back types.
Exhaust Frame	The component that usually supports the aft-most journal bearing. Its shape slows down air discharged from the last range of buckets, recovers some of the pressure and directs the air to the turning vanes. The exhaust frame has internal struts that are air-cooled to maintain the bearing cavity position.
Exhaust Stack	The exhaust assembly which can include silencing sections.

– F –

Fire Protection System	The system designed to detect and extinguish a fire if one occurs in an external turbine compartment area.
Fired Hours	The number of hours a particular gas turbine has been in operation.
Firing Temperature	Thought to be the highest temperature reached in the firing cycle, or the mass flow mean firing temperature at the stage 1 nozzle trailing-edge plane. (Brayton Cycle) Each increase in firing temperature yields dual benefits: increased efficiency, i.e., lower fuel costs; and increased specific work, i.e., higher output per unit of air flow, which reduces capital cost. Gas turbine power generation systems, with continually updated design engineering, have demonstrated the ability to evolve to even higher firing temperatures.
First Stage	Also known as the "Primary Zone" the first stage is where fuel from the primary nozzles in either burned or mixed with combustion air depending on the operational mode of the unit. It is this stage where the mixing of fuel and air helps produce a cooler flame hence lower NOx.

Flame Detectors	The machine parts that sense the presence of flame during startup by utilizing the ultra violet rays generated by the flame. Four types of detectors can be used: an ultraviolet sensor, an infrared sensor, a thermocouple, or a thermopile.
Flash Point	This is the lowest temperature at which the vapor above a given fuel will ignite when flame is applied. The flash point indicates the degree of fire hazard associated with handling the fuel.
Flexible Couplings	Type of couplings used with an Accessory Package that simplify field installation and allow the assembly to be more tolerant of variations in alignment.
Flow Divider (liquid fuel)	Fluid motor device comprised of a series of positive displacement gear elements that equally divide the flow of fuel to the fuel nozzles. Sometimes started by an electric or hydraulic motor, it then becomes self-sustaining. It sometimes contains a magnetic pick-up to aid the control system in measuring liquid fuel flow.
Flow Sleeve	Helps direct the desired quantity of compressor discharge air for combustion or cooling within the combustion can.
Flue Gas Scrubber	These are used to reduce sulfur oxide emissions by contacting the flue gas with a sorbate composed of metal (usually sodium, magnesium, or calcium) hydroxides in solution which acts as a base to produce sulfate and sulfite precipitates.
Forward Compressor Case	The housing that contains the early stages of the stator vanes. It provides a flow path for the air and assists in the formation of an air extraction manifold.
Fretting	Wearing away of metal as it rubs against another metal, generally associated with press fit or close fitting parts.
Fuel Injection System	The fuel injection system delivers fuel to the combustion zones. The Dry Low NOx 1 combustor has two types of fuel nozzles: primary and secondary.
Fuel Nozzle	This is the device that supplies fuel to the combustion chamber. Various types of nozzles are used; there are single-fuel nozzles for either liquid or gas, and there are dual fuel nozzles. On gas fuel systems, orifices in the fuel nozzle meter the gas to the combustion chamber. Most modern turbines utilizing liquid fuel have a high-pressure air source called atomizing air, that is piped into the nozzle to help control smoke problems associated with liquid fuel.
Fuels	The two most frequently used fuels in gas turbines are natural gas and distillate oil. Natural gas produces approximately 2 percent more output than distillate oil, although there are many variables that can increase oil's output and efficiency. Other fuels that can be used are non-distillate liquid fuels such as crude and residual oils, or lighter liquids such as naphtha, kerosene and methanol. GE gas turbines are also capable of burning low-heating value gases such as syngas and steel mill gas, as well as land fill gases. Each unit must be approached individually and fuel systems adjusted appropriately to achieve maximum performance.
Full Load	The designated (rated) output at ISO conditions (base-load at ISO condition).

– G –

Galling	A defect caused by the movement of two surfaces in contact with each other.
Gas Path	Normal flow path of air through the gas turbine.
Gas Turbine Compartment	The housing that contains the prime mover and, on some units, the accessory base as well. It is usually a sheet metal structure with access doors mounted on an "I" beam base.
Gasification	The process of turning various types of coal into a gas fuel for use in the gas turbine.
Gas Separator	A device used to remove liquid fuel droplets (slugs) from fuel before it enters the turbine, which operates on an inertial separation principle. Wet gas passes through an inlet baffle and then through a series of angled vanes that impart inertial forces on the remaining liquid droplets, which are caught on the vanes and removed from the fuel flow by the force of gravity. Gas separators are available in either vertical or horizontal configurations.
Gear Pump	This is a positive displacement pump that consists of a drive gear and driven gear mounted in a suitable housing. The working medium travels from the intake port around the outside of the gears to the outlet port.
Generator	One of several load devices driven by a turbine. It is usually located at the aft-end of the turbine on a separate base. It is air or hydrogen-cooled and usually has a terminal voltage of 13.8kV. Available in various KVA ratings.
Generator Drive	The term used to describe a gas turbine installation in which the driver load is a generator providing electric power.
Gib Key	One of the devices that prevents lateral or rotational movement of the turbine while allowing axial and radial thermal expansion. The Gib Key is a machine part that is an integral part of the lower half of the exhaust frame. Fits into the guide block. (See also Guide Block.)
Guide Block	One of the devices that prevents lateral or rotational movement of the turbine while allowing axial and radial thermal expansion. The guide block is a steel block welded to the turbine base, the gib key fits into the guide block, which also has adjusting bolts for axial and transverse location of the turbine. . (See also Gib Key.)
Greenville, SC USA	Current location of GE's Gas Turbine Manufacturing Facility.

– H –

H Gas Turbine	The latest in GE's evolutionary family of heavy duty gas turbines, the advanced H machine has broken the barrier to a 60% net efficiency power generation system with this gas turbine-steam turbine combined-cycle system. The first H technology system is expect to be tested in 1998, and be in commercial service before the end of the decade.

Heat Exchanger/Cooler	The heat transfer equipment used to extract excessive heat from one working fluid and transmit it to another non-working fluid for eventual dissipation to atmosphere.
Heat Rate	Measured Btu/kWh or Btu/hph or kJ/kWh (ck these caps)
Heating & Ventilating System	A series of components, fans, heaters and thermostats used to control the temperatures of various compartments.
Heating Value	A fuel's heating value has a significant impact on performance. Factors influencing heating values are fuels, pressure ratios, volume, water and air content, etc.
Heavy Duty Gas Turbine	A GE heavy duty gas turbine is defined as a turbine (any frame size) built by the Gas Turbine division of GE Power Systems. They are available in either 50 or 60 Hz machines.
Hertz (Hz)	International frequency equal to one cycle per second.
Honeycomb Shrouds	These utilize a honeycomb material made of high temperature, oxidation resistant alloy material with a 1/16th cell size and a foil thickness of 1 or 2 mils located on the stationary shroud. The rotating bucket seal teeth with a cutting edge will cleanly cut away the material when contact occurs. This design allows tight clearances to be maintained during steady state operations.
Hot Corrosion	Occurs on buckets as a result of alkali metal contaminants such as sodium and potassium reacting with sulfur in the gas turbine fuel. There are two types of hot corrosion: *high- temperature* (Type 1) and *low-temperature* (Type 2). Both are rapid and often aggressive forms of corrosion. Lines of defense against hot corrosion are: 1) reduce contaminants; 2) use corrosion resistant materials; 3) apply coatings that improve the corrosion resistance of the bucket materials.
Hot Gas Path	The gas turbine system that consists of the combustion chambers, transition pieces turbine nozzles, buckets and exhaust section.
Humidity Effect	The effect of humid air, which is less dense than dry air, on gas turbine output and heat rate is especially evident on larger machines. Previously this effect was thought to be too small to be of consequence, but in the larger turbines where humidity is used to bias water and steam injection for NOx control, this effect has greater significance.
Hydraulic System	The hydraulic system is designed to provide a clean, high-pressure source of hydraulic pressure necessary to control various devices. In some unit designs, air entering the gas turbine inlet is cooled to increase the density of the air mass. Air-cooled generators can use a pre-cooler to lower the inlet air temperature. The atomizing air system uses a pre-cooler to control the entrance air temperature to the main atomizing air compressor.

– I –

Ignition Sequence	This process consists of turning on ignition power to the spark plugs in the combustor and setting the firing fuel flow. When flame is detected by the flame detectors, ignition and cross-firing has occurred.
Inlet Air System	The inlet air system is the means used to provide distortion free air in the correct quantities to the gas turbine. Most turbines use some form of filtration to clean the air. Some inlet systems cool the air mass by evaporative coolers, while other systems protect the air mass from ice formation by treating the inlet air.
Inlet Chiller	A device that uses coolant and coils to transfer heat in the compressor inlet areas. Usually causes considerable condensate and is somewhat inefficient as most of the cooling energy of the unit goes to condensation with little left to reduce temperature.
Inlet Cooling	To improve output and heat rate, the compressor inlet temperature can be cooled (lowered) by the installation of evaporative coolers, or an inlet chiller, in the ducting downstream of the inlet filters.
Internal Voting Logic	System of checks in the automated turbine control system whereby the computers use a two-out-of-three voting redundancy system to monitor a gas turbine's performance.
Inlet and Exhaust Losses	Air filtration, silencing, evaporative coolers, or chillers placed in the inlet or exhaust heat recovery devices cause pressure losses in the system. The effects of these losses are unique to each design and must be considered on each individual unit.
Inlet Guide Vanes (IGVs)	Inlet Guide Vanes (IGVs) are devices used to control the inlet air flow through the compressor. Their position therefore changes the air flow as a function of turbine speed, ambient temperature and exhaust temperature. They are of variable geometry and are designed to direct air at the optimum flow angle for the highest efficiency and output. They are located at the aft-end of the inlet casing bellmouth in the compressor.
Inlet Filtration	Used where required to filter air for sand, salt and other airborne contaminants before it enters the gas turbine.
Inlet System	The system that allows ambient air with low velocity to flow over interior surfaces. The system is usually manufactured from low carbon steel.
Intersegment Seals	The gaps between segments of shrouds and nozzles are a significant source of hot gas leakage. Intersegment seals, or spline seals are comprised of strips of metal placed in grooves on the segment faces. These have traditionally been used to form a barrier to leakage between segments. Spline seals in gas turbines are rounded and allowed to pivot in the groove. These are referred to as a "dog-bone" or "Q-Tip" seals because of their appearance, and they provide the flexibility needed to adjust to the thermal stresses in the gas turbine. There are other types of seals such as the "pumpkin tooth" and "bus bar" seals which, when implemented, reduce leakage significantly in some machines. Each unit must be evaluated and designed for the most appropriate seals.

– J –

Journal	The axis of bearing contact.
Journal Bearing	The machine part that improves stability and absorbs the load of the rotating shafts during normal operation. Various styles are used; see applicable unit instruction book.

– K –

– L –

Labyrinth Packing	A seal designed with multiple rows of alloy teeth, located at the extreme end of the bearing assemblies. Sealing air is circulated between the shaft and the seal to prevent oil from passing the seal and spreading along the shaft.
Load Range	A selected mode of operation within the designed load capability. For example, the turbine may operate between spinning reserve and pre-selected load; the load range is selectable.
Louvers	Devices on the combustion liners which provide a film cooling on the inner surface of the liner.
Lube Filter	A device that filters the lube oil prior to its delivery to the bearings and gears.
Lube Oil Heat Exchanges	Devices which allow the hot lube fluid to be cooled by heat transfer to the cooling water.
Lube Oil Pumps	Located on the accessory base/oil reservoir; includes an accessory gear-driven main pump, an ac motor-driven auxiliary pump and a partial-flow dc motor-driven emergency pump.

– M –

Master Control Switch	The switch used by the operator to start and stop the machine. This switch can also be used to select predetermined loads once the unit is running.
Magnetic Pickup	The device that produces frequency (proportional to speed) output signals which are converted into dc voltage signals. These signals are used for speed control or tripping the turbine.
Main Hydraulic Supply Pump	A very high-pressure pump that uses the common oil supply tank as its source. It is usually a constant pressure, variable type, accessory gear driven, servo-supply pump.
Main Lube Pump	The source of all lubricating oil pressure under normal operating conditions. It is a positive displacement gear pump and accessory gear driver.
Maximum Load	The absolute capability of the generator as listed in the design data. The unit maximum load limit may be set by the load gear.

Moisture Separator	Removes moisture from the condenser.
Mist Eliminator	A mechanical device that removes small oil droplets from the oil tank vent system prior to the discharge of the vapor to atmosphere.
Monitoring & Diagnostics (M&D)	This is the process of accessing, transmitting, evaluating and reporting on the operating condition of power generation equipment. An effective M&D program provides access to multiple users regardless of where they are located.
Multi-shaft	One of two configurations available in the combined-cycle power generation equipment line. (The other is the single-shaft.) A multi-shaft system is composed of one or more gas turbines and heat recovery steam generators (HRSGs) that supplies steam through a common header to a separate single steam turbine unit.

– N –

Natural Gas	One of two preferred fuels for modern gas turbines; the second fuel is distillate oil. Natural gas is the cleanest fuel used in gas turbines, it is composed mostly of methane, with trace hydrocarbons such as ethane, propane, butane or hydrogen.
Nozzles	Nozzles are GE's term for the stator vanes in a gas turbine. They direct the hot gases towards the buckets.
Nozzle Segment	An assembly of a small number of nozzle partitions. Several nozzle assemblies comprise a complete nozzle assembly.
NOx	Oxides of Nitrogen (NO and NO2, collectively called NOx) must be carefully controlled to meet environmental requirements. This may be accomplished in three different ways: 1) by the injection of water or steam into the combustion system; 2) by catalytic clean-up of the gas turbine exhaust; 3) by designing the combustor to limit formation of pollutants in the burning zone (Dry Low NOx combustion techniques). There are many variables to successful control: for example, the amount of water or steam must be adjusted for fuel flow, fuel type, ambient humidity, and the nitrogen oxide emission levels required by the regulations in force at the site. (See also Water Injection, Steam Injection and Dry Low NOx.)

– O –

Off Base	A unit component not mounted on the accessory turbine or generator base is said to be "off base."
Offset Ratio	The amount of emissions must be offset in a new facility, as required by the Clean Air Act of 1990.
On Base	This term describes a unit component mounted on the accessory turbine or generator base.

Olefins	These are troublesome unsaturated hydrocarbons such as ethene, propene, butene, etc., that have a tendency to form deposits on fuel system surfaces. Owners should identify the presence of olefins in potential fuel, take the necessary steps to reduce or eliminate them, and get specific GE recommendations for reducing combustion hardware fouling.
Overspeed Bolt	The primary trip on a unit without an electronic trip system. This bolt senses an overspeed condition and is mounted in the accessory gear box or on the turbine and/or compressor stub shaft. It is also used as a back-up for an electronic overspeed trip.
Ozone	Sunlight, summer temperatures, hydrocarbons and oxides of nitrogen produce ozone.

– P –

Parasitic Flows	Defined as cooling and leakage air flows that bypass the combustion system; parasitic flows can typically consume up to 20% of the total air flow through the gas turbine. There are two categories: *chargeable* and *non-chargeable*. *Chargeable* is any air flow which bypasses the combustion system and reenters the flow-path downstream of the firing temperature calculation plane Tf, i.e., just downstream of the stage 1 nozzle throat. Since output and efficiency are reduced, the losses are "charged" against the thermodynamic cycle performance. *Non-chargeable* flows also bypass the combustion system, but they reenter the flow path upstream of the firing temperature calculation plane and are available to perform work. These non-chargeable flows do not impact output, but do have a small impact on heat rate. Both types of parasitic flows impact emissions as they reduce the amount of air available for combustion.
Particulates	These are composed of smoke, ash, ambient non-combustibles, and erosion and corrosion products.
Partition	Airfoil-shaped stator section of the turbine nozzle assembly.
Peak Load	Defined as operation at 1250 hours per year with five hours per start. Running at peak load produces more power, but reduces life expectancy of turbine parts.
Peak Reserve	Condition of severe operation that dramatically reduces the life of the hot section turbine parts.
Performance Degradation	There are two types: *recoverable* and *non-recoverable*. *Recoverable* performance degradation is associated with compressor fouling and can be partially rectified by water washing, or more thoroughly, by opening the unit and mechanically cleaning the compressor blades and vanes. *Non-recoverable* performance degradation is due to increased turbine and compressor clearances and changes in surface finish and airfoil contour. Performance can only be recovered through replacement of affected parts.
Performance Verification	Performance Testing is done as soon as possible after a machine goes on-line, preferably while in "new and clean condition" which is considered to be less than 100 hours of operation. Power, fuel, heat consumption and sufficient supporting data are recorded to enable as-tested performance to be corrected to the condition of the guarantee. Instruments are inspected and calibrated, and tests are conducted as described in the ASME Performance Test Code, PTC-22-1985.

Plenum, Inlet or Exhaust	An enclosure in which the volume of contained (inlet) air or exhaust gas (exhaust) is under different pressure than that which surrounds the enclosure.
Pressure Ratio	In the Brayton Cycle, the Pressure at the compressor discharge point divided by the pressure at the compressor inlet point.
Pre-Mix Lean	This is the term given to the process of mixing a large portion of the compressor discharge air with the fuel just prior to combustion, creating a "lean mixture" that produces low gaseous emissions when combusted in a fluid mechanics- stabilized gas turbine combustion chamber.
Pre-Mixed Combustion	This is part of the DLN process where the fuel and air are injected into the combustion chamber and mixed together upstream from the flame zone, prior to ignition.
Pour Point	The lowest temperature at which a given fuel oil will flow under standard test conditions.

– Q –

– R –

<R> <S> <T>	Designations for the three control processors in the GE SPEEDTRONIC™ suite of control computers.
Rainbow Tests	These are tests conducted on customer's unit components with new materials installed side-by-side with the older or baseline materials to compare the results. Rainbow materials are removed and evaluated periodically, then replaced with standard parts. Rainbow tests can included bucket and nozzle coatings, combustion components and bucket and nozzle materials.
Reaction Zone	Area in the combustion liner where fuel is mixed with compressor discharge air and then ignited.
Regenerator	Heat Exchanger that transfers heat from the exhaust gas to the working fluid before the gas enters the combustor.
Residence Time	Amount of time hot gases are in the combustor.
Residual Fuels	Low-grade by products of fuel refinement, these are fuels with low-hydrogen content that create heavy smoke.
Ring Seal	This seals the bearing area to prevent oil loss. Usually used in conjunction with an air pressure source and labyrinth seal.
Rotating Seals	These seals minimize leakage between stationary and rotation components in the gas turbine. They must be tight, and yet allow for the probability of high speed contact between the components. Two types of rotating seals are honeycomb and brush seals. (See Brush Seals and Honeycomb Shrouds.)
Rotor	This is the term applied to the compressor and/or turbine rotor assemblies in a gas turbine.

– S –

Scaling, geometric	In turbine design, geometric scaling is based on the principle that one can reduce or increase the physical size of a machine while simultaneously increasing or decreasing rotational speed to produce an aerodynamically and mechanically similar line of compressors and turbines.
Secondary Fuel Nozzle	Delivers fuel to the secondary combustion zone. The secondary nozzle is inserted into the centerbody of the liner and may have a secondary flame detector mounted on it.
Selective Catalytic Reduction (SCR)	This is a system that converts NO and NO2 in the gas turbine exhaust stream to molecular nitrogen and oxygen by reacting the NOx with ammonia in the presence of a catalyst. This system is restricted to units with a heat recovery boiler installed in the exhaust, and it requires that temperatures remain within a narrow range. The SCR is comprised of metal segments stacked in the exhaust duct that have a honeycomb pattern with passages that are aligned in the direction of the exhaust gas flow.
Selector Valve	This is a manual valve that allows pressure sampling on each fuel line going to a liquid fuel nozzle. Incorporates an extra connection for specific customer selected pressures.
Servo Valve	This is a flow-control valve designed to provide directional and proportional flow control in response to the polarity and magnitude of a low-power, direction-current input signal. The valve normally is used as a flow-control device in a closed-loop circuit to control the direction and rate of movement of a piston actuator or other control device.
Scrubbers, Dry	These are used to clean and condition gas before it enters the turbine combustor. Dry scrubbers are multiple-cyclone (multi-clone) inertial separators that remove both liquids and solid materials without using scrubbing oils or liquids. They come in vertical or horizontal configurations, with the vertical ones typically used for the relatively small flow volumes for a single gas turbine, and the horizontal units used to treat the gas in a gas pipeline with high flow rates.
Shank	The section of turbine bucket between the platform and the dovetail.
Shutdown	Normal shutdown is initiated by the operator and is reversible until the breaker is opened and the turbine operating speed falls below 95 percent.
Shrouds	Shrouds are strips of metal opposite the bucket tips that limit air flow leakage. There are stationary shrouds and rotating shrouds. The stationary shrouds are used on older gas turbines and rotating, interlocking tip-shrouds are used on the newer turbines.
Simple-Cycle	This is the process in which the working medium passes successively through the compressor, combustor and turbine. Simple-Cycle units lack the heat recovery steam-generator, and efficiencies are achieved with higher pressure ratios at given firing temperatures. High-firing temperatures increase the power output at a given pressure ratio, but at the sacrifice of efficiency.

Single-Shaft	This is a type of gas turbine where the rotating components, the compressor balding, and the turbine blading are all on one shaft in an in-line arrangement. One of two basic configurations available in the combined-cycle GE product line. (The second is the Multi-shaft.) This machine is comprised of a single gas turbine, one heat recovery steam generator (HRSG), one generator and one steam turbine.
Site Elevation	Another factor that affects gas turbine performance is the elevation at the site. Corrections are made for altitude and barometric pressure, as less dense air reduces the airflow and output proportionately. Heat rate and other cycle parameters are not affected by site elevation.
Slugging	Heavier hydrocarbons in gas form liquid slugs that create problems with standard combustor gas turbine units. These need to be removed by cleaning or treating the fuel before the gas enters the turbine, otherwise they cause major hot gas path damage.
Soft Nozzle	This type of primary nozzle uses an internal orifice to meter gas flow instead of openings at the tip. This design helps reduce pressure oscillations.
Solenoid Valves	Normally, two-position electrically actuated devices that will allow or prohibit fluid flow.
Spacers	These are the spaces between the turbine wheels that provide access for the turbine nozzles.
Specific Gravity (Fuel)	This is the ratio of the weight of a given volume of fuel oil at 60° F (16° C) to the weight of an equal volume of distilled water at the same temperature. (The closer the specific gravity of the fuel is to that of water, the more difficult it is to treat it.)
Spinning Reserve	The minimum load control point based on generator output.
SPEEDTRONIC™ Control Systems	There are several versions of this GE designed control system in current use on all types and sizes of steam and gas turbines. They are designated by the name Mark and then a Roman numeral; e.g., Mark I through Mark V. SPEEDTRONIC Control Systems are constantly being improved and are used to monitor, control and regulate unit operation. On gas turbines, control systems perform many functions including fuel, air and emissions control; sequencing of turbine fuel and auxiliaries for startup, shutdown and cool down; synchronizing and voltage matching the generator and system; monitoring all turbine, control and auxiliary functions; and protecting against unsafe and adverse operating conditions.
Spline Seals	See Intersegment Seals.
Staged Combustors	Used to control emissions, staged combustors allow only a portion of the flame zone air in the combustor to mix with the fuel at lower loads or during start-up. There are two types of staged combustors: *fuel-staged* or *air-staged*.
Starting Device	The machine component used to produce adequate torque to meet the requirements of the starting system. Six types of starting Devices are used: diesel engine, electric motor, steam turbine, natural gas expansion turbine, turbine impingement, and air motor.

Starts and Hours Criteria	GE maintenance requirements are based upon independent counts of starts and hours in a given turbine; whichever criteria limit is reached first determines the maintenance interval.
Stationary Seals	Leakage barriers around and between stationary components are called stationary seals. They are typically metal-to-metal seals providing minimal clearance between adjacent hardware parts. Areas where stationary seals are used include intersegment gaps in shrouds and nozzles, the transition piece to the stage 1 nozzle interface, and interfaces between shrouds and nozzles and support structures. (See also Intersegment Seals.)
Stator	A casing or group of casings surrounding a rotor assembly. Names that apply to the various sections include: inlet casing, forward compressor casing, aft-compressor casing, compressor discharge casing and exhaust frame.
Steady State	Constant mode of operation.
Steam Injection	Steam injection for power augmentation can be introduced into the compressor discharge casing or the combustor. GE gas turbines are designed to allow up to 5% of the compressor airflow for steam injection. The system is designed to allow only enough steam to meet NOx abatement until the unit reaches base load.
Synchronization	As a turbine approaches running speed, synchronization is initiated. This is a two or three step process that consists of matching turbine generator speed, and sometimes voltage, to the bus and then closing the breaker at the point where the two are in phase within predetermined limits. When synchronization has been completed, the turbine will be at a spinning reserve load.

– T –

Transition Piece	The interface between the combustion system and the stage 1 nozzle; this is a major source of non-chargeable leakage.
Thermocouples	Thermocouples are temperature sensors that are invaluable to the safe and efficient operation of a turbine. They can be placed in obscure places to measure temperatures where it would be difficult or impossible to do so by other means. In the gas turbine thermocouples are used to measure temperatures in wheel spaces, lube oil systems, inlet, exhaust, and compressor discharge areas.
Tie-bolts	Tie-Bolts are large bolts used to fabricate the compressor rotor.
Trips	Turbine trips (shutdown of the turbine) occur when the protective functions of the control system act as a result of detecting such events as overspeed, overtemperature, high rotor vibration, fire, loss of flame, or loss of lube oil pressure. Additional features on the more modern systems include monitoring combustion and thermocouple operation, high lube-oil header temperature, low-hydraulic supply pressure, multiple control computer faults, and compressor surge for the aircraft-derivative gas turbines.

Triple Redundant Controls	State-of-the-art control system composed of three microprocessor-based computers that share control of the gas turbine using triple redundant sensors. When one computer or sensor fails, the triple-redundant system automatically switches turbine operation, using internal voting logic, to the two remaining control computers and associated sensors. Alarms alert the operator of a fault in the system. After the repair, the two remaining computers interrogate the repaired system to ensure that it is functioning properly.
Turbulators	Drilled or cast swirl patterns in bucket cooling holes, giving more surface contact for cooling air.
Turbine Wheels	These are disks that are part of the gas turbine shaft. Buckets (or blades) are attached to the wheels. They may be cast or slip-on type.
Turbine Rotor Flexibility	The ability of the rotor to synchronize and respond appropriately to changes in temperature and speed.
Turning Gear	A cooling rotor or a rotor undergoing maintenance needs to be turned periodically to prevent bowing, which will cause vibration upon subsequent startups. Turning of the rotor for cool down or maintenance is done by a ratcheting mechanism on smaller turbines and by a conventional turning gear on larger machines. The turning gear can be operated manually or be attached to the accessory drive gear.

– U –

Ultra Violet Flame Detector	These provide an indication of flame, or lack thereof, in the combustor. They utilize ultra violet radiation. Usually two scanners are used.
Upgrade	Refurbishing an older turbine with the most modern design parts and components, to increase output.
Uprate	Refurbishing a turbine to increase MWs.

– V –

Variable Inlet Guide Vanes	See Inlet Guide Vanes.
Viscosity (Fuel)	Viscosity of a fluid is a measure of its resistance to flow and is expressed in units such as Saybolt Universal Seconds (SSU) or Saybolt Furol Seconds, or Kinematic Viscosity Centistokes (cSt).

– W –

Water Injection	Water is injected into the head of the combustor for NOx abatement. This increases mass flow and therefore, output. However, the amount of water is limited to that required to meet the NOx requirement, as water injection will also increase operating costs and inspection intervals.

Water Washing	Water washing is a turbine cleaning system that removes ash deposits from combustors and turbines using a spray-soak-refire method. Water is sprayed into the combustors and turbine through the atomizing air manifold and nozzles while the unit is operated on the staring motor, and allowed to soak into the deposits. The unit is refired and the water soaked deposits form steam with sufficient pressure to remove the deposits.
Washing, Fuel	Ash forming fuel oils are generally contaminated with water-soluble salts of sodium and potassium which can be removed by mixing heated fuel with 5 to 10 percent potable water and a small amount of emulsion-breaking fluid. The procedure consists of an extraction process followed by the separation of salt-laden water from the fuel.
Wax Content (Fuel)	Wax in fuels such as crude oil and heavy distillates will clog the fuel system unless it is kept below its melting point. The percentage of wax and its melting point must be determined and heating and heat tracing methods incorporated to ensure that the wax is continuously dissolved.

– X – Y – Z–

REVISION PAGE

Original Release Date
April 8, 2004

Revision Date	Revision	Revision Details	Approved By
04/08/04	-	New article approved by EM review board.	MJC
01/10/06	A	Updated URLs	GTM