

# COMPUTER ORGANIZATION AND DESIGNe Hardware/Software Interface



# **Chapter 3**


**Arithmetic for Computers** 

### **Arithmetic for Computers**

- Operations on integers
  - Addition and subtraction
  - Multiplication and division
  - Dealing with overflow
- Floating-point real numbers
  - Representation and operations

# Integer Addition

Example: 7 + 6

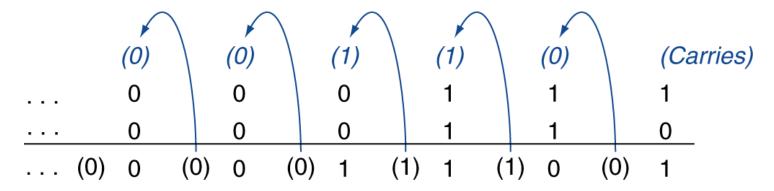

- Overflow if result out of range
  - Adding +ve and –ve operands, no overflow
  - Adding two +ve operands
    - Overflow if result sign is 1
  - Adding two –ve operands
    - Overflow if result sign is 0



### Integer Subtraction

- Add negation of second operand
- Example: 7 6 = 7 + (-6)

<u>-6: 1111 1111 ... 1111 1010</u>

+1: 0000 0000 ... 0000 0001

- Overflow if result out of range
  - Subtracting two +ve or two -ve operands, no overflow
  - Subtracting +ve from –ve operand
    - Overflow if result sign is 0
  - Subtracting –ve from +ve operand
    - Overflow if result sign is 1

# Multiplication

Start with long-multiplication approach

multiplier 1000

multiplier 1000

x 1001

1000


0000

0000


1000

1001

Length of product is the sum of operand lengths

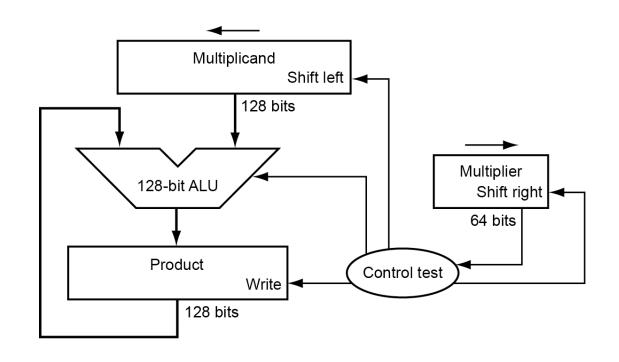


#### **Multiplication Hardware**

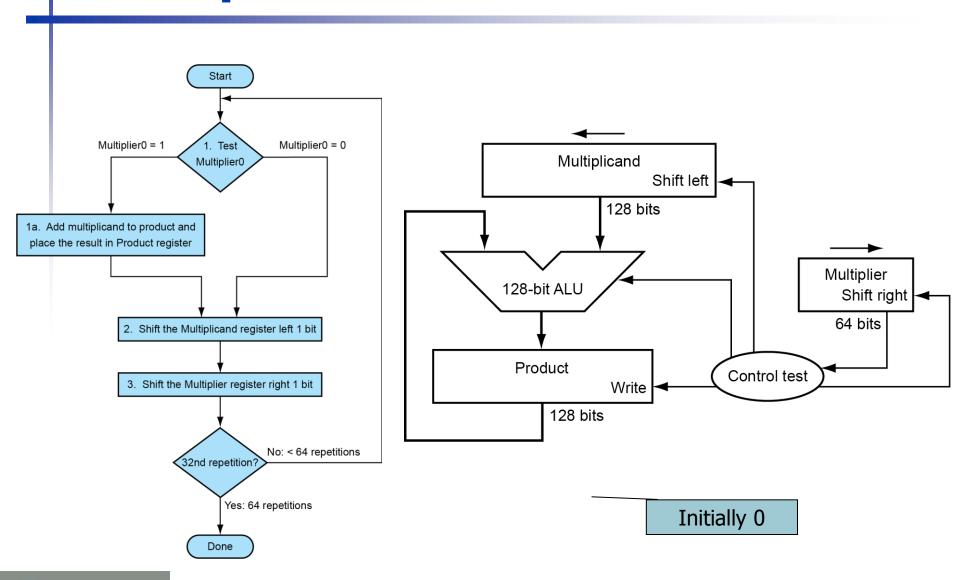



# **Optimized Multiplier**

Perform steps in parallel: add/shift

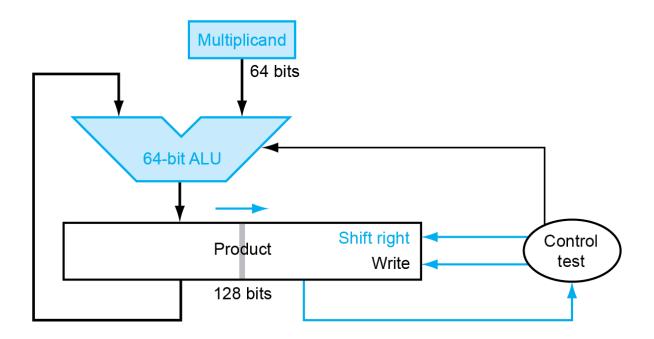

- One cycle per partial-product addition
  - That's ok, if frequency of multiplications is low

### **RISC-V Multiplication**

- Four multiply instructions:
  - mul: multiply
    - Gives the lower 64 bits of the product
  - mulh: multiply high
    - Gives the upper 64 bits of the product, assuming the operands are signed
  - mulhu: multiply high unsigned
    - Gives the upper 64 bits of the product, assuming the operands are unsigned
  - mulhsu: multiply high signed/unsigned
    - Gives the upper 64 bits of the product, assuming one operand is signed and the other unsigned
  - Use mulh result to check for 64-bit overflow



# Floating Point

- Representation for non-integral numbers
  - Including very small and very large numbers
- Like scientific notation

-2.34 × 
$$10^{56}$$
-0.002 ×  $10^{-4}$ 
-987.02 ×  $10^{9}$ 
not normalized

- In binary
  - $\bullet$  ±1. $xxxxxxxx_2 \times 2^{yyyy}$
- Types float and double in C

### Floating Point Standard

- Defined by IEEE Std 754-1985
- Developed in response to divergence of representations
  - Portability issues for scientific code
- Now almost universally adopted
- Two representations
  - Single precision (32-bit)
  - Double precision (64-bit)

# **IEEE Floating-Point Format**

single: 8 bits single: 23 bits double: 11 bits double: 52 bits

S Exponent Fraction

$$x = (-1)^{S} \times (1 + Fraction) \times 2^{(Exponent-Bias)}$$

- S: sign bit  $(0 \Rightarrow \text{non-negative}, 1 \Rightarrow \text{negative})$
- Normalize significand: 1.0 ≤ |significand| < 2.0</p>
  - Always has a leading pre-binary-point 1 bit, so no need to represent it explicitly (hidden bit)
  - Significand is Fraction with the "1." restored
- Exponent: excess representation: actual exponent + Bias
  - Ensures exponent is unsigned
  - Single: Bias = 127; Double: Bias = 1203

# Single-Precision Range

- Exponents 00000000 and 11111111 reserved
- Smallest value
  - Exponent: 00000001⇒ actual exponent = 1 - 127 = -126
  - Fraction:  $000...00 \Rightarrow significand = 1.0$
  - $\pm 1.0 \times 2^{-126} \approx \pm 1.2 \times 10^{-38}$
- Largest value
  - exponent: 11111110⇒ actual exponent = 254 127 = +127
  - Fraction: 111...11 ⇒ significand ≈ 2.0
  - $\pm 2.0 \times 2^{+127} \approx \pm 3.4 \times 10^{+38}$

#### **Double-Precision Range**

- Exponents 0000...00 and 1111...11 reserved
- Smallest value
  - Exponent: 0000000001⇒ actual exponent = 1 - 1023 = -1022
  - Fraction:  $000...00 \Rightarrow significand = 1.0$
  - $\pm 1.0 \times 2^{-1022} \approx \pm 2.2 \times 10^{-308}$
- Largest value

  - Fraction: 111...11 ⇒ significand ≈ 2.0
  - $\pm 2.0 \times 2^{+1023} \approx \pm 1.8 \times 10^{+308}$

### Floating-Point Precision

- Relative precision
  - all fraction bits are significant
  - Single: approx 2<sup>-23</sup>
    - Equivalent to 23 x log<sub>10</sub>2 ≈ 23 x 0.3 ≈ 6 decimal digits of precision
  - Double: approx 2<sup>-52</sup>
    - Equivalent to 52 x log<sub>10</sub>2 ≈ 52 x 0.3 ≈ 16 decimal digits of precision

### Floating-Point Example

- Represent –0.75
  - $-0.75 = (-1)^1 \times 1.1_2 \times 2^{-1}$
  - S = 1
  - Fraction =  $1000...00_2$
  - Exponent = -1 + Bias
    - Single:  $-1 + 127 = 126 = 011111110_2$
    - Double:  $-1 + 1023 = 1022 = 0111111111110_2$
- Single: 1011111101000...00
- Double: 10111111111101000....00

### Floating-Point Example

 What number is represented by the singleprecision float

11000000101000...00

- S = 1
- Fraction =  $01000...00_2$
- Fxponent =  $10000001_2 = 129$

$$x = (-1)^{1} \times (1 + 01_{2}) \times 2^{(129 - 127)}$$

$$= (-1) \times 1.25 \times 2^{2}$$

$$= -5.0$$

#### **Denormal Numbers**

■ Exponent = 000...0 ⇒ hidden bit is 0

$$x = (-1)^{S} \times (0 + Fraction) \times 2^{-Bias}$$

- Smaller than normal numbers
  - allow for gradual underflow, with diminishing precision
- Denormal with fraction = 000...0

$$x = (-1)^{S} \times (0+0) \times 2^{-Bias} = \pm 0.0$$

Two representations of 0.0!

#### Infinities and NaNs

- Exponent = 111...1, Fraction = 000...0
  - ±Infinity
  - Can be used in subsequent calculations, avoiding need for overflow check
- Exponent = 111...1, Fraction ≠ 000...0
  - Not-a-Number (NaN)
  - Indicates illegal or undefined result
    - e.g., 0.0 / 0.0
  - Can be used in subsequent calculations

#### Floating-Point Addition

- Consider a 4-digit decimal example
  - $-9.999 \times 10^{1} + 1.610 \times 10^{-1}$
- 1. Align decimal points
  - Shift number with smaller exponent
  - $\bullet$  9.999 × 10<sup>1</sup> + 0.016 × 10<sup>1</sup>
- 2. Add significands
  - $\bullet$  9.999 × 10<sup>1</sup> + 0.016 × 10<sup>1</sup> = 10.015 × 10<sup>1</sup>
- 3. Normalize result & check for over/underflow
  - $1.0015 \times 10^2$
- 4. Round and renormalize if necessary
  - $1.002 \times 10^2$

#### Floating-Point Addition

- Now consider a 4-digit binary example
  - $1.000_2 \times 2^{-1} + -1.110_2 \times 2^{-2} (0.5 + -0.4375)$
- 1. Align binary points
  - Shift number with smaller exponent
  - $1.000_2 \times 2^{-1} + -0.111_2 \times 2^{-1}$
- 2. Add significands
  - $1.000_2 \times 2^{-1} + -0.111_2 \times 2^{-1} = 0.001_2 \times 2^{-1}$
- 3. Normalize result & check for over/underflow
  - $1.000_2 \times 2^{-4}$ , with no over/underflow
- 4. Round and renormalize if necessary
  - $-1.000_2 \times 2^{-4}$  (no change) = 0.0625

# Floating-Point Multiplication

- Consider a 4-digit decimal example
  - $1.110 \times 10^{10} \times 9.200 \times 10^{-5}$
- 1. Add exponents
  - For biased exponents, subtract bias from sum
  - New exponent = 10 + -5 = 5
- 2. Multiply significands
  - $1.110 \times 9.200 = 10.212 \Rightarrow 10.212 \times 10^{5}$
- 3. Normalize result & check for over/underflow
  - $1.0212 \times 10^6$
- 4. Round and renormalize if necessary
  - $1.021 \times 10^6$
- 5. Determine sign of result from signs of operands
  - $+1.021 \times 10^6$

# Floating-Point Multiplication

- Now consider a 4-digit binary example
  - $1.000_2 \times 2^{-1} \times -1.110_2 \times 2^{-2} (0.5 \times -0.4375)$
- 1. Add exponents
  - Unbiased: -1 + -2 = -3
  - Biased: (-1 + 127) + (-2 + 127) = -3 + 254 127 = -3 + 127
- 2. Multiply significands
  - $1.000_2 \times 1.110_2 = 1.1102 \Rightarrow 1.110_2 \times 2^{-3}$
- 3. Normalize result & check for over/underflow
  - $1.110_2 \times 2^{-3}$  (no change) with no over/underflow
- 4. Round and renormalize if necessary
  - 1.110<sub>2</sub> × 2<sup>-3</sup> (no change)
- 5. Determine sign: +ve x −ve ⇒ −ve
  - $-1.110_2 \times 2^{-3} = -0.21875$

#### **FP Arithmetic Hardware**

- FP multiplier is of similar complexity to FP adder
  - But uses a multiplier for significands instead of an adder
- FP arithmetic hardware usually does
  - Addition, subtraction, multiplication, division, reciprocal, square-root
  - FP ↔ integer conversion
- Operations usually takes several cycles
  - Can be pipelined

#### **FP Instructions in RISC-V**

- Separate FP registers: f0, ..., f31
  - double-precision
  - single-precision values stored in the lower 32 bits
- FP instructions operate only on FP registers
  - Programs generally don't do integer ops on FP data, or vice versa
  - More registers with minimal code-size impact
- FP load and store instructions
  - flw, fld
  - fsw, fsd

#### **FP Instructions in RISC-V**

- Single-precision arithmetic
  - fadd.s, fsub.s, fmul.s, fdiv.s, fsqrt.s
    - e.g., fadds.s f2, f4, f6
- Double-precision arithmetic
  - fadd.d, fsub.d, fmul.d, fdiv.d, fsqrt.d
    - e.g., fadd.d f2, f4, f6
- Single- and double-precision comparison
  - feq.s, flt.s, fle.s
  - feq.d, flt.d, fle.d
  - Result is 0 or 1 in integer destination register
    - Use beq, bne to branch on comparison result
- Branch on FP condition code true or false
  - B.cond



# **Concluding Remarks**

- Bits have no inherent meaning
  - Interpretation depends on the instructions applied

- Computer representations of numbers
  - Finite range and precision
  - Need to account for this in programs

# **Concluding Remarks**

- ISAs support arithmetic
  - Signed and unsigned integers
  - Floating-point approximation to reals

- Bounded range and precision
  - Operations can overflow and underflow