



D1 (top side)

D2 (bottom side)

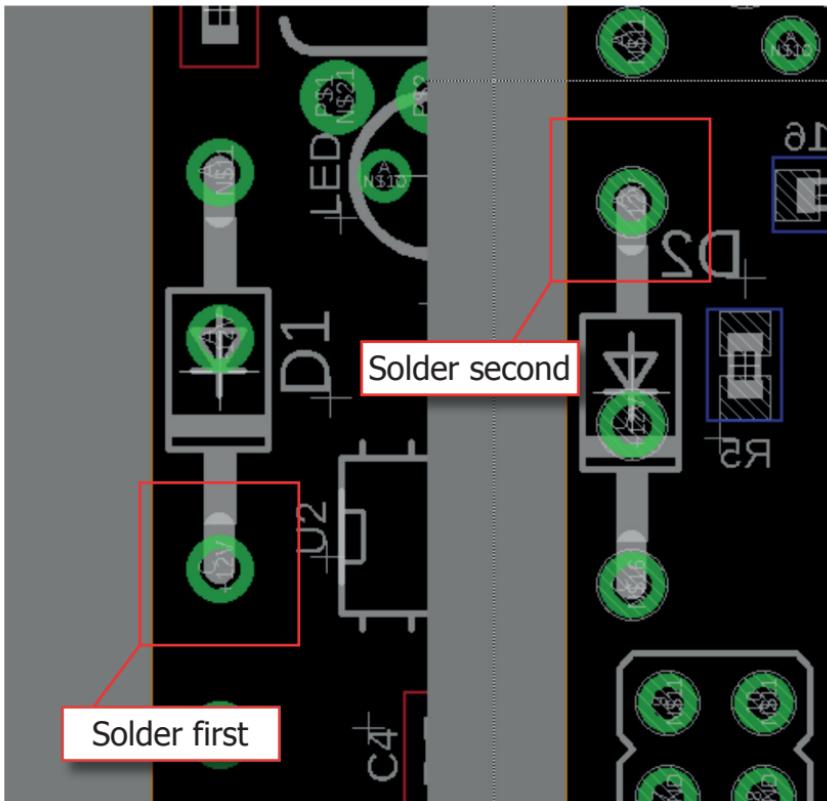

Having soldered the diode legs mentioned above you may proceed soldering the other two legs.

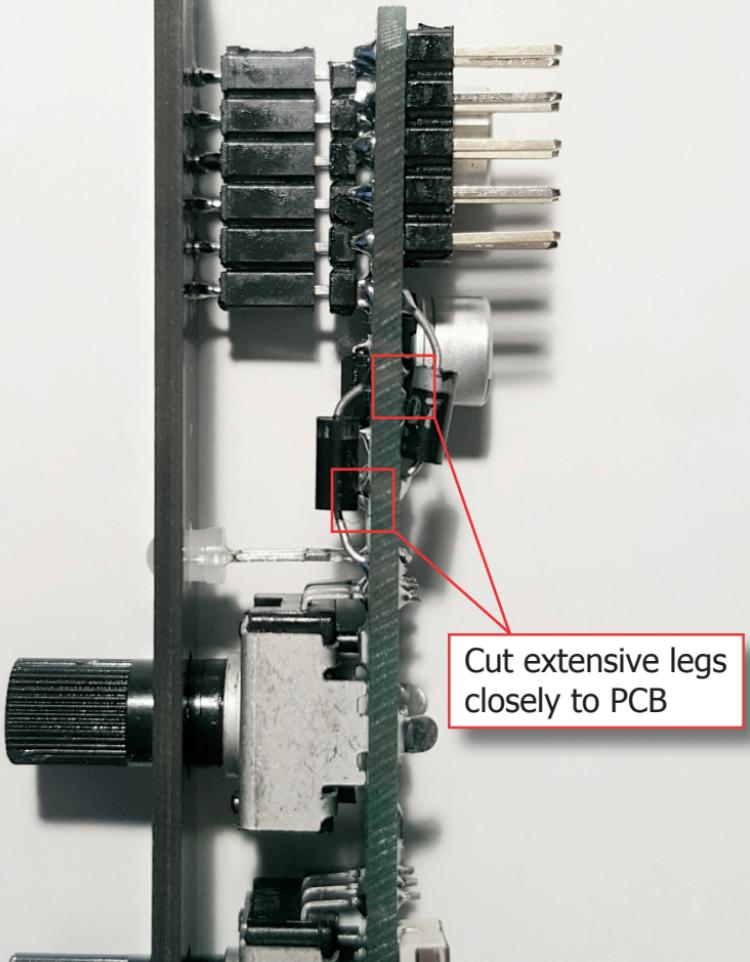

Cut extensive legs
closely to PCB

SMD header soldered to panel

