

1. Product Specification Document for boAt Airdopes 141 (Gen 3)

Objective: To understand the complete product details and technical diagnostic guidelines for a new product, which will help the service team build a detailed service plan.

Document Owner: Product Manager

1. Total Playtime 50 Hours
2. Quad Mics with ENx™ Technology
3. Dual EQs (Signature Sound/Balanced Mode)
4. BEAST™ Mode
5. 10 Mins ASAP™ Charge = 120 Mins Playtime
6. IWP™ Technology
7. Bluetooth v5.3
8. IPX4 Splash and Sweat Shield
9. Type-C Charging Interface
10. Dual Tone Colours

2. Technical Definitions

Terms	Definitions
TWS	True Wireless Stereo
IPX4	Water Splash Protection Certified
MSC	Multi-Brand Service Centre
D2D	Door-to-Door Replacement Service
CTC	Capacitive Touch Control
DUT	Device Under Testing

3. Product Details

3.1. Product Specifications

Headphone Type	TWS
Bluetooth Version	5.3
Music Playtime	Up to 50 hours (at 60% volume)
Number of ENx™ Equipped Mics	4
IWP™ Tech	Yes
BEAST™ Mode	Yes, 50 ms Low Latency
Transmission Range	10 m
Driver Size	13 mm*2
Supported Codec	AAC/SBC
Frequency	20 Hz-20 kHz
Battery	650 mAh (Case); 40 mAh*2 (Earbuds)
ASAP™ Charge	Yes; 10 mins charge = 120 mins playtime

Charging Time	40 mins (Earbuds); 1.5 hours (Case)
Charging Interface	USB Type-C
Water Resistance	IPX4
Headphone Type	TWS


Note: Music playtime of 50 hrs per charge is based on listening to music at 60% volume. Listening to music/audio files at more than 60% volume will reduce the playtime.

3.2. Packaging Contents

1.	1 X boAt Airdopes 141
2.	1 X Type-C Cable
3.	1 X User Guide
4.	2 X Pairs of Additional Earmuffs

3.3. Colour Variants

Product Name	Colour Variants
Airdopes 141	Matte Charcoal
	Lavender Bloom
	Lime White

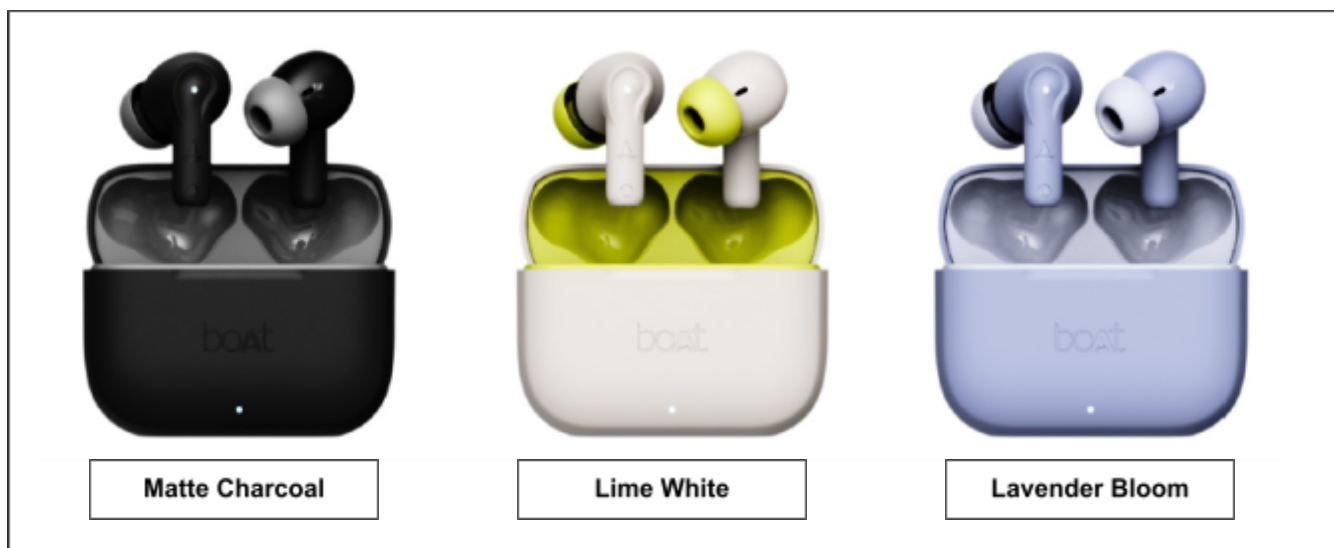

3.4. Product Functionalities

Function	Process
Power On	Smart Power On: - To automatically switch the earbuds on, simply open the lid of the charging case when the earbuds are kept inside. Manual Power On - Long press the CTC on either earbud for 3 seconds to manually power on the earbuds
Power Off	Smart Power Off: Step 1: After usage, remove both earbuds from your ears. Step 2: Place the earbuds back into the charging case in the correct orientation and close the case lid. Step 3: The earbuds will automatically switch off (and enter into charging mode). Manual Power Off Long press the CTC on either earbud for 5 seconds to manually power on the earbuds
Answer Call	Single tap the CTC on either earbud to answer an incoming call.
Reject/ End Call	Double tap either earbud's CTC to reject an incoming call or end an ongoing call.
Play/Pause	Single tap the CTC on either earbud to play or pause a track
Previous/Next Track	- While playing music, double tap the left earbud's CTC to return to the previous track. - While playing music, double tap the right earbud's CTC to skip to the next track.
Volume Change	Volume can only be adjusted via phone/media devices
Voice Assistant	NA
Dual EQ	Long touch the CTC on the left earbud for 3 seconds to switch to Balanced EQ Mode. Long touch the left earbud CTC again for 3 seconds to switch to boAt Signature Sound.
BEAST™ Mode	Long touch the CTC on the right earbud for 3 seconds to activate BEAST™ Mode. Long touch the right earbud CTC again for 3 seconds to deactivate BEAST™ Mode
Connecting with Media Devices – Mono Earbud Usage	Step 1: Please note that both the earbuds can be used in Mono mode. Use Smart Power On for switching on the desired earbud. Step 2: The selected earbud will automatically enter the connection mode. Step 3: Turn on Bluetooth on your phone/media device and search for "Airdopes 141" to connect. Note- - You can only skip to the next track while using the right earbud or play the previous track using the left earbud in Mono (single earbud) mode.

Connecting with Media Devices – Stereo Earbud Usage	• Switch the earbuds on; both the earbuds automatically enter the Connection Mode. • Turn on the Bluetooth functionality on your phone/media device and scan. • Search for “Airdopes 141” and tap on the same for pairing & connect via Bluetooth. • To switch to Stereo mode from Mono, simply take out the other earbud from the case. It will automatically power on and pair with the previously selected earbud, hence enabling Stereo usage.
Factory Reset	*NOTE: Before performing a reset, clear "Airdopes 141" from pairing device history by forgetting the device. Step 1: Long press the CTC on both earbuds for 5 seconds while in pairing mode to perform a reset. After a successful factory reset: • Blue LED blinks 5 times followed by Red LED blinking once NOTE: The case enters sleep mode automatically after 15 minutes when the lid is kept open. Please make sure to close the case lid and open it again, with both earbuds placed inside, to perform a factory reset. Congratulations! Your Airdopes 141 earbuds have been reset.

3.5. Product LED Indications

3.5.1. Case LED Indications

Charging Case Status	LED Indication
Low battery (<20%)	Blue LED blinks 4 times
On charging	Blue LED blinks continuously
Fully charged (100%)	Blue LED remains solid on

Case LED indication when Earbuds are charging from the case-

This is to indicate the earbuds are getting charged from the case (when the case lid is closed):

Earbuds Status	Case LED State (when the lid is closed)
On charging	Blue LED blinks 4 times
Both earbuds charged	LED remains off

3.5.2. Earbud LED Indications

Scenario	LED Indication
Earbuds – Low battery in it (<20%)	Red LED blinks 3 times (Blinks every 30 seconds)
Power ON	Blue LED is ON for 2 second upon opening the lid or manually powering on
Power OFF	Red LED is on for 1 second when powered off
Pairing mode	• Alternate red and blue LED flashes on the master earbud. • Slave earbud blinks blue LED every 5 seconds
Pairing successful (1-time indication)	Solid blue LED remains on for 3 seconds
If pairing is not successful (In pairing mode)	Same as pairing mode. Alternate red and blue LED flashes on the master earbud. Slave earbud blinks blue LED every 5 seconds.
Connected	• Blue LED on both earbuds will flash once every 20 seconds • No LED flash when media is playing
Disconnected	Same as Pairing mode • Alternate red and blue LED flashes on the master earbud. • Slave earbud blinks blue LED every 5 seconds
Earbuds Charging	Red LED stays ON for 2 seconds when the case lid is closed.
Fully charged	The LED turns off
Play the music	All lights are OFF (But "Connected" status will remain)


3.6. Charging Procedures and Guidelines

Statement	Information
Charging the Case	• To charge the case, plug one end of the cable into the case and connect the other end to a computer, wall adapter, or a power bank.
Charging Norms and Guidelines	• Charging through wall adapter – Specs of the adapter: 5V, 2A • Charging through cable/wire – Standard cable: 35 strands @0.10mm diameter/strand • Any other accessory can be used for charging the earbuds as long as the above norms are followed.
Note-	• Before using the earbuds for the first time, it is recommended to fully charge the earbuds as well as the charging case. Also, keep the lid of the charging case closed while charging.

4. Product Weight Matrix Details – (D2C & Warranty Tool)

Product	Length	Breadth	Height	Earbuds Weight	Case Weight
boAt Airdopes 141	31.92	21.55	24.97	4g (per Earbud)	36 g

5. Hearables App Functionalities

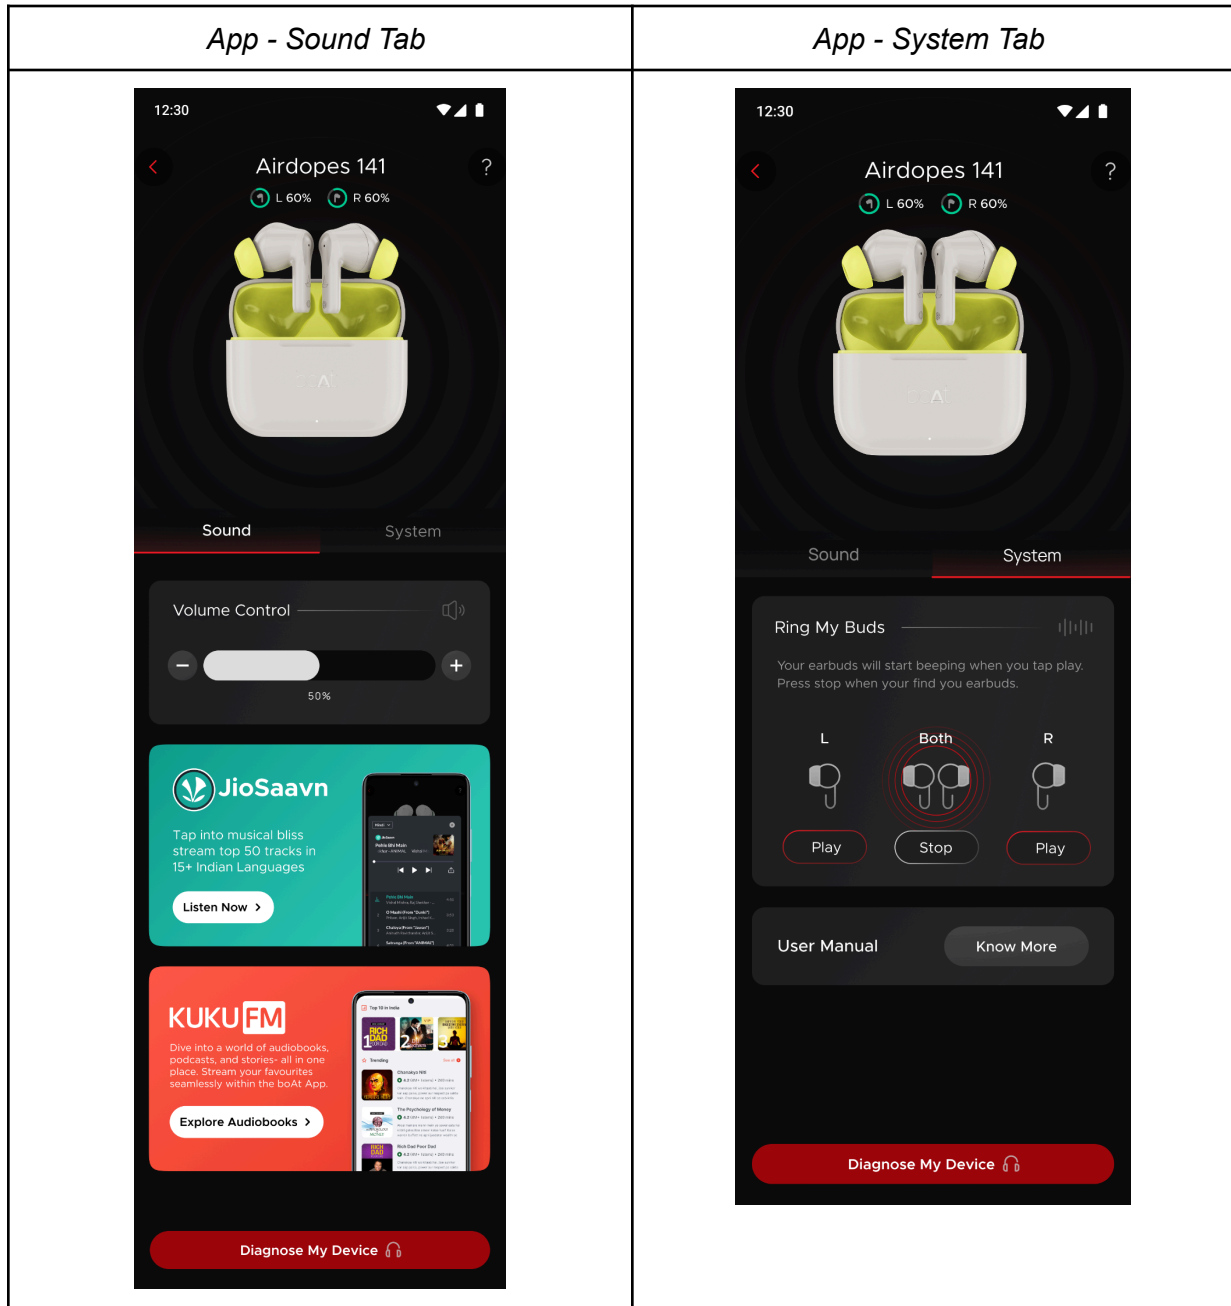

Function	Process
App Installation	- To install the boAt Hearables app, you can follow one of the options mentioned below- Scan QR Code - Airdopes 141 has the Hearables app QR code printed on the packaging box. Simply scan this code using your smartphone. The subsequent link will redirect you to the Google Play Store and iOS Store, and you can select the applicable option. Google Play Store - Download the boAt Hearables app from the Google Play Store on your Android smartphone. <https://play.google.com/store/apps/details?id=com.boAt.hearables&hl=en_IN&gl=US> App Store - Download the boAt Hearables app from the App Store on your iOS smartphone. <https://apps.apple.com/in/app/boat-hearables/id1592550875>
Account Setup	After installing the app, follow the steps shown on the app to set up your account by entering your phone number, name, and email ID. Account setup is a one-time action.
Device Pairing	Step 1: Turn on Bluetooth on your media device. Step 2: Log in to your account on the boAt Hearables app. Step 3: Go to the "My Devices" section. Step 4: Open the case lid and take out the Airdopes 141 earbuds. The earbuds will show up under the list of available devices with "Ready to Pair" status. Follow the 'Pull to refresh' option on the app if the device does not show up on the list. Step 5: Tap the Airdopes 141 name card and accept the pairing request pop-up notification on your media device. Step 6: Tap the 'OK' option on the pairing notification. You can also save Airdopes 141 to your Google account for fast pairing in the future by clicking on "Save" and then "Set up". Congratulations! Airdopes 141 is now connected to your media device with "Connected" status.
Activating Ring My Buds	Step 1: Pair the Airdopes 141 to your media device by following the pairing process. Step 2: Go to the "System" tab on the Hearables app. Step 3: Under the System tab, go to the 'Ring My Buds' section to search for either or both earbuds by playing a tone from the app. Please ensure that the volume on your smartphone is set to the maximum level to detect the earbuds easily.
Viewing Connectivity Status	Step 1: Pair the Airdopes 141 to your media device by following the pairing process. Step 2: Go to the "My Devices" section on the Hearables app. Step 3: If the device is connected successfully, the device will show up at the top of the list with "Connected" mentioned on top of the device card with a Bluetooth symbol.

	Note: Follow the 'Pull to refresh' option on the app if the device does not show up on the list. When disconnected, the device card will disappear from the available devices list.
Listen to Audiobooks and Music	Step 1: Pair the Airdopes 141 to your media device by following the pairing process. Step 2: Go to the "Sound" tab on the Hearables app. Step 3: Choose between JioSaavn and Kuku FM to listen to your favourite music or desired audiobooks for free.
View Airdopes 141 User Manual	Step 1: Pair the Airdopes 141 to your media device by following the pairing process. Step 2: Go to the "System" tab on the Hearables app. Step 3: Under the System tab, you have the option to read the User Manual for Airdopes 141
Smart Diagnostics Mode	To diagnose issues related to Bluetooth connectivity, mic, speaker, and battery, use the Smart Diagnostics function of the Hearables app. Step 1: Tap the "Diagnose My Device" option at the bottom. Step 2: Follow the instructions to start the smart diagnostics process. Step 3: Click on "Let's Go" to start. Step 4: Complete all the steps one by one to check Bluetooth connectivity, mic, speaker, and battery functions. Step 5: Click on 'Done' to finish diagnostics.

6. Service Details

6.1. Service Channels

Product Name	Service Channels
boAt Airdopes 141	1) Door-to-Door Replacement Service (D2D)
	2) MSC Replacement Service (Walk-In)

6.2. Probable FAQs, Actionable Instructions and Resolutions for boAt Airdopes 141

Issues	Instructions	Final Resolution
--------	--------------	------------------

Earbuds not connecting via Bluetooth	• Check if the device is in the range of Bluetooth (usually 10m) and if there are any obstructions in between. • Check to see if the device being connected to supports Bluetooth connection. • Check if it is a passcode issue and, if so, enter '0000'. • Check to see if the device being connected to does not have any software issues – check to forget the device on Bluetooth, update the mobile software, if it still does not work, try factory resetting the device. • Check if the pogo pins in the charging case and both earbuds are clean. You may do so by gently cleaning them using a cotton swab dipped in alcohol and try using them again.	If nothing else works and there is no physical damage, send the device for replacement.
Earbuds not showing in “My Devices” on the Hearables app	• Check to see if the device is in pairing mode, indicated by alternate blue and red LED flashes on the master earbud and blue LED flashes every 5 seconds on the slave earbud. • Check whether the boAt Hearables app on the media device is updated to the latest version. The app version can be checked from the Google Play Store for Android smartphones and from the App Store for iOS smartphones. • Check whether the case lid is open, and the earbuds have been taken out. • Check if the earbuds are in the range of the media device's Bluetooth (usually 10m) and if there are any obstructions in between. • Check to see if the media device being connected to supports Bluetooth connections. • Check if the Bluetooth of the media device is turned ON. • Check to see if the device being connected to has no software issues. • Check to forget the earbuds from the device's Bluetooth paired list, update the mobile software, and if it still does not work, try factory resetting the product. • Check whether closing the app and opening it again solves the issue.	If nothing else works and there is no physical damage, send the device for replacement.

Charging case is not charging	• Check to see if the wire connected to the case is not broken. Use other wires and also ensure that the charger being used is not of 9V or 12V as that will damage the case. • To charge the case, plug one end of the provided cable into the case and connect the other end to a computer or a wall adapter. Note: The LED located at the bottom of the charging case indicates the battery status of the case. Blue LED flashes 4 times when the battery level is less than 20% (on opening the case lid), blue LED flashes 4 times slowly when the battery level is more than 20% (on opening the case lid), blue LED blinks continuously to indicate the case is charging, and the blue LED stays solid on to indicate full charge. • Check if the pogo pins in the charging case and both earbuds are clean. You may do so by gently cleaning them using a cotton swab dipped in alcohol and try using them again.	If nothing else works and there is no physical damage, send the device for replacement
Earbuds are not charging	• Check to see if the earbuds have been put inside the case in the right orientation. • Check to see if the earbuds are completely charged or not. • Check if the pogo pins in the charging case and both earbuds are clean. You may do so by gently cleaning them using a cotton swab dipped in alcohol and try using them again. App - Run the Smart Diagnostics function of the boAt Hearables app and check whether there are issues related to the earbud battery. Please note the Smart Diagnostics function in the app can only identify issues related to the firmware and not the hardware.	If nothing else works, and there is no physical damage, send the device for replacement
Device not entering Stereo Mode/ stuck in Mono Mode	• Place the earbuds in the charging case and then try using them again. Check if it connects automatically. • Check and see if factory resetting the device works. • Check if the pogo pins in the charging case and both earbuds are clean. You may do so by gently cleaning them using a cotton swab dipped in alcohol and try using them again.	If nothing else works, and there is no physical damage, send the device for replacement

The sound is distorted/low volume/low bass/low quality	• Check if the connected device does not have any equalizer settings applied. • Check if third-party Spatial Audio/EQ apps are deactivated in the connected device to avoid any sound abnormalities. • Check if the problem still occurs if the device is moved closer and all obstacles in the middle are removed. • Check if the distortion of sound occurs at all volumes or only at high volumes. • Check with different media players and different devices and whether the distortion happens on all devices or only on specific ones. • Check if the problem occurs at all levels of charging or only at low charging levels. • Check if the earbuds do not have water droplets. In case they do, use a blow dryer from a distance to dry out any water. • Check if the earbuds are clogged with ear wax or dirt. If yes, simply clean the earbuds with a cotton swab dipped in alcohol to resolve the issue. App - Run the Smart Diagnostics function of the boAt Hearables app and check whether there are issues related to the earbud battery. Please note the Smart Diagnostics function in the app can only identify issues related to the firmware and not the hardware.	If nothing else works, and there is no physical damage, send the device for replacement
Earbuds not turning on	• Check to see if the device has been properly charged first- white LED on the case blinks 2 times to indicate that the earbuds are fully charged. • Check if the voltage of the charger is correct for the charging case and if the lights on the bottom of the case are glowing to indicate the charge level. • Check by opening the lid of the charging case (with the earbuds inside) to power on the earbuds. The blue LED should flash for 1 second. • Check if the product was not subjected to any mishandling, broken wires, or exposure to direct sunlight, or hazards like fire.	If nothing else works and there is no physical damage, send the device for replacement
The in-built controls of the product are not working	• Check if the controls do not work while being connected to another device. • Check if the media player being used supports such controls and if the controls	If nothing else works and there is no physical damage, send the

	do not function on call or with other media players. • Check if the controls have been physically damaged or exposed to any hazards.	device for replacement
Occasional disconnects/ one of the earbuds keeps disconnecting	• Check if restarting the device resolves the issue. • Check if the same problem happens for different devices and media players. • Check if there are any obstructions between the earbuds and the device and clear them. Move the device at a closer range to the earbuds and see if this still affects it. • Try factory-resetting the device.	If nothing else works and there is no physical damage, send the device for replacement
If there are other exceptions in the usage of the product	• Check if restarting the device resolves the issue. • Place the earbuds in the charging case and try using them again. • Try factory-resetting the device.	If nothing else works and there is no physical damage, send the device for replacement.
The sound output is muffled	• Check if dust has accumulated inside the earbuds or if there is any obstruction. • Check if earwax has accumulated inside the earbuds. • Check if there is no damage to the tips of the earbuds and see if changing them helps. • Check if sweat or water has gone inside the earbuds. App - Run the Smart Diagnostics function of the boAt Hearables app and check whether there are issues related to the earbud battery. Please note the Smart Diagnostics function in the app can only identify issues related to the firmware and not the hardware.	If nothing else works and there is no physical damage, send the device for replacement.
How to check on the Hearables app whether the earbuds are connected or not?	• The boAt Hearables app shows all currently and previously paired devices in the 'My Devices' section. • Once Airdopes 141 is paired to your smartphone, the status gets changed to "Connected" in the thumbnail. • Tap the thumbnail to check whether both the left and right earbuds are connected or not. You can also check the battery level of both earbuds.	Not Applicable
Can I access the product manual on the Hearables app?	• You can view the product's manual under the "System" tab of the Hearables app. Go to the 'User Manual' section and tap 'Know More' to access the user manual.	Not Applicable

Voice is muffled during calls/ Microphone has muffled input	• Check if restarting the device resolves the issue. • Check if dust or earwax has accumulated near or inside the microphone port, and if there is no blockage on the microphone. • Check if sweat or water has gone inside the microphone. • Check if there are any obstructions between the earbuds and the device, and clear them. Move the device at a closer range to the earbud and see if the connection is still affected. App - Run the Smart Diagnostics function of the boAt Hearables app and check whether there are issues related to the earbud mic. Please note that the Smart Diagnostics function in the app can only identify issues related to the firmware and not the hardware.	If nothing else works and there is no liquid and physical damage, send the device for replacement
What is Insta Wake N' Pair (IWP™) technology?	• Our IWP™ technology allows the earbuds to connect to your phone instantaneously upon opening the case if they have already been paired before. • Simply open the case and ensure that the Bluetooth is turned on for your media device. The earbuds will connect as soon as the case is opened without the need to take them out of the case first.	Not Applicable
How to enable IWP™ for my earbuds?	• There is no special process to enable IWP™- simply follow the steps to first pair your Airdopes 141 to your media device. Then, upon subsequent usage, the IWP™ tech will be enabled, and the earbuds will pair automatically to your previously paired media device if Bluetooth is turned on in your media device.	Not Applicable
IWP™ is not working for my earbuds	• Check if your earbuds model has IWP™ tech integrated. • Make sure that you have paired the earbuds at least once before to the device you are trying to use IWP™ with. • Check if Bluetooth is turned on for your media device and if it has Airdopes 141 in the list of paired devices. • Try factory-resetting the device.	If IWP™ not working and there is no physical damage, send the device for replacement

Voice is muffled during calls/ Microphone has muffled input	• Check if restarting the device resolves the issue. • Check if dust or earwax has accumulated near or inside the microphone port and if there is no blockage on the microphone. • Check if sweat or water has gone inside the microphone. • Check if there are any obstructions between the earbuds and the device and clear them. Move the device at a closer range to the earbud and see if the connection is still affected. App - Run the Smart Diagnostics function of the boAt Hearables app and check whether there are issues related to the earbud mic. Please note that the Smart Diagnostics function in the app can only identify issues related to the firmware and not the hardware.	If nothing else works and there is no liquid and physical damage, send the device for replacement
Earbud not charging while inside the case, even when the case is charged	• Check if the charging pins of the case are clear and there is no obstruction. • Check if the charging pins of the earbuds are clear and there is no obstruction. • Check if the orientation of the earbuds inside the case is correct and if they have been properly inserted inside the case. • Check if the pogo pins are clean. You may do so by gently cleaning them using a cotton swab dipped in alcohol.	If nothing else works and there is no liquid and physical damage, send the device for replacement
Can I lower the volume of the voice prompts/turn them off?	• No, the voice prompts are integrated inside the earbuds, and there is no provision to turn them off or lower their volume.	Not Applicable
Can I control the volume of the earbuds through integrated controls?	• No, the earbuds do not have any integrated volume controls on them. The volume has to be controlled using your connected Bluetooth device. • Ensure that in the Bluetooth settings of your media device, you have enabled syncing of Bluetooth and phone volume levels otherwise, you may not be able to fully control the volume of the earbuds as intended.	Not Applicable
Can I submerge my earbuds in the water/swim with them?	• While your earbuds do have IPX4 water and sweat resistance, it is recommended that they not be submerged in water directly or used for prolonged periods inside water, like for swimming/showers, as it may lead to damage.	Not Applicable

Does Airdopes 141 support aptX codec by Qualcomm?	No, it does not.	Not Applicable
Does Airdopes 141 have cVc technology by Qualcomm?	No, it does not.	Not Applicable
Does my device have dual microphones?	Yes, it does.	Not Applicable
Does my device support low latency for gaming?	Airdopes 141 does support 50 ms low latency for entertainment and casual gaming. But if you're looking for professional gaming equipment, then Airdopes 141 is not the right product.	Not Applicable
Does my device have AI-Environmental Noise Cancellation technology?	No, it does not.	Not Applicable
Does my device have an ANC feature?	No, it does not.	Not Applicable

7. ASIN/FSN Codes of boAt Airdopes 141 – (Return Tool)

Product Description	EAN Number	ASIN	FSN
Airdopes 141 – Matte Charcoal	8905650134261		
Airdopes 141 – Lavender Bloom	8905650134278		
Airdopes 141 – Lime White	8905650134285		

8. Annexure

8.1. Testing Service Testing SOP & Videos Link:

8.2. Tutorial Video Links: