

1 Product Specification Document for boAt Airdopes Prime 800D

Objective: To understand complete product details and technical diagnostic guidelines for a new product, which can help the service team to build a detailed service plan.

Document Owner: Product Manager

1. Dolby Audio
2. Quad mics with AI-ENx™
3. Multipoint
4. 11mm drivers
5. ASAP™ Charge 10mins = 4 hrs of playtime
6. 45 hrs playback
7. V6.1 Bluetooth
8. Beast™ Mode: 45ms Low latency
9. In-Ear detection
10. GFPS, Microsoft Swift pair, Google Find Hub
11. boAt Hearables App Support
12. IPX5

2 Technical Definitions

Terms	Definitions
TWS	True Wireless Stereo
IPX5	Water Splash Protection Certified
MSC	Multi-Brand Service Centre
D2D	Door-to-Door Replacement Service
CTC	Capacitive Touch Control
DUT	Device Under Testing

3 Product Details

3.1 Product Specifications

Product Name	Airdopes Prime 800D
Headphone Type	TWS Earbuds
Bluetooth Version	v6.1
Music Playtime	Up to 45 hours (at 60% volume)
Number of AI-ENx™ Equipped Mics	4
IWP™ Tech	Yes
BEAST™ Mode	Yes; 45 ms Low Latency

Transmission Range	12 m
Driver Size	11 mm*2
Supported Codec	AAC/SBC
Frequency	20 Hz-20 kHz
Battery	500 mAh (Case); 50 mAh*2 (Earbuds)
ASAP™ Charge	Yes; 10 mins charge = 4 hrs mins playtime
Charging Time	30 mins (Earbuds); 1.5 hours (Case)
Charging Interface	USB Type-C
Water Resistance	IPX5

Note: Music Playtime of 45 hours per charge is based on listening to music at 60% volume & in AAC Codec. Listening to music/audio files at more than 60% volume, Dolby Audio On, and Multipoint On will reduce the playtime.

3.2 Packaging Contents

1.	1 X Pair of boAt Airdopes Prime 800D TWS Earbuds
2.	1 X Charging Case
3.	1 X Type-C Charging Cable
4.	1 X Smart Guide
5.	2 X Pairs of Additional Earmuffs

3.3 Colour Variants

Product Name	Colour Variants
Airdopes Prime 800D	Raven Black
	Swedish White
	Royal Blue
	Smart Raven Black
	Smart Swedish White
	Smart Royal Blue



3.4 Product Functionalities

Function	Process
Power On	Smart Power On: To automatically switch the earbuds on, simply open the lid of the charging case when the earbuds are kept inside.
Power Off	Smart Power Off: ● Step 1: After usage, remove both earbuds from your ears. ● Step 2: Place the earbuds back into the charging case in the correct orientation and close the case lid. ● Step 3: The earbuds will automatically switch off (and enter charging mode).
Answer	● Single tap the CTC on either earbud to answer an incoming call
Reject/ End Call	● Double tap either earbud's CTC to reject an incoming call or end an ongoing call
Play/Pause	● Plug the earbuds inside your ears to start playback and remove both to pause music. OR ● Single tap the CTC on either earbud to play or pause a track
Previous/Next Track	● While playing music, triple tap the left earbud's CTC to return to the previous track. ● While playing music, triple tap the right earbud's CTC to skip to the next track.
Volume Change	● Volume can only be adjusted via phone/media devices
Voice Assistant	● Long press the CTC on either earbud to activate the voice assistant Google/Siri
Dual EQs	● Double tap the left earbud CTC to switch between Dolby Audio and boAt Signature Sound modes.
BEAST™ Mode	● Double tap the right earbud CTC to switch between low latency gaming BEAST™ mode and disable BEAST™ mode
Connecting with Media Devices – Mono Earbud Usage	● Step 1: Please note that both the earbuds can be used in Mono mode. Use Smart Power On for switching on the desired earbud. ● Step 2: The selected earbud will automatically enter the connection mode. ● Step 3: Turn on Bluetooth on your phone/media device and search for "Airdopes Prime 800D" to connect. Note- 1. Dolby Audio activation tone can be heard in Mono mode, but both earbuds have to be worn for a full sound staging effect. 2. Please deactivate Dolby Atmos/Dolby Audio/Dirac/third-party Spatial apps to avoid any abnormalities in sound, since Airdopes Prime 800D is already integrated with Dolby Audio.
	● Switch the earbuds on; both the earbuds automatically enter the Connection Mode.

Connecting with Media Devices – Stereo Earbud Usage	• Turn on the Bluetooth functionality on your phone/media device and scan. • Search for “Airdopes Prime 800D” and tap on the same for pairing & connect via Bluetooth. • To switch to Stereo mode from Mono, simply take out the other earbud from the case. It will automatically power on and pair with the previously selected earbud, hence enabling Stereo usage.
Factory Reset	*NOTE: Before performing a reset, clear "Airdopes Prime 800D" from the pairing device history by forgetting the device. Step 1: Place the earbuds inside the case in the correct orientation. Step 2: While the earbuds are inside the case and case lid is opened, long press the Reset button located on the case for 10 seconds. After a successful factory reset: • Red LED blinks quickly 5 times on the Charging Case • White LED blinks quickly 5 times on the Earbuds Step 3: Close the lid and then re-open it again after a few seconds. Step 4: Take out the earbuds from the charging case and perform a fresh connection attempt. Congratulations! Your Airdopes Prime 800D earbuds have been reset.
In-Ear Detection	• Airdopes Prime 800D comes with In-Ear Detection that will help in pausing the media when the earbuds are taken out of the ears. Earmuffs, as per CX’s ear size, are to be used to have an optimal experience of In-Ear detection. • This feature can be switched OFF from the boAt Hearables App.
Multipoint Connectivity	Airdopes Prime 800D can be connected to 2 devices at once. To enable this feature, the following steps are to be taken: Step 1: Switch on the Bluetooth of your first phone/media device and search for ‘Airdopes Prime 800D’. After the selection is done, the earbuds are paired with your phone/media device. Step 2: Turn off the Bluetooth function of your first phone/media device. The earbuds are ready to be paired again. Step 3: Now switch on the Bluetooth function on your second phone/media device. Scan and select ‘Airdopes Prime 800D’ to connect. Step 4: Switch on the Bluetooth of the first phone/media device again and select ‘Airdopes Prime 800D’ from the list of available devices for pairing. The earbuds are now reconnected to the first phone/media device. Congratulations! Your earbuds are now connected to both your devices successfully via Bluetooth.

	This feature can be switched OFF from the boAt Hearables App.
--	---

3.5 Product LED Indications

3.5.1 Remaining Case Battery LED Indications

Case Remaining Battery	Charging State	Normal (Non-Charging) State
Less than 30%	Red LED flashes 3 times rapidly to indicate the battery level and then blinks slowly	Red LED blinks 3 times on opening the case lid
30%-99%	White LED flashes 3 times rapidly to indicate the battery level and then blinks slowly	White LED blinks 3 times on opening the case lid
Fully Charged (100%)	White LED remains steady	White LED is solid ON for 5 seconds after the charging cable is removed

3.5.2 Earbuds LED Indications

Scenario	Charging State
Earbuds – Low battery in it (<30%)	White LED blinks 3 times when the case lid is opened
Earbuds – 30-100% charge	Solid white LED for 3 seconds when the case lid is opened
Power ON	White LED flashes for 1 second on opening the case Lid
Pairing mode	White LED flashes quickly on the master earbud, and white LED flashes on the slave earbud.
Pairing successful (1 time indication)	White LED blinks twice
If pairing is not successful (In pairing mode)	If 5 minutes later, pairing is still not successful, then the earbuds will show a solid white light for 1 second and will auto power off
Connected	- White LED flashes on both earbuds every 20 seconds (3 times in a minute) - No LED flash when media is playing
Disconnected	The same as pairing mode: White LED flashes quickly on the master earbud, and white LED flashes on the slave earbud.
Earbuds Charging	If the battery is less than 30%, the white LED blinks 3 times when the case lid is opened, and if the charge is above 30%, the white LED remains solid ON for 3 seconds when the case lid is opened. The LED should be off when the lid is closed.
Fully charged	White LED remains solid on for 3 seconds when the case lid is opened
Play the music	All lights are OFF (But "Connected" status will remain)

3.5.3 Factory Reset LED Indications

Scenario	Result
Long press reset button on the charging case for 10 seconds	• Red LED blinks quickly 5 times on the charging case • White LED blinks quickly 5 times on the earbuds

3.6 Charging Procedure and Guidelines


Statement	Information
Charging the Earbuds	• To charge the earbuds, put the earbuds into the charging case in their correct orientation. • During charging, the LED on the case blinks as per the case battery percentage. The earbuds' charging status will be shown after the case's charge status. • Once the charging is complete, white LED on the case remains solid for 5 seconds.
Charging the Case	• To charge the case, plug one end of the cable into the case and connect the other end to a computer, wall adapter, or a power bank.
Charging Norms and Guidelines	• Charging through wall adapter – Specs of the adapter: 5V, 2A • Charging through cable/wire – Standard cable: 35 strands @0.10mm diameter/strand • Any other accessory can be used for charging the earbuds as long as the above norms are followed.
Note-	• Before using the earbuds for the first time, it is recommended to fully charge the earbuds as well as the charging case. Also, keep the lid of the charging case closed while charging.

3.7 Product Weight Matrix Details – (D2C & Warranty Tool)


Product	Length	Breadth	Height	Earbuds Weight	Case Weight
boAt Airdopes Prime 800D	24.9 mm	20.77 mm	32.2 mm	4 g per earbud	36 g

4 Hearables App Functionalities


App - Sound Tab

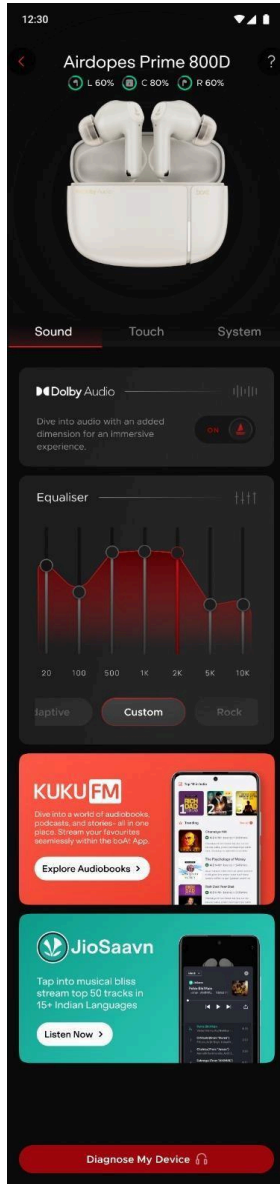

App - Touch Tab

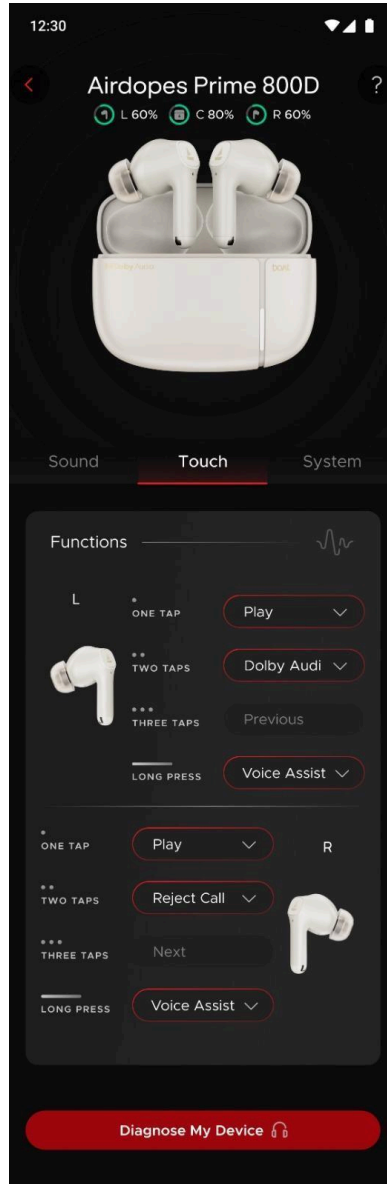

App - System Tab

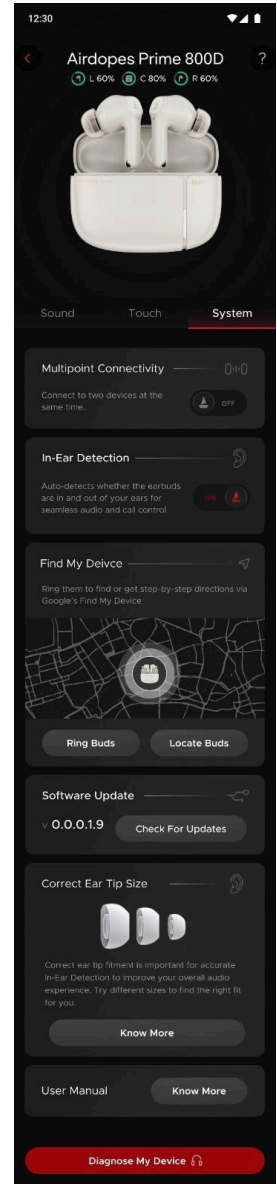

Function	Process
App Installation	- To install the boAt Hearables app, you can follow one of the options mentioned below- Scan QR Code - Airdopes Prime 800D has the Hearables app QR code printed on the packaging box. Simply scan this code using your smartphone. The subsequent link will redirect you to the Google Play Store and iOS Store, and you can select the applicable option. Google Play Store - Download the boAt Hearables app from the Google Play Store on your Android smartphone. <https://play.google.com/store/apps/details?id=com.boAt.hearables&hl=en_IN&gl=US> App Store - Download the boAt Hearables app from the App Store on your iOS smartphone. <https://apps.apple.com/in/app/boat-hearables/id1592550875>
Account Setup	After installing the app, follow the steps shown on the app to set up your account by entering your phone number, name, and email ID. Account setup is a one-time action.
Device Pairing	Step 1: Turn on the Bluetooth on your media device. Step 2: Log in to your account on the boAt Hearables app. Step 3: Go to the "My Devices" section. Step 4: Open the case lid and take out the Airdopes Prime 800D. The earbuds will show up under the list of available devices with "Ready to Pair" status. Follow the 'Pull to refresh' option on the app if the device does not show up on the list. Step 5: Tap the Airdopes Prime 800D name card and accept the pairing request pop-up notification on your media device. Step 6: Tap the 'OK' option on the pairing notification. You can also save Airdopes Prime 800D to your Google account for fast pairing in the future by clicking on "Save" and then "Set up". Congratulations! Airdopes Prime 800D is now connected to your media device with "Connected" status.
Activating Dolby Audio	Step 1: Pair the Airdopes Prime 800D to your media device by following the pairing process. Step 2: Go to the "Sound" tab on the Hearables app. Step 3: Under the "Dolby Audio" header, activate or deactivate Dolby Audio using the toggle switch.
Activating Equalizer	Step 1: Pair the Airdopes Prime 800D to your media device by following the pairing process. Step 2: Go to the "Sound" tab on the Hearables app. Step 3: Under the Sound tab, the "Equalizer" header has all the equalization modes displayed. Step 4: Select the mode of your choice depending on the level of sound elements required- - Tap 'Balanced' to experience the sound elements evenly - Tap 'Pop' to experience preset Pop EQ mode - Tap 'Rock' to experience preset Rock EQ mode

	4. Tap 'Jazz' to experience preset Jazz EQ mode 5. Tap 'Club' to experience preset Club EQ mode
Customizing Touch Controls	Airdopes Prime 800D lets you customize existing touch functions to another from the list of available options. <u>LEFT earbud:</u> 1 Tap: Existing Function - Accept incoming calls Customizable Functions - Volume Up, Volume Down, Previous Track, Next Track, Activate/De-activate BEAST™ Mode, Activate Google/Siri Voice Assistant, Activate/Deactivate Dolby Audio 2 Taps: Existing Function - Activate/Deactivate Dolby Audio Reject/Hang Up Calls Customizable Functions - Volume Up, Volume Down, Next Track, Play/Pause audio, Activate/Deactivate BEAST™ Mode, Activate Google/Siri Voice Assistant 3 Taps: Existing Function - Return to Previous Track <u>RIGHT earbud:</u> 1 Tap: Existing Function - Accept incoming calls Customizable Functions - Volume Up, Volume Down, Previous Track, Next Track, Activate/De-activate BEAST™ Mode, Activate Google/Siri Voice Assistant, Activate/Deactivate Dolby Audio 2 Taps: Existing Function - Activate/Deactivate BEAST™ Mode Reject/Hang Up Calls Customizable Functions - Volume Up, Volume Down, Next Track, Play/Pause audio, Activate/Deactivate BEAST™ Mode, Activate Google/Siri Voice Assistant, Activate/Deactivate Dolby Audio 3 Taps: Existing Function - Return to Next Track

Activating In-Ear Detection	• Step 1: Pair the Airdopes Prime 800D to your media device by following the pairing process. • Step 2: Go to the “System” tab on the Hearables app. • Step 3: Under the System tab, slide the “In-Ear Detection” toggle to the OFF state to deactivate in-ear detection. Slide the toggle once again to ON for activating in-ear detection. Note - By default, In-Ear detection remains ON in Airdopes Prime 800D.
Activating Multipoint Connectivity	• Step 1: Pair the Airdopes Prime 800D to your media device by following the pairing process. • Step 2: Go to the “System” tab on the Hearables app. • Step 3: Multipoint connectivity remains ON by default for keeping Airdopes Prime 800D connected to two media devices at the same time. Under the System tab, slide the “Multipoint Connectivity” toggle to the OFF state to deactivate the multipoint connection. Slide the toggle once again to ON to activate multipoint connection. Note: By default, Multipoint connectivity remains ON in Airdopes Prime 800D.
Installing Software Updates	• Step 1: Pair the Airdopes Prime 800D to your media device by following the pairing process. • Step 2: Go to the “System” tab on the Hearables app. • Step 3: Tap the “Check For Updates” option under the “Software Update” header to check and update Airdopes Prime 800D to the latest firmware version, if available. Note - If the product is updated to the latest available version, the app will show an alert on clicking the option -‘You already have the latest firmware version’.
Factory Reset	• Step 1: To reset Airdopes Prime 800D from your device, go to the Troubleshooting section “?” on the Hearables app. • Step 2: Next, tap the “Malfunctioning” sub-header in the Troubleshooting section. • Step 3: Click on the option “Reset My Device” to reset the earbuds. Congratulations! Your Airdopes Prime 800D has been reset. Airdopes Prime 800D will now show as “Ready to Pair” in the My Devices section. Follow the pairing procedure to connect the earbuds to your device.
Smart Diagnostics Mode	To diagnose issues related to Bluetooth connectivity, mic, speaker, and battery, use the Smart Diagnostics function of the Hearables app. • Step 1: Tap the “Diagnose My Device” option at the bottom. • Step 2: Follow the instructions to start the smart diagnostics process. • Step 3: Click on “Let’s Go” to start. • Step 4: Complete all the steps one by one to check Bluetooth connectivity, mic, speaker, and battery functions. • Step 5: Click on ‘Done’ to finish diagnostics.

5 Technical Diagnostics Guidelines from The Product Manager

5.1 Service Channels

Product Name	Service Channels
boAt Airdopes Prime 800D	1) Door-to-Door Replacement Service (D2D)
	2) MSC Replacement Service (Walk-In)

5.2 Probable FAQs, Actionable Instructions and Resolutions for boAt Airdopes Prime 800D

Issues	Instructions	Final Resolution
Earbuds not connecting via Bluetooth	● Check to see if the device is in pairing mode, indicated by white LED flashes quickly on the master earbud and white LED flashes on the slave earbud. ● Check if the device is in the range of Bluetooth (usually 12m) and if there are any obstructions in between. ● Check to see if the device being connected to supports Bluetooth connection. ● Check if it is a passcode issue, and if so, enter '0000'. ● Check to see if the device being connected to does not have any software issues – check to forget the device on Bluetooth, update the mobile software, and if it still does not work, try factory resetting the device. ● Check if the pogo pins in the charging case and both earbuds are clean. You may do so by gently cleaning them using a cotton swab dipped in alcohol, and try using them again. App - Run the Smart Diagnostics function of the boAt Hearables app and check whether there are issues related to Bluetooth connectivity. Please note that the Smart Diagnostics function in the app can only identify issues related to the firmware and not the hardware.	If nothing else works and there is no physical damage, send the device for replacement.

Earbuds not showing in “My Devices” on the Hearables app	● Check to see if the device is in pairing mode, indicated by white LED flashes quickly on the master earbud and white LED flashes on the slave earbud. ● Check whether the boAt Hearables app on the media device is updated to the latest version. The app version can be checked from the Google Play Store for Android smartphones and from the App Store for iOS smartphones. ● Check whether the case lid is open, and the earbuds have been taken out. ● Check if the earbuds are in the range of the media device’s Bluetooth (usually 10m) and if there are any obstructions in between. ● Check to see if the media device being connected to supports Bluetooth connections. ● Check if the Bluetooth of the media device is turned ON. ● Check to see if the device being connected to has no software issues. ● Check to forget the earbuds from the device’s Bluetooth paired list, update the mobile software, and if it still does not work, try factory resetting the product. ● Check whether closing the app and opening it again solves the issue.	If nothing else works and there is no physical damage, send the device for replacement.
Charging case is not charging	● Check to see if the wire connected to the case is not broken. Use other wires and also ensure that the charger being used is not of 9V or 12V, as that will damage the case. ● To charge the case, plug one end of the provided cable into the case and connect the other end to a computer or a wall adapter. Note: The LED located at the bottom of the charging case indicates the battery status of the case. Red LED flashes 3 times when the battery level is less than 30%, white LED flashes 3 times when the battery level is between 30-99%, white LED is solid ON when the battery level is more than 100%, and the white LED stays solid on for 5 seconds to indicate a full charge.	If nothing else works and there is no physical damage, send the device for replacement

Earbuds are not charging	● Check to see if the earbuds have been put inside the case in the right orientation. ● Check to see if the earbuds are completely charged or not. ● Once the earbuds have been completely charged, the LED on the case flashes blue for 5 seconds. ● Check if the pogo pins in the charging case and both earbuds are clean. You may do so by gently cleaning them using a cotton swab dipped in alcohol, and try using them again. App - Run the Smart Diagnostics function of the boAt Hearables app and check whether there are issues related to the earbud battery. Please note that the Smart Diagnostics function in the app can only identify issues related to the firmware and not the hardware.	If nothing else works, and there is no physical damage, send the device for replacement
Device not entering Stereo Mode/ stuck in Mono Mode	● Check when both the earbuds are taken out of the charging case. The earbuds will enter Pairing Mode, indicated by white LED flashes quickly on the master earbud and white LED flashes on the slave earbud. ● Place the earbuds in the charging case and then try using them again. Check if it connects automatically. ● Check and see if factory resetting the device works. ● Check if the pogo pins in the charging case and both earbuds are clean. You may do so by gently cleaning them using a cotton swab dipped in alcohol, and try using them again.	If nothing else works, and there is no physical damage, send the device for replacement
The sound is distorted/low volume/low bass/low quality	● Check if the connected device does not have any equalizer settings applied. ● Check if Dolby Atmos/Dolby Audio/Dirac/third-party EQ apps are deactivated in the connected device to avoid any sound abnormalities. ● Check if the problem still occurs if the device is moved closer and all obstacles in the middle are removed. ● Check if the distortion of sound occurs at all volumes or only at high volumes.	If nothing else works, and there is no physical damage, send the device for replacement

	● Check with different media players and different devices, and whether the distortion happens on all devices or only on specific ones. ● Check if the problem occurs at all levels of charging or only at low charging levels. ● Check if the earbuds do not have water droplets. In case they do, use a blow dryer from a distance to dry out any water. ● Check if the earbuds are clogged with earwax or dirt. If yes, simply clean the earbuds with a cotton swab dipped in alcohol to resolve the issue. App - Run the Smart Diagnostics function of the boAt Hearables app and check whether there are any speaker-related issues. Please note that the Smart Diagnostics function in the app can only identify issues related to the firmware and not the hardware.	
Earbuds not turning on	● Check to see if the device has been properly charged first- a solid white LED on the case for 3 seconds will indicate that they are fully charged. ● Check if the voltage of the charger is correct for the charging case and if the lights on the bottom of the case are glowing to indicate the charge level. ● Check by opening the lid of the charging case (with the earbuds inside) to power on the earbuds. The white LED should flash for 1 second. ● Check if the product was not subjected to any mishandling, broken wires, or exposed to direct sunlight, or hazards like fire.	If nothing else works and there is no physical damage, send the device for replacement
The in-built controls of the product are not working	● Check if the controls do not work while being connected to another device. ● Check if the media player being used supports such controls and if the controls do not function on call or with other media players. ● Check if the controls have been physically damaged or exposed to any hazards.	If nothing else works and there is no physical damage, send the device for replacement

Occasional disconnects/ one of the earbuds keeps disconnecting	● Check if restarting the device resolves the issue. ● Check if the same problem happens for different devices and media players. ● Check if there are any obstructions between the earbuds and the device, and clear them. Move the device at a closer range to the earbuds and see if this still affects it. ● Try factory-resetting the device.	If nothing else works and there is no physical damage, send the device for replacement
If there are other exceptions in the usage of the product	● Check if restarting the device resolves the issue. ● Place the earbuds in the charging case and try using them again. ● Try factory-resetting the device.	If nothing else works and there is no physical damage, send the device for replacement.
The sound output is muffled	● Check if dust has accumulated inside the earbuds or if there is any obstruction. ● Check if earwax has accumulated inside the earbuds. ● Check if there is no damage to the tips of the earbuds and see if changing them helps. ● Check if sweat or water has gone inside the earbuds. App - Run the Smart Diagnostics function of the boAt Hearables app and check whether there are speaker issues. Please note that the Smart Diagnostics function in the app can only identify issues related to the firmware and not the hardware.	If nothing else works and there is no physical damage, send the device for replacement.
How to check on the Hearables app whether the earbuds are connected or not?	● The boAt Hearables app shows all currently and previously paired devices in the 'My Devices' section. ● Once the Airdopes Prime 800D is paired to your smartphone, the status gets changed to "Connected" in the thumbnail. ● Tap the thumbnail to check whether both the left and right earbuds are connected or not. You can also check the battery level of both earbuds.	Not Applicable
Can I access the product manual on the Hearables app?	● You can view the product's manual under the "System" tab of the Hearables app. Go to the 'User Manual' section and tap 'Know More' to access the user manual.	Not Applicable

What is Insta Wake N' Pair (IWP™) technology?	● Our IWP™ technology allows the earbuds to connect to your phone instantaneously upon opening the case if they have already been paired before. ● Simply open the case and ensure that the Bluetooth is turned on for your media device. The earbuds will connect as soon as the case is opened without the need to take them out of the case first.	Not Applicable
How to enable IWP™ for my earbuds?	● There is no special process to enable IWP™- simply follow the steps to first pair your Airdopes Prime 800D to your media device. Then, upon subsequent usage, the IWP™ tech will be enabled, and the earbuds will pair automatically to your previously paired media device if Bluetooth is turned on in your media device.	Not Applicable
IWP™ is not working for my earbuds	● Check if your earbuds model has IWP™ tech integrated. ● Make sure that you have paired the earbuds at least once before to the device you are trying to use IWP™ with. ● Check if Bluetooth is turned on for your media device and if it has Airdopes Prime 800D in the list of paired devices. ● Try factory-resetting the device.	If IWP™ is not working and there is no physical damage, send the device for replacement
How to enable In-Ear Detection for my earbuds?	● In-ear detection is enabled by default on Airdopes Prime 800D. ● You can use the boAt Hearables app to turn off or re-activate in-ear detection for your earbuds.	Not Applicable
Voice is muffled during calls/ Microphone has muffled input	● Check if restarting the device resolves the issue. ● Check if dust or earwax has accumulated near or inside the microphone port, and if there is no blockage on the microphone. ● Check if sweat or water has gone inside the microphone. ● Check if there are any obstructions between the earbuds and the device, and clear them. Move the device at a closer range to the earbud and see if the connection is still affected. App - Run the Smart Diagnostics function of the boAt Hearables app and check whether	If nothing else works and there is no liquid and physical damage, send the device for replacement

	there are issues related to the earbud mic. Please note that the Smart Diagnostics function in the app can only identify issues related to the firmware and not the hardware.	
Earbud not charging while inside the case, even when the case is charged	● Check if the charging pins of the case are clear and there is no obstruction. ● Check if the charging pins of the earbuds are clear and there is no obstruction. ● Check if the orientation of the earbuds inside the case is correct and if they have been properly inserted inside the case. ● Check if the pogo pins are clean. You may do so by gently cleaning them using a cotton swab dipped in alcohol.	If nothing else works and there is no liquid and physical damage, send the device for replacement
Can I lower the volume of the voice prompts/turn them off?	● No, the voice prompts are integrated inside the earbuds, and there is no provision to turn them off or lower their volume.	Not Applicable
Can I control the volume of the earbuds through integrated controls?	● No, the earbuds do not have any integrated volume controls on them. The volume has to be controlled using your connected Bluetooth device. ● Ensure that in the Bluetooth settings of your media device, you have enabled syncing of Bluetooth and phone volume levels; otherwise, you may not be able to fully control the volume of the earbuds as intended.	Not Applicable
Can I submerge my earbuds in the water/swim with them?	● While your earbuds do have IPX5 water and sweat resistance, it is recommended that they are not submerged inside water directly or used for prolonged periods inside water, such as for swimming/showers, as it may lead to damage.	Not Applicable
Does Airdopes Prime 800D support aptX codec by Qualcomm?	● No, it does not.	Not Applicable
Does Airdopes Prime 800D have cVc technology by Qualcomm?	● No, it does not.	Not Applicable
Does my device have dual microphones?	● Yes, it does.	Not Applicable

Does my device support low latency for gaming?	Airdopes Prime 800D does support 45 ms low latency for entertainment and casual gaming. But if you're looking for professional gaming equipment, then Airdopes Prime 800D is not the right product.	Not Applicable
Does my device have AI-Environmental Noise Cancellation technology?	Yes, it does.	Not Applicable
Does my device have an ANC feature?	No, it does not.	Not Applicable

6 ASIN/FSN Codes of boAt Airdopes Prime 800D – (Return Tool)

Product Description	EAN Number	ASIN	FSN
Airdopes Prime 800D – Raven Black	8905650132113		
Airdopes Prime 800D – Swedish White	8905650132120		
Airdopes Prime 800D – Royal Blue	8905650132151		
Airdopes Prime 800D – Smart Raven Black	8905650133929		
Airdopes Prime 800D – Smart Swedish White	8905650133936		
Airdopes Prime 800D – Smart Royal Blue	8905650133943		

7 Annexure

7.1 Testing Service Testing SOP & Videos Link:

7.2 Tutorial Video Links: