

EXP NO.1a	VIRTUAL LABS PROGRAMMING FOR DELAY GENERATION AND EFFECT OF CPU CLOCK
DATE: 03.07.26	

AIM

To study the effect of CPU clock on Microcontroller operations.

OBJECTIVE

To investigate the impact of varying the clock speed of a PIC18F4550 series microcontroller on the execution speed of instructions and to understand how CPU clock frequency affects the overall performance of the microcontroller.

PROCEDURE

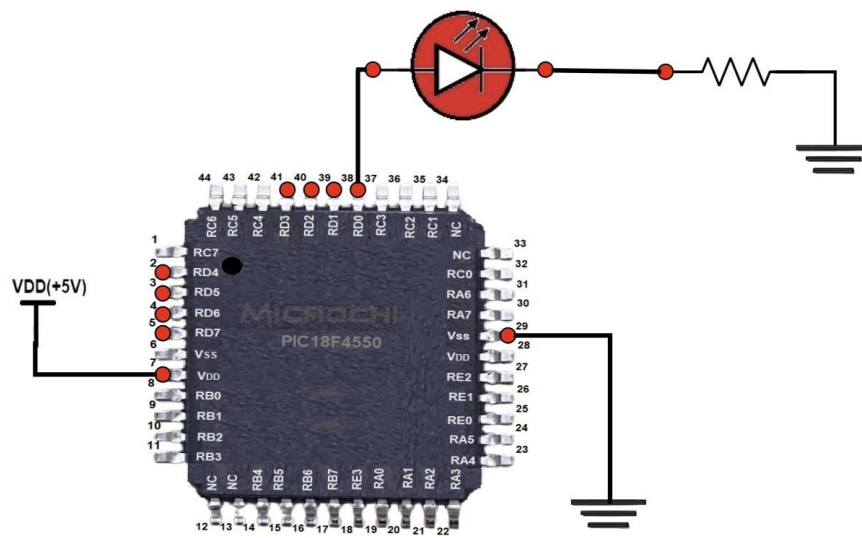
1. Open the Virtual Labs simulator.
2. Select the required CPU Clock Frequency.
3. Enter the Total Delay between **1 ms and 1000 ms**.
4. Enter the ON Delay and OFF Delay such that:

$$\text{Total Delay} = \text{ON Delay} + \text{OFF Delay}$$

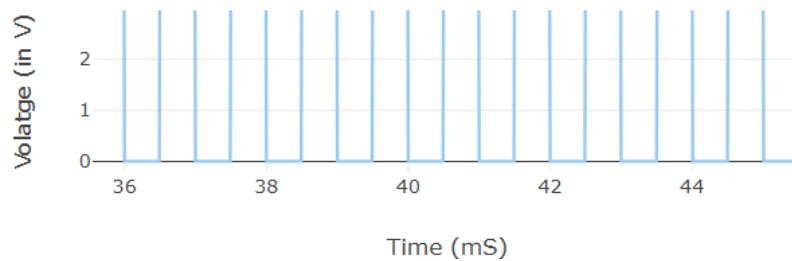
5. Click **SUBMIT**.
6. Select the required output pin.
7. Select the LED Configuration.
8. Click **GENERATE CODE**.
9. Click **COMPILE CODE**.
10. Click **EXECUTE CODE**.
11. The MIMIC window opens.
12. Connect the selected pin to the LED anode.
13. Connect the LED cathode to the resistor.
14. Click **Check Connection**.
15. If the connection is incorrect, click **Reset Connection** and reconnect.
16. Click **Run**.
17. Observe the LED blinking and square wave output.
18. Repeat the experiment with different clock frequencies.

SIMULATIONS:**SCENARIO – 1:****INPUT PARAMETERS:**

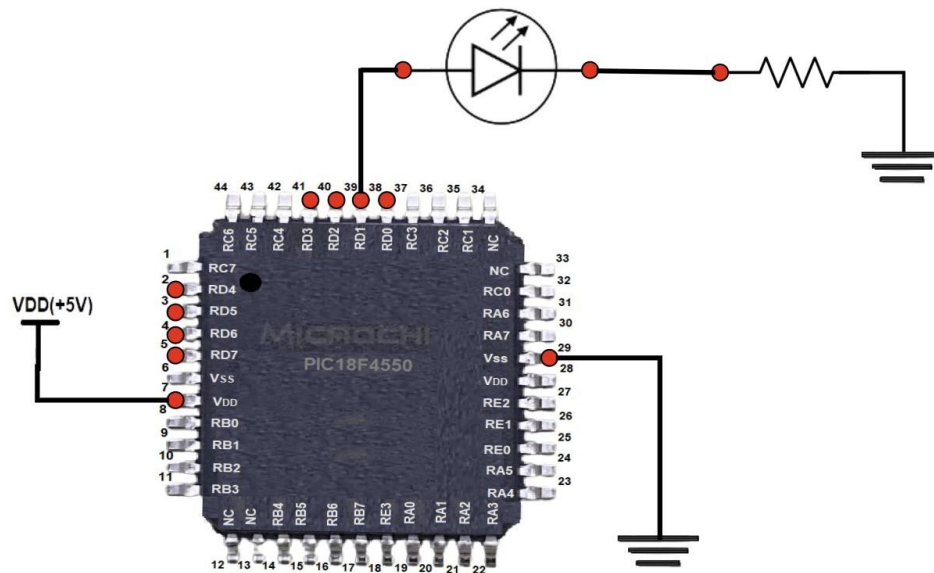
CONFIGURATION			
Select Clock Frequency:	1 MHz		
Enter Total Delay(ms):	1000		
Enter ON-OFF Delay(ms):	500	500	SUBMIT
Select Pin:	RD0		
Select LED Configuration:	Current Sourcing		
GENERATE CODE	COMPILE CODE	EXECUTE CODE	DOWNLOAD PROGRAM



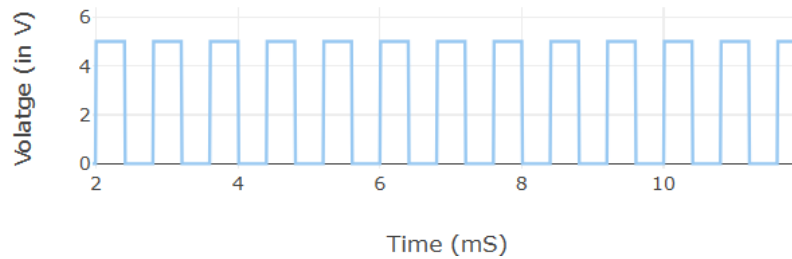
Delay Generation Graph

**SCENARIO – 2:****INPUT PARAMETERS:**

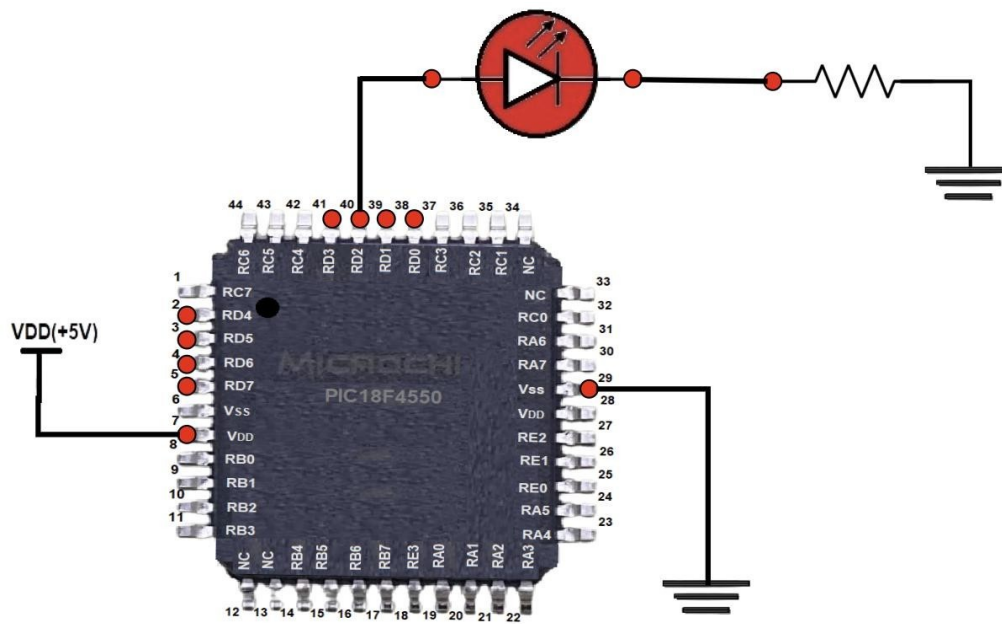
CONFIGURATION				
Select Clock Frequency:	4 MHz			
Enter Total Delay(ms):	800			
Enter ON-OFF Delay(ms):	400	400	SUBMIT	
Select Pin:	RD1			
Select LED Configuration:	Current Sourcing			
GENERATE CODE		COMPILE CODE	EXECUTE CODE	DOWNLOAD PROGRAM



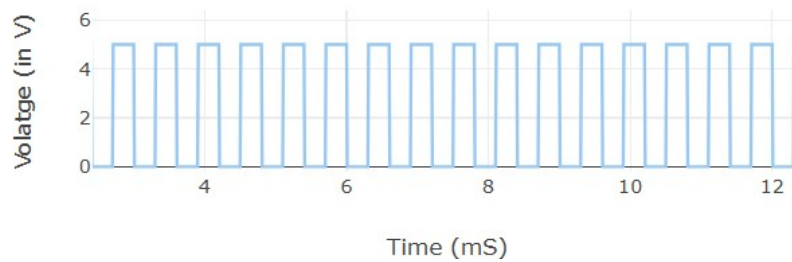
Delay Generation Graph

**SCENARIO – 3:****INPUT PARAMETERS:**

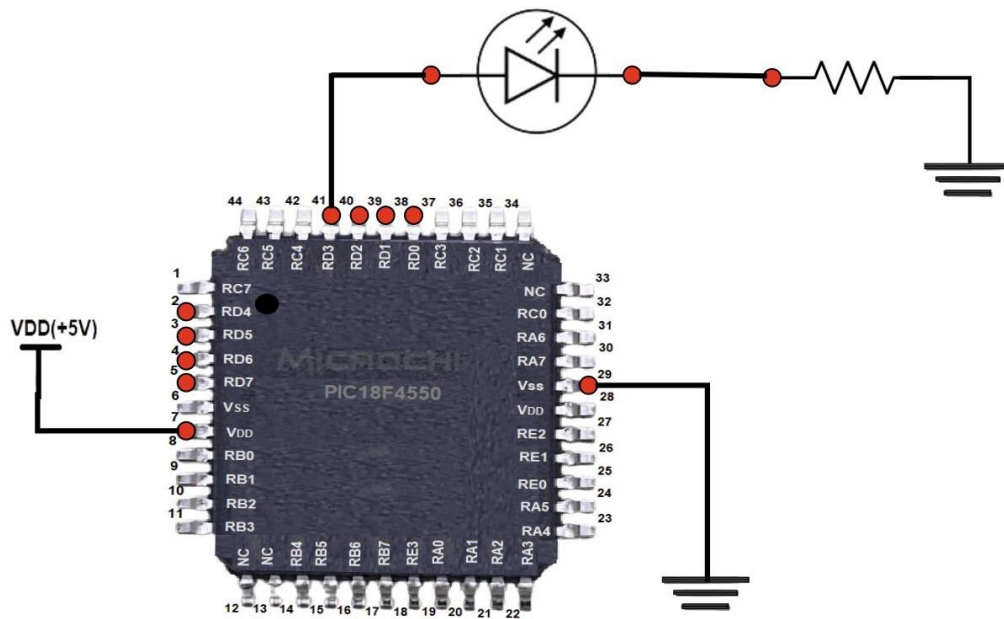
CONFIGURATION				
Select Clock Frequency:	8 MHz			
Enter Total Delay(ms):	600			
Enter ON-OFF Delay(ms):	300	300	SUBMIT	
Select Pin:	RD2			
Select LED Configuration:	Current Sourcing			
GENERATE CODE		COMPILE CODE	EXECUTE CODE	DOWNLOAD PROGRAM



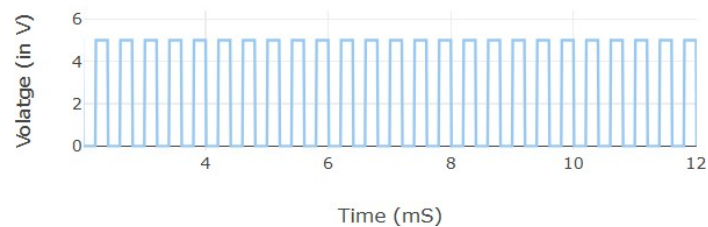
Delay Generation Graph

**SCENARIO – 4:****INPUT PARAMETERS:**

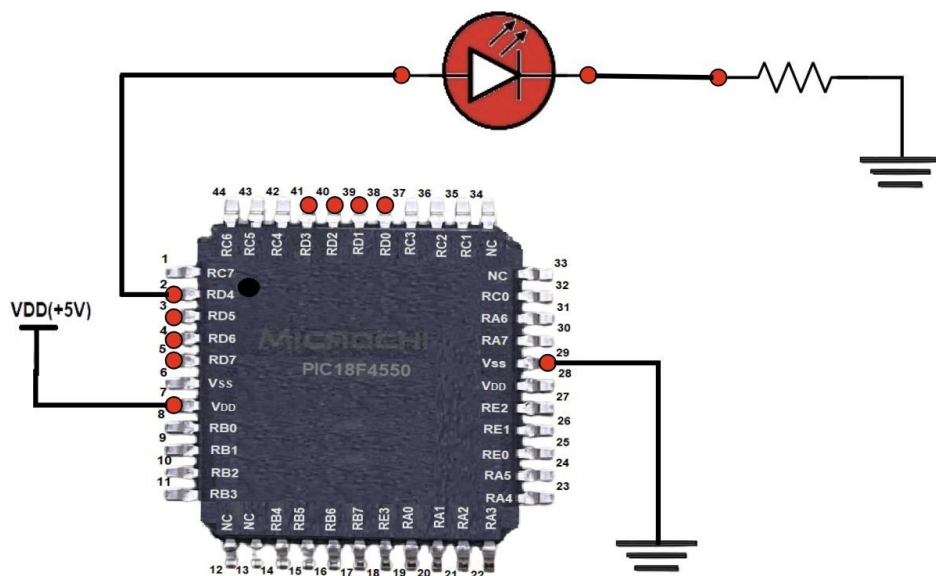
CONFIGURATION			
Select Clock Frequency:	16 MHz		
Enter Total Delay(ms):	400		
Enter ON-OFF Delay(ms):	200	200	SUBMIT
Select Pin:	RD3		
Select LED Configuration:	Current Sourcing		
GENERATE CODE		COMPILE CODE	EXECUTE CODE
DOWNLOAD PROGRAM			



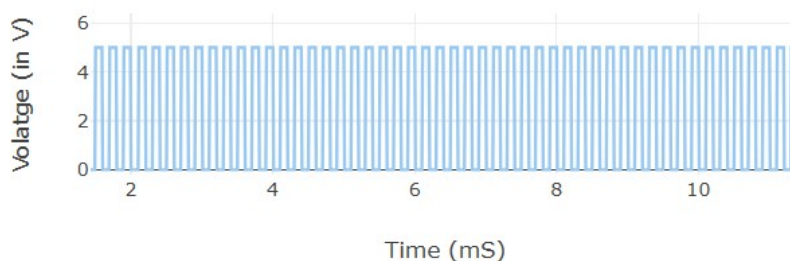
Delay Generation Graph

**SCENARIO – 5:****INPUT PARAMETERS:**

CONFIGURATION			
Select Clock Frequency:	24 MHz		
Enter Total Delay(ms):	200		
Enter ON-OFF Delay(ms):	100	100	SUBMIT
Select Pin:	RD4		
Select LED Configuration:	Current Sourcing		
GENERATE CODE	COMPILE CODE	EXECUTE CODE	DOWNLOAD PROGRAM



Delay Generation Graph

**RESULT**

Thus, the effect of CPU clock frequency on the operation of the PIC18F4550 microcontroller was studied successfully. It was observed that increasing the clock frequency decreases instruction execution time, resulting in faster LED blinking and quicker program execution.

EXP NO.1b	VIRTUAL LABS PROGRAMMING FOR I/O INTERFACING (LED AND SWITCH INTERFACING)
DATE: 03.07.26	

AIM

To write a program for LED blinking through a push button using the PIC18F4550 series microcontroller.

OBJECTIVE

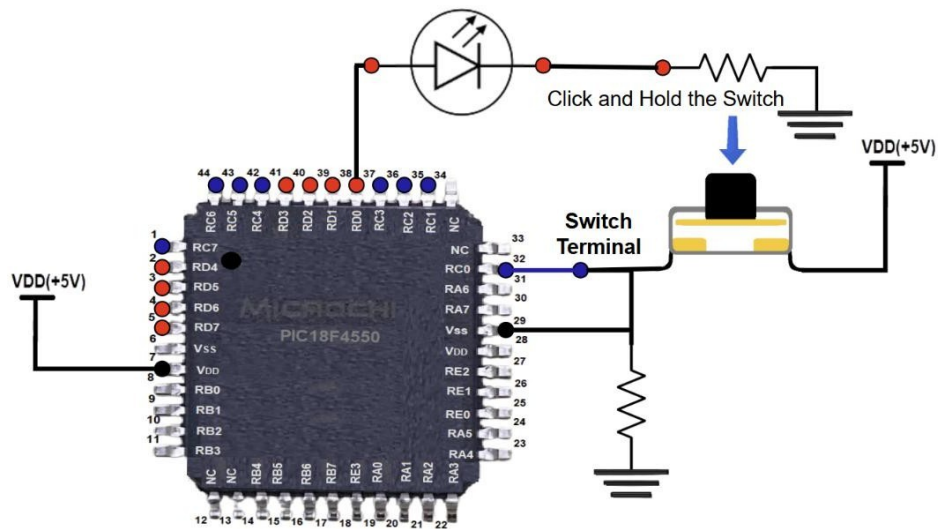
To demonstrate the use of the PIC18F4550 microcontroller's GPIO (General Purpose Input Output) pins for interfacing an input device (push button switch) and an output device (LED). The experiment aims to understand how the microcontroller reads the state of a push button and controls the LED accordingly.

PROCEDURE

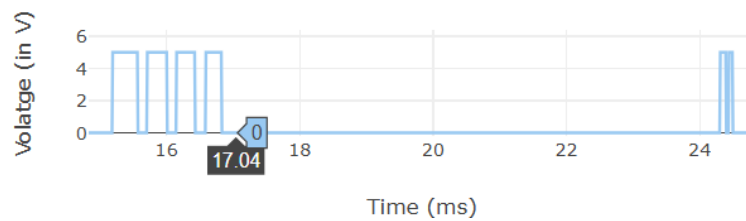
1. Open the Virtual Labs simulator.
2. Select the **Input Pin** for the Switch.
3. Select the **Output Pin** for the LED.
4. Select the **Switch Configuration**.
5. Select the **LED Configuration**.
6. Click **GENERATE CODE**.
7. Click **COMPILE CODE**.
8. Click **EXECUTE CODE**.
9. The MIMIC window opens.
10. Connect the selected Output Pin to the LED Anode.
11. Connect the LED Cathode to the resistor.
12. Connect the selected Input Pin to the Switch.
13. Click **Check Connection**.
14. If the connection is incorrect, click **Reset Connection** and reconnect.
15. Press and hold the Switch.
16. Observe the LED and square wave output.
17. Repeat the experiment with different pin configurations.

SIMULATIONS SCENARIO – 1:
INPUT PARAMETERS:

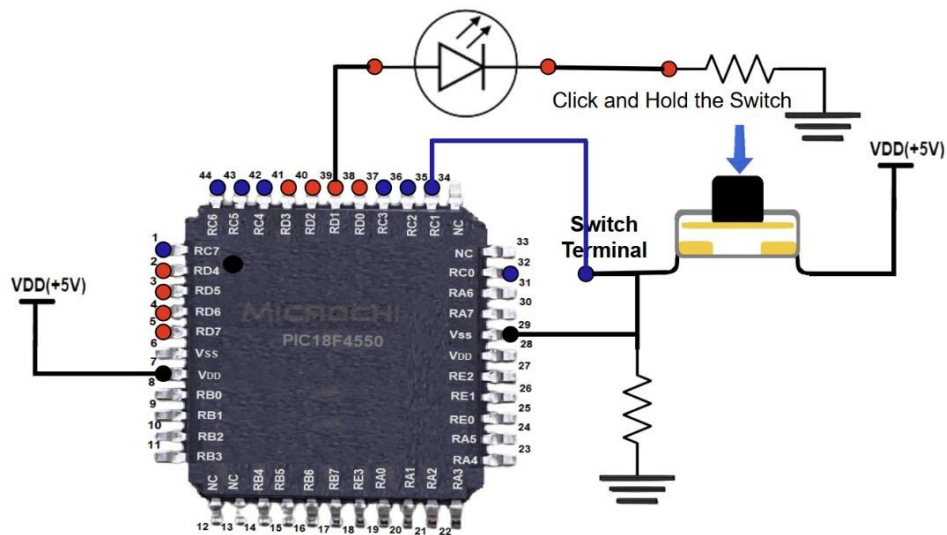
CONFIGURATION	
Select Input Pin For Switch :	RC0
Select Output Pin For LED :	RD0
Select Switch Configuration :	Press-to-High
Select LED Configuration :	Current Sourcing



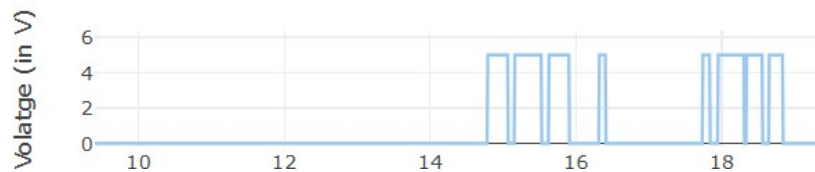
Square Wave Graph

**SCENARIO – 2:****INPUT PARAMETERS:**

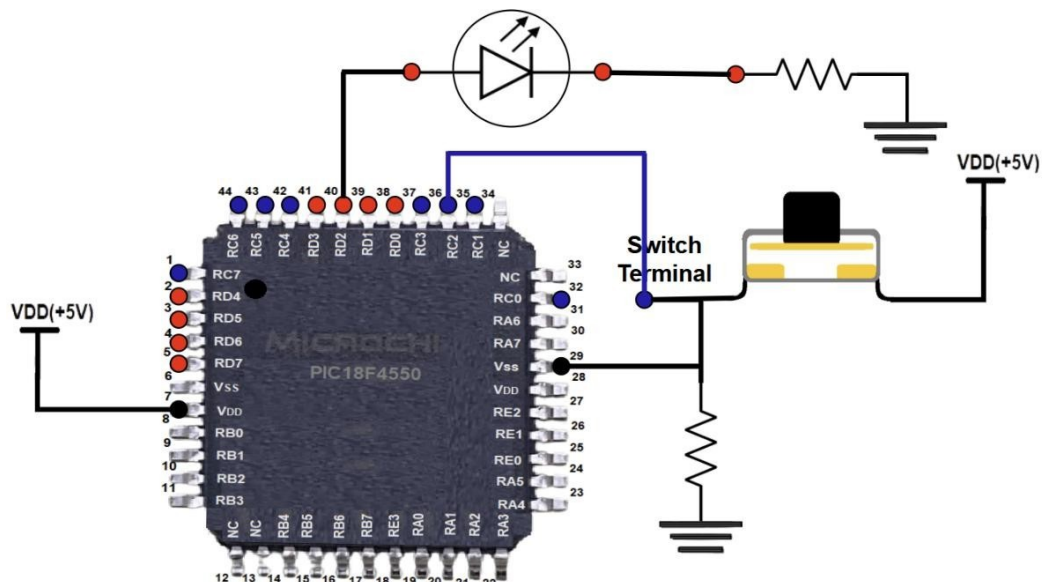
CONFIGURATION	
Select Input Pin For Switch :	RC1
Select Output Pin For LED :	RD1
Select Switch Configuration :	Press-to-High
Select LED Configuration :	Current Sourcing
GENERATE CODE	COMPILE CODE
EXECUTE CODE	DOWNLOAD PROGRAM



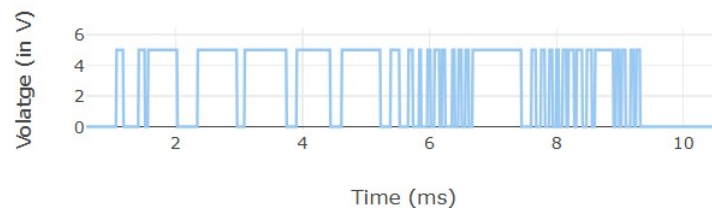
Square Wave Graph

**SCENARIO – 3:****INPUT PARAMETERS:**

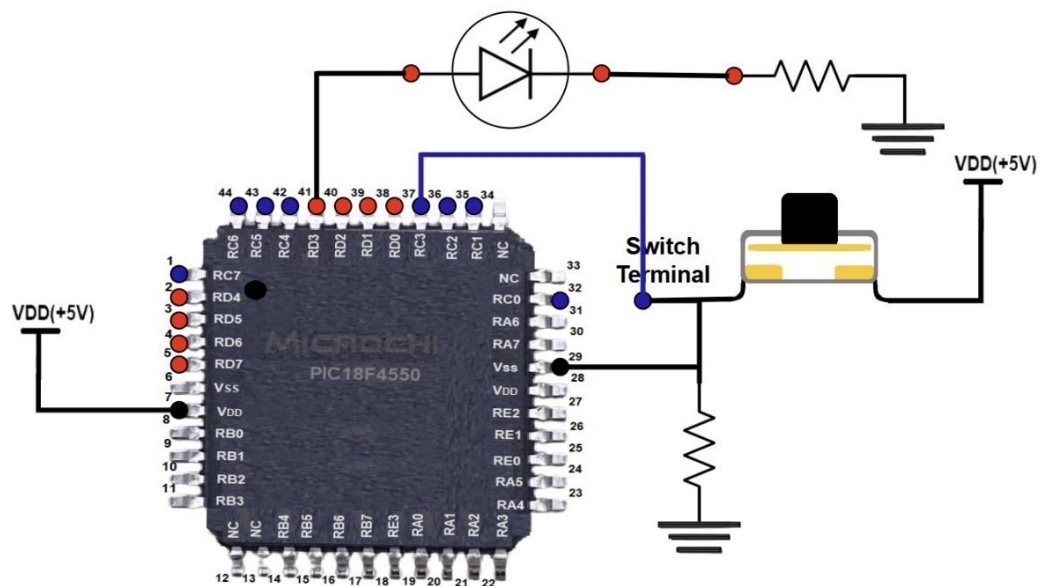
CONFIGURATION	
Select Input Pin For Switch :	RC2
Select Output Pin For LED :	RD2
Select Switch Configuration :	Press-to-High
Select LED Configuration :	Current Sourcing
GENERATE CODE	COMPILE CODE
EXECUTE CODE	DOWNLOAD PROGRAM



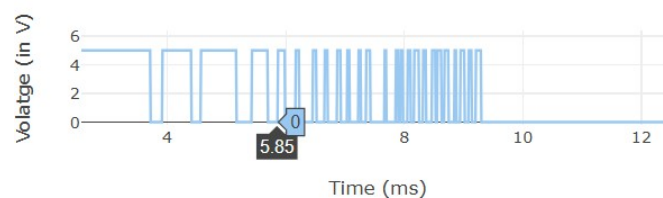
Square Wave Graph

**SCENARIO – 4:****INPUT PARAMETERS:**

CONFIGURATION	
Select Input Pin For Switch :	RC3
Select Output Pin For LED :	RD3
Select Switch Configuration :	Press-to-High
Select LED Configuration :	Current Sourcing
GENERATE CODE	COMPILE CODE
EXECUTE CODE	DOWNLOAD PROGRAM



Square Wave Graph

**SCENARIO – 5:**

INPUT PARAMETERS:**CONFIGURATION**

Select Input Pin For Switch : RC5

Select Output Pin For LED : RD5

Select Switch Configuration : Press-to-High

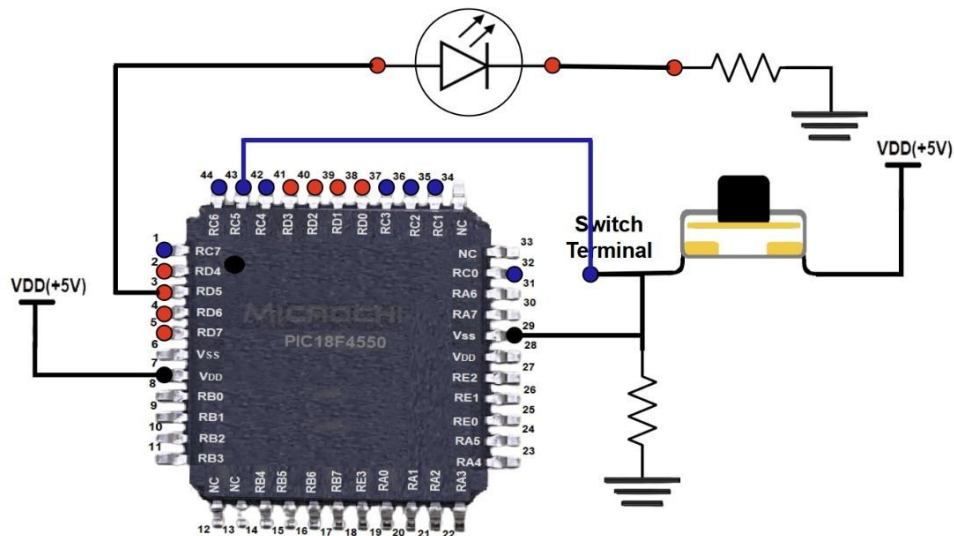
Select LED Configuration : Current Sourcing

GENERATE
CODE

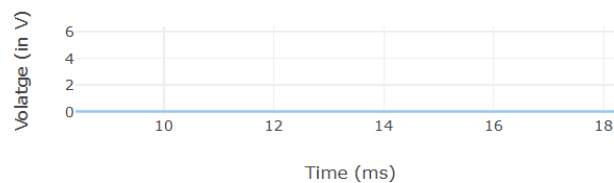
COMPILE
CODE

EXECUTE
CODE

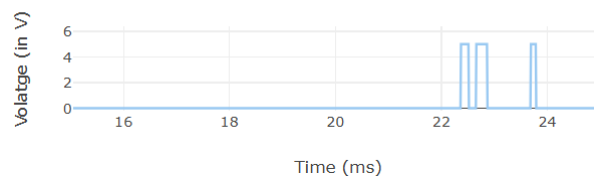
DOWNLOAD
PROGRAM



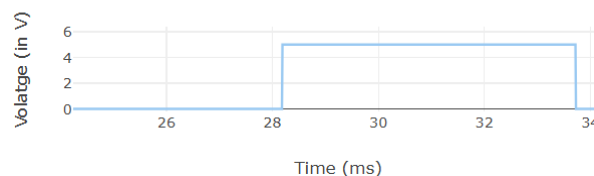
Square Wave Graph



Square Wave Graph



Square Wave Graph

**RESULT**

Thus, the interfacing of a push button switch and an LED using the PIC18F4550 microcontroller was successfully studied. The GPIO pins correctly detected the switch input and controlled the LED output.

EXP NO.1c	VIRTUAL LABS PROGRAMMING WITH ON-CHIP TIMERS/COUNTERS
DATE: 10.07.26	

AIM

To study programming with on-chip Timers/Counters using the PIC18F4550 microcontroller.

OBJECTIVE

- To understand the basic concepts of Timer and Counter.
- To study Timer0 of the PIC18F4550 microcontroller.
- To understand the interrupt structure of the PIC18F4550.
- To generate accurate delays using Timer0 and interrupts.

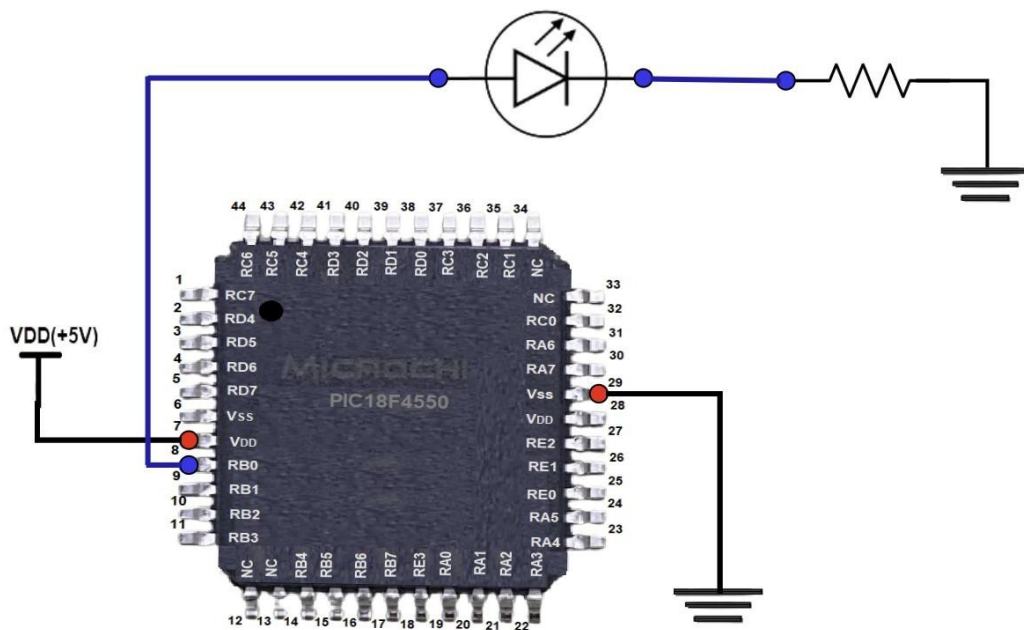
PROCEDURE

1. Select the Operating Frequency.
2. Select the Timer.
3. Select the Prescaler.
4. Select Enable Interrupt.
5. Enter ON Delay (in ms).
6. Enter OFF Delay (in ms).
7. Click GENERATE CODE.
8. Click COMPILE CODE.
9. Click EXECUTE CODE.
10. The MIMIC window opens.
11. Connect the output pin to the LED anode.
12. Connect the LED cathode to the resistor.
13. Click CHECK CONNECTION.
14. If the connection is incorrect, click RESET CONNECTION and reconnect.
15. Click RUN.
16. Observe the LED blinking and square wave output.
17. Click REFRESH to repeat the experiment

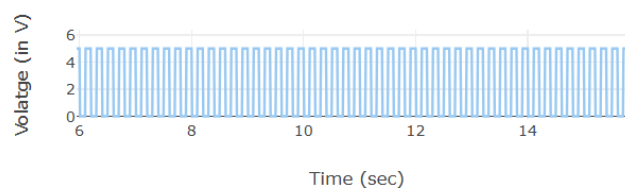
SIMULATIONS SCENARIO – 1

CONFIGURATION	
Output Pin to Generate Square Wave : RB0 Pin	
Select Operating Frequency :	8 MHz
Select Timer :	Timer0
Select Prescaler :	1:32
Select Enable Interrupt :	YES
Enter ON Delay (in ms) :	100
Enter OFF Delay (in ms) :	100
GENERATE CODE	COMPILE CODE
EXECUTE CODE	DOWNLOAD PROGRAM

PUT PARAMETERS



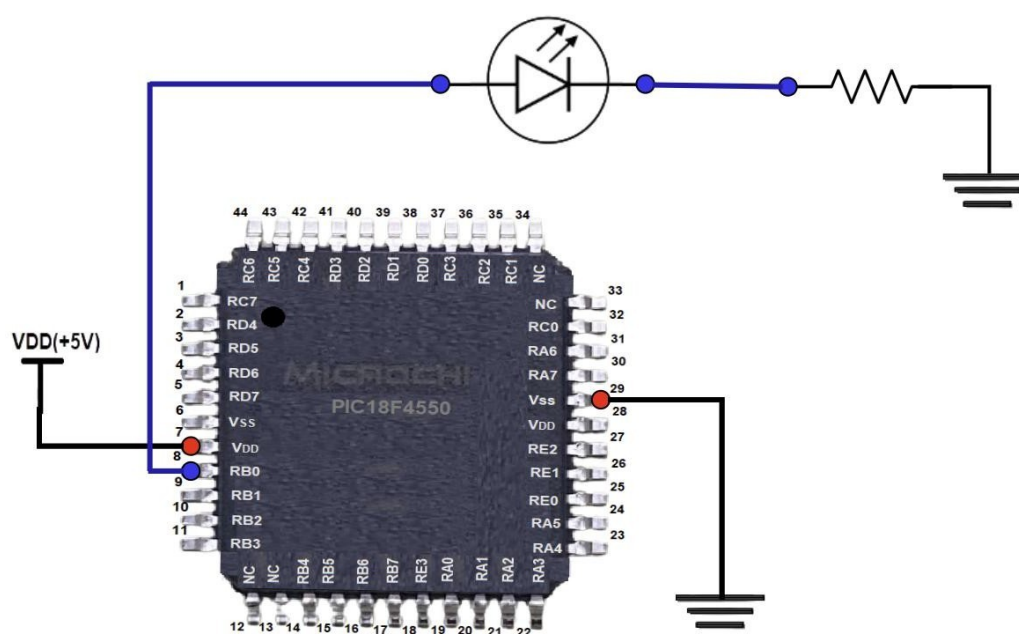
Timer0 Output on RB0 Pin



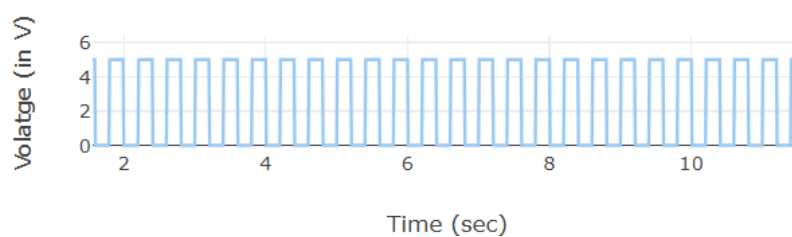
SCENARIO – 2

INPUT PARAMETERS

CONFIGURATION	
Output Pin to Generate Square Wave : RB0 Pin	
Select Operating Frequency :	20 MHz
Select Timer :	Timer0
Select Prescaler :	1:64
Select Enable Interrupt :	YES
Enter ON Delay (in ms) :	200
Enter OFF Delay (in ms) :	200
GENERATE CODE	COMPILE CODE
EXECUTE CODE	DOWNLOAD PROGRAM

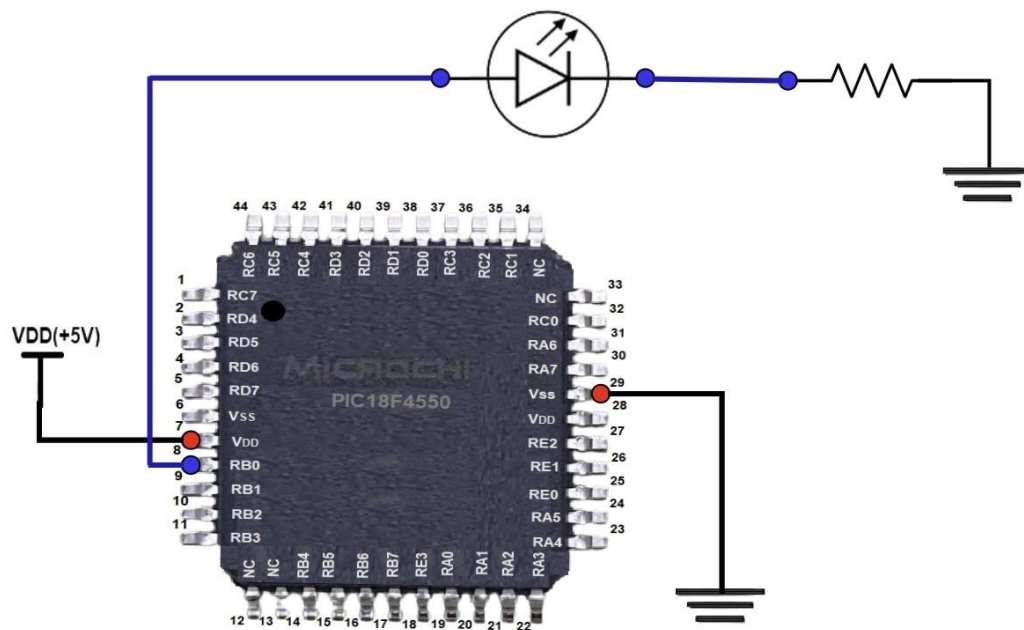


Timer0 Output on RB0 Pin



SCENARIO – 3**INPUT PARAMETERS**

CONFIGURATION	
Output Pin to Generate Square Wave : RB0 Pin	
Select Operating Frequency :	48 MHz
Select Timer :	Timer0
Select Prescaler :	1:256
Select Enable Interrupt :	YES
Enter ON Delay (in ms) :	500
Enter OFF Delay (in ms) :	500
GENERATE CODE	COMPILE CODE
EXECUTE CODE	DOWNLOAD PROGRAM

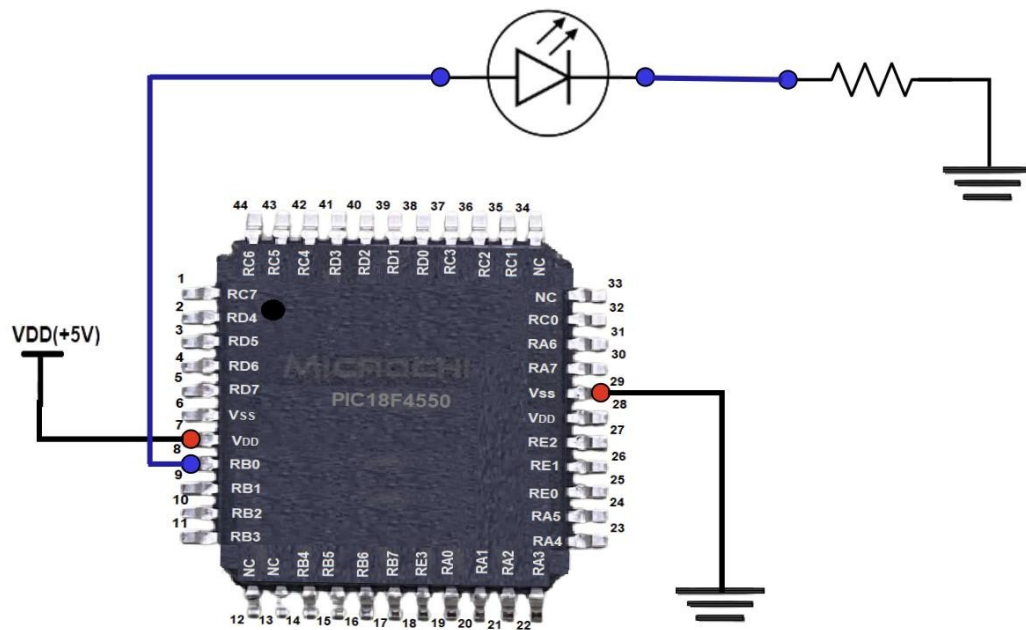


Timer0 Output on RB0 Pin

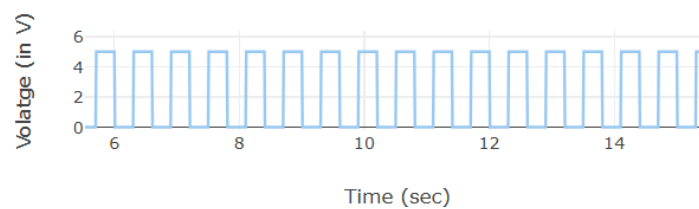
**SCENARIO – 4**

INPUT PARAMETERS

CONFIGURATION	
Output Pin to Generate Square Wave : RB0 Pin	
Select Operating Frequency :	20 MHz
Select Timer :	Timer0
Select Prescaler :	1:128
Select Enable Interrupt :	YES
Enter ON Delay (in ms) :	300
Enter OFF Delay (in ms) :	300
GENERATE CODE	COMPILE CODE
EXECUTE CODE	DOWNLOAD PROGRAM



Timer0 Output on RB0 Pin



SCENARIO – 5

INPUT PARAMETERS

CONFIGURATION

Output Pin to Generate Square Wave : RB0 Pin

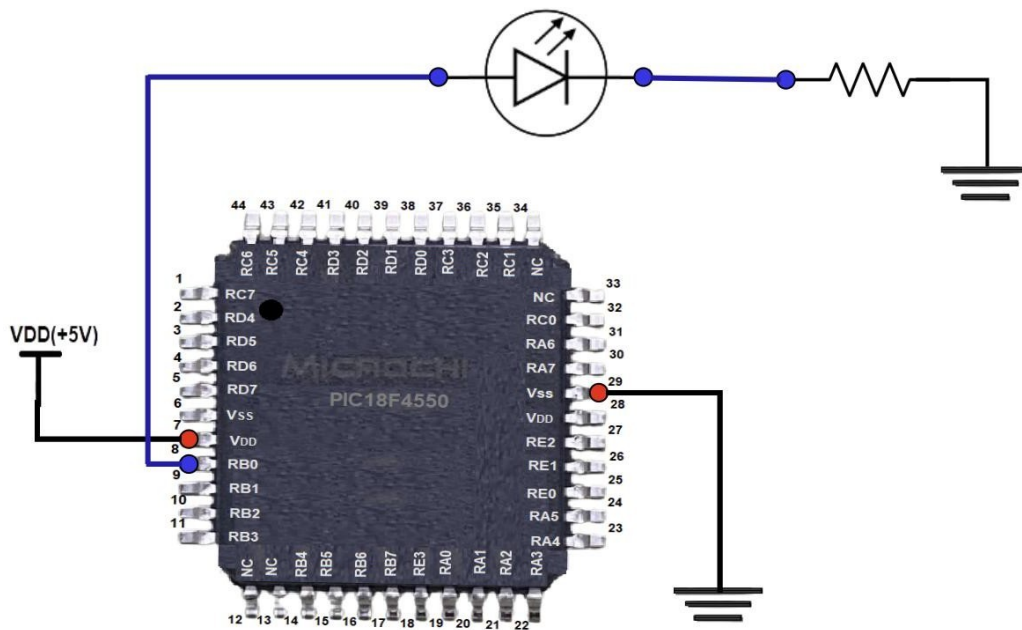
Select Operating Frequency :	8 MHz
Select Timer :	Timer0
Select Prescaler :	1:16
Select Enable Interrupt :	YES
Enter ON Delay (in ms) :	50
Enter OFF Delay (in ms) :	50

GENERATE
CODE

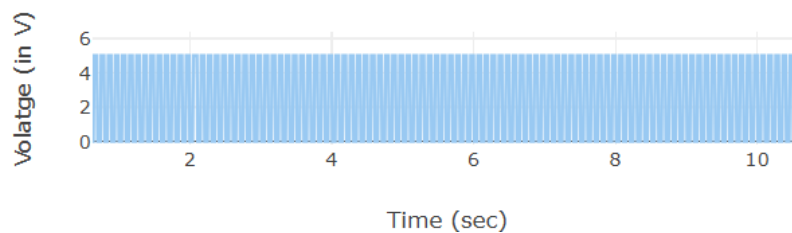
COMPILE
CODE

EXECUTE
CODE

DOWNLOAD
PROGRAM



Timer0 Output on RB0 Pin



RESULT

Thus, programming with on-chip Timers/Counters using the PIC18F4550 microcontroller was studied successfully.

EXP NO.2	STUDY OF KEIL SOFTWARE
DATE: 17.07.26	

AIM

To study the Keil μ Vision Integrated Development Environment (IDE) and understand its features, components, installation procedure, project creation, compilation, debugging, and simulation of embedded C programs for microcontrollers.

APPARATUS / SOFTWARE REQUIRED

- Computer or Laptop
- Keil μ Vision IDE (Keil MDK)
- Windows Operating System
- ARM Cortex-M or 8051 Device Pack
- Embedded C Program

THEORY

Keil μ Vision is an Integrated Development Environment (IDE) developed for programming embedded

systems based on various microcontrollers such as 8051, ARM Cortex-M, C166, and others. It provides all the necessary tools required to develop, compile, debug, simulate, and download programs into microcontrollers. Keil simplifies embedded software development by integrating source code editing, project management, compiler, linker, debugger, and simulator into a single application. It is widely used in educational institutions and industries for embedded system design and development.

COMPONENTS OF KEIL SOFTWARE1. **μ Vision IDE:**

The μ Vision IDE provides a user-friendly interface for creating and managing embedded projects. It contains the code editor, project manager, compiler, debugger, and simulator.

2. **Compiler:**

The compiler converts Embedded C source code into object code that can be understood by the microcontroller.

3. **Assembler:**

The assembler converts assembly language programs into machine language.

4. **Linker:**

The linker combines multiple object files into a single executable file.

5. **Debugger:**

The debugger is used to identify and remove errors from the program. It allows step-by-step execution, breakpoint setting, variable monitoring, and register inspection.

6. **Simulator:**

The simulator allows execution of programs without connecting the actual hardware. It helps verify program functionality before downloading it into the microcontroller.

FEATURES OF KEIL SOFTWARE

- Simple and user-friendly interface
- Supports Embedded C and Assembly Language
- Fast program compilation
- Built-in simulator
- Powerful debugging facilities
- Supports thousands of microcontrollers
- Generates HEX files for programming microcontrollers
- Device database with manufacturer support
- Syntax highlighting and code completion

APPLICATIONS OF KEIL SOFTWARE

Keil software is used in the development of:

- Embedded systems
- IoT devices

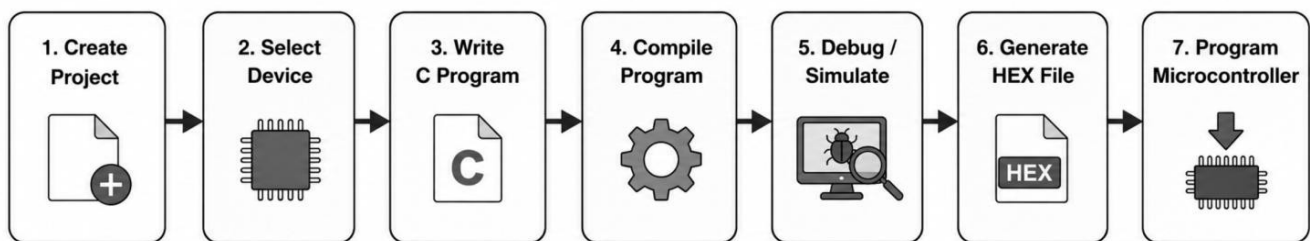
- Robotics
- Automotive electronics
- Consumer electronics
- Medical instruments
- Industrial automation
- Home automation systems

WORKING OF KEIL SOFTWARE

The general development process in Keil is:

1. Create a new project.
2. Select the target microcontroller.
3. Write the Embedded C program.
4. Save the source file.
5. Add the source file to the project.
6. Compile (Build) the program.
7. Correct compilation errors if any.
8. Debug and simulate the program.
9. Generate the HEX file.
10. Download the HEX file into the microcontroller using a programmer.

FLOW DIAGRAM



OBSERVATION

- Keil IDE successfully creates embedded projects.
- The compiler checks the program for syntax errors.
- The debugger executes the program step by step.
- The simulator allows testing without hardware.
- A HEX file is generated after successful compilation.

ADVANTAGES

- Easy to learn and operate
- High-speed compiler
- Powerful debugging tools
- Supports a large number of microcontrollers
- Integrated project management
- Industry-standard embedded development software

LIMITATIONS

- Full version requires a commercial license.
- Primarily designed for embedded applications.
- Some advanced features are available only in licensed versions.

RESULT

The Keil μ Vision IDE was successfully studied. Its components, features, project creation process, compilation, debugging, simulation, and HEX file generation were understood successfully.

EXP NO.3	ARITHMETIC AND LOGICAL OPERATIONS USING 8051 ASSEMBLY LANGUAGE IN KEIL μVISION
DATE: 24.07.26	

AIM:

To develop and simulate 8051 Assembly language programs for performing arithmetic and logical operations using Keil μ Vision IDE.

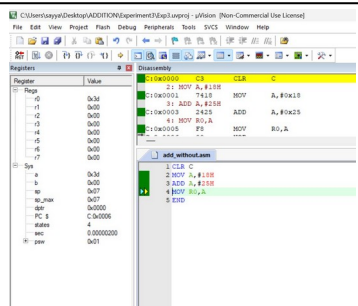
DESCRIPTION:

Keil μ Vision is a software development environment used for programming and simulating 8051 microcontrollers. It provides tools for writing Assembly language programs, assembling source code, debugging errors, and observing register as well as memory contents through simulation.

In this experiment, Assembly language instructions were used to perform arithmetic operations such as addition, subtraction, multiplication, and division, along with logical operations including AND, OR, XOR, complement, rotate left, rotate right, clear accumulator, and carry flag operations. The simulator was used to verify the results by monitoring the accumulator, registers, and status flags.

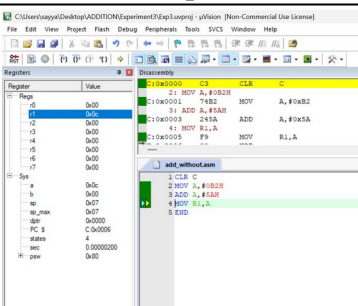
ARITHMETIC OPERATIONS**1 (i) Addition without Carry**

Objective: To add two hexadecimal numbers without generating a carry.

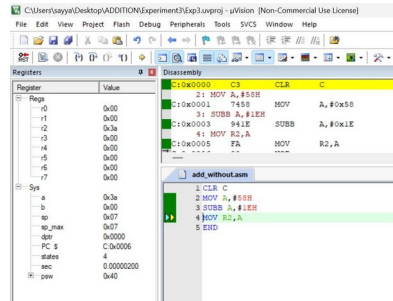
Input	Calculation	Result
18H = 24 25H = 37	24 + 37 = 61	3DH = 61 Carry = 0
Program		Output
<pre>CLR C MOV A, #18H ADD A, #25H MOV R0, A</pre>		

1 (ii) Addition with Carry

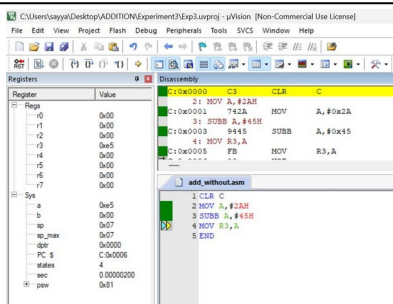
Objective: To perform addition of two hexadecimal numbers that produces a carry.

Input	Calculation	Result
B2H = 178 5AH = 90	178 + 90 = 268	R1 = 0CH Carry = 1
Program		Output
<pre>CLR C MOV A, #0B2H ADD A, #5AH MOV R1, A</pre>		

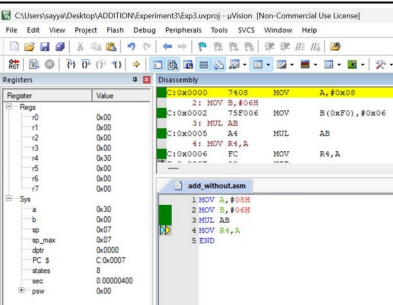
2 (i) Subtraction without Borrow**Objective:** To subtract one hexadecimal number from another without borrow.

Input	Calculation	Result
58H = 88 1EH = 30	$88 - 30 = 58$	3AH = 58 Borrow(Carry)=0
Program		Output
<pre>CLR C MOV A, #58H SUBB A, #1EH MOV R2, A</pre>		

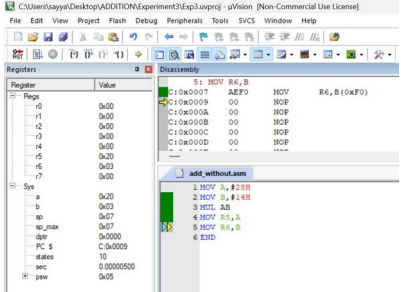
2 (ii) Subtraction with Borrow**Objective:** To subtract a greater hexadecimal value from a smaller one.

Input	Calculation	Result
2AH = 42 45H = 69	$42 - 69 = -27$	E5H Borrow(Carry)=1
Program		Output
<pre>CLR C MOV A, #2AH SUBB A, #45H MOV R3, A</pre>		

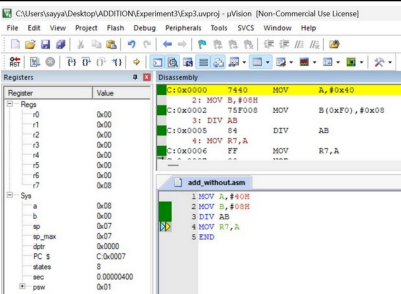
3 (i) Multiplication without Overflow**Objective:** To multiply two hexadecimal numbers without overflow.

Input	Calculation	Result
08H = 8 06H = 6	$8 \times 6 = 48$	A = 30H B = 00H
Program		Output
<pre>MOV A, #08H MOV B, #06H MUL AB MOV R4, A</pre>		

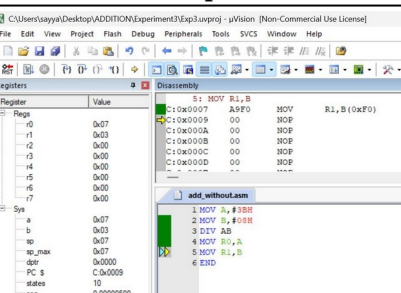
3 (ii) Multiplication with Overflow**Objective:** To multiply two hexadecimal numbers producing a 16-bit result.

Input	Calculation	Result
28H = 40 14H = 20	$40 \times 20 = 800$	A = 20H B = 03H
Program		Output
<pre> MOV A, #28H MOV B, #14H MUL AB MOV R5, A MOV R6, B </pre>		

4 (i) Division without Remainder**Objective:** To divide two hexadecimal numbers exactly without remainder.

Input	Calculation	Result
40H = 64 08H = 8	$64 \div 8 = 8$	Quotient = 08H Remainder = 00H
Program		Output
<pre> MOV A, #40H MOV B, #08H DIV AB MOV R7, A </pre>		

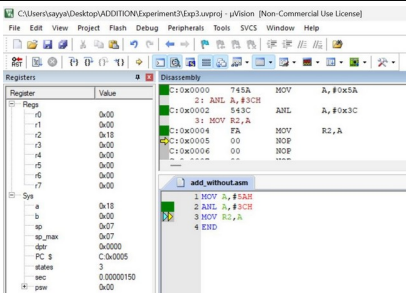
4 (ii) Division with Remainder**Objective:** To divide two hexadecimal numbers producing quotient and remainder.

Input	Calculation	Result
3BH = 59 08H = 8	$59 \div 8 = 7$ Remainder = 3	Quotient = 07H Remainder = 03H
Program		Output
<pre> MOV A, #3BH MOV B, #08H DIV AB MOV R0, A MOV R1, B </pre>		

LOGICAL OPERATIONS

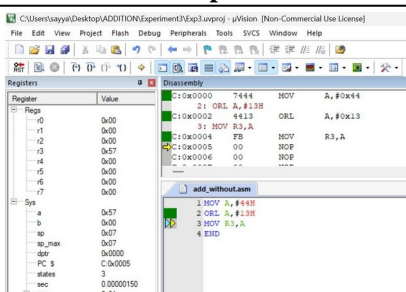
5 (i) Logical AND

Objective: To perform a bitwise AND operation.

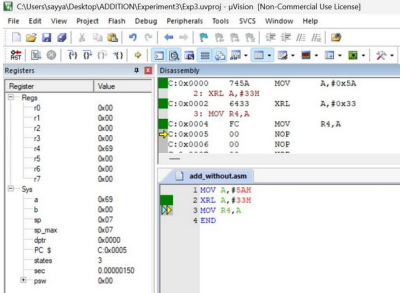
Input	Calculation	Result
5AH = 90 3CH = 60	$\begin{array}{r} 01011010 \\ 00111100 \\ \hline 00011000 \end{array}$	18H = 24
Program		Output
<pre>MOV A, #5AH ANL A, #3CH MOV R2, A</pre>		

5 (ii) Logical OR

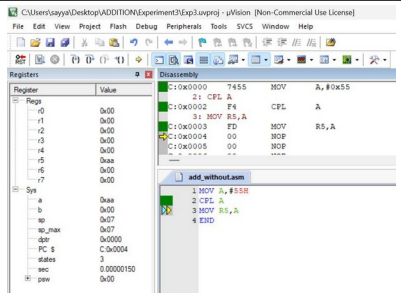
Objective: To perform a bitwise OR operation.

Input	Calculation	Result
44H = 68 13H = 19	$\begin{array}{r} 01000100 \\ 00010011 \\ \hline 01010111 \end{array}$	57H = 87
Program		Output
<pre>MOV A, #44H ORL A, #13H MOV R3, A</pre>		

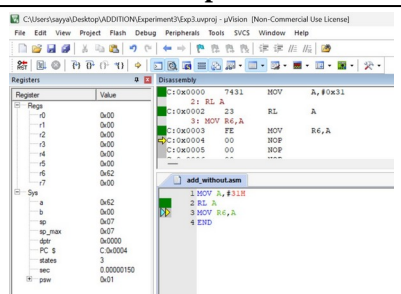
5 (iii) Logical XOR**Objective:** To perform a bitwise Exclusive-OR operation.

Input	Calculation	Result
5AH = 90 33H = 51	01011010 00110011 01101001	69H = 105
Program		Output
<pre>MOV A, #5AH XRL A, #33H MOV R4, A</pre>		

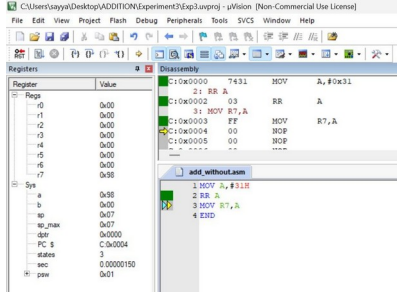
5 (iv) Complement**Objective:** To complement every bit of the accumulator.

Input	Calculation	Result
55H = 85	01010101 ↓ 10101010	AAH = 170
Program		Output
<pre>MOV A, #55H CPL A MOV R5, A</pre>		

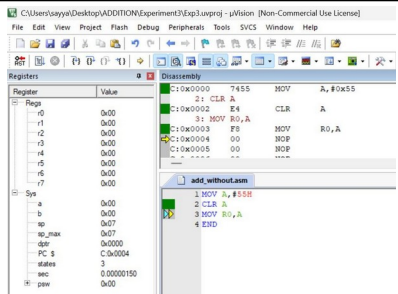
5 (v) Rotate Left**Objective:** To rotate the accumulator bits one position to the left.

Input	Calculation	Result
31H = 49	00110001 ↓ 01100010	62H = 98
Program		Output
<pre>MOV A, #31H RL A MOV R6, A</pre>		

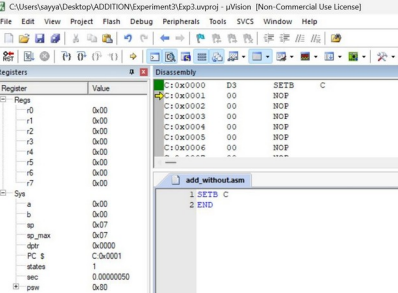
5 (vi) Rotate Right**Objective:** To rotate the accumulator bits one position to the right.

Input	Calculation	Result
31H = 49	00110001 ↓ 10011000	98H = 152
Program		Output
<pre>MOV A, #31H RR A MOV R7, A</pre>		

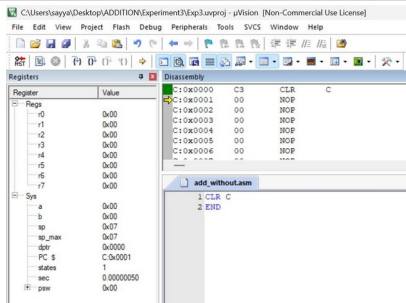
5 (vii) Clear Accumulator**Objective:** To clear all the bits in the accumulator.

Input	Calculation	Result
A = 55H	01010101 ↓ 00000000	00H
Program		Output
<pre>MOV A, #55H CLR A MOV R0, A</pre>		

5 (viii) Set Carry Flag**Objective:** To set the carry flag.

Result	
Carry = 1	
Program	Output
SETB C	

5 (ix) Clear Carry Flag**Objective:** To clear the carry flag.

Result	
Carry = 0	
Program	Output
CLR C	

RESULT:

Thus, the arithmetic and logical operations were successfully implemented and verified using 8051 Assembly Language in Keil μ Vision IDE.

B) Exchange (Swap) the Block of Data Between Two Memory Locations**AIM:**

To write an Assembly Language Program (ALP) to exchange (swap) the contents of a block of data between two internal memory locations.

ALGORITHM:

1. Initialize the starting address of Block 1.
2. Initialize the starting address of Block 2.
3. Load the counter with the number of bytes.
4. Read one byte from Block 1 into the Accumulator.
5. Store it temporarily in Register B.
6. Read one byte from Block 2 into the Accumulator.
7. Move the contents of Register B to Block 2.
8. Move the Accumulator contents to Block 1.
9. Increment both memory pointers.
10. Decrement the counter.
11. Repeat until all bytes are exchanged.
12. Stop the program.

PROGRAM:

```

ORG 00H
MOV R0, #50H
MOV R1, #80H
MOV R2, #04H
L1: MOV A, @R0
MOV B, A
MOV A, @R1
MOV @R0, A
MOV A, B
MOV @R1, A
INC R0
INC R1
DJNZ R2, L1
END

```

OUTPUT:

Memory window before execution

Address	00	01	02	03	04	05	06	07	08	09	0A	0B	0C	0D	0E	0F
C:0x0050:	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
C:0x0051:	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
C:0x0052:	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
C:0x0053:	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
C:0x0054:	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
C:0x0055:	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
C:0x0056:	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
C:0x0057:	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
C:0x0058:	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
C:0x0059:	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
C:0x005A:	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
C:0x005B:	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
C:0x005C:	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
C:0x005D:	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
C:0x005E:	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
C:0x005F:	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
C:0x0060:	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
C:0x0061:	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
C:0x0062:	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
C:0x0063:	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
C:0x0064:	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
C:0x0065:	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
C:0x0066:	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
C:0x0067:	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
C:0x0068:	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
C:0x0069:	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
C:0x006A:	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
C:0x006B:	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
C:0x006C:	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
C:0x006D:	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
C:0x006E:	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
C:0x006F:	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
C:0x0070:	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
C:0x0071:	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
C:0x0072:	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
C:0x0073:	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
C:0x0074:	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
C:0x0075:	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
C:0x0076:	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
C:0x0077:	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
C:0x0078:	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
C:0x0079:	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
C:0x007A:	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
C:0x007B:	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
C:0x007C:	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
C:0x007D:	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
C:0x007E:	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
C:0x007F:	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
C:0x0080:	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00

Memory window after execution

Address	00	01	02	03	04	05	06	07	08	09	0A	0B	0C	0D	0E	0F
C:0x0032:	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
C:0x0069:	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
C:0x00A0:	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
C:0x00D7:	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
C:0x010E:	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
C:0x0145:	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
C:0x017C:	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
C:0x01B3:	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
C:0x01EA:	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00

RESULT:

Thus, the contents of the two memory blocks were successfully exchanged and verified successfully.

EXP NO.5	LARGEST AND SMALLEST NUMBER IN AN ARRAY USING 8051 ALP
DATE: 18.09.26	

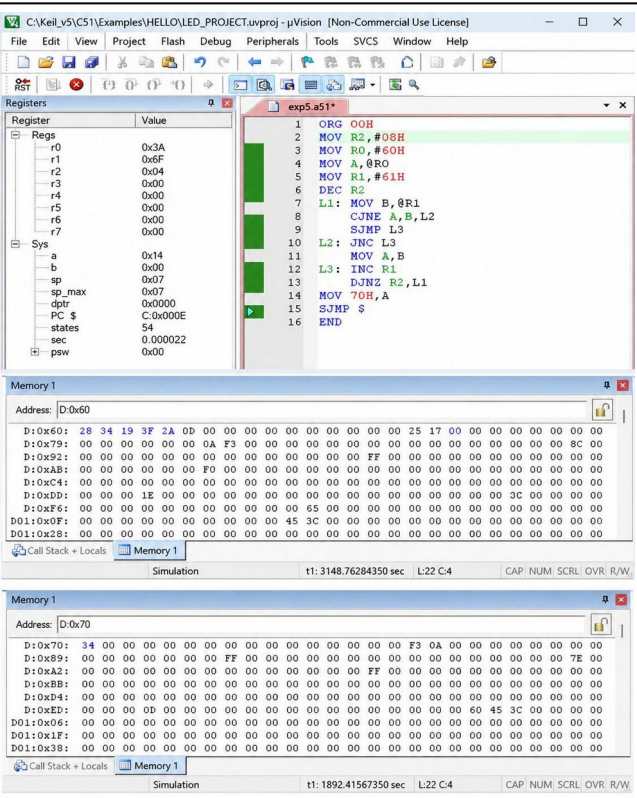
(a) Largest Number in an Array**AIM:**

To write and execute an 8051 Assembly Language program to find the largest and smallest numbers in an array and store the results in the specified memory location.

ALGORITHM:

1. Start the program.
2. Load the number of array elements into register R2.
3. Initialize R0 with the starting address of the array.
4. Move the first array element into accumulator A.
5. Initialize R1 with the address of the next element.
6. Compare the current largest value in A with the next array element.
7. If the next element is larger, move it into A.
8. Increment the array pointer.
9. Repeat the comparison until all elements are checked.
10. Store the largest value from A into memory location 70H.
11. Stop.

PROGRAM:

Program	Output
<pre> ORG 00H MOV R2, 50H DEC R2 MOV R0, #60H MOV A, @R0 MOV R1, #61H L1: MOV 00H, @R1 CJNE A, 00H, L2 L2: JNC L3 MOV A, @R1 L3: INC R1 DJNZ R2, L1 MOV 70H, A END </pre>	 The screenshot displays the Keil uVision IDE interface during the execution of the assembly program. The main window shows the assembly code with line numbers 1 through 16. The Registers window on the left shows the values of registers R0 through R7. The Memory window on the right shows the contents of memory locations from 0x60 to 0x6F. The simulation status bar at the bottom indicates the execution time (t1: 3148.76284350 sec) and the current instruction (L22 C-4).

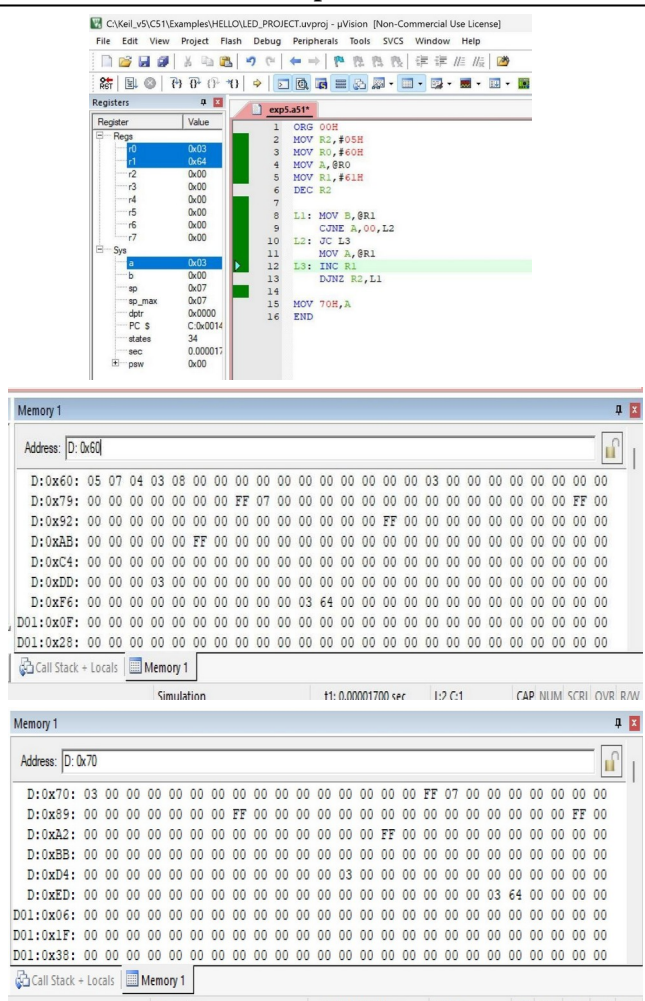
(b) Smallest Number in an Array**AIM:**

To write and execute an 8051 Assembly Language program to find the smallest number in an array stored in the specified memory location.

ALGORITHM:

1. Start the program.
2. Load the number of array elements into register R2.
3. Initialize R0 with the starting address of the array.
4. Move the first array element into accumulator A.
5. Initialize R1 with the address of the next element.
6. Compare the current smallest value in A with the next array element.
7. If the next element is smaller, move it into A.
8. Increment the array pointer.
9. Repeat the comparison until all elements are checked.
10. Store the smallest value from A into memory location 70H.
11. Stop.

PROGRAM:

Program	Output
<pre> ORG 00H MOV R2, 50H DEC R2 MOV R0, #60H MOV A, @R0 MOV R1, #61H L1: MOV 00H, @R1 CJNE A, 00H, L2 L2: JNC L3 MOV A, @R1 L3: INC R1 DJNZ R2, L1 MOV 70H, A END </pre>	 The screenshot displays the Keil uVision IDE interface. The main window shows the assembly code being executed. The Registers window on the right shows the state of the 8051 registers: R0 is 0x60, R1 is 0x61, and R2 is 0x00. The Memory window at the bottom shows the contents of memory locations starting from 0x60. The program is executed, and the result is stored at memory location 0x70.

RESULT:

Thus, the 8051 Assembly Language programs for finding the largest and smallest numbers in an

array were executed successfully.

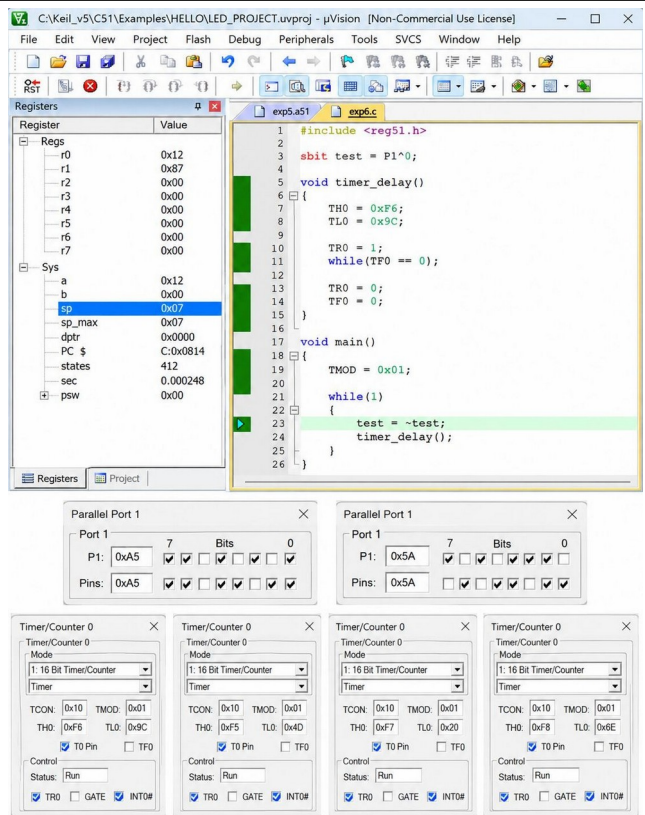
EXP NO.6**DATE: 18.09.26****8051 C PROGRAMMING FOR TIMER****(a) 8051 Timer Mode 1 with Delay****AIM:**

To write and execute an 8051 C program using Timer 0 in Mode 1 to generate a delay and enable/disable a port pin.

ALGORITHM:

1. Start the program.
2. Define the port pin P1.0 as the test pin.
3. Configure Timer 0 in Mode 1 (16-bit timer mode).
4. Load the initial values into TH0 and TL0.
5. Start Timer 0.
6. Wait until the Timer 0 overflow flag TF0 is set.
7. Stop the timer and clear TF0.
8. Toggle the P1.0 pin.
9. Repeat the process continuously.

PROGRAM:

Program	Output
<pre>#include <reg51.h> sbit test = P1^0; void timer_delay() { TH0 = 0xFC; TL0 = 0x74; TR0 = 1; while(TF0 == 0); TR0 = 0; TF0 = 0; } void main() { TMOD = 0x01; while(1) { test = ~test; timer_delay(); } }</pre>	 The screenshot displays the Keil uVision IDE interface. The main window shows the C program code. The Registers window on the left shows the state of registers, with the Program Counter (PC) at 0x0814. The Project window on the right shows the compilation process. The Parallel Port 1 window at the bottom shows the pin configuration for Port 1, with P1.0 selected. The Timer/Counter 0 window at the bottom shows the timer mode (16-bit timer/counter) and control settings, including the TH0 and TL0 registers.

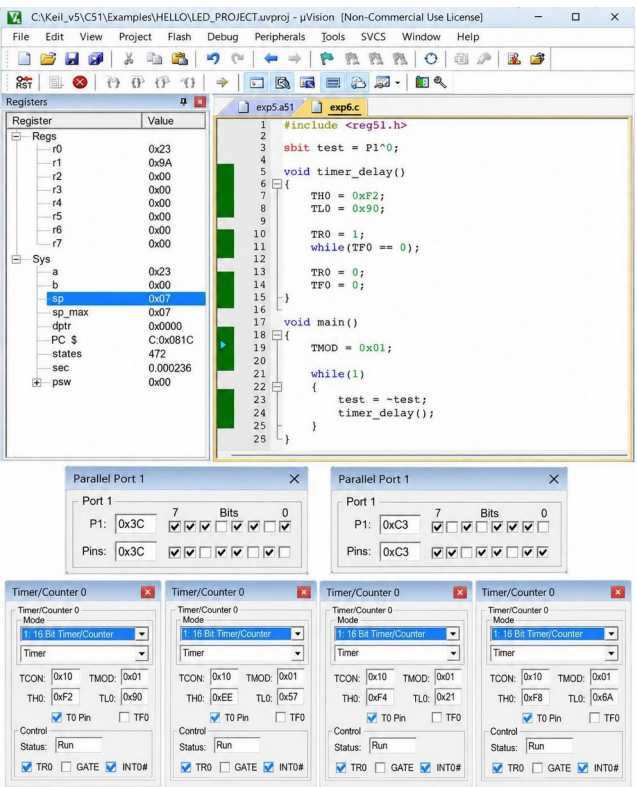
(b) Timer-Based Interrupt to Toggle Output Pin**AIM:**

To write and execute an 8051 C program using a timer-based interrupt to toggle an output pin at a fixed time interval.

ALGORITHM:

1. Start the program.
2. Define P1.0 as the output/test pin.
3. Configure Timer 0 in Mode 1.
4. Load TH0 and TL0 with the required initial values.
5. Enable the global interrupt.
6. Enable Timer 0 interrupt.
7. Start Timer 0.
8. When Timer 0 overflows, execute the interrupt service routine.
9. Toggle P1.0.
10. Reload TH0 and TL0.
11. Repeat the process continuously.

PROGRAM:

Program	Output
<pre>#include <reg51.h> sbit test = P1^0; void Timer_init(void) { TMOD = 0x01; TH0 = 0x4C; TL0 = 0x00; TR0 = 1; } void Timer0_ISR(void) interrupt 1 { test = ~test; TH0 = 0x4C; TL0 = 0x00; } int main(void) { EA = 1; ET0 = 1; Timer_init(); while(1); }</pre>	

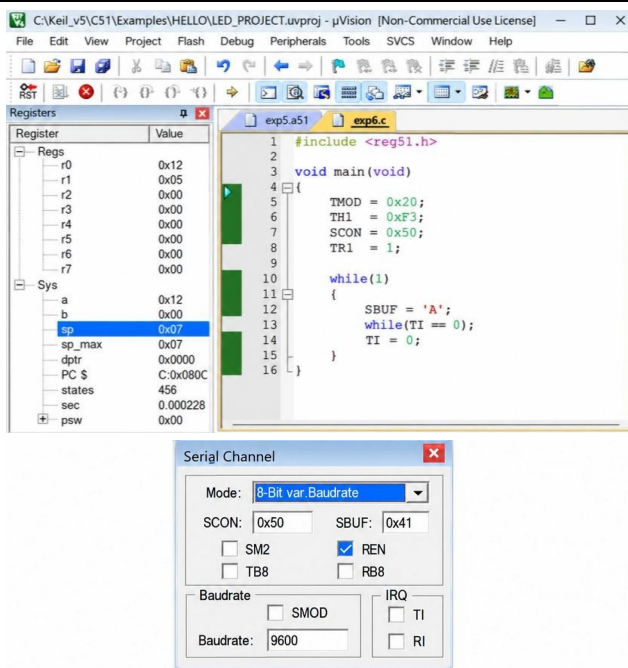
(c) UART Programming Using 8051**AIM:**

To write and execute an 8051 C program for Universal Asynchronous Receiver Transmitter (UART) to transmit a character serially.

ALGORITHM:

1. Start the program.
2. Configure Timer 1 in Mode 2 for baud-rate generation.
3. Load the required value into TH1.
4. Configure the serial control register SCON.
5. Start Timer 1.
6. Load the character to be transmitted into SBUF.
7. Wait until the transmission interrupt flag TI is set.
8. Clear the TI flag.
9. Repeat the transmission continuously.

PROGRAM:

Program	Output
<pre>#include <reg51.h> void main(void) { TMOD = 0x20; TH1 = 0xFA; SCON = 0x50; TR1 = 1; while(1) { SBUF = 'B'; while(TI == 0); TI = 0; } }</pre>	

RESULT:

Thus, the 8051 C programs were successfully implemented for timer delay and port toggling, timer-based interrupt, and UART serial data transmission.

EXP NO.7	8051 C PROGRAMMING FOR PORT HANDLING OPERATIONS
DATE: 25.09.26	

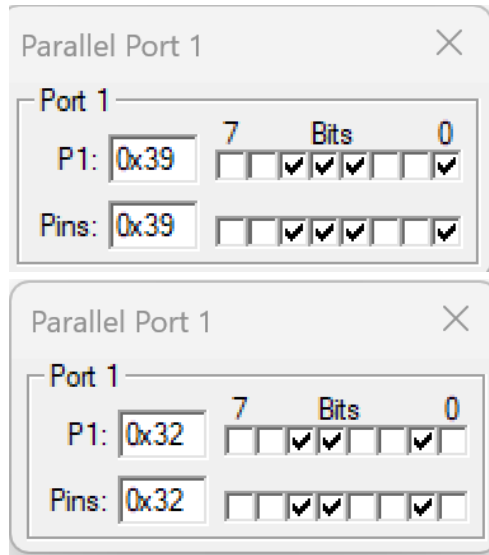
(a) To Display ASCII Number in a Port**AIM:**

To write and execute 8051 C programs that display an ASCII number through a port, perform I/O port programming with a delay, and toggle between two or more I/O ports.

ALGORITHM:

1. Begin the program.
2. Include the header file REG51.H.
3. Declare the variables x and y.
4. Load the hexadecimal number 29H into the variable mb.
5. Separate the lower nibble using mb & 0x0F.
6. Add 30H to change the lower nibble into its ASCII value.
7. Send the result to Port 1.
8. Separate the upper nibble using mb & 0xF0.
9. Shift the upper nibble four bits to the right.
10. Add 30H to get its ASCII value.
11. Send the result to Port 1.
12. Repeat the steps continuously.

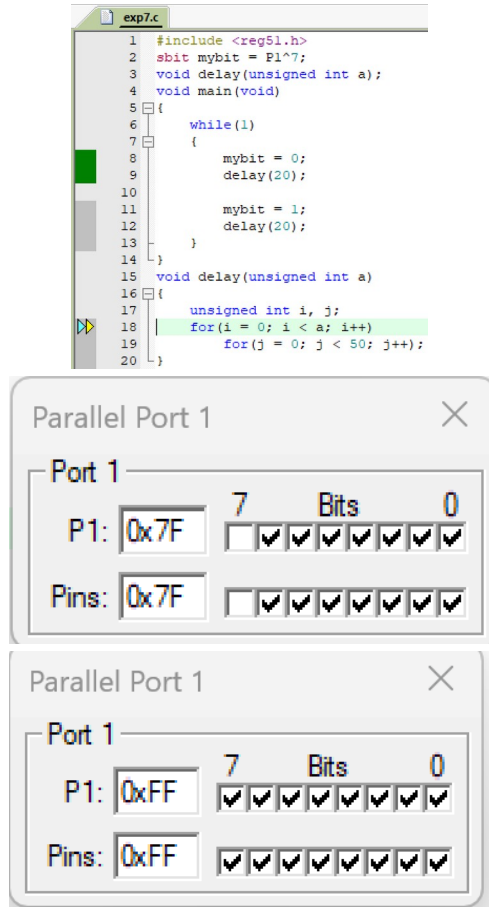
PROGRAM:

Program	Output
<pre>#include<reg51.h> void main(void){ while(1){ unsigned char x,y; unsigned char mb = 0x29 ; x = mb &0x0F; P1 = x 0x30; y = mb & 0xF0; y = y >>4; P1 = y 0x30;}}</pre>	

(b) I/O Port Programming with Delay**ALGORITHM:**

1. Begin the program.
2. Include the header file REG51.H.
3. Define P1.7 as the bit mybit.
4. Write a delay function.
5. Clear mybit to 0.
6. Call the delay function.
7. Make mybit equal to 1.
8. Call the delay function once more.
9. Repeat this process in an endless loop.
10. Watch Port 1 bit 7 toggle in the simulator.

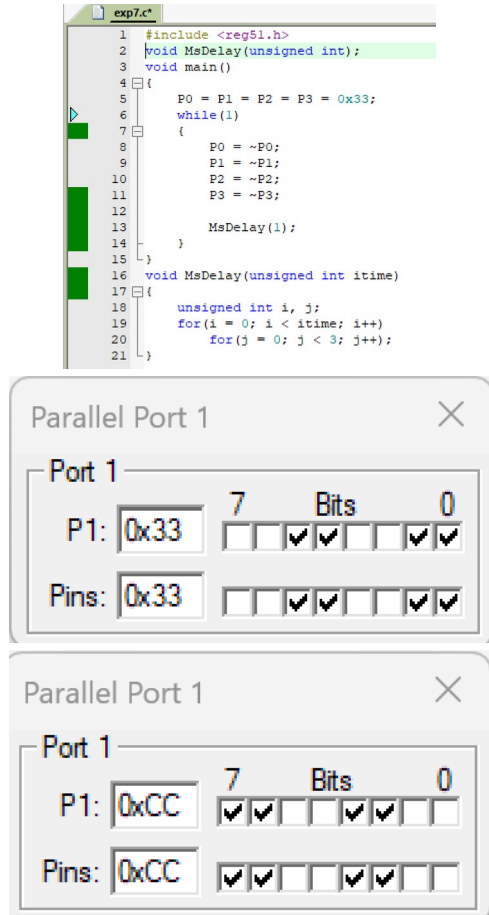
PROGRAM:

Program	Output
<pre>#include <reg51.h> sbit mybit = P1^7; void delay(unsigned int a); void main(void) { while(1) { mybit = 0; delay(20); mybit = 1; delay(20); } } void delay(unsigned int a) { unsigned int i, j; for(i = 0; i < a; i++) for(j = 0; j < 50; j++); }</pre>	 The output section displays the C program code and two screenshots of the Parallel Port 1 window. The first screenshot shows the Port 1 value as 0x7F and Pins as 0x7F. The second screenshot shows the Port 1 value as 0xFF and Pins as 0xFF, indicating a toggle in bit 7.

(c) 8051 I/O Port Programming to Toggle Between Two or More Ports**ALGORITHM:**

1. Begin the program.
2. Include the header file REG51.H.
3. Initialize Port 0, Port 1, Port 2 and Port 3 with 33H.
4. Invert the contents of Port 0.
5. Invert the contents of Port 1.
6. Invert the contents of Port 2.
7. Invert the contents of Port 3.
8. Add a short delay.
9. Repeat this process in an endless loop.
10. Observe that the ports alternate between 33H and CCH.

PROGRAM:

Program	Output
<pre>#include <reg51.h> void MsDelay(unsigned int); void main() { P0 = P1 = P2 = P3 = 0x33; while(1) { P0 = ~P0; P1 = ~P1; P2 = ~P2; P3 = ~P3; MsDelay(1); } } void MsDelay(unsigned int itime) { unsigned int i, j; for(i = 0; i < itime; i++) for(j = 0; j < 3; j++); }</pre>	 The output section shows a code editor window with the program code and two screenshots of the 'Parallel Port 1' output window. The first screenshot shows the port value P1 as 0x33 and Pins as 0x33, with bits 0-3 checked. The second screenshot shows the port value P1 as 0xCC and Pins as 0xCC, with bits 0-3 checked, demonstrating the toggle operation.

RESULT:

Thus, the 8051 C programs for displaying an ASCII number, I/O port programming with delay and toggling of multiple I/O ports were executed successfully and the expected port outputs were obtained.

EXP NO.8	8051 C PROGRAMMING FOR INTERFACING LED
DATE: 09.10.26	

A. 8051 Programming to Blink the LED with Delay**AIM:**

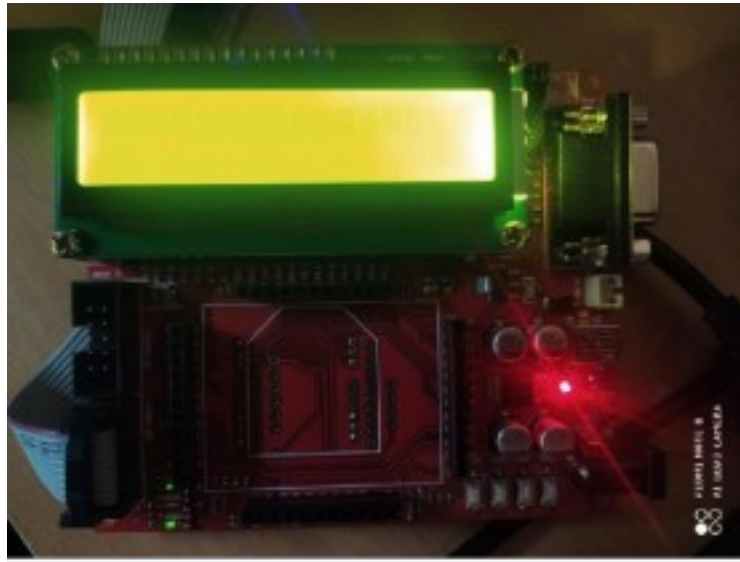
To interface LEDs with the 8051 microcontroller and blink them with a time delay.

PROCEDURE:

1. Create a new project.
2. Select the microcontroller Atmel → AT89C52.
3. Enter the source code.
4. Save the program.
5. Add the HEX file to the output.
6. Compile the program using Project → Build Target / F7.
7. The HEX file will be generated in the project folder.

PROGRAM:

```
#include <REGX52.H>
#define LED1 P1_5
#define LED2 P1_4
#define LED3 P1_3
void delay(unsigned int count);
void main()
{
    while(1)
    {
        LED1 = 0;
        LED2 = 1;
        LED3 = 0;
        delay(50);
        LED1 = 1;
        LED2 = 0;
        LED3 = 0;
        delay(50);
    }
}
void delay(unsigned int count)
{
    int x, y;
    for(x = 0; x < count; x++)
        for(y = 0; y < 1275; y++);
}
```

OUTPUT:**BEFORE EXECUTION:****AFTER EXECUTION:****B. LED with Switch Control****AIM:**

To operate the LEDs through switches connected to the 8051 microcontroller and produce a beep whenever a switch is pressed.

ALGORITHM:

1. Start the program.
2. Include the required header file and define the ports for LEDs, switches and beep.
3. Run an infinite while loop for continuous switch monitoring.
4. Check whether a particular switch is pressed.
5. When a switch is pressed, produce a beep for a short delay and switch ON the corresponding LED.
- 6.

PROGRAM:

```
#include <REGX52.H>
#define EN P1_0
#define RS P1_2
```

```

#define SW1 P2_0
#define SW2 P2_1
#define SW3 P2_2
#define beep P1_6
#define LED0 P1_5
#define LED1 P1_4
#define LED2 P1_3
void delay(unsigned int count);
void main()
{
    while(1)
    {
        if(SW1 == 0)
        {
            while(!SW1);
            beep = 0;
            delay(25);
            beep = 1;
            LED0 = 0;
            LED1 = 1;
            LED2 = 1;
        }
        if(SW2 == 0)
        {
            while(!SW2);
            beep = 0;
            delay(25);
            beep = 1;
            LED0 = 1;
            LED1 = 0;
            LED2 = 1;
        }
        if(SW3 == 0)
        {
            while(!SW3);
            beep = 0;
            delay(25);
            beep = 1;
            LED2 = 0;
            LED1 = 1;
            LED0 = 1;
        }
    }
}
void delay(unsigned int count)
{

```

```
int x, y;  
for(x = 0; x < count; x++)  
    for(y = 0; y < 1275; y++);  
}
```

OUTPUT:**LED1****LED2****LED3****RESULT**

Thus, the 8051 C program for LED interfacing was executed and verified successfully.

EXP NO.9	8051 C PROGRAMMING FOR INTERFACING LCD
DATE: 09.10.26	

A. 8051 C programming to interface with LCD and display the given input

AIM:

To interface an LCD with the 8051 microcontroller, display the given text, and show different messages on the LCD according to the switch pressed.

ALGORITHM:

1. Start the program.
2. Include the required header file and define the LCD data port, EN, RS and RW pins.
3. Initialize the LCD using the required commands.
4. Send the required text to the LCD.
5. Run the program continuously.
6. Stop the program.

HEXCODE COMMANDS:

30 1 Line, 5x7 matrix
 38 2 lines and 5x7 matrix
 01 Clear display screen
 06 Increment cursor (shift cursor to right)
 0C Display on, cursor off
 80 Force cursor to beginning (1st line)
 C0 Force cursor to beginning (2nd line)

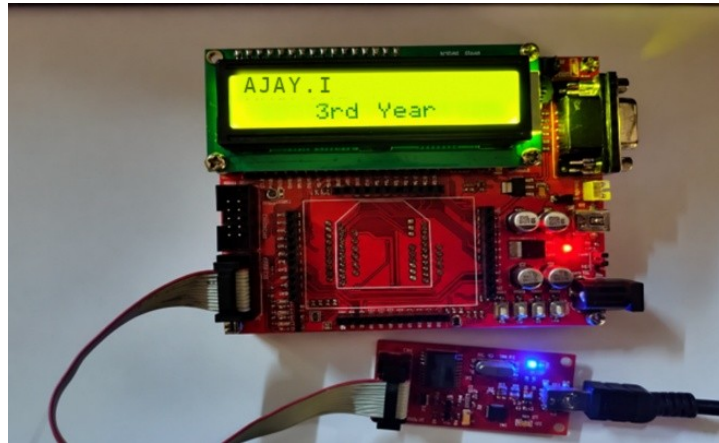
PROGRAM:

```
#include <REGX52.H>
#define LCD_PORT P0
#define EN P1_0
#define RS P1_2
#define RW P1_1
void lcd_initial(void);
void lcd_command(char);
void lcd_data(char);
void lcd_display(unsigned char, const char *);
void delay(unsigned int);
void main()
{
    lcd_initial();
    lcd_display(0x80, "AJAY.I");
    lcd_display(0xC0, "3rd Year");
    while(1);
}
void lcd_initial(void)
{
    lcd_command(0x30);
    lcd_command(0x30);
```

```

        lcd_command(0x30);
        lcd_command(0x38);
        lcd_command(0x01);
        lcd_command(0x06);
        lcd_command(0x0C);
        lcd_command(0x80);
    }
    void lcd_command(char value)
    {
        RW = 0;
        RS = 0;
        EN = 1;
        LCD_PORT = value;
        delay(1);
        EN = 0;
    }
    void lcd_data(char value)
    {
        RW = 0;
        RS = 1;
        EN = 1;
        LCD_PORT = value;
        delay(1);
        EN = 0;
    }
    void lcd_display(unsigned char locn, const char *dat)
    {
        lcd_command(locn);
        while(*dat != '\0')
        {
            lcd_data(*dat);
            dat++;
        }
    }
    void delay(unsigned int count)
    {
        int x, y;
        for(x = 0; x < count; x++)
            for(y = 0; y < 1275; y++);
    }

```

OUTPUT:**B. LCD WITH SWITCH CONTROL****AIM:**

To interface an LCD with the 8051 microcontroller and show a different message for each switch that is pressed.

ALGORITHM:

1. Start the program.
2. Include the required header file and define LCD, switch, EN, RS, RW and buzzer pins.
3. Initialize the LCD.
4. Display "Press Any Switch" initially.
5. Continuously check the switches.
6. If SW1 is pressed, display "Pressed Switch 1".
7. If SW2 is pressed, display "Pressed Switch 2".
8. If SW3 is pressed, display "Pressed Switch 3".
9. Stop the program. MCP record from Exp 7

PROGRAM:

```
#include <REGX52.H>
#define LCD_PORT P0
#define EN P1_0
#define RS P1_2
#define RW P1_1
#define SW1 P2_0
#define SW2 P2_1
#define SW3 P2_2
#define beep P1_6
void Lcd_Initial(void);
void lcd_command(char);
void lcd_data(char);
void lcd_display(unsigned char, const char *);

void delay(unsigned int);
void main()
{
    P2 = 0x07;
    Lcd_Initial();
```

```

    lcd_display(0x80, "Press Any Switch");
    delay(100);
    while(1)
    {
        if(SW1 == 0)
        {
            while(!SW1);
            beep = 0;
            delay(25);
            beep = 1;
            lcd_display(0x80, "Pressed Switch 1");
        }
        if(SW2 == 0)
        {
            while(!SW2);
            beep = 0;
            delay(25);
            beep = 1;
            lcd_display(0x80, "Pressed Switch 2");
        }
        if(SW3 == 0)
        {
            while(!SW3);
            beep = 0;
            delay(25);
            beep = 1;
            lcd_display(0x80, "Pressed Switch 3");
        }
    }
}

void Lcd_Initial(void)
{
    lcd_command(0x30);
    lcd_command(0x30);
    lcd_command(0x30);
    lcd_command(0x38);
    lcd_command(0x01);
    lcd_command(0x06);
    lcd_command(0x0C);
}

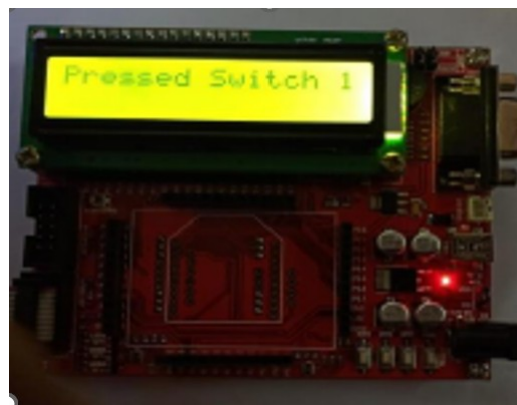
void lcd_command(char value)
{
    RW = 0;
    RS = 0;
    EN = 1;
    LCD_PORT = value;
    delay(1);
}

```

```

    EN = 0;
}
void lcd_data(char value)
{
    RW = 0;
    RS = 1;
    EN = 1;
    LCD_PORT = value;
    delay(1);
    EN = 0;
}
void lcd_display(unsigned char locn, const char *dat)
{
    lcd_command(locn);
    while(*dat != '\0')
    {
        lcd_data(*dat);
        dat++;
    }
}
void delay(unsigned int count)
{
    int x, y;
    for(x = 0; x < count; x++)
        for(y = 0; y < 1275; y++);
}

```

OUTPUT:



\

RESULT:

Thus, the 8051 C programs for LCD interfacing and for LCD with switch control were executed and verified successfully.

EXP NO.10	ARM7 PROGRAMMING FOR LED AND LCD INTERFACE
DATE: 16.10.26	

A. Interfacing ARM7 with LED using LPC2148.

AIM:

To demonstrate the interfacing of an LED and an LCD with the ARM7 LPC2148 processor, to control the LED and to display the given text on the LCD.

PROCEDURE:

1. Create a new project.
2. Select ARM → ARM7.
3. Enter the source code.
4. Save the program.
5. Add the source code to the target.
6. Compile and build the target.
7. Generate the HEX file.
8. Add the HEX file to the LPC2000 Flash Utility.
9. Transfer the HEX file to the ARM processor.
10. End the program.

PROGRAM:

```
#include <lpc21xx.h>

void delay(unsigned long val);

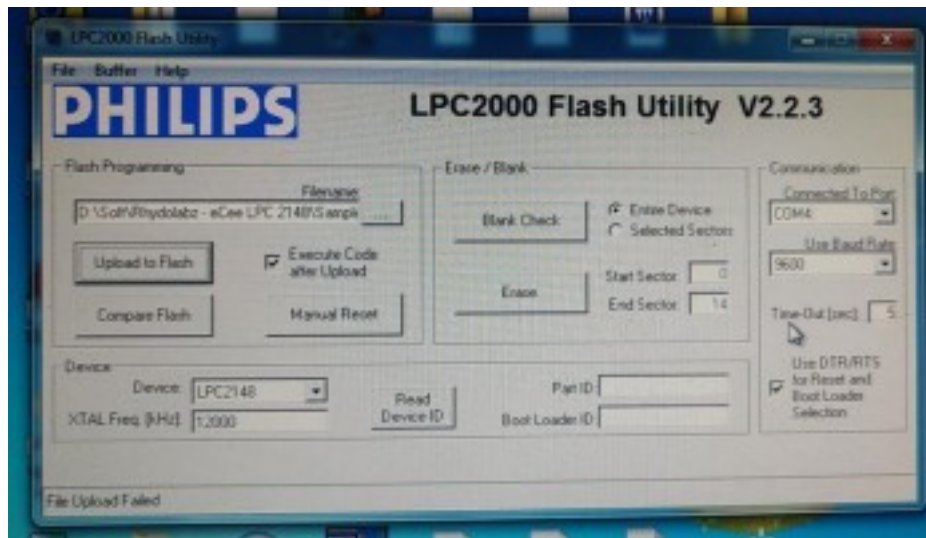
int main()
{
    IO1DIR = 0x00FF0000;

    while(1)
    {
        IO1SET = 0x00FF0000;
        delay(1000000);

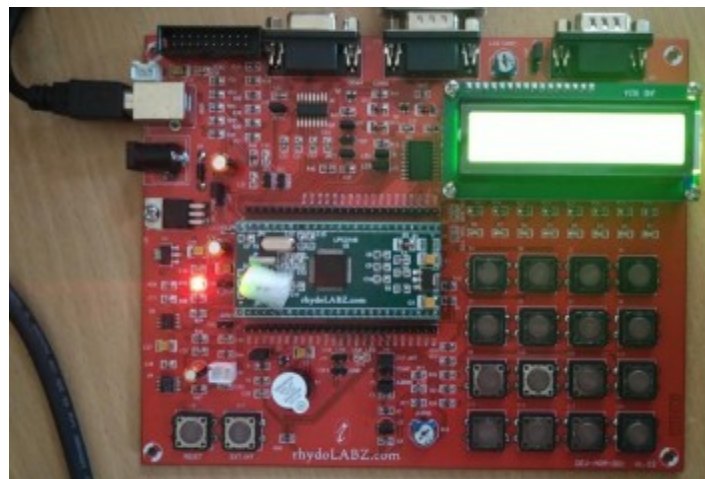
        IO1CLR = 0x00FF0000;
        delay(1000000);
    }
}

void delay(unsigned long val)
{
    while(val > 0)
        val--;
}
```

PHILIPS LPC2000 FLASH UTILITY



OUTPUT:



B. ARM7 Programming for LCD Interface

AIM:

To interface an LCD with the ARM7 LPC2148 processor and display the given text on it.

PROCEDURE:

1. Create a new project.
2. Select ARM → ARM7.

3. Enter the source code.
4. Save the program.
5. Add the source code to the target.
6. Compile and build the target.
7. Generate the HEX file.
8. Add the HEX file to the LPC2000 Flash Utility.
9. Transfer the HEX file to the ARM processor.
10. End the program. MCP record from Exp 7

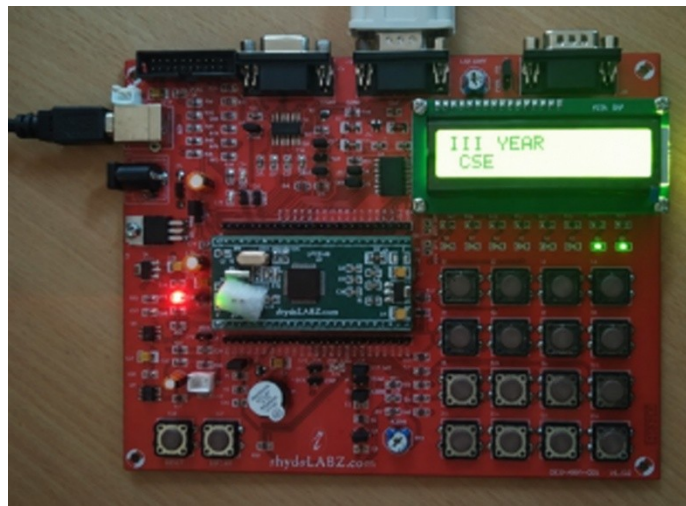
PROGRAM:

```
#include <LPC21xx.h>
#include "lcd4bit.h"
void Delay(unsigned long b)
{
    while(--b != 0);
}
void write_command(int cmd)
{
    IO1CLR |= 0x00f00000;
    IO1CLR |= 0x00040000;
    IO1CLR |= 0x00020000;
    IO1SET |= 0x00f00000 & cmd;
    IO1SET |= 0x00080000;
    Delay(30000);
    IO1CLR |= 0x00080000;
}
void write_data(int dat)
{
    IO1CLR |= 0x00f00000;
    IO1CLR |= 0x00040000;
    IO1SET |= 0x00020000;
    IO1SET |= 0x00f00000 & dat;
    IO1SET |= 0x00080000;
    Delay(30000);
    IO1CLR |= 0x00080000;
}
void lcd_data(char dat)
{
    write_data(dat << 16);
    write_data(dat << 20);
}
void lcd_command(char cmd)
{
    write_command(cmd << 16);
    write_command(cmd << 20);
}
void printlcd(char *CPtr)
```

```
{
    while(*CPtr != '\0')
    {
        lcd_data(*CPtr);
        CPtr++;
        Delay(20000);
    }
}

void init_lcd(void)
{
    IO1DIR |= 0x00FE0000;
    Delay(200000);
    write_command(0x30 << 16);
    Delay(100000);
    write_command(0x30 << 16);
    Delay(100000);
    write_command(0x30 << 16);
    Delay(100000);
    write_command(0x20 << 16);
    lcd_command(0x01);
    lcd_command(0x06);
    lcd_command(0x0c);
    lcd_command(0x80);
}

int main(void)
{
    init_lcd();
    printlcd("eCee LPC2148 DLB");
    lcd_command(0xC0);
    printlcd(" rhydolabz.com ");
    while(1);
}
```

PHILIPS LPC2000 FLASH UTILITY:**OUTPUT:****RESULT:**

Thus, the ARM7 programs for LED and LCD interfacing were executed and verified successfully.

EXP NO.11	ARM7 PROGRAMMING FOR BUZZER INTERFACE
DATE: 16.10.26	

AIM:

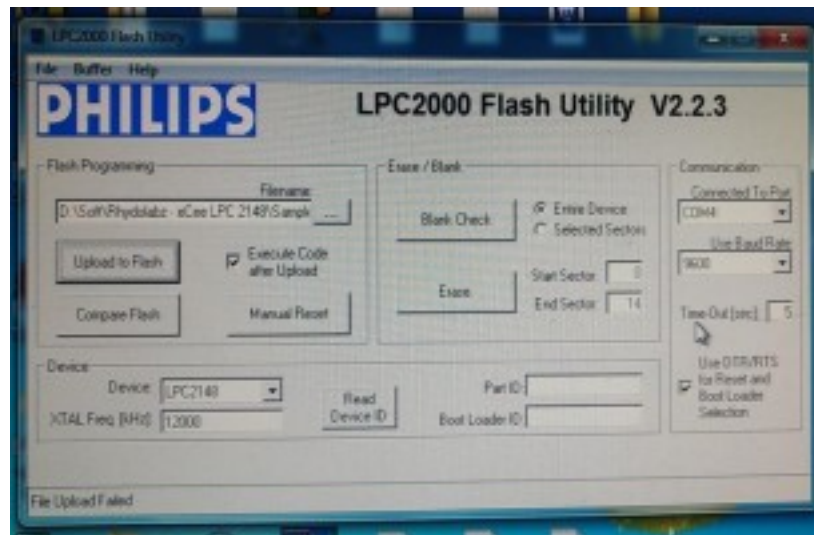
To demonstrate how a buzzer is interfaced with the ARM7 processor.

PROCEDURE:

1. Create a new project.
2. Select ARM → ARM7.
3. Enter the source code.
4. Save the program.
5. Add the source code to the target.
6. Compile and build the target.
7. Generate the HEX file.
8. Add the HEX file to the LPC2000 Flash Utility.
9. Transfer the HEX file to the ARM processor.
10. End the program.

PROGRAM:

```
#include <lpc21xx.h>
void ext_interrupt(void) irq
{
    EXTINT = 0X02;
    IO0PIN = (IO0PIN ^ 0X00010080) & 0X00010080;
    VICVectAddr = 0x00000000;
}
void init_ext(void)
{
    PINSEL0 |= 0X20000000;
    EXTMODE = 0X02;
    EXTPOLAR = 0X02;
    VICVectAddr0 = (unsigned int)ext_interrupt;
    VICVectCntl0 = 0x0000002F;
    VICIntEnable = 0x00008000;
}
int main(void)
{
    IO0DIR = 0X00010080;
    init_ext();
    while(1);
}
```

PHILIPS LPC2000 FLASH UTILITY**OUTPUT:****RESULT:**

Thus, the ARM7 program for buzzer interfacing was executed and verified successfully.

EXP NO.12	ARM7 PROGRAMMING FOR TIMER CONTROLLING OPERATION
DATE: 23.10.26	

AIM:

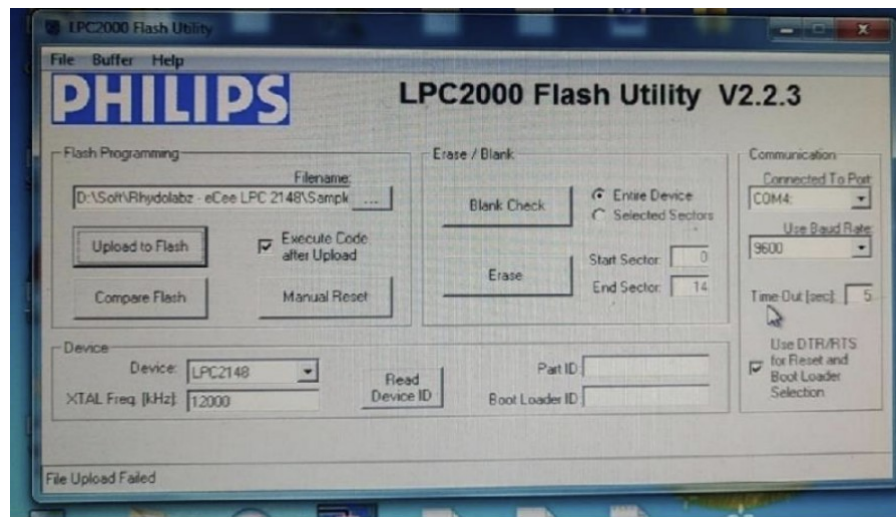
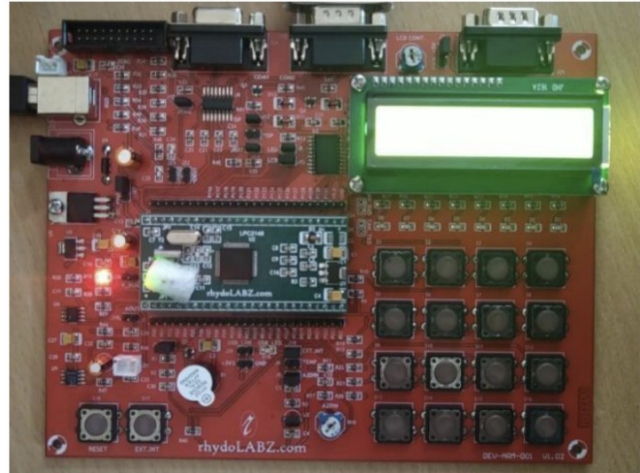
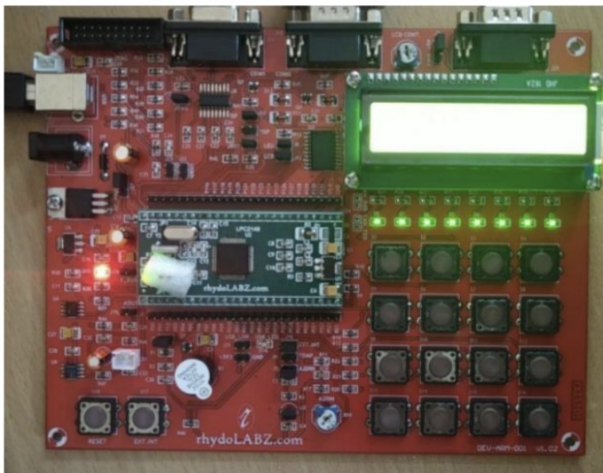
To demonstrate LED blinking with the help of a Timer of the ARM7 processor.

PROCEDURE:

1. Create a new project.
2. Select ARM → ARM7.
3. Enter the source code.
4. Save the program.
5. Add the source code to the target.
6. Compile and build the target.
7. Generate the HEX file.
8. Add the HEX file to the LPC2000 Flash Utility.
9. Transfer the HEX file to the ARM processor.
10. End the program.

PROGRAM:

```
#include <lpc21xx.h>
void timer0_delay_ms(unsigned int ms)
{
    T0TCR = 0x02;
    T0PR = 14999;
    T0TCR = 0x01;
    while (T0TC < ms);
    T0TCR = 0x00;
}
int main(void)
{
    IO0DIR = 0x00000080;
    while (1)
    {
        IO0SET = 0x00000080;
        timer0_delay_ms(500);
        IO0CLR = 0x00000080;
        timer0_delay_ms(500);
    }
}
```

PHILIPS LPC2000 FLASH UTILITY:**OUTPUT:****RESULT:**

Thus, the ARM7 program for LED blinking using the Timer was executed and verified successfully.