Revision 4

Page 1/14 Quartus Tutori

Quartus Tutorial with Basic Graphical Gate Entry and Simulation (Last verified for Quartus II Web Edition 15.0)

Contents

I. Creating a Project in Quartus2	2
A. New Project Design Creation2	2
B. Configuring Quartus Window2	2
II. Designing	2
A. Creating a <i>BDF</i>	
B. Adding Text	2
C. Component Selection Process and Moving Components3	3
D. Adding/Deleting Wires4	1
E. Adding Input & Output Ports5	5
F. Compiling6	5
G. Functional Compiling6	5
III. Simulating6	5
A. Creating a VWF (Vector Waveform)6	5
B. Adding signals7	7
C. Changing Grid Size and End Time7	7
D. Manually Changing VWF7	7
E. Functional and Timing Simulation8	3
F. Grouping Signals and Using Count Value and Clock Value9)
IV. Programming11	1
A. Importing Pin Assignments11	l
B. Assigning pins using Pin Planner12	2
C. Tri-stating unused pins13	3
D. Programming	3
E. Exporting Pin Assignments14	1
D. Deleting Pin Assignments14	
V. Archiving Your Project14	1
A. Archiving your project into a qar file14	1

Revision 4

28-Sep-16

Page 2/14

Quartus Tutorial with Basic Graphical Gate Entry and Simulation (Last verified for Quartus II Web Edition 15.0)

Example Problem

Given the logic equation Y = A*/B + /C, implement this equation using a two input AND gate, a two input OR gate and two inverters under the Quartus environment. Upon completion of the schematic entry portion of the example, simulate the circuit and print out copies of the circuit & simulation results. **Draw a Logic Table and Voltage Table (in counting order) for the inputs & output** and you will later compare it with the simulation results. Assume A, B, C, and Y are active high signals so your voltage table will look identical to your truth table but instead of 0s there will be Ls and instead of 1s there will be Hs.

I. Creating a Project in Quartus

A. New Project Design Creation

- 1. Setup a local 'lab1_ex' directory on your PC to hold your design & simulation files.
- 2. Launch the Altera Quartus software under Windows.
- 3. Open the New Project Wizard by selecting the New Project Wizard icon or by selecting "File" and "New Project Wizard ...". Select "Next" (feel free to check the "Don't show me this introduction again" box).
- 4. Under "What is the working directory for this project", use the "..." button to browse and select the directory you created in step number 1.
- 5. Under "What is the name of this project", name the project lab1_ex. (This may already be done for you. This should also make the top-level design entity name lab1_ex. If not, again type in lab1_ex.) Select "Next", "Next", "Next". (Note that dashes should NOT be used in file names. The simulator has a problem with dashes.)
- 6. Change the "Family" under "Device family" to MAX V. Under Available Devices select "5M570ZT100C5".
- 7. Select the pull-down button "File" and "New | Device Design Files | Block Diagram/Schematic File". Press OK. This should open a palette (called a bdf) where you will design your circuit. Select "Finish".

B. Configuring Quartus Window

- 1. Select "View" and "Utility Windows". Make sure "Project Navigator", "Messages", and "Tasks" are selected.
- 2. Select "Tools" and "Customize." Make sure "File", "Standard" and "Applications" are selected.

II. Designing

A. Creating a BDF

- 1. Create a new bdf by selecting the bdf button or by selecting "File", "New", "Block Diagram/Schematic File", and "OK".
- 2. Remove the grid dots by selecting "View" and "Show Guidelines".
- 3. Select "File" and "Save As". Save your bdf as "lab1_ex" in your lab1_ex" project director. The file will be given the bdf extension; bdf stands for "block design file" and contains schematics, symbols or block diagrams.

B. Adding Text

- 1. Select the "A" in the toolbar of your bdf window.
- 2. Select a point near the top left in the window with the left mouse key. Type your "Name:" followed by your first and last name, and then hit the "Enter" key.



Name: Tim Tebow

Section #: 3701

TA Name: Alli Gator

Description: Y = A/B + /C

Lab 1 Part 1

Department of Electrical & Computer Engineering

Revision 4

28-Sep-16

Quartus Tutorial with Basic Graphical Gate Entry and Simulation Page 3/14 (Last verified for Quartus II Web Edition 15.0)

3. Type "Lab # Part #", where # is replaced by that week's lab number and the lab part number respectively and then hit the "Enter" key.

4. Type your "Section Number: ####" and then hit the "Enter" key.

5. Type "TA Name:", followed by your TA's first and last name. Hit the "Enter" key.

Sample bdf heading "Description:" followed by an appropriate description. In this case type the following equation, "Y = A * /B + /C," and then hit the "Enter" key.

7. Hit the "Esc" (escape) key to end text additions.

8. If your text is getting clipped off/cut off, this may be due to a resolution issue. Go to this website for instructions on fixing resolution issues.

http://mil.ufl.edu/3701/docs/quartus/quartus15.0 Display Issues.pdf


C. Component Selection Process and Moving Components

- 1. With your mouse pointing inside the bdf, double-click (or click the right mouse key and select "Insert and Symbol"). The "Symbol" dialog box will appear. This window lists the available Altera libraries.
- 2. Select the + icon to expand the "/altera/15.0/quartus1/libraries" folder.
- 3. Select the + icon to expand the "primitives" folder and then expand the "logic" folder.
- 4. In the logic folder, select the "and2" component by double clicking on it (or by selecting it with a single click, then selecting "OK").
- 5. Click the pointer at the desired location in the bdf to insert the AND symbol into the design
- 6. Repeat step 1 to place an OR (OR2) gate. This time type "OR2" into the box under "Name:" and press "OK".
- 7. Place the OR symbol into the bdf.
- 8. Repeat step 1 to place two Level-Shifter (not) gates. This time type "Not" into the box and click on the box next to "Repeat-insert mode".
- 9. Click the pointer at the desired location in the bdf to insert the NOT symbol into the design file. Now click on another desired location in the bdf to insert a second NOT symbol.
- 10. Hit the "Esc" (escape) key to end Repeat-insert mode.
- 11. Select the magnifying glass in the toolbar of your bdf window. Select a point in the window with the left mouse button. Notice that the image gets larger with the center of the enlargement at the point you selected. Now select a point in the window with the right mouse button. Notice that the image gets smaller with the center of the enlargement at the point you selected.
- 12. Hit the "Esc" (escape) key to end magnifying options or select the pointer symbol to return to selection mode.

Revision 4

Page 4/14 Quartus Tutorial with Basic Graphical Gate Entry and Simulation (Last verified for Quartus II Web Edition 15.0)

13. Rearrange your devices in approximately the placement you would like for the logic diagram you are trying to construct. You can move a component by selecting it with your mouse, and either holding down the left mouse button and moving it to another location on your bdf or using your up/down/left/right arrow keys. The window should look similar to the picture below.

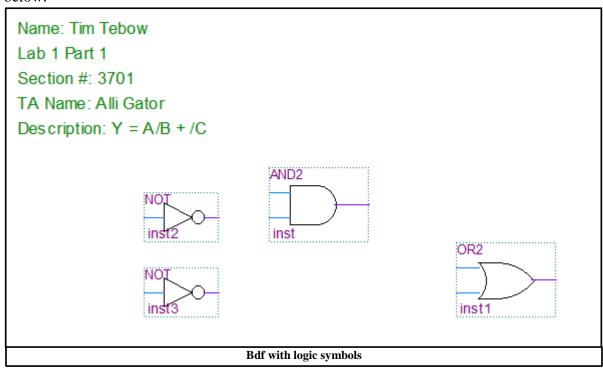


D. Adding/Deleting Wires

- 1. Save your design. You are now ready "wire up" your circuit. It is a good idea to save your design often, just in case something bad happens (like a Windows crash or a power outage).
- 2. Place your pointer on the output of one of the Level-Shifters and hold the left mouse button down. You should see a cross-hairs or "+" appear at the output.
- 3. Drag your pointer to the input of the AND gate. Every time you release the mouse key, the line (wire) ends. If your wire did not reach the AND gate, you can add to the wire by putting your mouse over an end of the wire and again selecting it with your left mouse button and dragging your mouse to another position.
- 4. To delete a wire or a portion of a wire, simply right click on the wire and select "Delete" or left click on the wire (it should change color to indicate selection) and press the delete key.
- 5. If wires are connected to the component as you are moving it, the wires will drag and stay connected to the component. This is referred to as 'rubber banding' and is a feature of all major schematic entry design packages.
- 6. Add the rest of the wires needed to connect the logic diagram. Add small input lines where the three inputs will be placed and an output line where the output will be placed. Your bdf should look similar to the picture on the next page.


Madison Emas, TA 28-Sep-16

Page 5/14 Quartus Tutorial with Basic Graphical Gate Entry and Simulation (Last verified for Quartus II Web Edition 15.0)

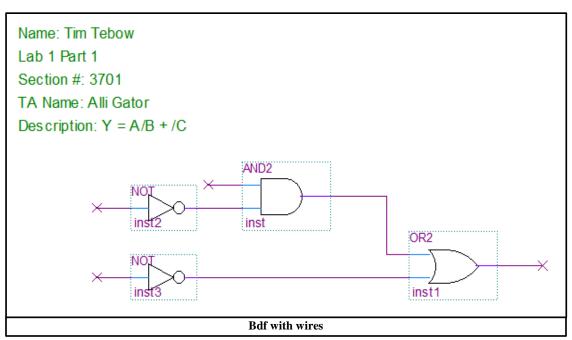

E. Adding Input & Output Ports

- 1. In the same manner that you placed a gate onto the bdf, add three input pins from the "Symbol" libraries. Input pins can be found under "primitives | pin | inputs". I would place these inputs together, above your logic diagram and just to the right of your name.
- 2. Double click on the first input pin name (on the left of the input port symbol) and change it to 'A'. Repeat these two steps to create input ports 'B' & 'C'.
- 3. In the same manner and in the same library that you found the input pins, add an output pin from the "Symbol" library. I put this output pin under and to the right of the input pins. Change the pin name to 'Y' on the output port.
- 4. Now select the top wire near the left most point where you would like to connect signal A. The wire should change colors. Type "A." An "A" should appear near the point you selected.
- 5. Do the same to place "B", "C" and "Y" at the appropriate points.
- 6. The "A" label will connect the input labeled "A" to this wire. Similar connections are made by the labels on the other inputs and output. The bdf should look similar to the picture below.

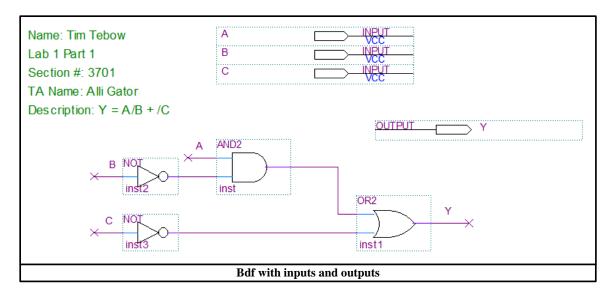

Revision 4

Quartus Tutorial with Basic Graphical Gate Entry and Simulation (Last verified for Quartus II Web Edition 15.0)

7. Save your design. You are now ready to proceed to simulation of the circuit.

F. Compiling


Page 6/14

- 0. See "Functional Compiling" below.
- 1. To compile your design, click on the purple triangle button or double click on "Compile Design" in the task utility window or select "Processing" and then "Start Compilation". Your task utility window should be similar to the image below.



2. Notice that the Messages Utility Bar on the bottom of the Quartus window says "Quartus II Full Compilation was successful. 0 errors, 11 warnings". You may have a different number of warnings. You can ignore most warnings. If you did something wrong, Quartus will not compile and will give you an error.

Note: Several common errors involve having floating (unconnected) inputs and outputs, shorts (possible locations where ground and power are connected), and top-level enity undefined (if this occurs click on

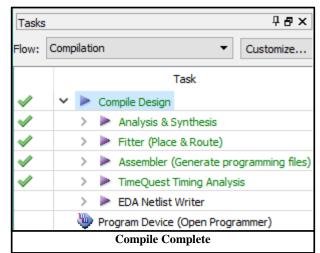

"Files" on the Project Navigator utility window, right click your bdf (in this case lab1_ex.bdf), and select "Set as Top-Level Entity").

Note: When using Quartus schematic entry (bdf) files as your circuit diagram for constructing circuits on your breadboard, always label the parts and pin numbers of the chip. If there are multiples of the same part needed, e.g., if you need five 2-input AND gates when the 74'08 only has four per chip, then label the two 74'08's differently, i.e., 08_A and 08_B.

G. Functional Compiling


To functionally compile your design takes **significantly less time** than the full compilation described above.

- 1. To functionally compile your design, double click the "Analysis & Synthesis" in the Compilation window shown here.
- 2. Since you have done a Functional Compiling, when you simulate, you can **ONLY** run a Functional Simulation (as described below).

III. Simulating

A. Creating a VWF (Vector Waveform)

- 1. Select "File" and "New". Under "Verification/Debugging Files" select "University Program VWF".
- 2. Save this file under the name "lab1_ex" with the default type of "University Program VWF (*.vwf)".

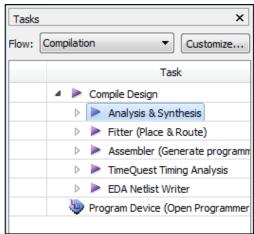

Functional Compile

3. Waveform Editor". Select this icon. (You could also go to "File | New | Verification/Debugging | Vector Waveform File" to open up the same waveform window.)

Revision 4


28-Sep-16

Page 7/14 Quartus Tutorial with Basic Graphical Gate Entry and Simulation (Last verified for Quartus II Web Edition 15.0)

4. Save this file: "File | Save". The file should be saved under the name lab1_ex with the extension vwf for "Vector Waveform File.

B. Adding signals

- 1. In the lab1_ex.vwf window, in the left side of the window (under "Name") double click with the left mouse button or click the right mouse button. The "Insert Node or Bus" window will appear. Select "Node Finder". Under "Filter" select "Pins: all" then select "List." Hit the >> button to copy all the nodes (inputs and outputs) to the "Selected Nodes" list on the right. Select "OK". Select "OK" again.
- 2. You should now see the inputs and outputs in the vector waveform file window. Save this file. The window should look something like below.

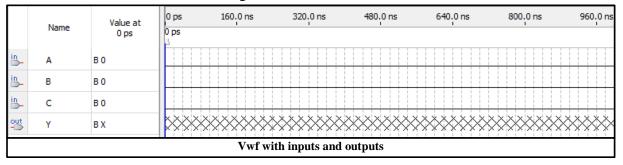

Special Note: The time scale is shown above is in increments of 10ns (ns = nano seconds). This is too small for our parts. Our parts have a propagation delay of 10ns, i.e., the output of the gates does not change until 10ns after the inputs change.

C. Changing Grid Size and End Time

- 1. Change the default grid size (which is 10ns by default) to 25ns (or more) by the following. Go to the "Edit" menu and select "Grid Size". Then change the Time period to 25.0ns.
- 2. Go to the "Edit" menu and select "End Time". Change the default time from 1.0us (1000ns) to 1.2us (1200ns). **NOTE:** When you increase the end time, Quartus simulation will pick signal values to fill up the total time. Be sure to review your inputs to verify that the simulation is doing what you want. **NOTE:** To avoid possible simulation issues, **ALWAYS INCREASE END TIME**. You may give it a new end time once you simulate at least once, but you should always increase the end time initially.

D. Manually Changing VWF


- 3. Use the magnifying glass to zoom in on the waveform window until you can see 50 ns intervals as seen in the image below.
- 4. Using your mouse (make sure the pointer is selected), click and drag your mouse cursor across 0 ns to 100 ns on input A to select the area. You should see that area highlighted blue (as seen from 0ns to 50ns in the image below). Now press the "1" button on the toolbar (or select "Edit", "Value", "Focing High (1)") to set this time as High.

Revision 4

28-Sep-16


Page 8/14 Quartus Tutorial with Basic Graphical Gate Entry and Simulation (Last verified for Quartus II Web Edition 15.0)

5. Using the same methods in the previous step, set the time period of 0ns to 50ns to Low by using the "0" button. Your vwf should look like the image below.

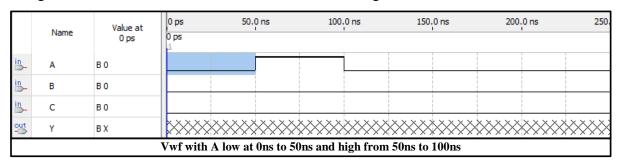

Special Note: Your simulation will match your **voltage** table (**not** your **truth** table). When you compare the outputs, you should verify it with the outputs of your **voltage** table and not your **truth** table. When you see a 0, it is **LOW**. When you see a 1, it is **HIGH**. Please do not get this confused.

6. Manually manipulate your signals to match the image below. Press Save.

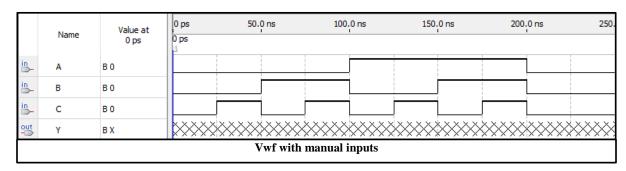

7. The inputs have now been defined and "count" or increment through the binary numbers 000 to 111 (ABC where A is the most significant bit and C is the least significant bit). We can now run the design simulation at this point. Note: The Y output is comprised of 'XXX' in the waveform editor to show that the output is presently undefined.

Note: There are better ways to input data then to enter each of the values you want by changing default inputs. See Section F

E. Functional and Timing Simulation


1. Select "File" and "Run Functional Simulation". You'll notice a Simulation Flow Progress window pop up then a new simulation window will open. It will look similar to your vwf except that it is read only. You cannot modify signals on this window.

Revision 4


28-Sep-16

Page 9/14 Quartus Tutorial with Basic Graphical Gate Entry and Simulation (Last verified for Quartus II Web Edition 15.0)

2. Zoom in on the window. You should see something similar to the image below.

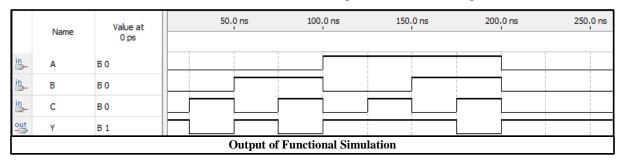

- 3. If you haven't created a logic and voltage table for the equation you entered under Quartus, do so now and compare these results with those obtained from simulation. Because the signals are assumed to be active high, the truth and voltage tables will look identical (with 0 and 1 replaced with L and H, respectively). Your simulation results from Quartus should match your voltage table.
 - For active-low signals, I suggest that you name your signals with a suffix of _L. For active-high signals, I suggest no suffix (or you could use _H). For example, if X is active-low and Z was active-high, use signal names X_L and Z.
 - When submitting screenshots for lab documents, take a screenshot of this window with the **simulated** output. Use a tool like snip tool or paint to annotate the simulation. Use arrows and text to describe what is occurring and demonstrate that you received the proper results.
- 4. Close the simulation window and select "Simulation" and "Run Timing Simulation". You'll again notice a Simulation Flow Progress window pop up and a new simulation window will pop up.
- 5. Zoom in on the window. You should see something similar to the image below.

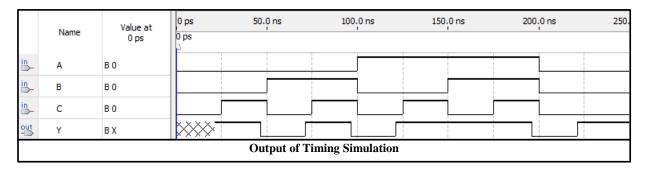

6. When comparing the results of the logic table with that of the simulator, it should be apparent that they match but that there is a small delay between when the inputs change and when the output changes to the expected value. For example, if we look at the time segment from 25 to 50 ns, we see that the inputs C change at 25 ns, but that Y does not change immediately. This delay is called the propagation delay of the device. This slight delay is due to the physical gate delay of the gates in the programmable logic device (PLD) required to implement the circuit. In other words, every gate in your circuit has a chunk of PLD hardware that is associated with it and an associated physical delay.

F. Grouping Signals and Using Count Value and Clock Value

1. You can group inputs by selecting several and then click the right mouse button, select "Grouping" and then select "Group." Group A, B, and C and name them "Inputs". Select the

Page 10/14

Department of Electrical & Computer Engineering


Revision 4

Quartus Tutorial with Basic Graphical Gate Entry and Simulation

(Last verified for Quartus II Web Edition 15.0)

radix (base you want to use, i.e., binary, hexadecimal, or octal). In this case you should stick to the default: binary. Press "Ok".

2. Click on the arrow next to Inputs to expand your group. You should see something similar to the image below.

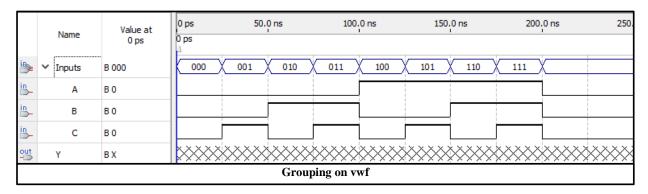

- 3. Click "Inputs" and press the "0" button to make all the inputs low.
- 4. Click "Inputs" and press the C button in the toolbar (or Select "Edit", "Value", "Count Value ..."). This will allow you to count up from a start value (in this case from 000 to 111). Leave the default "Start value" at 000 and the default "Increment by" at 1. At "Count occur", change it to 50 ns. Press Ok.
- 5. Zoom out on the window. Notice that "Inputs" automatically counts for the entire simulation. Press Save.
- 6. Perform a functional and timing simulation.
- 7. You can also use Clock value to generate a clock signal. The button looks like a stopwatch. You will use this later on in the semester. You can change the period, offset, and duty cycle.

Dr. Eric M. Schwartz Madison Emas, TA 28-Sep-16


Department of Electrical & Computer Engineering

Revision 4

Quartus Tutorial with Basic Graphical Gate Entry and Simulation (Last verified for Quartus II Web Edition 15.0)

IV. Programming

Page 11/14

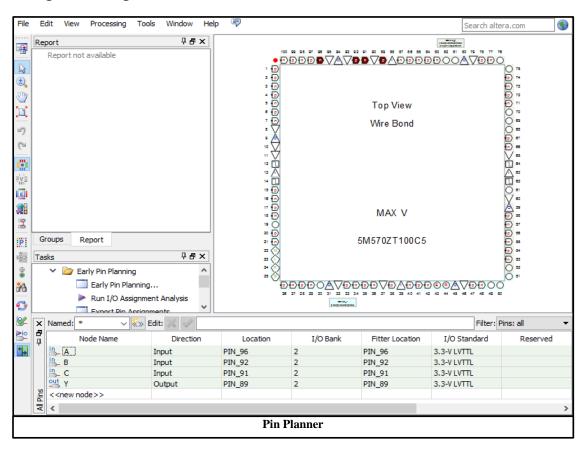

A. Importing Pin Assignments

- 1. Do **NOT** import pin assignments!
- 2. To program a device, you need to give your device pins. Your CPLD board only has access to 32 pins. To make sure you don't accidentally assign pins to the wrong location, you can import pin assignments to prevent you from damaging your CPLD.
- 3. To import assignments, select "Assignments" and "Import Assignments. Click the "..." and locate the "defaultPinAssignments.qsf" file. Press "Open". Press "Ok".
- 4. For more information go to:
 http://mil.ufl.edu/3701/docs/OOTB_MaxV/How%20to%20Import%20Pin%20Assignments.pdf


Revision 4

28-Sep-16

Page 12/14 Quartus Tutorial with Basic Graphical Gate Entry and Simulation (Last verified for Quartus II Web Edition 15.0)

B. Assigning pins using Pin Planner

1. To make sure you don't accidently assign pins to the wrong location, use only the pins shown in the below figure and table.

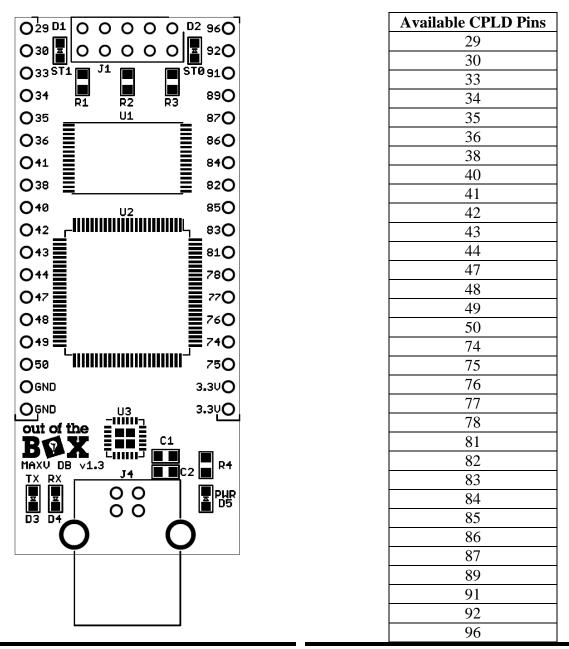

CPLD PCB top layer with available CPLD pins

Available CPLD pins

2. To program a device you need to give you device pins. Select "Assignments" and "Pin Planner". Under location, type in a pin number for A, B, C, and Y (in this case type in 96, 92, 91, and 89 respectively). Exit out of pin planner.


Page 13/14

Department of Electrical & Computer Engineering

Revision 4

Quartus Tutorial with Basic Graphical Gate Entry and Simulation (Last verified for Quartus II Web Edition 15.0)

3. Recompile and open your bdf. It should look similar to the image below.

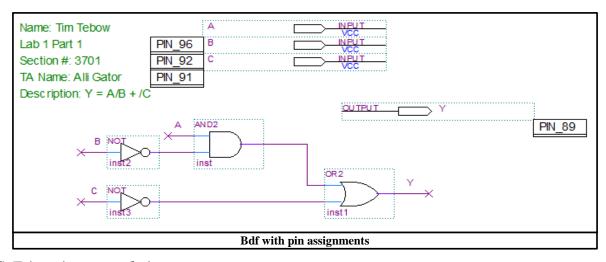


C. Tri-stating unused pins

- 1. In the default configuration, Quartus will program unused pins as outputs. The functions of these pins can be destroyed if they are connected as outputs. To prevent this from occurring, unused pins should be set as inputs and tri-stated.
- 2. In the "Assignment" menu select "Device"
- 3. Select "Device and Pin Options..."
- 4. Select the "Unused pins" tab and then select "As input tri-stated" Press "Ok". Press "Ok".

D. Programming

- 1. Make sure the driver is installed. Go to this website if you have not installed the driver. http://mil.ufl.edu/3701/docs/quartus/ByteBlaster/USB-Blaster_driver_install.pdf
- 2. Unless your breadboard is completely empty of wires and components, remove your CPLD board from your breadboard. This will prevent possible shorts.
- 3. Using your USB-B cable, connect your board to your computer. A green light should turn on (if you have a program already on your CPLD, 2 orange lights will also turn on).
- 4. Connect your USB-Blaster to your computer and to your CPLD board.
- 5. On quartus, select "Tools" and "Programmer".
- 6. Select "Hardware Setup" and then select (double-click on) USB-Blaster. If it does not show up make sure your USB-Baster is plugged into your computer and your driver is installed. Then press "Close". If you are on a mac using a virtual machine make sure your USB-blaster is connected to your virtual machine. Look in your settings machine virtual for something relating to **USB** Connection Preferences.
- 7. Make sure your mode is "JTAG".

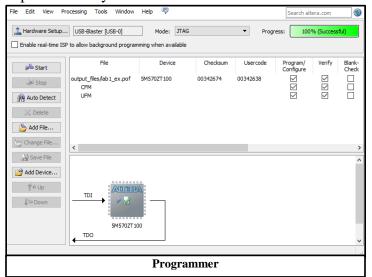

Page 14/14

Department of Electrical & Computer Engineering

Revision 4

Quartus Tutorial with Basic Graphical Gate Entry and Simulation

- (Last verified for Quartus II Web Edition 15.0)

 8. Select "Add File" and go to the "output files" directory. Select lab1 ex.pof. Press "Open".
- 9. Click the boxes under Program/Configure and Verify.
- 10. Press "Start". Progress should read "100% Successful." The 2 orange lights should now turn on. If under Progress it says "Failed", make sure your USB-Blaster is not plugged in backwards and make sure it is plugged into all the pins. If that is not the issue, check your soldering.
- 11. Remove the USB-Blaster and USB-B cable. Insert your CPLD into your breadboard. Do not plug in power until you wire it up.
- 12. To avoid having to repeat step 8 every time you program, you can save this configuration. Press "File" and "Save As". Name your file "lab1_ex".

E. Exporting Pin Assignments

- 5. Sometimes when you make multiple projects, you want to use the same pin assignments so you don't need to rewire the board. As long as you give the input and output pins the same names, you can easily do this by exporting the pin assignments from one project as a ".qsf" file and importing it to another project.
- 6. To export assignments, select "Assignments" and "Export Assignments". You may change the location you wish to save your qsf but do not change the name.
- 7. To import assignments, select "Assignments" and "Import Assignments. Click the "..." and locate the ".qsf" file. Press "Open". Press "Ok". If you have any additional pins that was not in your original file, go to pin planner and give those pins location. If there are pins that are not in the new project, they will be ignored. Recompile.

D. Deleting Pin Assignments

1. To delete Pin Assignments, select "Assignments" and "Remove Assignments". Check "Pin, Location & Routing Assignments" and Press "OK". Recompile.

V. Archiving Your Project

A. Archiving your project into a gar file

- 1. Archiving a project will save the relevant project files into a single compressed file. In the "Project" menu, select "Archive Project..."
- 2. Change the archive name, if necessary, and select "Archive." The archive file will have the file name extension qar, e.g., the file name might be "Lab6_part1.qar."