


1

CLEAR AREA

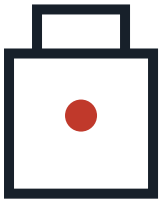

Clear the field zone.
Post warnings and
control access.

2

ARM

ARM

Wait for ARMED
feedback before
requesting On.

3

REQUEST ON



Press mapped UVC
button. Lights stay
off pending warning.

4


CONFIRM



Recheck area.
SW3 turns on;
SW4 cancels.

5

VERIFY

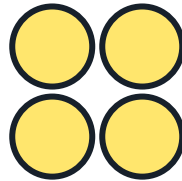

All 6 channels and
all 4 physical lamps
must agree.

6

SHUT DOWN

ALL OFF

All Off, Disarm,
verify indicators,
then disconnect
physical power.