Venus838FLPx GPS Receiver

For CubeSat Application

Data Sheet



10mmx 10mm

Venus838FLPx-L / Venus838FLPx-D

FEATURES

- Customized firmware for CubeSat application
- Maximum velocity 10Km/sec⁺
- -148dBm cold start sensitivity
- -165dBm tracking sensitivity
- 29 second cold start TTFF
- 1 second hot start
- 2.5m accuracy
- 110mW full power navigation
- Works directly with active or passive antenna
- Complete receiver in 10mm x 10mm x 1.3mm size
- Contains LNA, SAW Filter, TCXO, RTC Xtal, LDO
- Pb-free RoHS compliant

The Venus838FLPx-SPC is a high performance, low cost, single chip GPS receiver targeting CubeSat, small satellite, and micro satellite space applications. It offers very low power consumption, high sensitivity, and best in class signal acquisition and time-to-first-fix performance.

Venus838FLPx-SPC contains the necessary components of a complete GPS receiver, including GPS RF front-end, GPS baseband signal processor, 0.5ppm TCXO, 32.768kHz RTC crystal, RTC LDO regulator, and passive components. It takes up only 100mm2 PCB footprint.

Dedicated massive-correlator signal parameter search engine within the baseband enables rapid search of all the available satellites and acquisition of weak signal. An advanced track engine allows weak signal tracking and positioning in harsh environments.

Venus838FLPx-SPC is low cost, easy to use, minimizes RF layout design issues..

| Product Series | Product Description |
|-----------------------|---|
| Venus838FLPx-L | Flash version GPS receiver (internal 1.2V LDO version) |
| | Suitable for lower cost application using internal 1.2V supply |
| Venus838FLPx-D | Flash version GPS receiver (external 1.2V version) |
| | Suitable for lower power application using external 1.2V supply |

TECHNICAL SPECIFICATIONS

Receiver Type L1 C/A code

GPS QZSS

167 channel Venus 8 engine

Accuracy Position 2.5m CEP

Velocity 0.1m/sec Timing 10ns

Open Sky TTFF 29 second cold start

1 second hot start

Reacquisition < 1s

Sensitivity -165dBm tracking

-148dBm cold start

Update Rate 1 / 2 / 4 / 5 / 8 / 10 / 20 / 25 / 40 / 50 Hz (default 1Hz)

Dynamics 4G

Operational Limits Velocity 10Km/s⁺

Datum Default WGS-84

Interface UART LVTTL level

Baud Rate 4800 / 9600 / 38400 / 115200

Protocol NMEA-0183 V3.01, GGA, GLL, GSA, GSV, RMC, VTG, ZDA

SkyTraq Binary

Main Supply Voltage 2.8V ~ 3.6V (Venus838FLPx-L)

2.8V ~ 3.6V, 1.08V ~ 1.32V (Venus838FLPx-D)

Backup Voltage 2.5V ~ 3.6V

Current Consumption (3.3V)

| | | Acquisition | | | | | | | |
|-------------------------|------|-------------|------|------|------|--|--|--|--|
| Number of Search Engine | 2 | 4 | 6* | 8 | | | | | |
| Venus838FLPx-L | 39mA | 45mA | 51mA | 59mA | 33mA | | | | |
| Venus838FLPx-D** | 20mA | 23mA | 26mA | 30mA | 16mA | | | | |

^{*} default 6 search engine used

Operating Temperature -40 ~ +85 deg-C


Storage Temperature -40 ~ +125 deg-C

Package LGA69 10mm x 10mm x 1.3mm, 0.8mm pitch

Weight 0.3g

^{** 90%} efficiency 3.3V-to-1.2V switch-mode regulator is used

BLOCK DIAGRAM

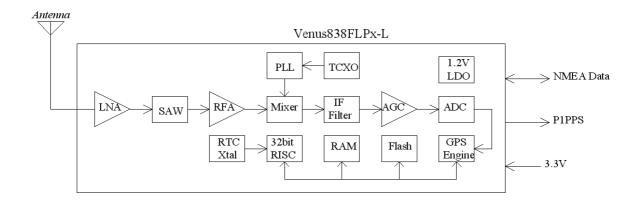

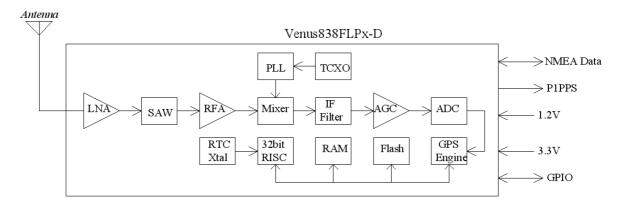


Figure-1 GPS Receiver based on Venus838FLPx

Venus838FLPx PIN-OUT DIAGRAM

Venus838FLPx-L / Venus838FLPx-D Top View

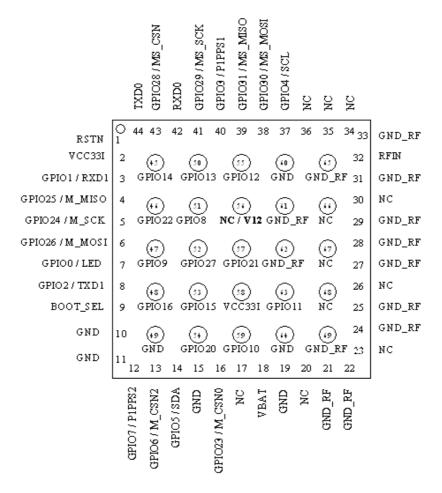


Figure-2 Venus838FLPx Pin-Out Diagram

Venus838FLPx PIN DEFINITION

| Pin Number | Signal Name | Type | Description |
|------------|-----------------|-------------|--|
| 1 | RSTN | Input | Active LOW reset input, 3.3V LVTTL |
| 2 | VCC33I | Power Input | Main voltage supply input, 2.8V ~ 3.6V |
| 3 | GPIO1 / RXD1 | Bidir | General purpose I/O pin, 3.3V LVTTL |
| | | | Or receive input of the asynchronous UART port |
| | | | Default not used |
| 4 | GPIO25 / M_MISO | Bidir | General purpose I/O pin, 3.3V LVTTL |
| | _ | | Or SPI master input |
| | | | Default not used |
| 5 | GPIO24 / M_SCK | Bidir | General purpose I/O pin, 3.3V LVTTL |
| | | | Or SPI master clock |
| | | | Default not used |
| 6 | GPIO26 / M_MOSI | Bidir | General purpose I/O pin, 3.3V LVTTL |
| | | Didii | Or SPI master output |
| | | | Default not used |
| 7 | LED / GPIO0 | Bidir | Navigation status indicator (default) |
| | | Bidii | Or General purpose I/O. 3.3V LVTTL |
| 8 | GPIO2 / TXD1 | Bidir | General purpose I/O pin. 3.3V LVTTL |
| | | Bidii | Or transmit output of the asynchronous UART port |
| | | | Default not used |

| - | | | |
|----|-------------------|--------------|---|
| 9 | BOOT_SEL | Bidir | Boot mode selection. Pull-high or pull-low |
| | _ | Didii | 1: execute from internal Flash |
| | | | 0: execute from internal ROM |
| | | | This is opposite of Venus638FLPx |
| 10 | GND | Dower | |
| | | Power | System ground |
| 11 | GND | Power | System ground |
| 12 | GPIO7 / P1PPS2 | Bidir | General purpose I/O pin, 3.3V LVTTL |
| | | | Second P1PPS output |
| | | | Default unused |
| 13 | GPIO6 / M CSN2 | Bidir | General purpose I/O pin, 3.3V LVTTL |
| | | | Or SPI master chip select #2 |
| | | | Default not used |
| 14 | GPIO5 / SDA | Bidir | |
| 14 | GPIO5 / SDA | Diuli | General purpose I/O pin, 3.3V LVTTL |
| | | | Or I2C serial data |
| | | | Default not used |
| 15 | GND | Power | System ground |
| 16 | GPIO23 / M_CSN0 | Bidir | General purpose I/O pin, 3.3V LVTTL |
| | _ | | Or SPI master chip select #0 |
| | | | Default not used |
| 17 | NC | | Not connected, empty pin |
| 18 | VBAT | Dawer Innest | Supply voltage for internal RTC and backup SRAM, 2.5V ~ 3.6V. |
| 10 | VDAI | Power Input | |
| | | | VBAT should be powered by non-volatile supply voltage to have |
| | | | optimal performance. Maximum VBAT current draw when VCC33I |
| | | | is removed is 35uA. If VBAT is connected to VCC33I, powered off |
| | | | as VCC33I power is removed, then it'll cold start every time. For |
| | | | applications that do not care lesser performance cold starting |
| | | | every time, this pin can be connected to VCC33I. Must not be left |
| | | | unconnected. |
| 10 | CND | Dawas | |
| 19 | GND | Power | System ground |
| 20 | NC | | Not connected, empty pin |
| 21 | GND_RF | Power | RF section system ground |
| 22 | GND RF | Power | RF section system ground |
| 23 | NC | | Not connected, empty pin |
| 24 | GND RF | Power | RF section system ground |
| 25 | GND_RF | Power | RF section system ground |
| | | rowei | |
| 26 | NC NC | | Not connected, empty pin |
| 27 | GND_RF | Power | RF section system ground |
| 28 | GND_RF | Power | RF section system ground |
| 29 | GND RF | Power | RF section system ground |
| 30 | NC | | Not connected, empty pin |
| 31 | GND RF | Power | RF section system ground |
| 32 | | | |
| | RFIN | Input | GPS signal input, connect to GPS antenna. |
| 33 | GND_RF | Power | RF section system ground |
| 34 | NC | | Not connected, empty pin |
| 35 | NC | | Not connected, empty pin |
| 36 | NC | | Not connected, empty pin |
| 37 | GPIO4 / SCL | Bidir | General purpose I/O pin, 3.3V LVTTL |
| | S. 13 17 30L | D.G.I | Or I2C SCL clock |
| | | | Default not used |
| | ODIO02 / 140 1405 | B: !: | |
| 38 | GPIO30 / MS_MOSI | Bidir | General purpose I/O pin, 3.3V LVTTL |
| | | | Or SPI master/slave data output |
| | | | Default not used |
| 39 | GPIO31 / MS MISO | Bidir | General purpose I/O pin, 3.3V LVTTL |
| | | | Or SPI master/slave data input |
| | | | Default not used |
| 40 | P1PPS / GPIO3 | bidir | 1 pulse per second output. Active after position fix; goes HIGH for |
| 40 | FIFFO/GPIUS | biuli | |
| | | | about 800usec at 1Hz, 3.3V LVTTL (default) |
| | | | Or general purpose I/O pin |
| 41 | GPIO29 / MS_SCK | Output | General purpose output pin, 3.3V LVTTL |
| | | | Or SPI master/slave clock |
| | | | Default not used |
| 42 | RXD0 | Input | Received input of the asynchronous UART port. Used to input |
| 74 | IVVDU | iriput | |
| 40 | CDIOCO / MC COST | Dist. | binary command to the GPS receiver. 3.3V LVTTL |
| 43 | GPIO28 / MS_CSN | Bidir | General purpose I/O pin, 3.3V LVTTL |
| | | | Or SPI master/slave chip select |
| | | | Default not used |
| | | · <u> </u> | |
| | | | |

| 44 | TXD0 | Output | Transmit output of the asynchronous UART port. Used to output standard NMEA-0183 sentence or response to input binary command. 3.3V LVTTL |
|----------|-----------------|-------------|---|
| 45 | GPIO14 | Bidir | General purpose I/O pin, 3.3V LVTTL Default not used |
| 46 | GPIO22 / M_CSN1 | Bidir | General purpose I/O pin, 3.3V LVTTL Or SPI master chip select #1 Default not used |
| 47 | GPIO9 | Bidir | General purpose I/O pin, 3.3V LVTTL Default not used |
| 48 | GPIO16 | Bidir | General purpose I/O pin, 3.3V LVTTL Default not used |
| 49 | GND | | System ground |
| 50 | GPIO13 | Bidir | General purpose I/O pin, 3.3V LVTTL Default not used |
| 51 | GPIO8 | Bidir | General purpose I/O pin, 3.3V LVTTL Default not used |
| 52 | GPIO27 | Input | General purpose I/O pin, 3.3V LVTTL Default not used |
| 53 | GPIO15 | Bidir | General purpose I/O pin, 3.3V LVTTL Default not used |
| 54 | GPIO20 / PWM0 | Bidir | General purpose I/O pin, 3.3V LVTTL Or PWM output #0 Default not used |
| 55 | GPIO12 | Bidir | General purpose I/O pin, 3.3V LVTTL Default not used |
| 56 | NC / V12 | | NC pin for Venus838FLPx-L 1.2V supply input pin for Venus838FLPx-D |
| 57 | GPIO21 / PWM1 | Output | General purpose I/O pin, 3.3V LVTTL Or PWM output #1 Default not used |
| 58 | VCC33I | Power Input | Main voltage supply input, 2.8V ~ 3.6V |
| 59 | GPIO10 | Bidir | General purpose I/O pin, 3.3V LVTTL Default not used |
| 60 | GND | Power | System ground |
| 61 | GND_RF | Power | RF section system ground |
| 62 | GND_RF | Power | RF section system ground |
| 63 | GPIO11 | Bidir | General purpose I/O pin, 3.3V LVTTL Default not used |
| 64 | GND | Power | System ground |
| 65 | GND_RF | Power | RF section system ground |
| 66,67,68 | NC | | Not connected, empty pin |
| 69 | GND_RF | Power | RF section system ground |


When using Venus838FLPx-L to replace Venus634FLPx, pin-45 \sim pin-69 can all be left unconnected. When using Venus838FLPx-D, 1.2V need to be supplied at pin-56 The NC pins are to be left unconnected.

DC CHARACTERISTICS OF DIGITAL INTERFACE

Below is when VCC3I is at nominally 3.3V

| Parameter | Min. | Тур. | Max. | Units |
|---|------|------|------|-------|
| Input Low Voltage | | | 8.0 | Volt |
| Input High Voltage | 2.0 | | | Volt |
| Output Low Voltage, IoI = 4 ~ 7.8mA | | | 0.4 | Volt |
| Output High Voltage, Ioh = 4.6 ~ 15.4mA | 2.4 | | | Volt |

MECHANICAL DIMENSION

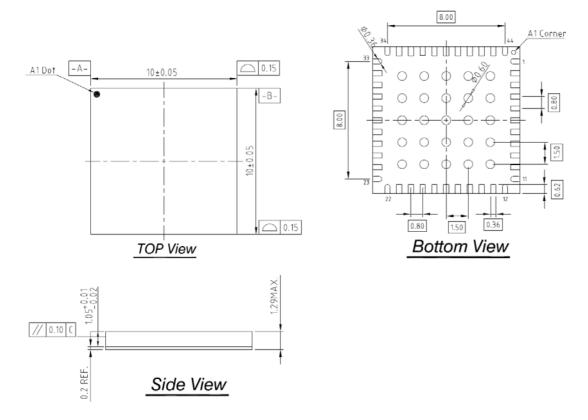

RECOMMENDED PCB FOOTPRINT

Package size = 10 mm x 10mm x1.3 mm Package Pad = 15 x 21 mil Package Pitch= 0.8 mm


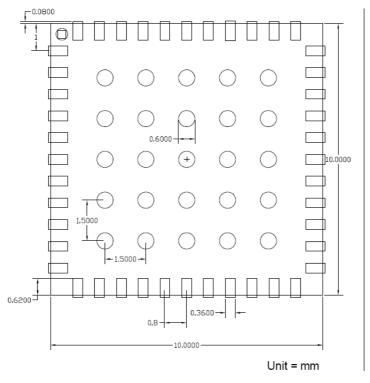


Figure-3 Recommended PCB Footprint.


RECOMMENDED REFLOW PROFILE

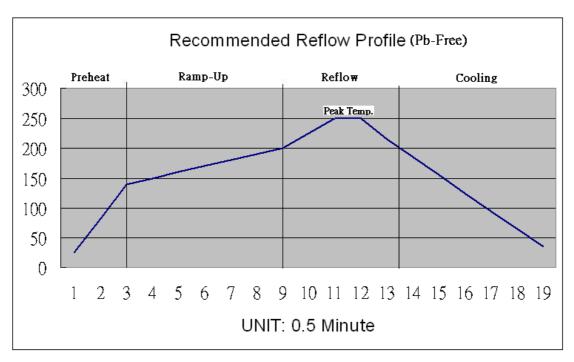


| Temperature (°ℂ) | 25 | 82.5 | 140 | 150 | 160 | 170 | 180 | 190 | 200 | 225 | 250 | 250 | 215 | 185 | 155 | 125 | 95 | 65 | 35 |
|------------------|----|------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|----|-----|----|
| Time(minute) | 0 | 0.5 | 1 | 1.5 | 2 | 2.5 | 3 | 3.5 | 4 | 4.5 | 5 | 5.5 | 6 | 6.5 | 7 | 7.5 | 8 | 8.5 | 9 |

| Profile Description | SnPb Eutectic Process | Lead Free Process | | |
|----------------------------|-----------------------|--------------------------|--|--|
| Preheat | | | | |
| Maximum Temperature | 100+/-10 ℃ | 140+/-10 °C | | |
| $Time(\DeltaT)$ | 40~60s | 50~70s | | |
| Ramp-Up | | | | |
| Ramp-Up Rate | 1 °C/s Max. | 1 °ℂ/s Max. | | |
| $Time(\DeltaT)$ | 120~150s | 160~200s | | |
| Reflow | | | | |
| Maximum Temperature | Peak Temp. | Peak Temp. | | |
| Minimum Temperature | 180+/-5℃ | 200+/-10°C | | |
| Peak Temperature | 220+/-2°C | 250+/-2°℃ | | |
| Time(∆T) during Peak | 10~30s | 20~40s | | |
| Temp.+/-2°℃ | | | | |
| Reflow Time(ΔT) | 120~150s | 120~150s | | |
| Cooling | | | | |
| Cooling Rate | 1.5 ℃/s Max | 1.5 °C/s Max | | |
| $Time(\DeltaT)$ | 60~120s | 150~180s | | |

VENUS838FLPx-L APPLICATION CIRCUIT

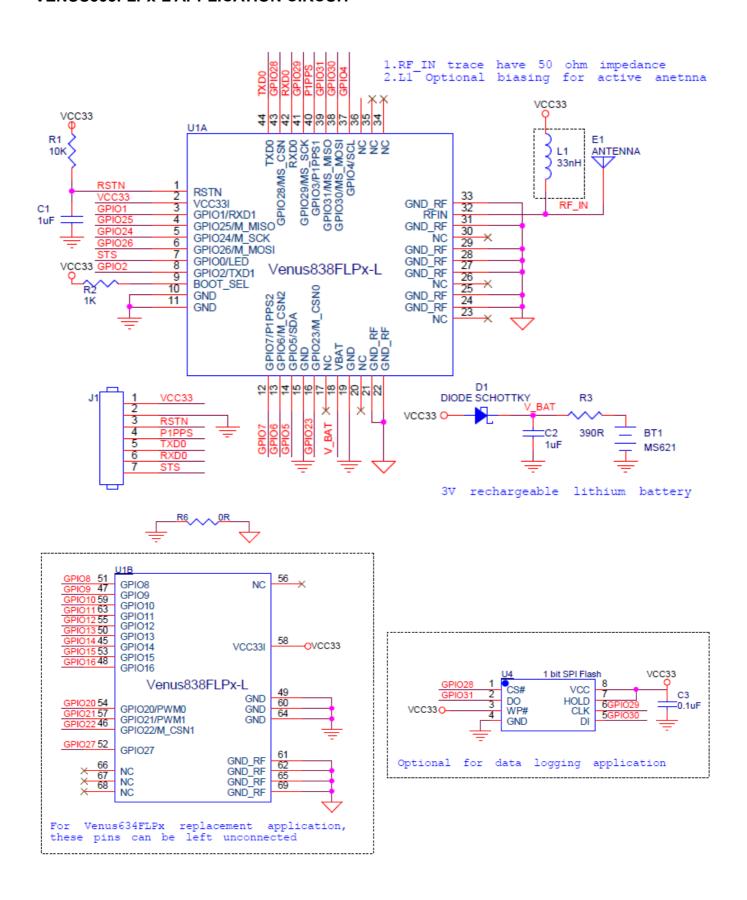

VENUS838FLPx-D APPLICATION CIRCUIT

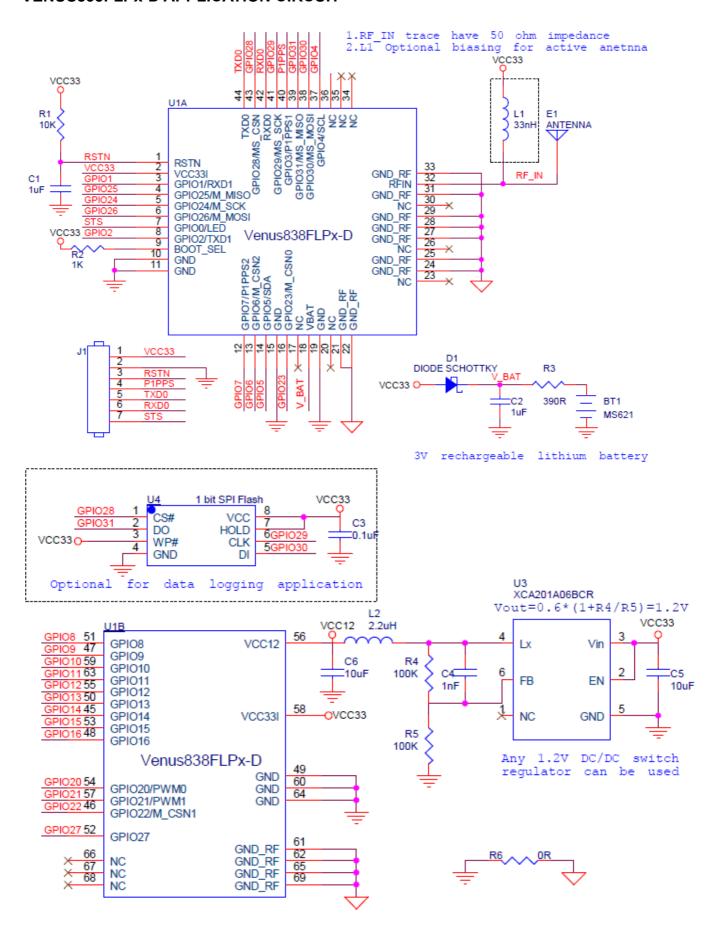

APPLICATION CIRCUIT INTERFACE SIGNALS

STS: Signal to indicate GPS position status, 3.3V LVTTL.

Active low for no-fix, toggle every second after position fix.

P1PPS: 1 pulse per second time-mark (3.3V LVTTL)

RSTN: Active low reset input

VCC33: 3.3V power input

RXD0: UART input (3.3V LVTTL)

TXD0: UART output (3.3V LVTTL)

APPLICATION INFORMATION


- 1. For fast-rising power supply, a simple series R/C reset delay to pin-1, RSTN, as indicated in the application circuit is suitable. For system having slow-rising power supply, a reset IC providing 2~5ms reset duration may be necessary.
- 2. The RF input of Venus838FLPx is already matched to 50-ohm. Passive antenna matched to 50-ohm can be directly applied.
- 3. For using Venus838FLPx with active antenna, one with gain in range of 10~30dB and noise figure < 2dB can be used. Power to the active antenna needs to be applied externally.
- 4. Pin-18 VBAT supplies backup power to the real-time clock and backup SRAM for fast startup. For portable applications where there is battery with voltage in range of 2.5V ~ 3.6V as the main source, the VBAT pin can be directly connected to it. If VBAT is connected to main power as pin-2, no supply voltage as Venus838FLPx is powered off, then it'll cold start every time and GPS performance will not be optimal.
- 5. Like BGA device, the Venus838FLPx is moisture sensitive. It needs to be handled with care to void damage from moisture absorption and SMT re-flow. The device should be baked for 24 hours at 125-degC before mounting for SMT re-flow if it has been removed from the protective seal for more than 48*1hours.
- 6. If hot plug/remove power and UART serial interface, add at least 1K-ohm series resistor to pin-42 RXD0 and pin-44 TXD0 to improve ESD protection.
- 7. The supported SPI Flash memory verified for data logging application are:

| Manufacturer | Device ID | Size |
|--------------|-------------|--------|
| EON | EN25F040 | 4Mbit |
| EON | EN25F080 | 8Mbit |
| MXIC | MX25L400 | 4Mbit |
| MXIC | MX25L800 | 8Mbit |
| MXIC | MX25L1605 | 16Mbit |
| MXIC | MX25L3205 | 32Mbit |
| MXIC | MX25L6405 | 64Mbit |
| WINBOND | W25X40 | 4Mbit |
| WINBOND | W25X80 | 8Mbit |
| WINBOND | W25X16 | 16Mbit |
| WINBOND | W25X32 | 32Mbit |
| WINBOND | W25X64 | 64Mbit |
| SST | SST25LF040 | 4Mbit |
| SST | SST25LF080 | 8Mbit |
| SST | SST25VF016 | 16Mbit |
| SST | SST 25VF032 | 32Mbit |


^{*1:} Actual will be longer, moisture sensitivity level still undergoing verification.

SLEEP MODE

For application requiring sleep mode, it can be implemented using regulator with enable control as below figure shows. To put Venus838FLPx to sleep, the power to Venus838FLPx is cut off by disabling the regulator via host processor GPIO pin. In sleep mode, VBAT consume less than 40uA. Fast start up operation is provided by keeping supply voltage to VBAT constant, retaining the internal data and keep RTC running while Venus838FLPx is put to sleep or when supply 3.3V power is removed.

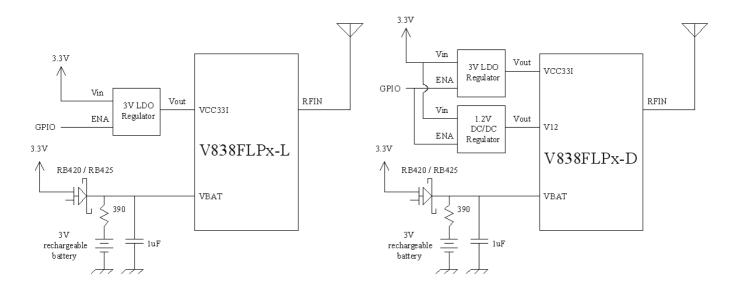



For applications needing sleep mode but cannot have extra cost of adding a rechargeable backup supply battery, it can be implemented as below figure shows. It will provide fast start up when Venus838FLPx is put to sleep and awakened, but will cold start every time when the 3.3V supply voltage is removed and re-applied again.

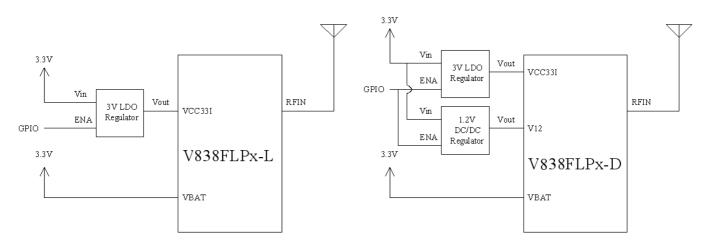

When using sleep mode, add 10K ~ 20K series resistor on pin-42 RXD0 to reduce leakage current.

PACKAGE

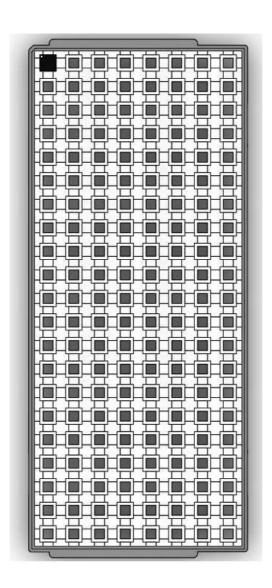

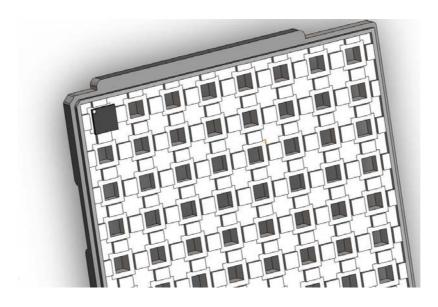

NMEA MESSAGES

The full descriptions of supported NMEA messages are provided at the following paragraphs.

GGA - Global Positioning System Fix Data

Time, position and fix related data for a GPS receiver.

Structure:

GPGGA,hhmmss.sssss,ddmm.mmmm,a,dddmm.mmmm,a,x,xx,x.x,x.x,M,,,,xxxx*hh<CR><LF>

1 2 3 4 56789 10 11

Example:

\$GPGGA,111636.998665,2447.0949,N,12100.5223,E,1,11,0.8,118.2,M,,,,0000*37<CR><LF>

| Field | Name | Example | Description |
|-------|-----------------|--------------|---|
| 1 | UTC Time | 111636.99866 | UTC of position in hhmmss.sssss format, (000000.000 ~ |
| | | 5 | 235959.999999) |
| 2 | Latitude | 2447.0949 | Latitude in ddmm.mmmm format |
| | | | Leading zeros transmitted |
| 3 | N/S Indicator | N | Latitude hemisphere indicator, 'N' = North, 'S' = South |
| 4 | Longitude | 12100.5223 | Longitude in dddmm.mmmm format |
| | | | Leading zeros transmitted |
| 5 | E/W Indicator | E | Longitude hemisphere indicator, 'E' = East, 'W' = West |
| 6 | GPS quality | 1 | GPS quality indicator |
| | indicator | | 0: position fix unavailable |
| | | | 1: valid position fix, SPS mode |
| | | | 2: valid position fix, differential GPS mode |
| | | | 3: GPS PPS Mode, fix valid |
| | | | 4: Real Time Kinematic. System used in RTK mode with fixed integers |
| | | | 5: Float RTK. Satellite system used in RTK mode. Floating integers |
| | | | 6: Estimated (dead reckoning) Mode |
| | | | 7: Manual Input Mode |
| | | | 8: Simulator Mode |
| 7 | Satellites Used | 11 | Number of satellites in use, (00 ~ 20) |
| 8 | HDOP | 0.8 | Horizontal dilution of precision, (0.0 ~ 99.9) |
| 9 | Altitude | 108.2 | mean sea level (geoid), (-9999.9 ~ 17999.9) |
| 10 | DGPS Station ID | 0000 | Differential reference station ID, 0000 ~ 1023 |
| | | | NULL when DGPS not used |

| 11 | Checksum | [37 |
|----|----------|-----|

GLL - Latitude/Longitude

Latitude and longitude of current position, time, and status.

Structure:

\$GPGLL,ddmm.mmmm,a,dddmm.mmmm,a,hhmmss.ssssss,A,a*hh<CR><LF>

1 2 3 4 5 678

Example:

\$GPGLL,2447.0949,N,12100.5223,E,111636.998665,A,A*63<CR><LF>

| Field | Name | Example | Description |
|-------|----------------|--------------|--|
| 1 | Latitude | 2447.0949 | Latitude in ddmm.mmmm format |
| | | | Leading zeros transmitted |
| 2 | N/S Indicator | N | Latitude hemisphere indicator |
| | | | 'N' = North |
| | | | 'S' = South |
| 3 | Longitude | 12100.5223 | Longitude in dddmm.mmmm format |
| | | | Leading zeros transmitted |
| 4 | E/W Indicator | E | Longitude hemisphere indicator |
| | | | 'E' = East |
| | | | 'W' = West |
| 5 | UTC Time | 111636.99866 | UTC time in hhmmss.sss format (000000.000000 ~ |
| | | 5 | 235959.999999) |
| 6 | Status | А | Status, 'A' = Data valid, 'V' = Data not valid |
| 7 | Mode Indicator | А | Mode indicator |
| | | | 'N' = Data not valid |
| | | | 'A' = Autonomous mode |
| | | | 'D' = Differential mode |
| | | | 'E' = Estimated (dead reckoning) mode |
| | | | 'M' = Manual input mode |
| | | | 'S' = Simulator mode |
| 8 | Checksum | 63 | |

GSA - GNSS DOP and Active Satellites

GPS receiver operating mode, satellites used in the navigation solution reported by the GGA or GNS sentence and DOP values.

Structure:

Example:

\$GPGSA,A,3,05,12,21,22,30,09,18,06,14,01,31,,1.2,0.8,0.9*36<CR><LF>

| Field | Name | Example | Description |
|-------|---------------------|----------------|---|
| 1 | Mode | А | Mode |
| | | | 'M' = Manual, forced to operate in 2D or 3D mode |
| | | | 'A' = Automatic, allowed to automatically switch 2D/3D |
| 2 | Mode | 3 | Fix type |
| | | | 1 = Fix not available |
| | | | 2 = 2D |
| | | | 3 = 3D |
| 3 | Satellite used 1~12 | 05,12,21,22,3 | Satellite ID number, 01 to 32, of satellite used in solution, |
| | | 0,09,18,06,14, | up to 12 transmitted |
| | | 01,31,, | |
| 4 | PDOP | 1.2 | Position dilution of precision (0.0 to 99.9) |
| 5 | HDOP | 0.8 | Horizontal dilution of precision (0.0 to 99.9) |
| 6 | VDOP | 0.9 | Vertical dilution of precision (0.0 to 99.9) |
| 7 | Checksum | 36 | |

GSV - GNSS Satellites in View

Number of satellites (SV) in view, satellite ID numbers, elevation, azimuth, and SNR value. Four satellites maximum per transmission.

Structure:

\$GPGSV,x,x,xx,xx,xx,xx,xx,xx,xx,xx,xx,xx *hh<CR><LF>
1 2 3 4 5 6 7 4 5 6 7 8

Example:

\$GPGSV,3,1,12,05,54,069,45,12,44,061,44,21,07,184,46,22,78,289,47*72<CR><LF>
\$GPGSV,3,2,12,30,65,118,45,09,12,047,37,18,62,157,47,06,08,144,45*7C<CR><LF>
\$GPGSV,3,3,12,14,39,330,42,01,06,299,38,31,30,256,44,32,36,320,47*7B<CR><LF>

| Field | Name | Example | Description |
|-------|--------------------|---------|--|
| 1 | Number of message | 3 | Total number of GSV messages to be transmitted (1-5) |
| 2 | Sequence number | 1 | Sequence number of current GSV message |
| 3 | Satellites in view | 12 | Total number of satellites in view (00 ~ 20) |
| 4 | Satellite ID | 05 | Satellite ID number, GPS: 01 ~ 32, SBAS: 33 ~ 64 (33 = |
| | | | PRN120) |
| 5 | Elevation | 54 | Satellite elevation in degrees, (00 ~ 90) |
| 6 | Azimuth | 069 | Satellite azimuth angle in degrees, (000 ~ 359) |
| 7 | SNR | 45 | C/No in dB (00 ~ 99) |
| | | | Null when not tracking |
| 8 | Checksum | 72 | |

RMC - Recommended Minimum Specific GNSS Data

Time, date, position, course and speed data provided by a GNSS navigation receiver.

Structure:

 $$\mathsf{GPRMC}_{,}\mathsf{hhmmss}.\mathsf{ssssss}_{,}\mathsf{A}_{,}\mathsf{dddmm}.\mathsf{mmmm}_{,}\mathsf{a}_{,}\mathsf{x}.\mathsf{x}_{,}\mathsf{x}.\mathsf{x}_{,}\mathsf{ddmm}\mathsf{yy}_{,,,,}\mathsf{a}^{\star}\mathsf{hh}<\mathsf{CR}><\mathsf{LF}>\mathsf{CR$

1 2 3 4 5 6789 1011

Example:

 $\$\mathsf{GPRMC}, 111636.998665, \mathsf{A}, 2447.0949, \mathsf{N}, 12100.5223, \mathsf{E}, 0.000, 000.0, 130712, \ldots, \mathsf{A}^*52 < \mathsf{CR} > < \mathsf{LF} > \mathsf{CR} > \mathsf{C$

| Field | Name | Example | Description |
|-------|--------------------|--------------|---|
| 1 | UTC time | 0111636.9986 | UTC time in hhmmss.ssssss format (000000.000000 ~ |
| | | 65 | 235959.999999) |
| 2 | Status | А | Status |
| | | | 'V' = Navigation receiver warning |
| | | | 'A' = Data Valid |
| 3 | Latitude | 2447.0949 | Latitude in dddmm.mmmm format |
| | | | Leading zeros transmitted |
| 4 | N/S indicator | N | Latitude hemisphere indicator |
| | | | 'N' = North |
| | | | 'S' = South |
| 5 | Longitude | 12100.5223 | Longitude in dddmm.mmmm format |
| | | | Leading zeros transmitted |
| 6 | E/W Indicator | E | Longitude hemisphere indicator |
| | | | 'E' = East |
| | | | 'W' = West |
| 7 | Speed over ground | 0.000 | Speed over ground in knots (000.000 ~ 19438.445) |
| 8 | Course over ground | 0.000 | Course over ground in degrees (000.0 ~ 359.9) |
| 9 | UTC Date | 130712 | UTC date of position fix, ddmmyy format |
| 10 | Mode indicator | А | Mode indicator |
| | | | 'N' = Data not valid |
| | | | 'A' = Autonomous mode |
| | | | 'D' = Differential mode |
| | | | 'E' = Estimated (dead reckoning) mode |
| | | | 'M' = Manual input mode |
| | | | 'S' = Simulator mode |
| 11 | checksum | 52 | |

VTG - Course Over Ground and Ground Speed

The Actual course and speed relative to the ground.

Structure:

 $\mathsf{GPVTG}, x.x, \mathsf{T}, \mathsf{,M}, x.x, \mathsf{N}, x.x, \mathsf{K}, a^*\mathsf{hh} \mathord{<} \mathsf{CR} \mathord{>} \mathord{<} \mathsf{LF} \mathord{>}$

1 2 3 4 5

Example:

\$GPVTG,000.0,T,,M,0.000,N,0.000,K,A*0D<CR><LF>

| Field | Name | Example | Description |
|-------|----------|---------|--|
| 1 | Course | 0.000 | True course over ground in degrees (000.0 ~ 359.9) |
| 2 | Speed | 0.000 | Speed over ground in knots (000.000 ~ 19438.445) |
| 3 | Speed | 0.000 | Speed over ground in kilometers per hour (0000.000 ~ |
| | | | 36000.000) |
| 4 | Mode | А | Mode indicator |
| | | | 'N' = not valid |
| | | | 'A' = Autonomous mode |
| | | | 'D' = Differential mode |
| | | | 'E' = Estimated (dead reckoning) mode |
| | | | 'M' = Manual input mode |
| | | | 'S' = Simulator mode |
| 5 | Checksum | OD | |

ZDA - Time & Date

UTC, day, month, year and local time zone.

Structure:

GPZDA,hhmmss.ssssss,xx,xx,xxx,xx,xx*hh< CR> < LF>

1 2 3 4 5 6 7

Example:

\$GPZDA,111636.998665,13,07,2012,00,00*6D<CR><LF>

| Field | Name | Example | Description |
|-------|--------------------|--------------|--|
| 1 | UTC time | 111636.99866 | UTC time in hhmmss.sss format (000000.000000 ~ |
| | | 5 | 235959.999999) |
| 2 | Day | 13 | Day, 01 to 31 |
| 3 | Month | 07 | Month, 01 to 12 |
| 4 | Year | 2012 | Year in yyyy format |
| 5 | Local zone hours | 00 | Local zone hours, 00 to +/- 13 hrs |
| 6 | Local zone minutes | 00 | Local zone minutes, 00 to +59 |
| 7 | checksum | 6D | |

ORDERING INFORMATION

| Part Number | Description | |
|--------------------|---|--|
| Venus838FLPx-L-SPC | Flash version GPS receiver (internal 1.2V LDO version) | |
| | Venus838FLPx-L with customized firmware for CubsSat application | |
| Venus838FLPx-D-SPC | Flash version GPS receiver (external 1.2V version) | |
| | Venus838FLPx-D with customized firmware for CubeSat application | |

SkyTraq Technology, Inc.

4F, No.26, Minsiang Street, Hsinchu, Taiwan, 300

Phone: +886 3 5678650 Fax: +886 3 5678680 Email: info@skytraq.com.tw

© 2017 SkyTraq Technology Inc. All rights reserved.

Not to be reproduced in whole or part for any purpose without written permission of SkyTraq Technology Inc ("SkyTraq"). Information provided by SkyTraq is believed to be accurate and reliable. These materials are provided by SkyTraq as a service to its customers and may be used for informational purposes only. SkyTraq assumes no responsibility for errors or omissions in these materials, nor for its use. SkyTraq reserves the right to change specification at any time without notice.

These materials are provides "as is" without warranty of any kind, either expressed or implied, relating to sale and/or use of SkyTraq products including liability or warranties relating to fitness for a particular purpose, consequential or incidental damages, merchantability, or infringement of any patent, copyright or other intellectual property right. SkyTraq further does not warrant the accuracy or completeness of the information, text, graphics or other items contained within these materials. SkyTraq shall not be liable for any special, indirect, incidental, or consequential damages, including without limitation, lost revenues or lost profits, which may result from the use of these materials.

SkyTraq products are not intended for use in medical, life-support devices, or applications involving potential risk of death, personal injury, or severe property damage in case of failure of the product.

Change Log

Version 4, October 8, 2019

1. Updated NMEA speed related fields

Version 3, November 22, 2018

1. Increased max velocity to 10Km/sec+

Version 2, April 19, 2018

1. Lowered max velocity to 7.8Km/sec+

Version 1, October 5, 2017

1. Initial release