




Construction Manual

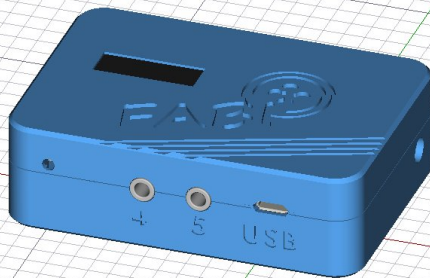

Welcome to the FAB1

Construction Manual

This manual covers detailed step-by-step instructions for building the FAB1 alternative input system.

As additional tools you will need:

- a soldering iron with a fine tip
- sharp side-cutting pliers
- a PH/PZ screwdriver
- optionally a PCB holder

The required materials are:

- tin-solder (small diameter)

We assume that you know how to solder — especially how to place and hold the parts correctly.

Don't burn yourself and solder the parts straight / in correct orientation!

Legend



Solder



Clip with pliers



Attention: orientation of this part is important!




This part is done in this step



Part number for this step
(see part overview on page 3)


Part Overview

1

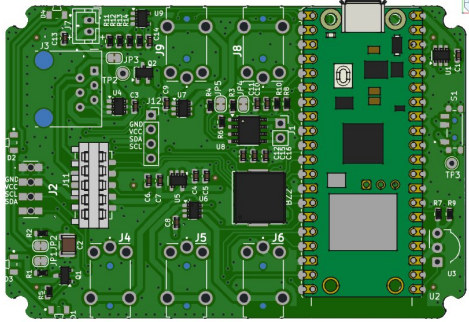


2


5x

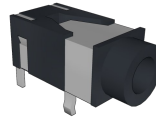


3



4



5




6



7



12

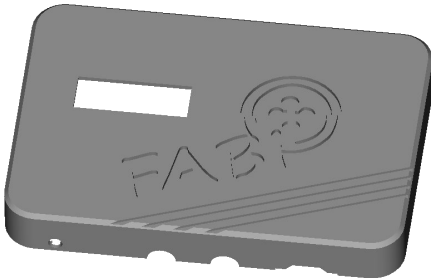


8



9



13

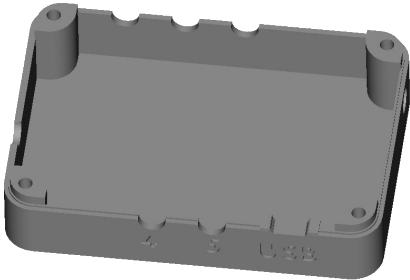


10

4x



M3 x 10mm


11





optional

1





2

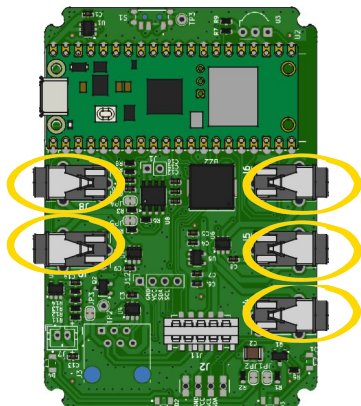





5x

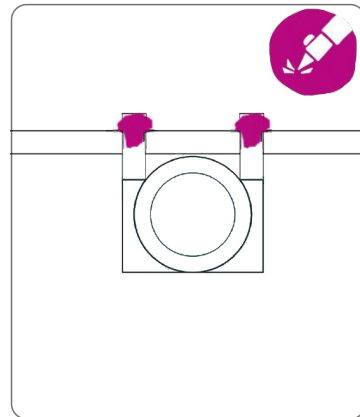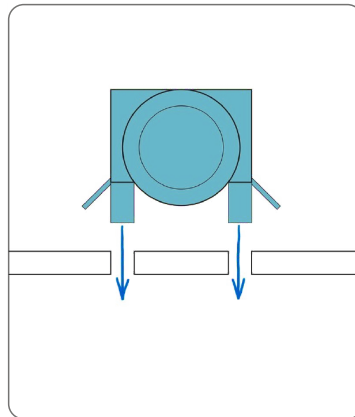




3

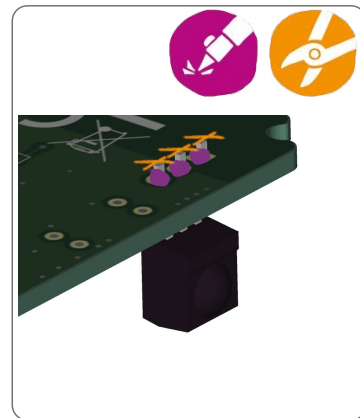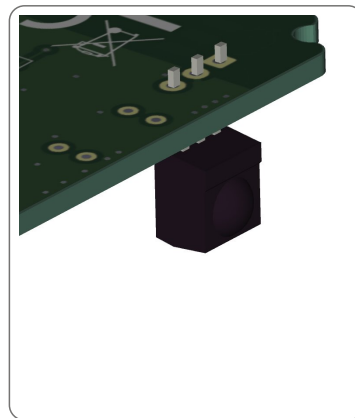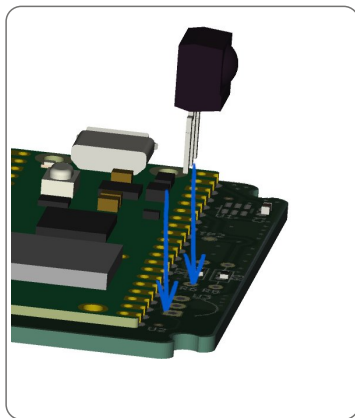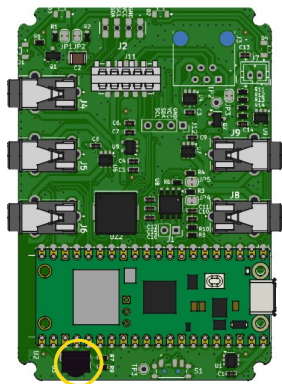





6

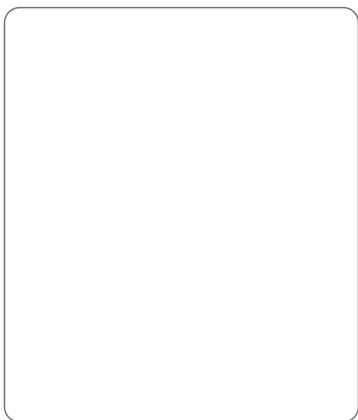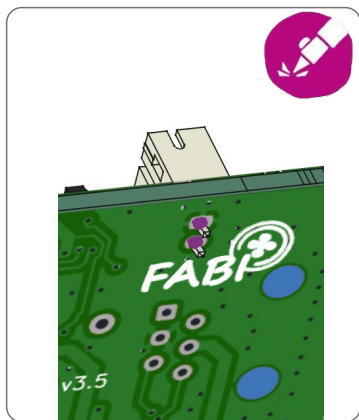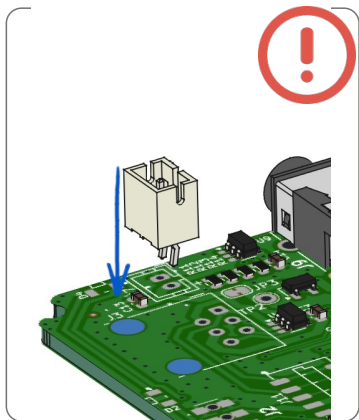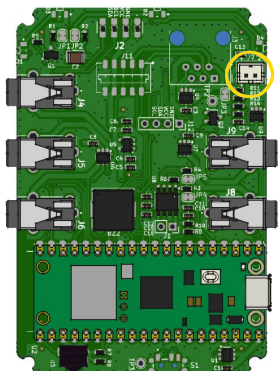





7

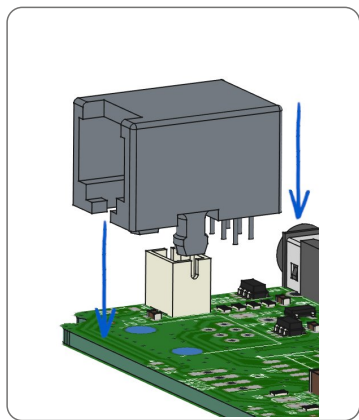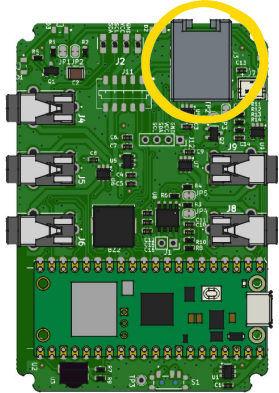



4

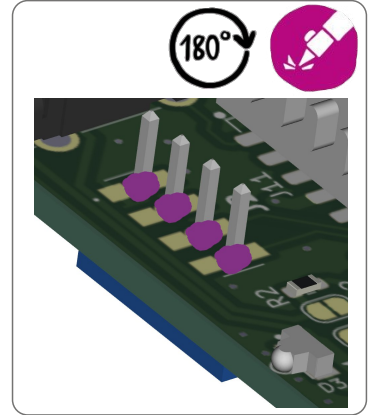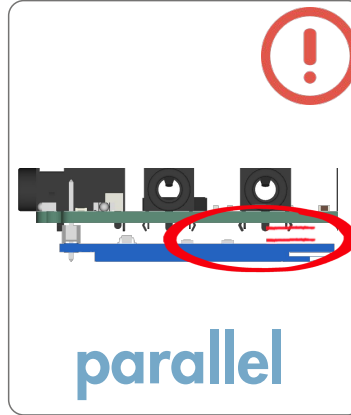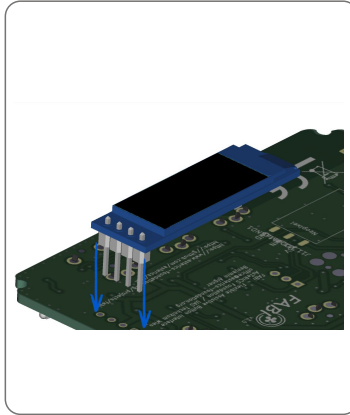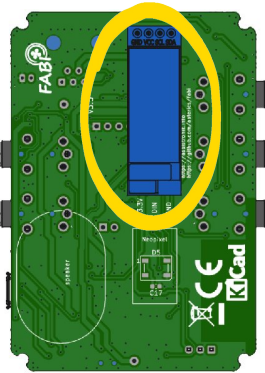


5

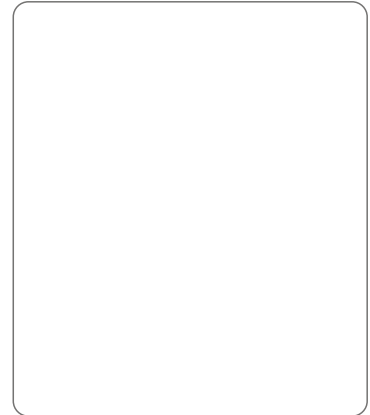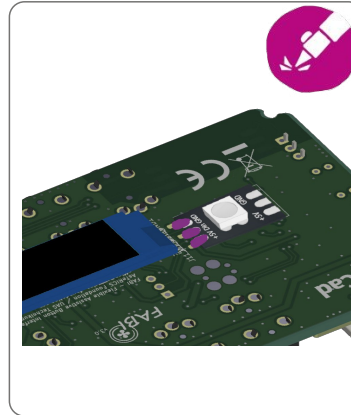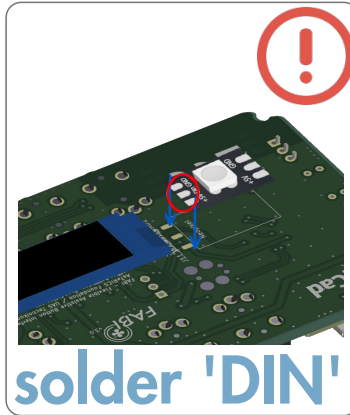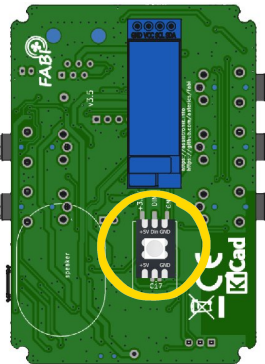

8

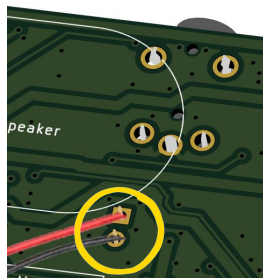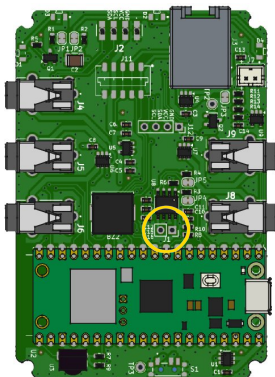


180°

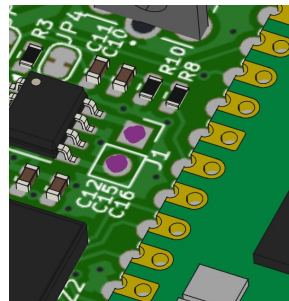







9

11

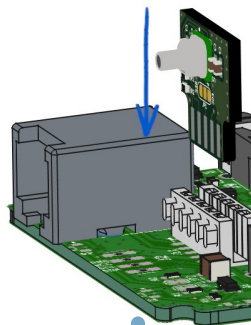

optional

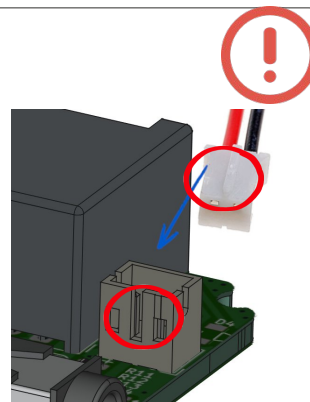

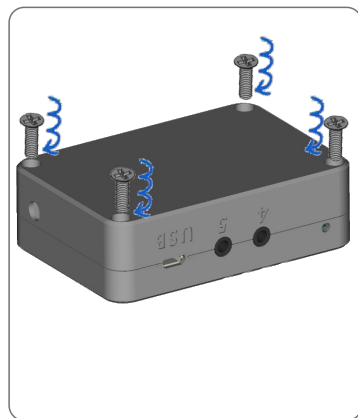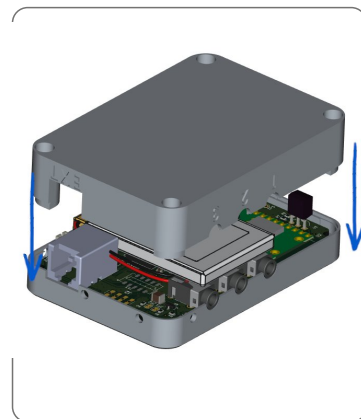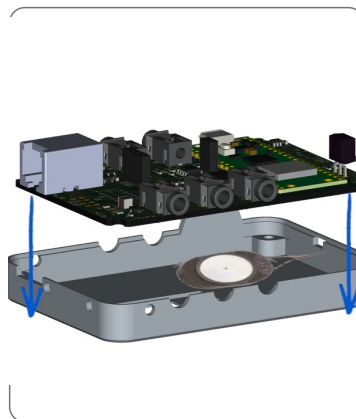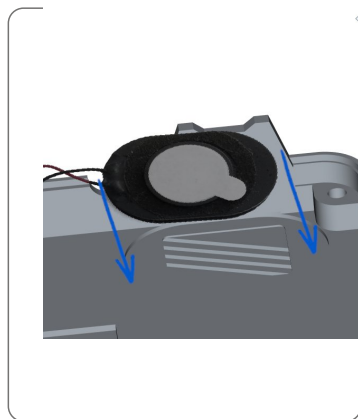



Copyright 2025, AsTeRICS Foundation & Assistronik
CC-BY-SA 3.0
office@asterics-foundation.org
office@assistronik.info

Acknowledgements:

Futura fonts by www.onlinewebfonts.com (CC BY 3.0)
Exclamation mark icon made by Pixel Buddha from
www.flaticon.com
Parts of illustrations based on work of Moritz Schwarzl