


Construction Manual

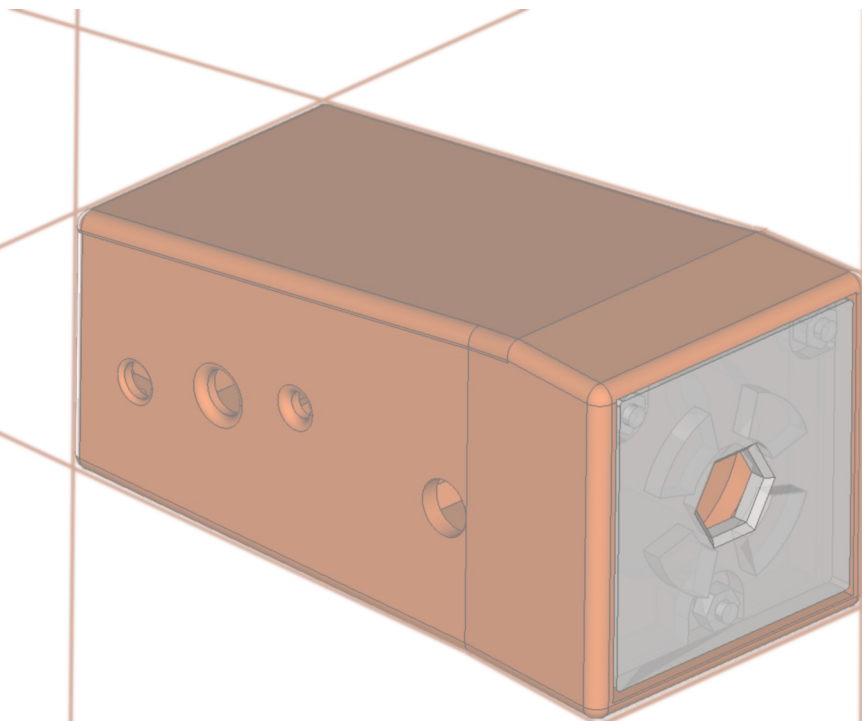

Welcome to the FLipMouse

Construction Manual

This manual covers detailed step-by-step instructions for building the FLipMouse alternative input system.

As additional tools you will need:

- a soldering iron with a fine tip
- sharp side-cutting pliers
- a PH/PZ screwdriver (PH0 or PH1)
- optionally a PCB holder

The required materials are:

- tin-solder (small diameter)

Legend



Solder / do not solder



Clip / do not clip with pliers



Attention: orientation of this part is important!



This part is done in this step



Parts necessary for this step
(see part overview on page 3/4)

2


Step number for reference

Part Overview - Electronic Parts


1




2

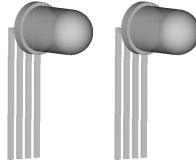

3

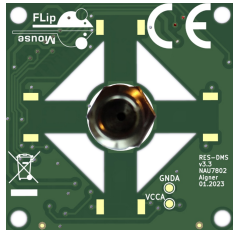


4




Part Overview - Case Parts

5

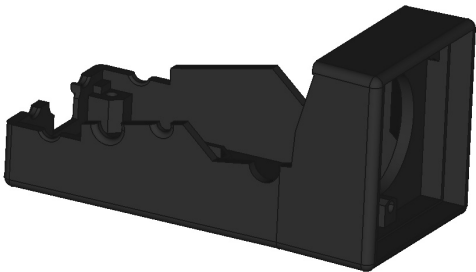


6

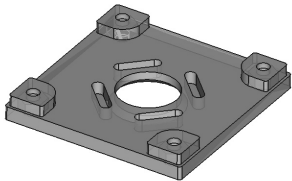


7



8

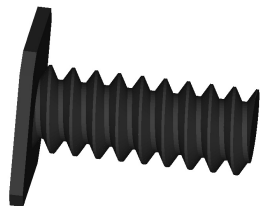


9

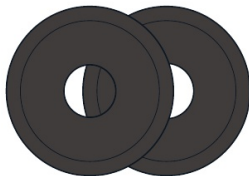


14


10



11



12

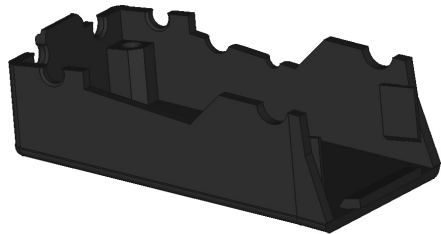


13






1

2

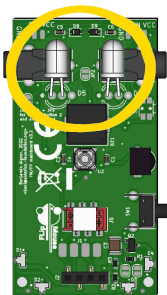

1

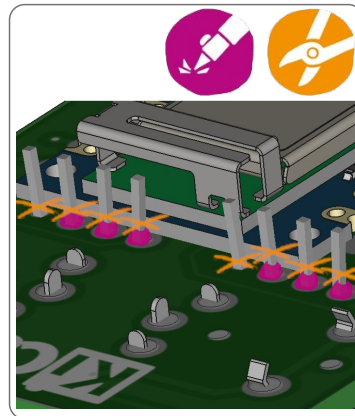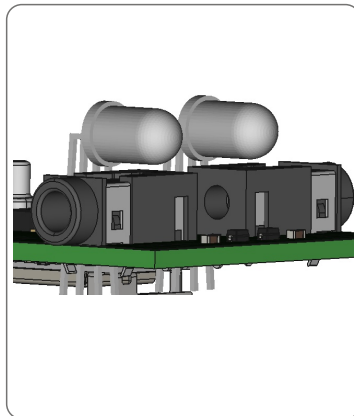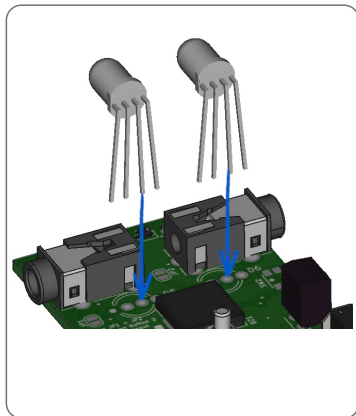


3



5

6


7

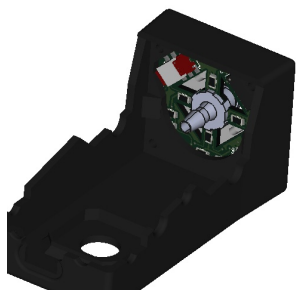




2

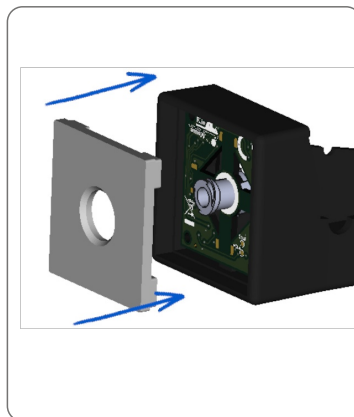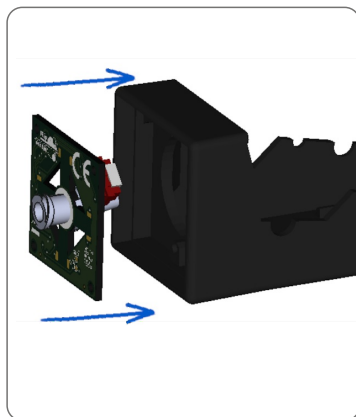


8 9

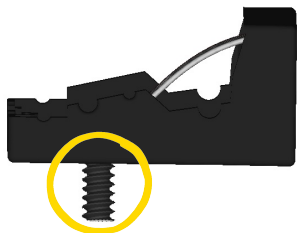




3

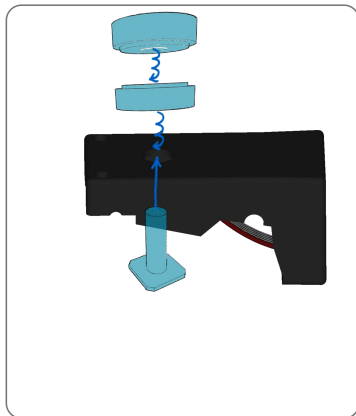


10 11




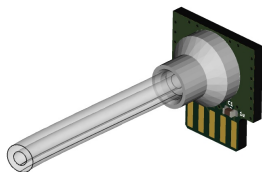


4


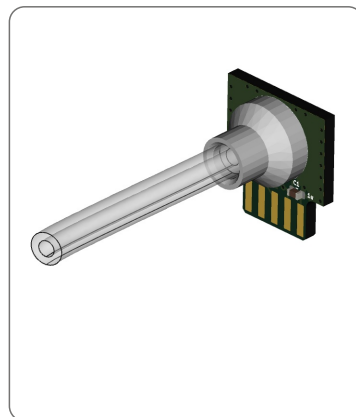
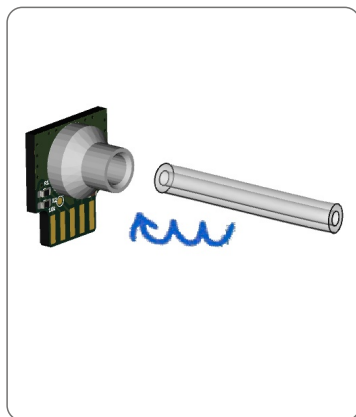


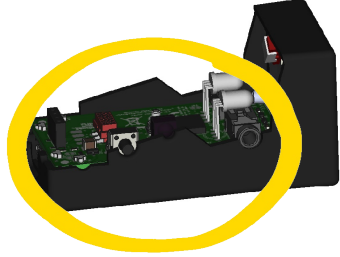


5

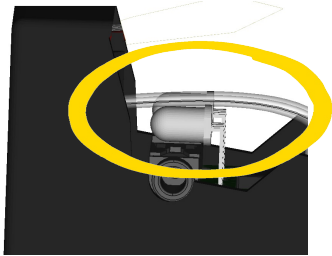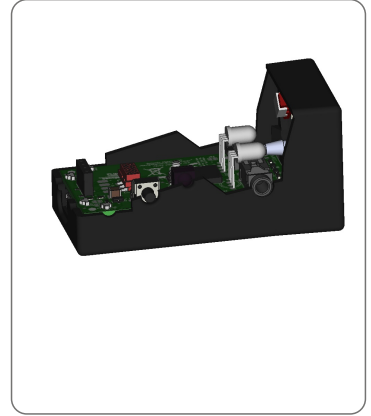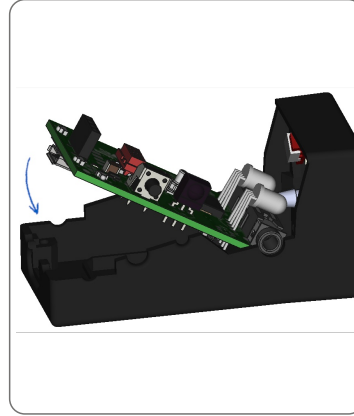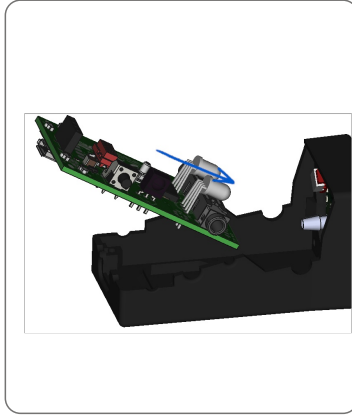




6

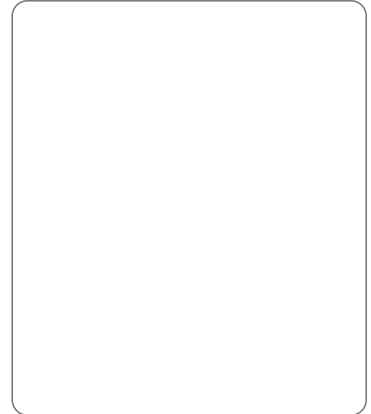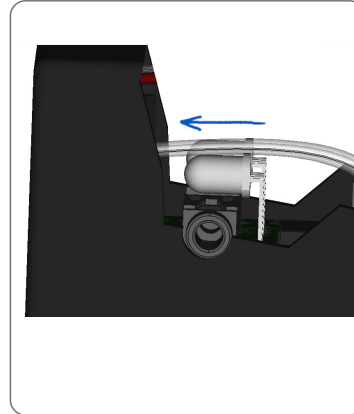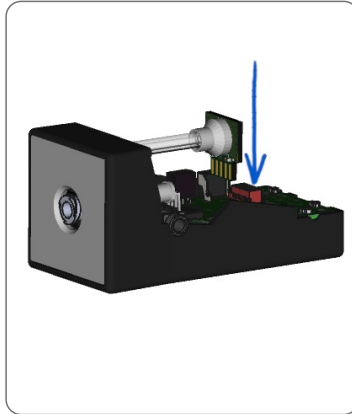

4

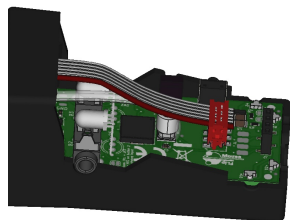

7


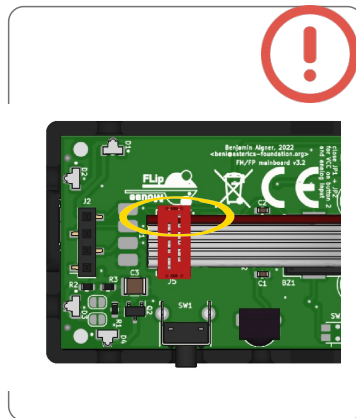
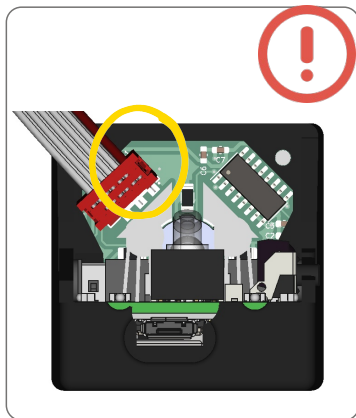


12

13








8

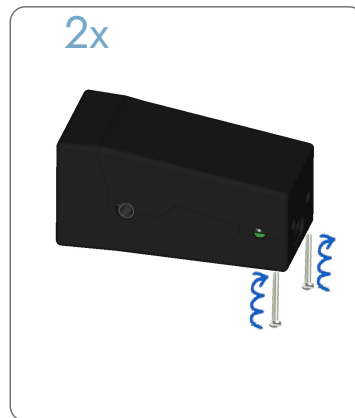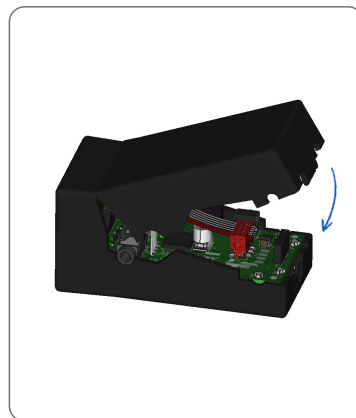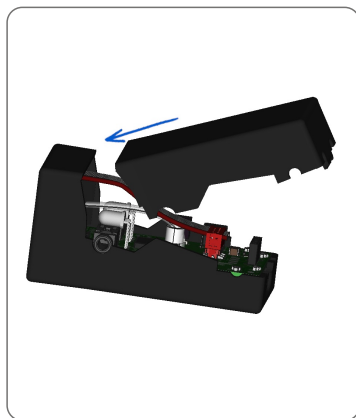

14



9

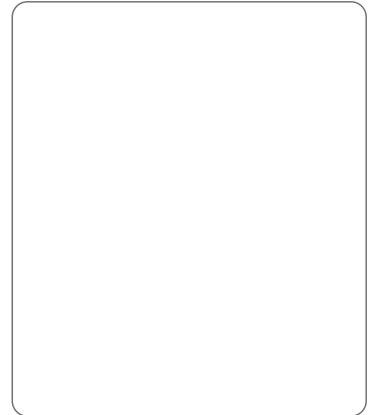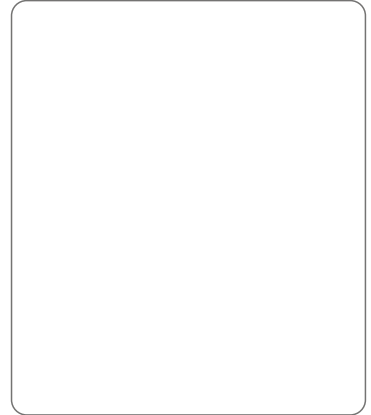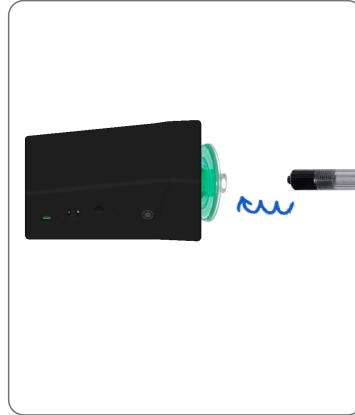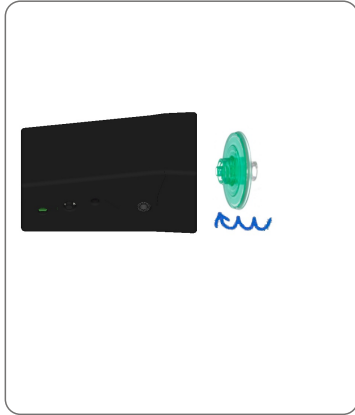

Copyright 2023, AsTeRICS Foundation, CC-BY-SA 3.0
office@asterics-foundation.org

Acknowledgements:

Exclamation mark icon made by Pixel Buddha from www.flaticon.com

Illustrations based on work of Moritz Schwarzl (moritz.schwarzl@gmx.at)