Radio Interferometry – Advanced Topics

Rick Perley, NRAO/Socorro




Sixteenth Synthesis Imaging Workshop 16-23 May 2018















Topics

- The lecture focusses on practical extensions to the basic theory.
- We will cover:
 - Real Sensors (aka 'antennas')
 - Finite bandwidth
 - Rotating reference frames (source motion)
 - Finite time averaging
 - Local Oscillators and Frequency Downconversion
- But I won't discuss polarization, sensitivity or calibration.
 These are topics for following lectures.



Review

- In the previous lecture, I set down the principles of Fourier synthesis imaging.
- I showed:

$$V_{\nu}(\mathbf{b}) = R_C - iR_S = \iint I_{\nu}(s) e^{-2\pi i \nu \mathbf{b} \cdot \mathbf{s}/c} d\Omega$$

Where the intensity I_{ν} is a real function, and the visibility $V(\mathbf{b})$ is complex and Hermitian.

- The model used for the derivation was idealistic not met in practice. We presumed:
 - Idealized Sensors (no dependence on direction)
 - Monochromatic radiation
 - Stationary reference frame.
 - RF throughout



Real Sensors

- The idealized isotropic sensors assumed earlier don't exist.
- Real sensors (antennas) have a directional voltage gain pattern $A(\mathbf{s}, \mathbf{s}_0)$, where \mathbf{s} is a general direction, and \mathbf{s}_0 is a pointing direction.
- The gain pattern is (nominally) easily incorporated into the formalism, once we realize that it attenuates the actual sky brightness. We can write:


$$V_{\upsilon}(\mathbf{s}_0, \mathbf{b}) = \iint A_1(\mathbf{s}, \mathbf{s}_0) A_2^*(\mathbf{s}, \mathbf{s}_0) I_{\upsilon}(s) e^{-2\pi i \upsilon \cdot \mathbf{s}/c} d\Omega$$

- Here, A_1 and A_2 are the complex voltage gain functions for the two antennas. s_0 = pointing direction.
- Note that if the antennas are identical, and pointing in the same direction, then $A_1A_2^* = A^2$, the power gain response.
- The effect on the output image is an attenuated (modified) representation of the true sky.



Effect of Finite Bandwidth

- A baseline has a fixed physical length, B. But the fringe pattern depends on its length **in wavelengths**.
- Each slice of wavelength has a pattern with angular separation of $\sim \lambda/B$.
- Each component has a maximum at the n=0 fringe (meridional plane).
- They get increasingly out of step as n gets larger.
- A simple illustration three wavelength components from the same physical baseline.
- The net result is the sum over all components.
- Here, this is shown in the thick blue line.

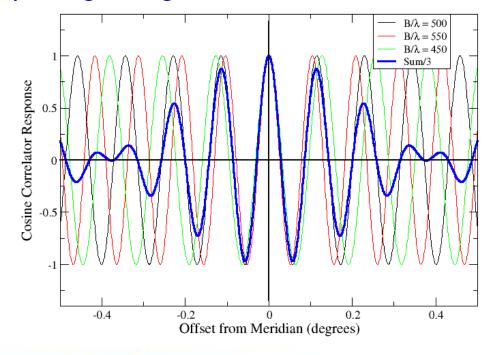




Bandwidth Effect (cont.)

 With more components (nine equal ones in this case), the summed response begins to look like a 'wave packet'.

Note that I added the nine components to make this response. In fact, the bandpass is not flat, and has phase variations — the actual sum is complex.

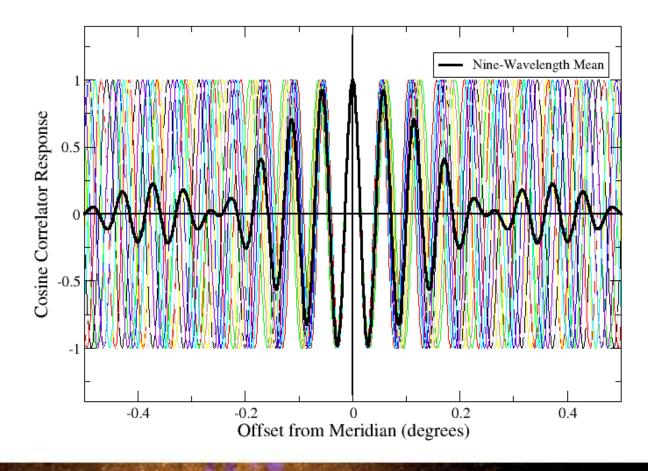



The Effect of Bandwidth -- Analysis.

• To find the finite-bandwidth response, we integrate our fundamental response over a frequency response G(v), of width Δv , centered at v_0

$$V = \int \left(\frac{1}{\Delta \nu} \int_{\nu_0 - \Delta \nu/2}^{\nu_0 + \Delta \nu/2} I(\mathbf{s}, \nu) G_1(\nu) G_2^*(\nu) e^{-i2\pi \nu \tau_g} d\nu \right) d\Omega$$

• If the source intensity does not vary over the bandwidth, and the instrumental gain parameters G_1 and G_2 are square and identical, then

$$V = \iint I_{\upsilon}(\mathbf{s}) \frac{\sin(\pi \tau_g \Delta \upsilon)}{\pi \tau_g \Delta \upsilon} e^{-2i\pi \nu_0 \tau_g} d\Omega = \iint I_{\upsilon}(\mathbf{s}) \operatorname{sinc}(\tau_g \Delta \upsilon) e^{-2i\pi \nu_0 \tau_g} d\Omega$$

where the **fringe attenuation function**, sinc(x), is defined as:

$$\operatorname{sinc}(x) = \frac{\sin(\pi x)}{\pi x}$$




Bandwidth Effect Example

For a square bandpass, the bandwidth attenuation reaches a null when

$$\tau_{\rm g}\Delta v = 1$$
, or $\sin\theta = \frac{\lambda}{B} \frac{B}{\Delta v} = \frac{c}{B\Delta v}$

- For the Jansky VLA, $\Delta v = 1$ MHz, and B = 35 km, (A configuration) then the null occurs at about 30 arcminutes off the meridian.
- A 10% loss in fringe amplitude occurs at an offset of ~7.5 arcminutes.
- This is a real loss of visibility amplitude because the effect depends on offset angle and baseline length, it effectively limits the resolution.

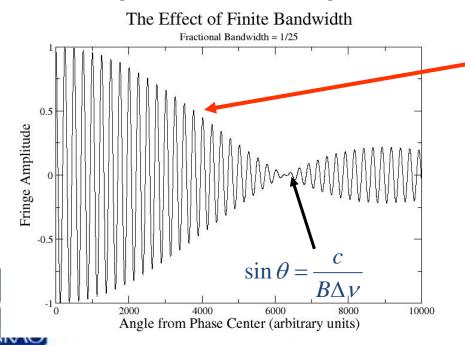

Fringe Attenuation function:

$$\operatorname{sinc}\left(\tau_{g}\Delta\upsilon\right) = \operatorname{sinc}\left(\frac{B\Delta\upsilon}{c}\sin\theta\right)$$

Number of fringes between peak and null:


$$N \sim \frac{c}{B\Delta \upsilon} \frac{B}{\lambda} \sim \frac{\upsilon}{\Delta \upsilon}$$

Observations off the Meridian


- In our basic scenario -- stationary source, stationary interferometer -- the effect of finite bandwidth will strongly attenuate the fringe amplitudes from sources far from the meridional plane.
- Since each baseline has its own plane, the only point on the sky free of attenuation for all baselines is a small angle around the zenith (presuming all baselines are coplanar).
- Hence, for our model interferometer, we can only observe objects within a few arcminutes of the zenith.
- Suppose we wish to observe an object far from the zenith?
- Best way is to shift the entire 'fringe packet' to the position of interest by adding time delay to the antenna closer to the source.



Adding Time Delay




$$\tau_0 = \mathbf{b} \cdot \mathbf{s}_0 / c$$



The entire fringe pattern has been shifted over by angle

$$\sin \theta = c\tau_0/b$$

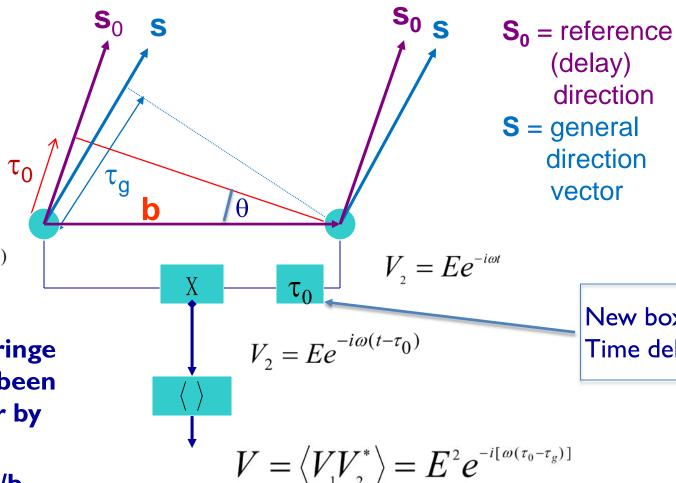

 $=E^{2}e^{i2\pi[\upsilon\mathbf{b}\cdot(\mathbf{s}-\mathbf{s}_{0})/c]}$

New box:

Time delay




Illustrating Delay Tracking


Top Panel:

Delay has been added and subtracted to move the delay pattern to the source location.

Bottom Panel:

A cosinusoidal sensor pattern is added, to illustrate losses from a fixed sensor.

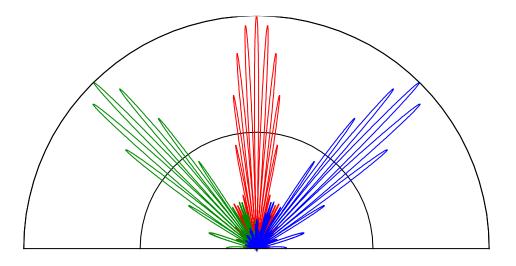

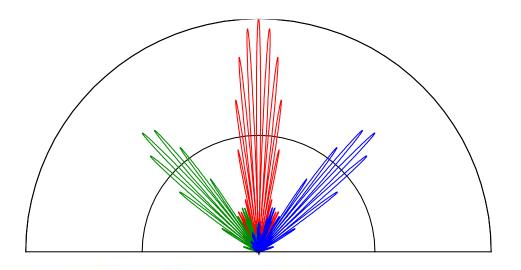



Observations from a Rotating Platform

- Real interferometers are built on the surface of the earth a rotating platform. From the observer's perspective, sources move across the sky.
- Since we know how to adjust the interferometer timing to move its coherence pattern to the direction of interest, it is a simple step to continuously move the pattern to follow a moving source.
- All that is necessary is to continuously add time delay, with an accuracy $\delta \tau \sim 1/10 \Delta v$ to minimize bandwidth loss.
- But there's one more issue to keep in mind, which is that of phase.



Phase Tracking ...

- Adding time delay will prevent bandwidth losses for observations off the baseline's meridian.
- Delay insertion is finite not continuously variable.
- Between delay settings, the source is moving through the interferometer pattern – a rapidly changing phase.
- The 'natural fringe rate' due to earth's rotation, is given by

$$v_f = u\omega_e \cos\delta$$
 Hz

- Where $u = B/\lambda$, the (E-W) baseline in wavelengths, and ω_e =7.3×10⁻⁵ rad/s is the angular rotation rate of the earth.
- For a million-wavelength baseline, $v_f \sim 70 \text{ Hz} \text{that's fast.}$
- If we leave things this way, we have to sample the output at at least twice this rate. A lot of data!

Following a Moving Object.

- There is **no useful information** in this fringe rate it's simply a manifestation of the platform rotation.
- Tracking, or 'stopping' the fringes greatly slows down the post-correlation data processing/archiving needs.
- To 'stop' the fringes, we must adjust the phase in one path.
- How fast:

- Tracking delay:
$$v_d >> \frac{\Delta v}{v} \frac{B}{\lambda} \omega_e \cos \delta \sim 1 \, \text{Hz}$$


- Tracking phase:
$$v_f >> \frac{B}{\lambda} \omega_e \cos \delta \sim 70 \text{ Hz}$$

- The rates given are appropriate for 35 km baselines, 128 MHz bandwidth, and 3 cm wavelength.
 - For the 'RF' interferometer, delay insertion does both.

Emphasis:

- Shown again is the fringe pattern of a real wide-band baseline.
- To preserve the visibility amplitude, we must re-set delays before the source moves too far down the pattern.
- To maintain a stable phase, we must reset the phase $\sim v/\delta v$ times faster.
- I'll mention later how this is done.

Source moves this way

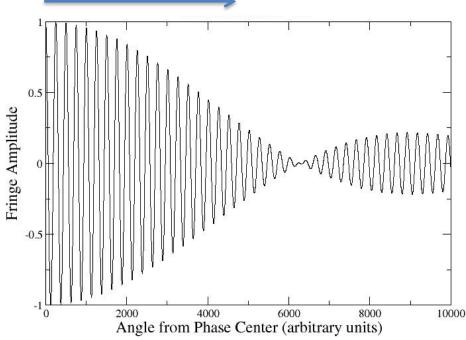

Maintaining phase stability requires much faster tracking than maintaining amplitude. The process is much easier if the phase adjustment can be done independently of delay.


Time Averaging Loss

- We can track a moving source, continuously adjusting the delay and phase to move the fringe pattern with the source.
- This does two good things:
 - Slows down the data recording needs
 - Prevents bandwidth delay losses.
- But, you cannot increase the time averaging indefinitely.
- The reason is that the fringe tracking mechanism is correct for only one point in the sky. All others have a different rate.
- So while you can reduce the fringe rate to zero for any given place, all other directions retain a differential rate.
- The limit to time averaging set by this differential.



Time-Smearing Loss Timescale

Simple derivation of fringe period, from observation at the NCP.

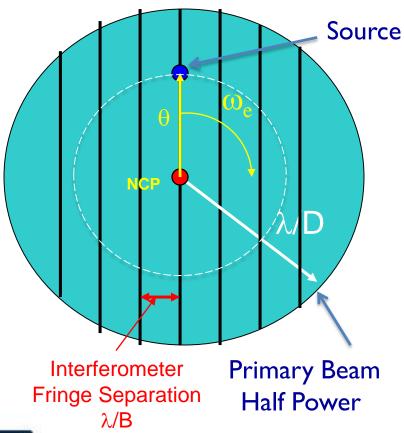

- Turquoise area is antenna primary beam on the sky – radius = λ/D
- Interferometer coherence pattern has spacing = λ/B
- Sources in sky rotate about NCP at angular rate:

$$\omega_e$$
 =7.3x10⁻⁵ rad/sec.

 Minimum time taken for a source to move by λ/B at angular distance θ is:

$$t = \frac{\lambda}{B} \frac{1}{\omega_E \theta}$$

 $t = \frac{\lambda}{B} \frac{1}{\omega_E \theta}$ • For a source at the beam half power, $\theta = \lambda/D$, so at that radius:

$$t = \frac{D}{B} \frac{1}{\omega_E}$$


• For the VLA in A configuration, t~10 seconds.



Illustrating Time Averaging Loss

- An object located away from the fringe tracking center moves through the fringe pattern as the earth rotates.
- It makes one cycle around in 24 hours.
- If we average the correlation products for too long a period, a loss in fringe amplitude will result.

Illustrating time average loss.
Blue trace: the fringe amplitude with no averaging.
Red trace: Amplitude after averaging for 12 'samples'.

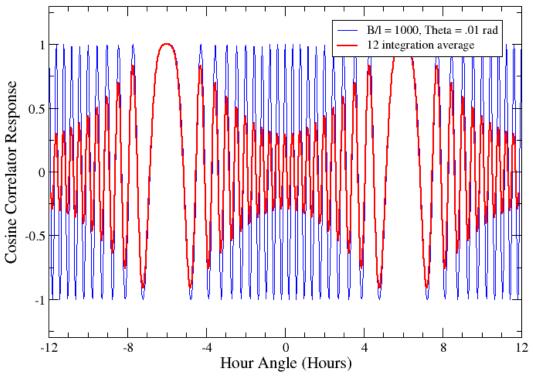



Time-Averaging Loss


- So, what kind of time-scales are we talking about now?
- How long can you integrate before the differential motion destroys the fringe amplitude?
- Case A: A 25-meter parabaloid, and 35-km baseline:
 - $t = D/(B\omega_e) = 10$ seconds. (independent of observing frequency).
- Case B: Whole Hemisphere for a 35-km baseline:
 - $-t = \lambda/(B\omega_e)$ sec = 83 msec at 21 cm.
- Averaging for durations longer than these will cause severe attenuation of the visibility amplitudes.
- To prevent 'delay losses', your averaging time must be much less than this.
 - Averaging time I/I0 of this value normally sufficient to prevent time
 loss.

The Heterodyne Interferometer: LOs, IFs, and Downcoversion

- This would be the end of the story (so far as the fundamentals are concerned) if all the internal electronics of an interferometer would work at the observing frequency (often called the 'radio frequency', or RF).
- Unfortunately, this cannot be done in general, as high frequency components are much more expensive, and generally perform more poorly than low frequency components.
- Thus, most radio interferometers use 'down-conversion' to translate the radio frequency information from the 'RF' to a lower frequency band, called the 'IF' in the jargon of our trade.
- For signals in the radio-frequency part of the spectrum, this can be done with almost no loss of information.
- But there is an important side-effect from this operation in interferometry which we now review.

Downconversion


At radio frequencies, the spectral content within a passband can be shifted – with almost no loss in information, to a lower frequency through multiplication by a 'LO' signal.

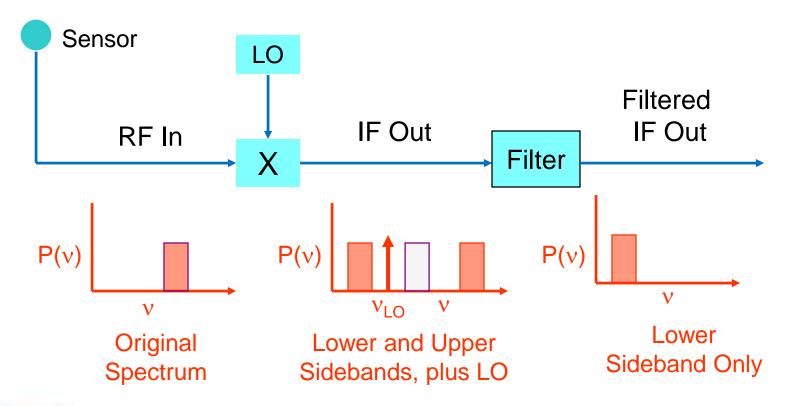

This operation preserves the amplitude and phase relations

Signal Relations, with LO Downconversion

- The RF signals are multiplied by a pure sinusoid, at frequency v_{LO}
- We can add arbitrary phase $\phi_{1,0}$ on one side.

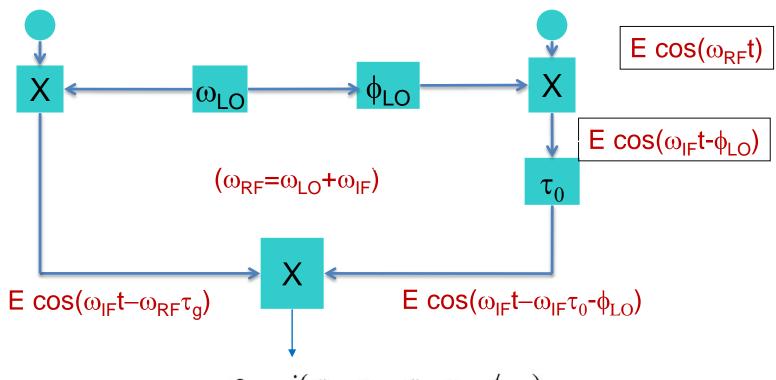



Recovering the Correct Visibility Phase

- Unfortunately, this downconversion process changes the phase of the correlated product. To see this, note:
- The correct phase (RF interferometer) is:

$$\omega_{RF}(au_{g}- au_{0})$$

The observed phase, with frequency downconversion is:

$$\omega_{_{RF}} au_{_{g}}-\omega_{_{IF}} au_{_{0}}-\phi_{_{LO}}$$

These will be the same when the LO phase is set to:

$$\phi_{LO} = \omega_{LO} \tau_{0}$$

- Thus, to retrieve the correct phase, we must adjust the LO phase.
- This is necessary because the delay, τ_0 , has been added in the IF portion of the signal path, rather than at the RF frequency at which the delay actually occurs.
- The phase adjustment of the LO compensates for the delay having been inserted at the IF, rather than at the RF.

The Three 'Centers' in Interferometry

- You are forgiven if you're confused by all these 'centers'.
- So let's review:
- 1. Beam Tracking (Pointing) Center: Where the antennas are pointing to. (Or, for phased arrays, the phased array center position).
- 2. Delay Tracking Center: The location for which the delays are being set for maximum wide-band coherence.
- 3. Phase Tracking Center: The location for which the system phase is slipping in order to track the coherence pattern.
- Note: Generally, we make all three the same. #2 and #3 are the same for an 'RF' interferometer. They are separable in a O downconversion system.