

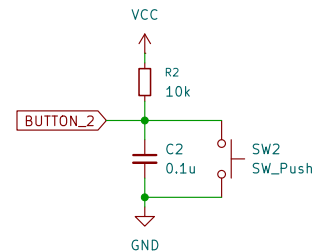
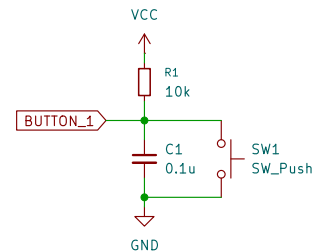


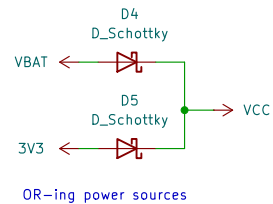

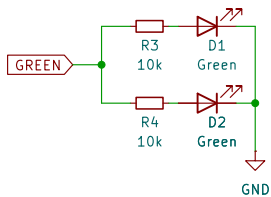


test points for all GPIOs
in case of bodes

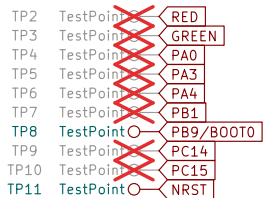

NO NEED TO WIRE VBAT TO A GPIO
we'll use internal ADC and Vref

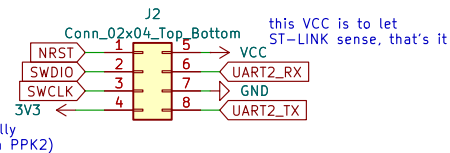

Sheet: /		
File: water_timer_revB.kicad_sch		
Title:		
Size: A4	Date:	Rev:
KiCad E.D.A. 10.0.4		Id: 1/1