


LUZSTA

40LED 3IN1 RGB WASH LIGHT BAR

USER MANUAL

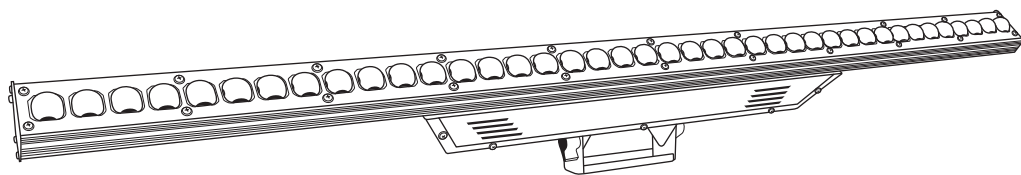

@2023 LUZSTA all rights reserved. Information, specifications, diagrams, images, and instructions herein are subject to change without notice. LUZSTA logo and identifying product names and numbers herein are trademarks of LUZSTA. Copyright protection claimed includes all forms and matters of copyrightable materials and information now allowed by statutory or judicial law or hereinafter granted. Product names used in this document may be trademarks or registered trademarks of their respective companies and are hereby acknowledged. All non-LUZSTA brands and product names are trademarks or registered trademarks of their respective companies.

LUZSTA and all affiliated companies hereby disclaim any and all liabilities for property, equipment, building, and electrical damages, injuries to any persons, and direct or indirect economic loss associated with the use or reliance of any information contained within this document, and/or as a result of the improper, unsafe, insufficient and negligent assembly, installation, rigging, and operation of this product.

LUZSTA PRODUCTS CUSTOMER SUPPORT

Contact LUZSTA Service for any product related service and support needs. Also visit website with Amazon Service: questions, comments or suggestions.

Tel: + 86 13691771096 / Email: doubles_online_service@outlook.com

Europe Energy Saving Notice

Energy Saving Matters (EuP 2009/125/EC)

Saving electric energy is a key to help protecting the environment. Please turn off all electrical products when they are not in use. To avoid power consumption in idle mode, disconnect all electrical equipment from power when not in use. Thank you!

CONTENTS

GENERAL INFORMATION	4
OVERVIEW.....	7
INSTALLATION.....	7
CONTROL PANEL.....	9
SYSTEM MENU.....	9
CONFIGURATION(STAND ALONE).....	10
DMX SETUP	12
DMX TRAITS.....	14
LED PIXEL ZONES.....	18
DAISY CHAIN POWER LINKING.....	18
CLEANING AND MAINTENANCE.....	19
SPECIFICATIONS.....	20

GENERAL INFORMATION

INTRODUCTION

Please read and understand the instructions in this manual carefully and thoroughly before attempting to operate this device. These instructions contain important safety and use information.

UNPACKING

Every device has been thoroughly tested and has been shipped in perfect operating condition. Carefully check the shipping carton for damage that may have occurred during shipping. If the carton is damaged, carefully inspect the device for damage, and be sure all accessories necessary to install and operate the device have arrived intact. In the event damage has been found or parts are missing, please contact our customer support team for further instructions. Please do not return this device to your dealer without first contacting customer support. Please do not discard the shipping carton in the trash. Please recycle whenever possible.

CUSTOMER SUPPORT

Contact LUZSTA Service for any product related service and support needs. You may also contact us for any comments or suggestions.

LUZSTA SERVICE USA - Monday - Friday 9:00am to 6:00pm PST

REPLACEMENT PARTS please contact our customer service's email:
doubles_online_service@outlook.com



IMPORTANT NOTICE!

THERE ARE NO USER SERVICEABLE PARTS INSIDE THIS UNIT.

DO NOT ATTEMPT ANY REPAIRS YOURSELF; DOING SO WILL VOID YOUR MANUFACTURER'S WARRANTY. DAMAGES RESULTING FROM MODIFICATIONS TO THIS FIXTURE AND/OR THE DISREGARD OF SAFETY INSTRUCTIONS AND GUIDELINES IN THIS MANUAL VOID THE MANUFACTURER'S WARRANTY AND ARE NOT SUBJECT TO WARRANTY CLAIMS AND/OR REPAIRS.

WARRANTY REGISTRATION

The 40LED 3IN1 RGB wash light bar carries 1 year limited warranty and 30-days returned policy by default. All returned service items, whether under warranty or not, must be contact us in advance and accompanied by a order number (Amazon order or others channel you bought). After LUZSTA agree your return, order number must be clearly written on the outside of the return package and a brief description of the problem as well as the order number must also be written down on a piece of paper included in the shipping carton. If the unit is under warranty, you must provide a copy of your proof of purchase invoice or order screenshot and please contact LUZSTA Products Service Department at doubles_online_service@outlook.com / +86 13691771096 in advance.

FEATURES

The 40LED 3IN1 RGB Wash Light Bar is a compact and lightweight LED Bar with 40 x 3-Watt, 3-IN-1 (RGB) LEDs. Great LED Bar for wash lighting lounges, clubs, stages and venues. The red, green and blue (RGB) LEDs offer a huge palette of colors to choose from via DMX, or set the fixture to one of the many built-in in operational modes and let the light bar RGB LED paint the room with color.

INCLUDED ITEMS

- 1 x 40LED 3in1 RGB Wash Light Bar
- 1 x Power Cable
- 1 x Yoke
- 2 x Knobs & Screws
- 1 x User Manual

IP RATING

This device is IP20 rated. This means that the unit is protected against the intrusion of solids approximately the size of an adult finger (2.5mm) or larger, but the unit is not protected against water or liquid intrusion of any kind

Claims

If the box or the contents (the product and included accessories) appear damaged from shipping, or show signs of mishandling, notify the carrier immediately, not LUZSTA. Failure to report damage to the carrier immediately may invalidate your claim. In addition, keep the box and contents for inspection.

For other issues, such as missing components or parts, damage not related to shipping, or concealed damage, file a claim with LUZSTA within 7 days of delivery.

Limited Warranty Periods

- LED Products = 1-year (365 days)


SAFETY GUIDELINES

This fixture is composed of sophisticated electronic components. To guarantee smooth operation, it is important to follow all instructions and guidelines in this manual. LUZSTA is not responsible for injury and/or damages resulting from the misuse of this fixture due to the disregard of the information printed in this manual. Any modifications to the fixture and/or the included mounting hardware will void the original manufacturer's warranty and increase the risk of damage and/or personal injury.

- Protection class 1 - fixture must be properly grounded.
- There are no user serviceable parts inside this unit.

- Do not attempt any repairs yourself; doing so will void your manufacturer's warranty. Damages resulting from modifications to this fixture and/or the disregard of safety instructions and guidelines in this manual void the manufacturer's warranty and are not subject to any warranty claims and/or repairs.
- Do not plug fixture into a dimmer pack!
- Never open this fixture while in use!
- Unplug power before servicing fixture!
- Never touch fixture during operation, as it may be hot!
- Keep flammable materials away from fixture!
- Never look directly into the light source!
- Retina injury risk - may induce blindness!
- Sensitive persons may suffer an epileptic shock!
- Indoor / dry locations use only!
- Do not expose fixture to rain and moisture!
- Minimum distance to objects/surfaces is 1.6 feet (0.5 meters)
- Minimum distance to flammable materials from the surface is 8.5 inches (20 centimeters).
- Do not touch the fixture housing during operation. Turn off the power and allow approximately 15 minutes for the fixture to cool down before serving.
- Do not shake fixture, and avoid brute force when installing and/or operating fixture.
- Do not operate fixture if the power cord is frayed, crimped, damaged and/or if any of the power cord connectors are damaged and do not insert into the fixture securely with ease. Never force a power cord connector into the fixture. If the power cord or any of its connectors are damaged, replace it immediately with a new one of the same power rating.
- Do not block any air ventilation slots. All fan and air inlets must remain clean and never blocked. Allow approx. 20" (50cm) between fixture and other devices or a wall for proper cooling.
- When installing fixture in a suspended environment, always use mounting hardware that is no less than m10 x 25 mm, and always install fixture with an appropriately rated safety cable.
- Always disconnect fixture from main power source before performing any type of service and/or cleaning procedure.
- Only handle the power cord by the plug end. Never pull out the plug by tugging the wire portion of the cord.
- During the initial operation of this fixture, a light smoke or smell may emit from the interior of the fixture. This is a normal process and is caused by excess paint in the interior of the casing burning off from the heat associated with the lamp and will decrease gradually over time.
- Consistent operational breaks will ensure fixture will function properly for many years.
- Only use original packaging and materials to transport the fixture in for service.

OVERVIEW

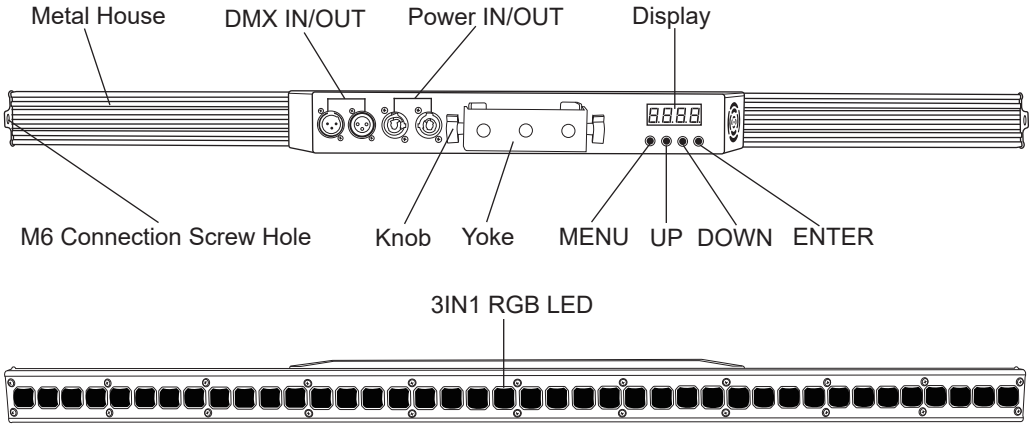

INSTALLATION



FLAMMABLE MATERIAL WARNING

Keep fixture minimum 8.5in. (22cm) away from flammable materials and/or pyrotechnics.



ELECTRICAL CONNECTIONS

A qualified electrician should be used for all electrical connections and/or installations.



MINIMUM DISTANCE TO OBJECTS/SURFACES IS 1.6 FEET (0.5 METERS).

MINIMUM DISTANCE OF INFLAMMABLE MATERIALS FROM THE SURFACE IS 8.5 IN. (22 CM).

DO NOT INSTALL THE FIXTURE IF YOU ARE NOT QUALIFIED TO DO SO!

- Fixture **MUST** be installed following all local, national, and country commercial electrical and construction codes and regulations.
- Before rigging/mounting a single fixture or multiple fixtures to any metal truss/structure or placing the fixture(s) on any surface, a professional equipment installer **MUST** be consulted to determine if the metal truss/structure or surface is properly certified to safely hold the combined weight of the fixture(s), clamps, cables, and accessories.


- Maximum ambient operating temperature is 122°F (50°C). Do not use fixture when ambient temperature exceeds this value.
- Fixture(s) should be installed outside walking paths, seating areas, or areas where unauthorized personnel might reach the fixture by hand.
- NEVER stand directly below the fixture(s) when rigging, removing, or servicing.
- Overhead fixture installation must always be secured with a secondary safety attachment, such as an appropriately rated safety cable.
- Allow approximately 15 minutes for the fixture to cool down before servicing.

RIGGING


Overhead rigging requires extensive experience, including calculating working load limits, knowledge of installation material being used, and periodic safety inspection of all installation material and the fixture, among other skills. If you lack these qualifications, do not attempt the installation yourself. Improper installation can result in bodily injury.

CLAMP INSTALLATION

This fixture features a mounting point on the yoke for the attachment of a mounting clamp. When mounting the fixture to a truss or any other suspended or overhead installation, be sure to secure appropriately rated clamps (not included) to the yoke

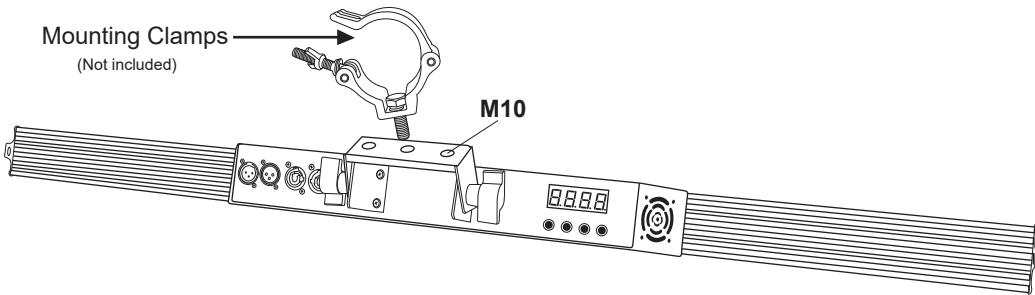

MULTIPLE LIGHTS CONNECTION INSTALLATION

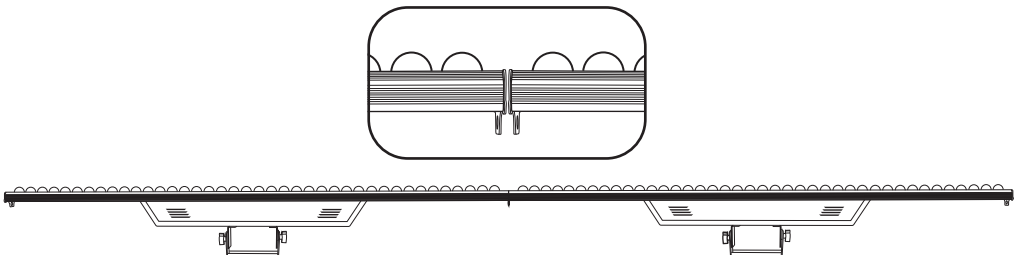


The fixture is fully operational in three different mounting positions: hanging upside-down, mounted sideways on trussing.

Always use an appropriately rated safety cable as a safety measure to prevent accidental damage and/or injury in the event the clamp fails. Never use the carrying handles for secondary attachment.

CONTROL PANEL

The fixture includes an easy to navigate system menu control panel display where all necessary settings and adjustments are made.

- **MENU:** Leave current menu and return to previous menu level.
- **UP:** Scroll up in currently displayed menu.
- **DOWN:** Scroll down in currently displayed menu.
- **ENTER:** Select an option or confirm a selection.

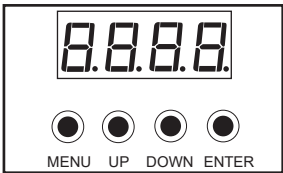

SYSTEM MENU

Mode	Display	Value	Options	Function
DMX Address	AXXX	001-512		Set DMX Address
DMX Channel	XXCH	3/4/6/7/8/12/13/24/ 25/60/61/120/121		Select DMX Channel
Red Dimming	rXXX	000-255		Red Dimming, 0% to 100%
Green Dimming	GXXX	000-255		Green Dimming, 0% to 100%
Blue Dimming	bXXX	000-255		Blue Dimming, 0% to 100%
Strobe Speed	FXXX	000-004		No Function
		005-255		Set Strobe Speed, slow to fast
Color Change Speed	CCXX	000-255		Set Color Change Speed, slow to fast

Color Fading 1	dEXX	01-15		Color Fading 1 and Speed (slow to fast)
Color Fading 2	CPXX	01-15		Color Fading 2 and Speed (slow to fast)
Static Color and single color fading	CLXX	01-07		Static Color
		08-15	SP01-15	Fading colors and speed
Auto programs	EX-Y	X: 1-9 , A-F	SP01-15	15 auto programs and program speed
		Y: 1-8		auto program colors
Sound -active	SUDX	1-3	SE01-15	3 sound active modes and sound sensitivity

CONFIGURATION(STAND ALONE)

Use standalone configuration to operate the product without a DMX controller.

DMX Address

DMX address mode can set the DMX address for the light.

1. Press the "MENU" button until the LCD screen displays "AXXX"
2. Press "UP" and "DOWN" to set the DMX address

DMX Channel

DMX channel mode allows the light to select different channel modes.

1. Press the "MENU" button until the LCD screen displays "XXCH"
2. Press "UP" and "DOWN" to select DMX channel

Red, Green, Blue Brightness

Red, green, blue dimming mode allows the brightness of red, green, and blue to be adjusted without a DMX controller.

1. Press the "MENU" button until the LCD screen displays "rXXX", "GXXX" or "bXXX"
2. Press "UP" and "DOWN" to set the dimming of red/green/blue

Color Strobe

Color strobe mode allows strobe speed adjustment without a DMX controller.

1. Press the "MENU" button until the LCD screen displays "FXXX"
2. Press "UP" and "DOWN" to set the color strobe speed

Color Changing

Color changing mode allows the speed adjustment of color jump without a DMX controller.

1. Press the "MENU" button until the LCD screen displays "CCXX"
2. Press "UP" and "DOWN" to set the color change speed

Color Fade

Color fade mode allows the speed adjustment of color gradients without a DMX controller.

1. Press the "MENU" button until the LCD screen displays "dEXX" or "CPXX"
2. Press "UP" and "DOWN" to set the color fade speed

Static Color

Static color mode allows static color settings without a DMX controller.

1. Press the "MENU" button until the LCD screen displays "CLXX"
2. Press "UP" and "DOWN" to set the static color(01-07)
3. When "XX" is between 8-15, it means entering breathing mode. Press "ENTER" to enter speed setting.
4. Press "UP" and "DOWN" to set the speed.

Auto Run

Automatic mode allows automatic mode colors and speeds to be controlled without a DMX controller.

1. Press the "MENU" button until the LCD screen displays "EX-Y"
2. Press the "UP" button to control the value of "X", press the "DOWN" button to control the value of "Y".
3. Press the "ENTER" button to enter the auto program speed setting
4. Press "UP" and "DOWN" to set the speed

Sound Activated

Sound activated mode allows the setting of sound controlled light change modes and sound sensitivity without a DMX controller.

1. Press the "MENU" button until the LCD screen displays "SudX"
2. Press the "UP" and "DOWN" to select sound activated mode
3. Press the "ENTER" button to enter the sound sensitivity setting
4. Press "UP" and "DOWN" to set sound sensitivity

Master-Slave Mode

Please note that when using the stage light as a slave, the device will not automatically switch to slave mode. You need to manually adjust the settings to enable the slave function. Follow the steps below:

Slave Units:

1. Press the "MENU" button repeatedly until "AXXX" shows on the display
2. Set the DMX address to "A001" to activate slave mode
3. Press the "ENTER" button to save the selection

Make sure all slave devices are set up in the same steps to ensure they can work in harmony.

Master Units:

set the master unit to operate in a standalone mode.

make the master unit the first unit in the daisy chain

Note:

The master is the one that runs a program whether in Auto , or Static Color mode.

Do not connect a DMX controller to the products configured for Master/Slave operation. The DMX controller may interfere with signals from the master. The master should be the first product in the daisy chain.


DMX SETUP

DMX-512: DMX is short for Digital Multiplex. This is a universal protocol used as a form of communication between intelligent fixtures and controllers. A DMX controller sends DMX data instructions from the controller to the fixture. DMX data is sent as serial data that travels from fixture to fixture via the DATA "IN" and DATA "OUT" XLR terminals located on all DMX fixtures (most controllers only have a DATA "OUT" terminal).

DMX Linking: DMX is a language allowing all makes and models of different manufacturers to be linked together and operate from a single controller, as long as all fixtures and the controller are DMX compliant. To ensure proper DMX data transmission, try to use the shortest cable path possible when using several DMX fixtures. The order in which fixtures are connected in a DMX line does not influence the DMX addressing. For example, a fixture assigned a DMX address of 1 may be placed anywhere in a DMX line: at the beginning, at the end, or anywhere in the middle. When a fixture is assigned a DMX address of 1, the DMX controller knows to send DATA assigned to address 1 to that unit, no matter where it is located in the DMX chain.

Data Cable (DMX Cable) Requirements (For DMX Operation): The strobe wash light can be controlled via DMX-512 protocol, and features multiple DMX channel modes. Your unit and your DMX controller require a 3-pin XLR connector for data input and data output. If you are making your own cables, be sure to use standard 110-120 Ohm shielded cable (This cable may be purchased at almost all pro lighting stores). Your cables should be made with a male XLR connector at one end and a female XLR connector on the other. Also remember that DMX cable must be daisy chained and cannot be split.

Special Note: Line Termination. When longer runs of cable are used, you may need to use a terminator on the last unit to avoid erratic behavior. A terminator is a 110-120 ohm 1/4 watt resistor which is connected between pins 2 and 3 of a male XLR connector (DATA + and DATA -). This unit is inserted in the female XLR connector of the last unit in your daisy chain to terminate the line.

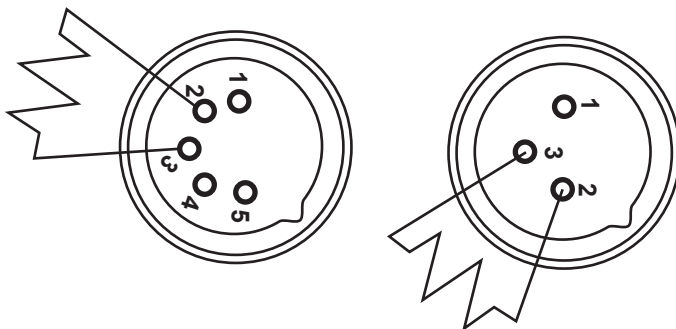

DMX ADDRESSING

All fixtures should be given a DMX starting address when operating with a DMX controller, in order to ensure that the correct fixture responds to the correct control signal. This digital starting address is the channel number from which the fixture starts to “listen” to the digital control signal sent out from the DMX controller. The assignment of this starting DMX address is achieved by setting the correct DMX address on the digital control display on the fixture.

You can set the same starting address for all fixtures or a group of fixtures, or set different addresses for each individual fixture. Setting all fixtures to the same DMX address will cause all fixtures to react in the same way. In this case, please note that changing the settings of one channel will affect all the fixtures simultaneously.

If you set each fixture to a different DMX address, each unit will “listen” starting at the channel number you have set, based on the quantity of DMX channels of each fixture. That means changing the settings of one channel will only affect the selected fixture.

As an example, when operating this device in 3 channel mode, you should set the starting DMX address of the first unit to 1, the second unit to 4 ($1 + 3$), the third unit to 7 ($4 + 3$), and so on. (See the chart below for more details.)

ChannelUnit	1 Address	Unit 2 Address	Unit 3 Address
3	1	4	7
4	1	5	9
6	1	7	13
7	1	8	15
8	1	9	17
12	1	13	25
13	1	14	27
24	1	25	49
25	1	26	51
60	1	61	121
61	1	62	123
120	1	121	
121	1	122	

DMX TRAITS

3 Channel:

Channel	Value	Function
1	000-255	RED Dimming, 0% to 100%
2	000-255	Green Dimming, 0% to 100%
3	000-255	Blue Dimming, 0% to 100%

4 Channel:

Channel	Value	Function
1	000-255	Master Dimming, 0% to 100%
2	000-255	Red Dimming, 0% to 100%
3	000-255	Green Dimming, 0% to 100%
4	000-255	Blue Dimming, 0% to 100%

6 Channel:

Channel	Value	Function
1	000-255	R1 Dimming, 0% to 100%
2	000-255	G1 Dimming, 0% to 100%
3	000-255	B1 Dimming, 0% to 100%
4	000-255	R2 Dimming, 0% to 100%
5	000-255	G2 Dimming, 0% to 100%
6	000-255	B2 Dimming, 0% to 100%

7 Channel:

Channel	Value	Function
1	000-255	Master Dimming, 0% to 100%
2	000-255	R1 Dimming, 0% to 100%
3	000-255	G1 Dimming, 0% to 100%
4	000-255	B1 Dimming, 0% to 100%
5	000-255	R2 Dimming, 0% to 100%
6	000-255	G2 Dimming, 0% to 100%
7	000-255	B2 Dimming, 0% to 100%

8 Channel:

Channel	Value	Function
1	000-255	Master Dimming, 0% to 100%
2	000-004	No Function
	005-255	Strobe Speed, Slow to Fast

3	000-009	Static Color, CH6-8 Control Color
	010-019	Static Color, CH5 Control Color
	020-029	Color Fading 1, CH5 Control Color
	030-039	Color Changing
	040-049	Color Fading 2
	050-059	Color Fading 3
	060-069	Auto Program 1, CH5 Control Color
	070-079	Auto program 2, CH5 Control Color
	080-089	Auto program 3, CH5 Control Color
	090-099	Auto program 4, CH5 Control Color
	100-109	Auto program 5, CH5 Control Color
	110-119	Auto program 6, CH5 Control Color
	120-129	Auto program 7, CH5 Control Color
	130-139	Auto program 8, CH5 Control Color
	140-149	Auto program 9, CH5 Control Color
	150-159	Auto program 10, CH5 Control Color
	160-169	Auto program 11, CH5 Control Color
	170-179	Auto program 12, CH5 Control Color
	180-189	Auto program 13, Preset color
	190-199	Auto program 14, Preset color
	200-209	Auto program 15, CH5 Control Color
	210-219	Sound Activated 1
	220-229	Sound Activated 2
	230-255	Sound Activated 3
4	000-255	Program Speed(slow to fast), when CH3 are 020-209
	000-255	Sound Sensitivity(low to high), when CH3 are 210-255
5	000-029	Color 1
	030-059	Color 2
	060-089	Color 3
	090-119	Color 4
	120-149	Color 5
	150-179	Color 6
	180-209	Color 7
	210-255	Cycle trough color 1-7, when CH3 are 020-029, 060-179, 200-209 Color 7, when CH3 are 010-019
6	000-255	Red Dimming, 0% to 100%
7	000-255	Green Dimming, 0% to 100%
8	000-255	Blue Dimming, 0% to 100%

12 Channel:

Channel	Value	Function
1	000-255	R1 Dimming, 0% to 100%
2	000-255	G1 Dimming, 0% to 100%
3	000-255	B1 Dimming, 0% to 100%
.....		
10	000-255	R4 Dimming, 0% to 100%
11	000-255	G4 Dimming, 0% to 100%
12	000-255	B4 Dimming, 0% to 100%

13 Channel:

Channel	Value	Function
1	000-255	Master Dimming, 0% to 100%
2	000-255	R1 Dimming, 0% to 100%
3	000-255	G1 Dimming, 0% to 100%
4	000-255	B1 Dimming, 0% to 100%
.....		
11	000-255	R4 Dimming, 0% to 100%
12	000-255	G4 Dimming, 0% to 100%
13	000-255	B4 Dimming, 0% to 100%

24 Channel:

Channel	Value	Function
1	000-255	R1 Dimming, 0% to 100%
2	000-255	G1 Dimming, 0% to 100%
3	000-255	B1 Dimming, 0% to 100%
.....		
22	000-255	R8 Dimming, 0% to 100%
23	000-255	G8 Dimming, 0% to 100%
24	000-255	B8 Dimming, 0% to 100%

25 Channel:

Channel	Value	Function
1	000-255	Master Dimming, 0% to 100%
2	000-255	R1 Dimming, 0% to 100%
3	000-255	G1 Dimming, 0% to 100%
4	000-255	B1 Dimming, 0% to 100%
.....		
23	000-255	R8 Dimming, 0% to 100%
24	000-255	G8 Dimming, 0% to 100%
25	000-255	B8 Dimming, 0% to 100%

60 Channel:

Channel	Value	Function
1	000-255	R1 Dimming, 0% to 100%
2	000-255	G1 Dimming, 0% to 100%
3	000-255	B1 Dimming, 0% to 100%
.....		
58	000-255	R20 Dimming, 0% to 100%
59	000-255	G20 Dimming, 0% to 100%
60	000-255	B20 Dimming, 0% to 100%

61 Channel:

Channel	Value	Function
1	000-255	Master Dimming, 0% to 100%
2	000-255	R1 Dimming, 0% to 100%
3	000-255	G1 Dimming, 0% to 100%
4	000-255	B1 Dimming, 0% to 100%
.....		
59	000-255	R20 Dimming, 0% to 100%
60	000-255	G20 Dimming, 0% to 100%
61	000-255	B20 Dimming, 0% to 100%

120 Channel:

Channel	Value	Function
1	000-255	R1 Dimming, 0% to 100%
2	000-255	G1 Dimming, 0% to 100%
3	000-255	B1 Dimming, 0% to 100%
.....		
118	000-255	R40 Dimming, 0% to 100%
119	000-255	G40 Dimming, 0% to 100%
120	000-255	B40 Dimming, 0% to 100%

121 Channel:

Channel	Value	Function
1	000-255	Master Dimming, 0% to 100%
2	000-255	R1 Dimming, 0% to 100%
3	000-255	G1 Dimming, 0% to 100%
4	000-255	B1 Dimming, 0% to 100%
.....		
119	000-255	R40 Dimming, 0% to 100%
120	000-255	G40 Dimming, 0% to 100%
121	000-255	B40 Dimming, 0% to 100%

LED PIXEL ZONES

6 and 7 Channel Mode:

RGB1	RGB2
------	------

12 and 13 Channel Mode:

RGB1	RGB2	RGB3	RGB4
------	------	------	------

24 and 25 Channel Mode:

RGB1	RGB2	RGB3	RGB4	RGB5	RGB6	RGB7	RGB8
------	------	------	------	------	------	------	------

60 and 61 Channel Mode:

R G B 1	R G B 2	R G B 3	R G B 4	R G B 5	R G B 6	R G B 7	R G B 8	R G B 9	R G B 10	R G B 11	R G B 12	R G B 13	R G B 14	R G B 15	R G B 16	R G B 17	R G B 18	R G B 19	R G B 20
------------------	------------------	------------------	------------------	------------------	------------------	------------------	------------------	------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

120 and 121 Channel Mode:

R G B 1	R G B 2	R G B 3	R G B 4	R G B 5	R G B 6	R G B 7	R G B 8	R G B 9	...	...	R G B 32	R G B 33	R G B 34	R G B 35	R G B 36	R G B 37	R G B 38	R G B 39	R G B 40
------------------	------------------	------------------	------------------	------------------	------------------	------------------	------------------	------------------	-----	-----	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

DAISY CHAIN POWER LINKING

These units have the capability to be daisy chained together via the power in/out ports. The maximum number of units that can be linked together in this manner is as follows:

- 6 units maximum when running on 110V power.

DO NOT EXCEED THE NUMBER OF UNITS LISTED ABOVE.

DO NOT MIX MAKE AND MODEL TYPES WHEN DAISY CHAINING! All units that are connected in this manner must be of the same make and model type.

CLEANING AND MAINTENANCE

DISCONNECT POWER BEFORE PERFORMING ANY MAINTENANCE!

CLEANING

Frequent cleaning is recommended to ensure proper function, optimized light output, and an extended life. The frequency of cleaning depends on the environment in which the fixture operates: damp, smoky, or particularly dirty environments can cause greater accumulation of dirt on the fixture's optics. Clean the external lens surface periodically with a soft cloth to avoid dirt/debris accumulation.


NEVER use alcohol, solvents, or ammonia-based cleaners.

MAINTENANCE

Regular inspections are recommended to ensure proper function and extended life. There are no user serviceable parts inside this fixture. Please refer to the following points during routine inspections:

- A detailed electrical check by an approved electrical engineer every three months, to make sure the circuit contacts are in good condition and prevent overheating.
- Be sure all screws and fasteners are securely tightened at all times. Loose screws may fall out during normal operation, resulting in damage or injury as larger parts could fall.
- Check for any deformations on the housing, color lenses, rigging hardware, and rigging points (ceiling, suspension, trussing). Deformations in the housing could allow for dust or liquids to go into the fixture. Damaged rigging points or unsecured rigging could cause fixture to fall and seriously injure a person(s).
- Electric power supply cables must not show any damage, material fatigue, or sediments.

DIMENSIONS

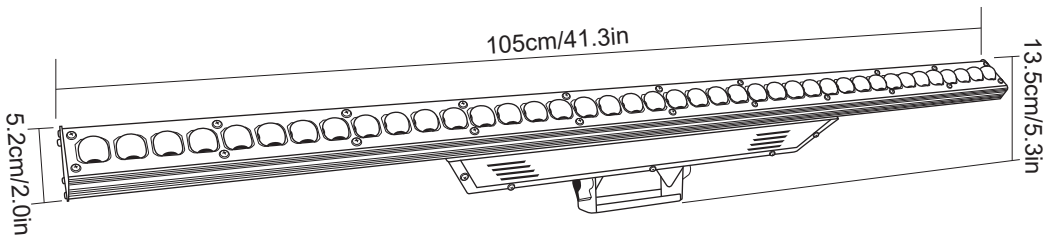

SPECIFICATIONS

- Light source: 40 x 3W RGB 3IN1 3535 LEDs
- Input Voltage:100-240V, 50Hz/60Hz
- Beam Angle:5 Degree
- Lifespan: 50,000 Hour Average LED Life
- DMX Modes: 3, 4, 6, 7, 8, 12, 13, 24, 25, 60, 61, 120 and 121 channels
- Dimming: 0-100% Smooth Dimming
- Display: 4-button display
- DMX connectors: 3-pin DMX In/Out
- Power connectors: locking power in/out