Disassembling a Stock (Tungsten) Triad Drive


1) Undo the screws at the top (holding the cable bracket and body together) and bottom (holding the foot on to the body).



2) Use gentle pressure on both ends to push the body off of the motor and foot dovetails.



3) Remove the foot, keeping the girder in place.

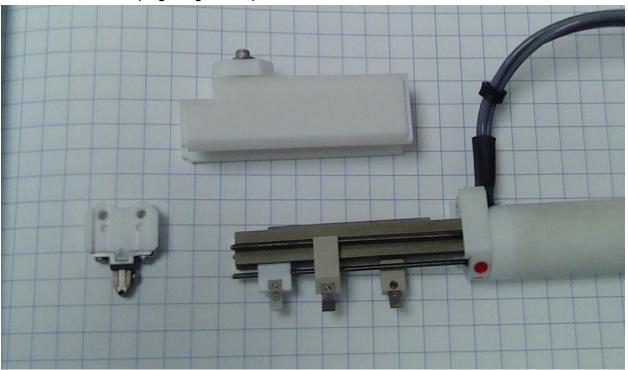

- 4) Reinstall the body without the foot present (this helps keep the arms on the girder).
- 5) Advance the arms off the ends of their threaded rods.

For reassembly:

- Check the threaded rod threads for fouling before reassembly.
- Apply a small amount of silicone oil to the threaded holes in the arms and to the threaded rods as-needed.
- When reinstalling the body, make sure the body is snug against the girder (i.e. that the girder is all the way back against the body). Otherwise the arms can jam.