


16X20 GABLE PAVILION

© MyOutdoorPlans.com



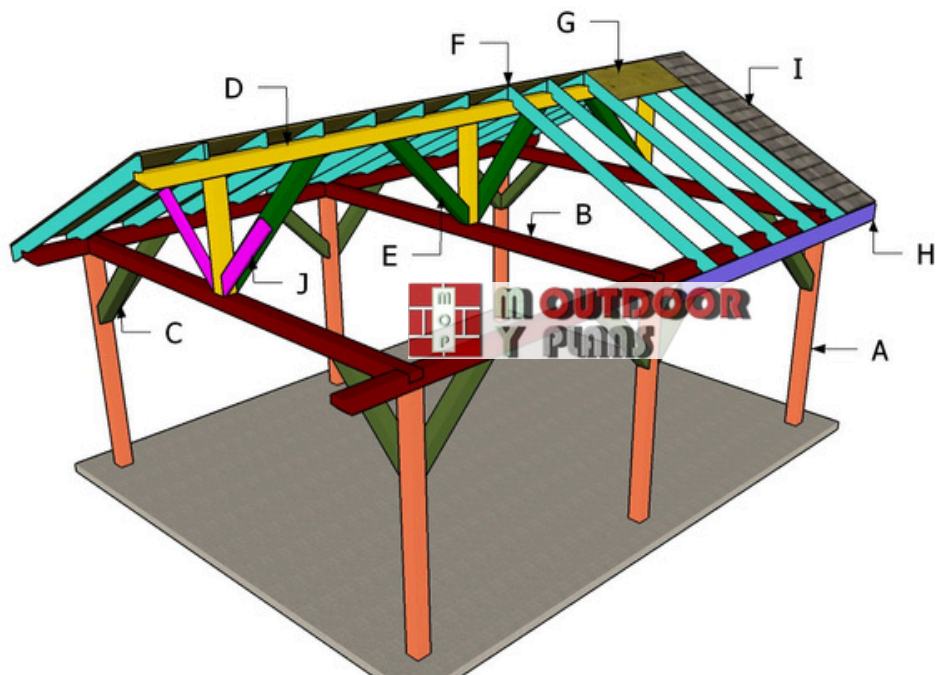

MATERIALS LIST

6x8 lumber - 24' long
 6x6 lumber - 24' long
 6x8 lumber - 16' long
 6x6 lumber - 8' long
 6x6 lumber - 10' long
 2x6 lumber - 10' long
 2x6 lumber - 8' long
 1x8 lumber - 12 ft long
 1/2" plywood - 4'x8'
 Tar Paper & Asphalt Shingles
 6x6 Post Anchors ex CB66
 Post to beam connector 6x6 ex BC6
 Tube form
 Concrete
 Construction glue
 Stain
 Rafter ties ex H2.5A
 8" screws
 5" screws
 1 5/8" screws
 1 1/2" structural screws
 2" finish nails

PIECES

2 pieces
 1 piece
 3 pieces
 9 pieces
 5 pieces
 30 pieces
 2 pieces
 8 pieces
 15 pieces
 500 sq ft
 6 pieces
 6 pieces
 6 pieces
 12 Bags
 1 piece
 4 cans
 52 pieces
 12 pieces
 70 pieces
 500 pieces
 2 boxes
 100 pieces

CUT LIST

A - Posts - 6x6 lumber 8' long	
B - Support Beams - 6x8 lumber 24' long	6 pieces
B - Support Beams - 6x8 lumber 16' long	3 pieces
C - Braces - 6x6 lumber 42 3/8" long	3 pieces
D - Ridge Beam - 6x6 lumber 24' long	12 pieces
D - Ridge Beam - 6x6 lumber 41 1/8 long	1 piece
E - Braces - 6x6 lumber 58 1/4 long	3 pieces
F - Rafters - 2x6 lumber 10' long	4 pieces
G - Roof - 1/2" plywood 4'x8'	30 pieces
G - Roof - 1/2" plywood 4'x4'	8 pieces
G - Roof - 1/2" plywood 2'x8'	4 pieces
G - Roof - 1/2" plywood 21 1/2"x96"	4 pieces
G - Roof - 1/2" plywood 21 1/2"x48"	4 pieces
G - Roof - 1/2" plywood 21 1/2"x24"	2 pieces
H - Trims - 1x8 lumber 12' long	4 pieces
H - Trims - 1x8 lumber 122" long	4 pieces
I - Roofing - Tar paper & Asphalt shingles	4 pieces
J - Trims - 2x6 lumber 42 1/8" long	500 sq ft
	4 pieces

Tools

- Miter Saw
- Drill
- Orbital Sander
- Wheelbarrow, Shovel
- Spirit level, Laser Level / Water Level
- Pocket hole jig
- Tape Measure, Pencil, Square, Brush
- Safety Glasses, Heating Protection


Time

- 1 week


Cost Estimate


- \$1500

CUT LAYOUT DIAGRAMS

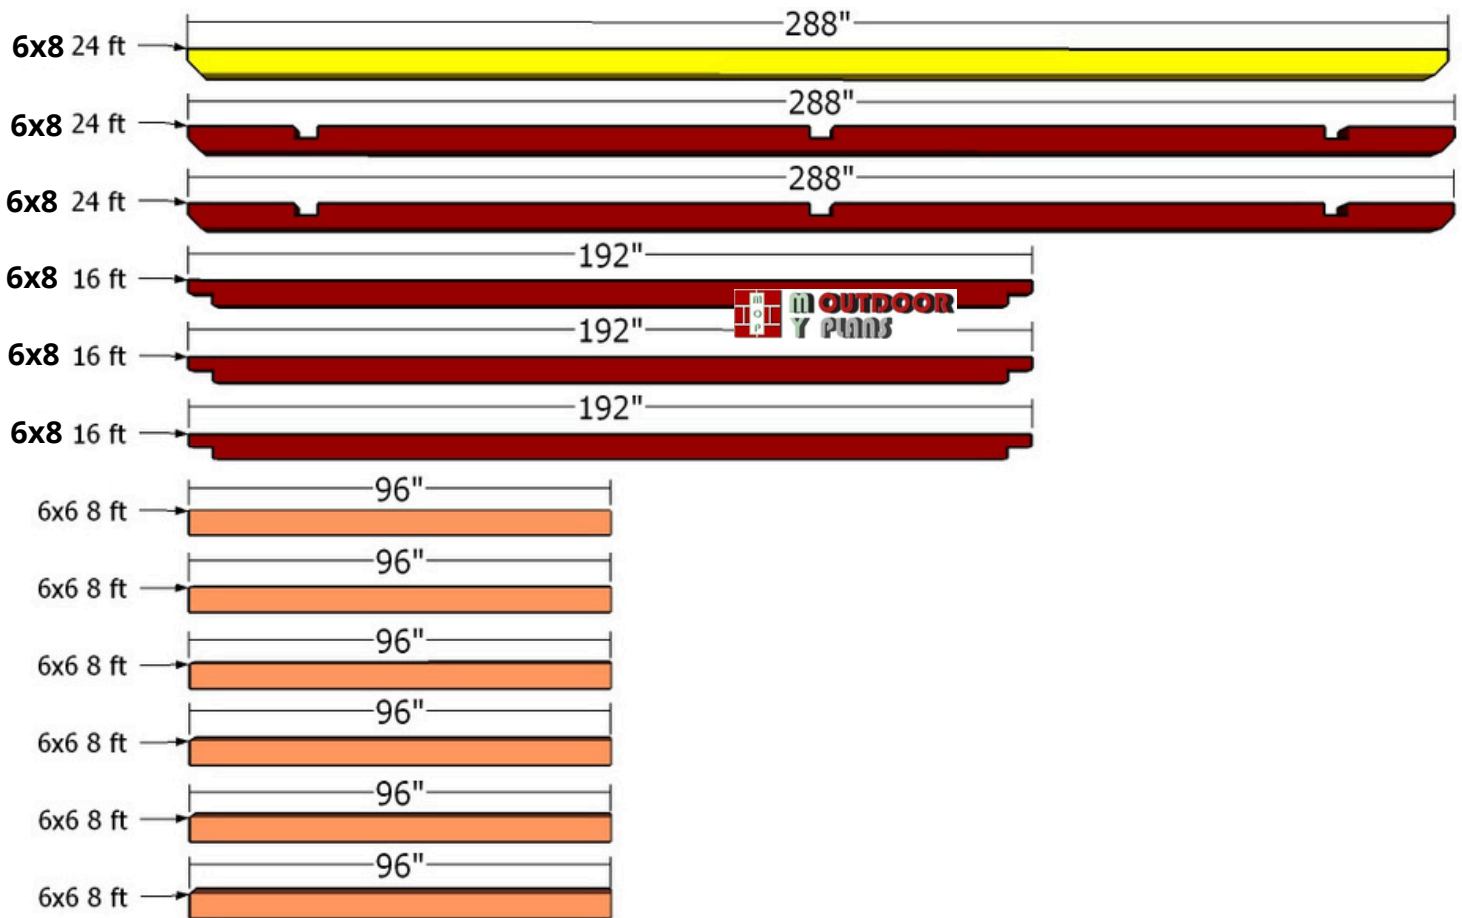


MORE PLANS AT:
MYOUTDOORPLANS.COM/SHOP

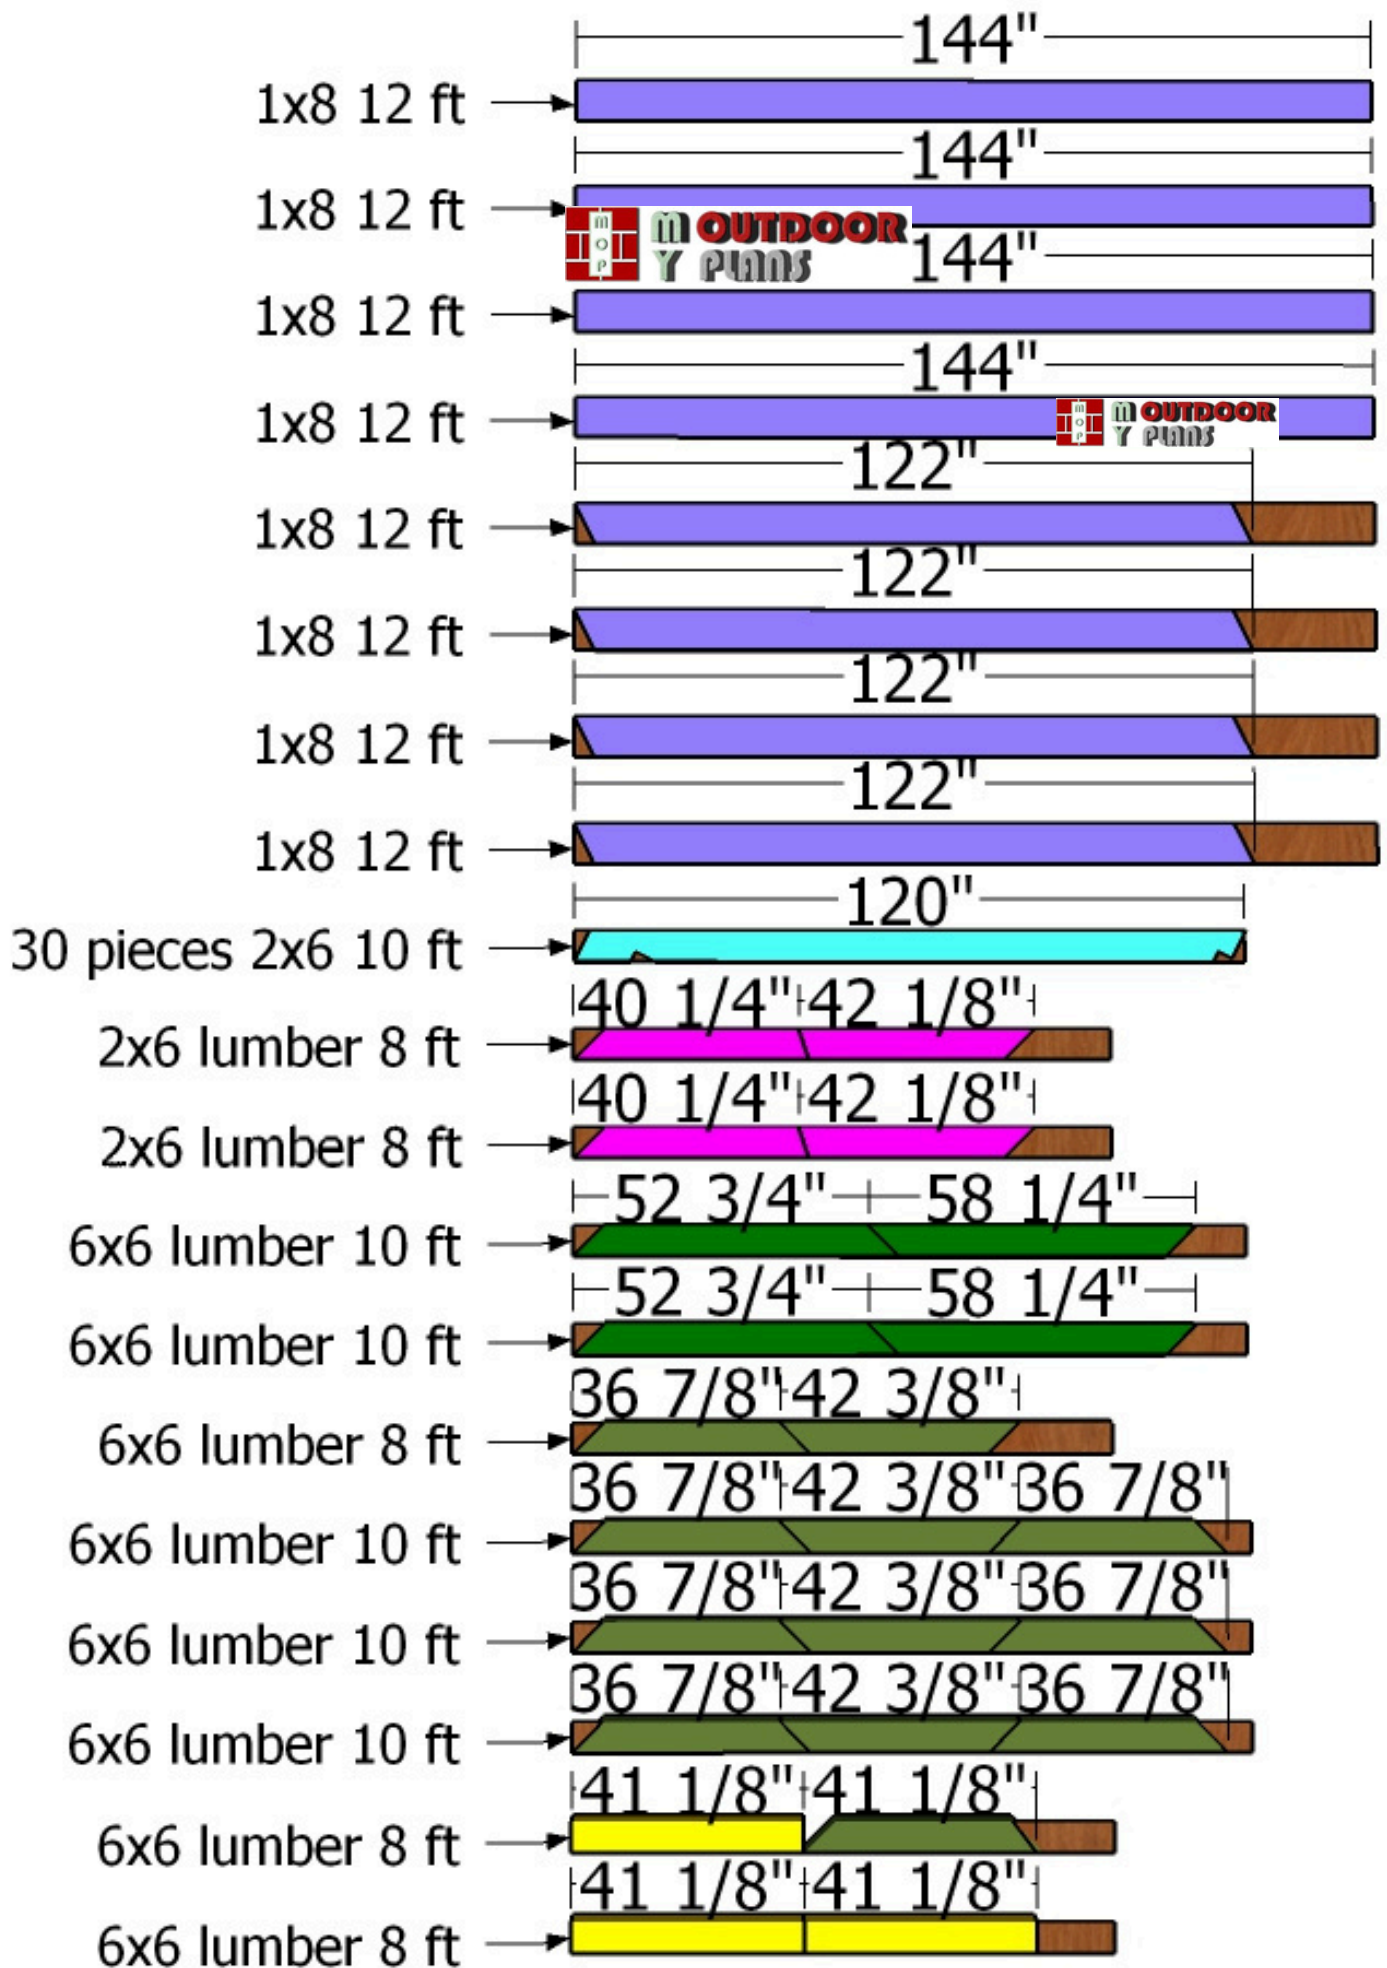

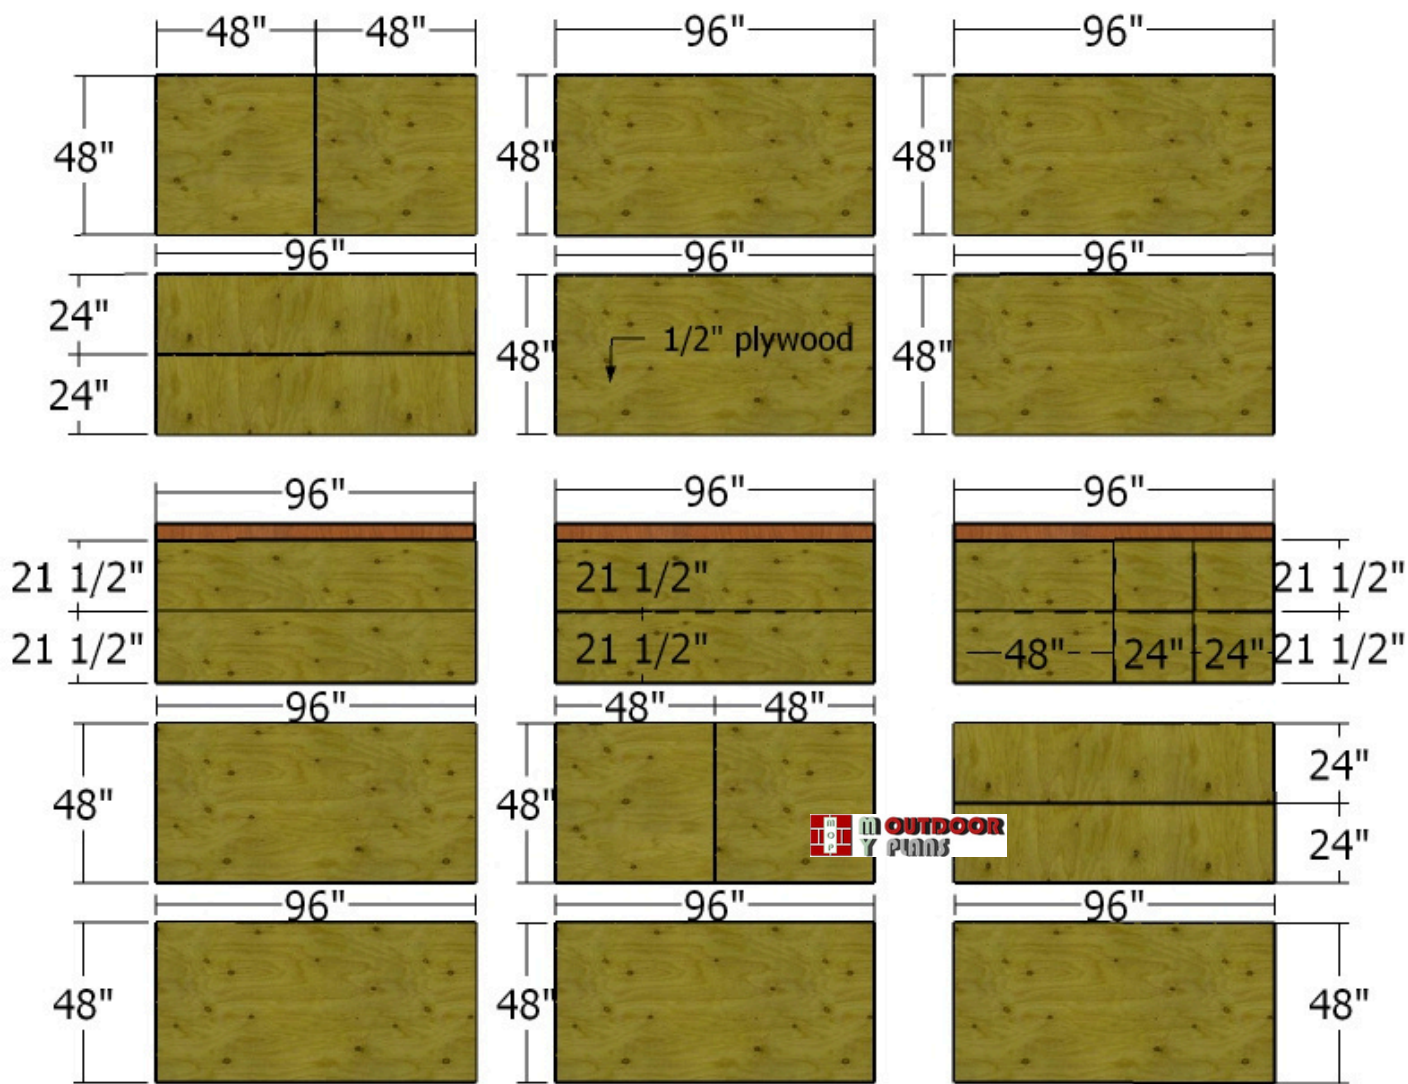


1

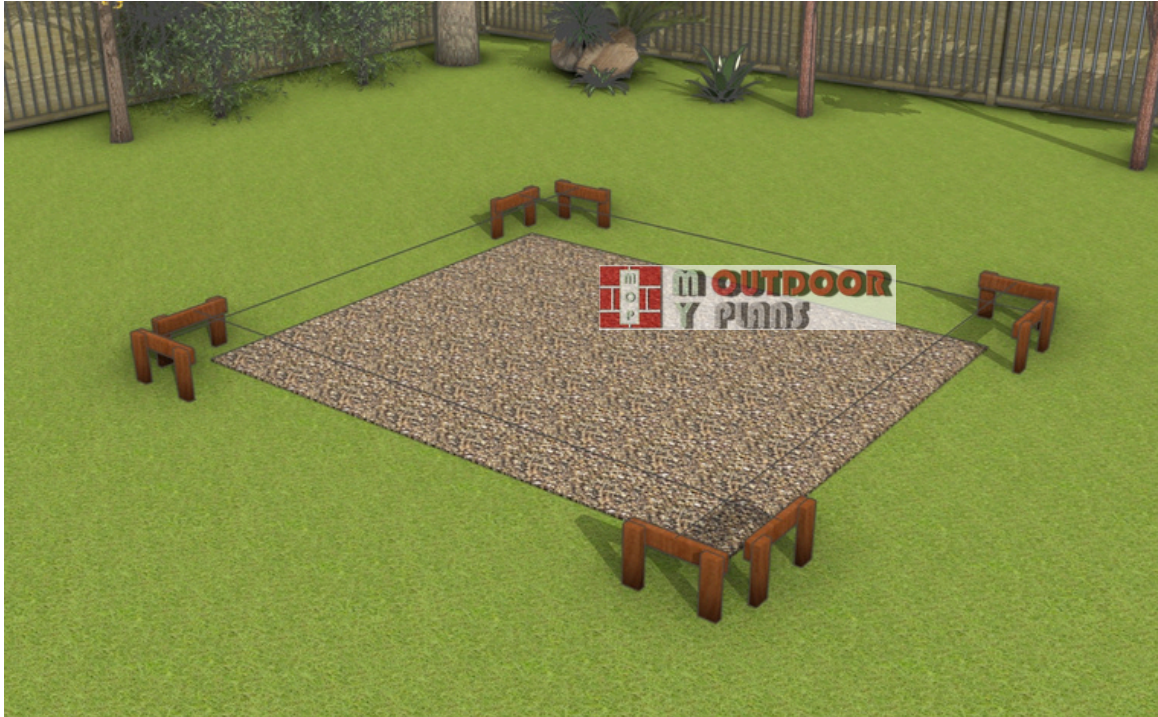


Preparing the site for construction is a crucial first step to ensure a stable and durable structure. Start by clearing the area of any debris, vegetation, or obstacles, and level the ground to create a solid and even surface. Mark the layout of the pavilion using stakes and string, ensuring the dimensions are accurate and square.

If required, excavate the site to the proper depth for footings or concrete pads, depending on your local building codes and project needs. Taking the time to prepare the site thoroughly will make the construction process smoother and set the stage for a reliable and well-aligned finished structure.

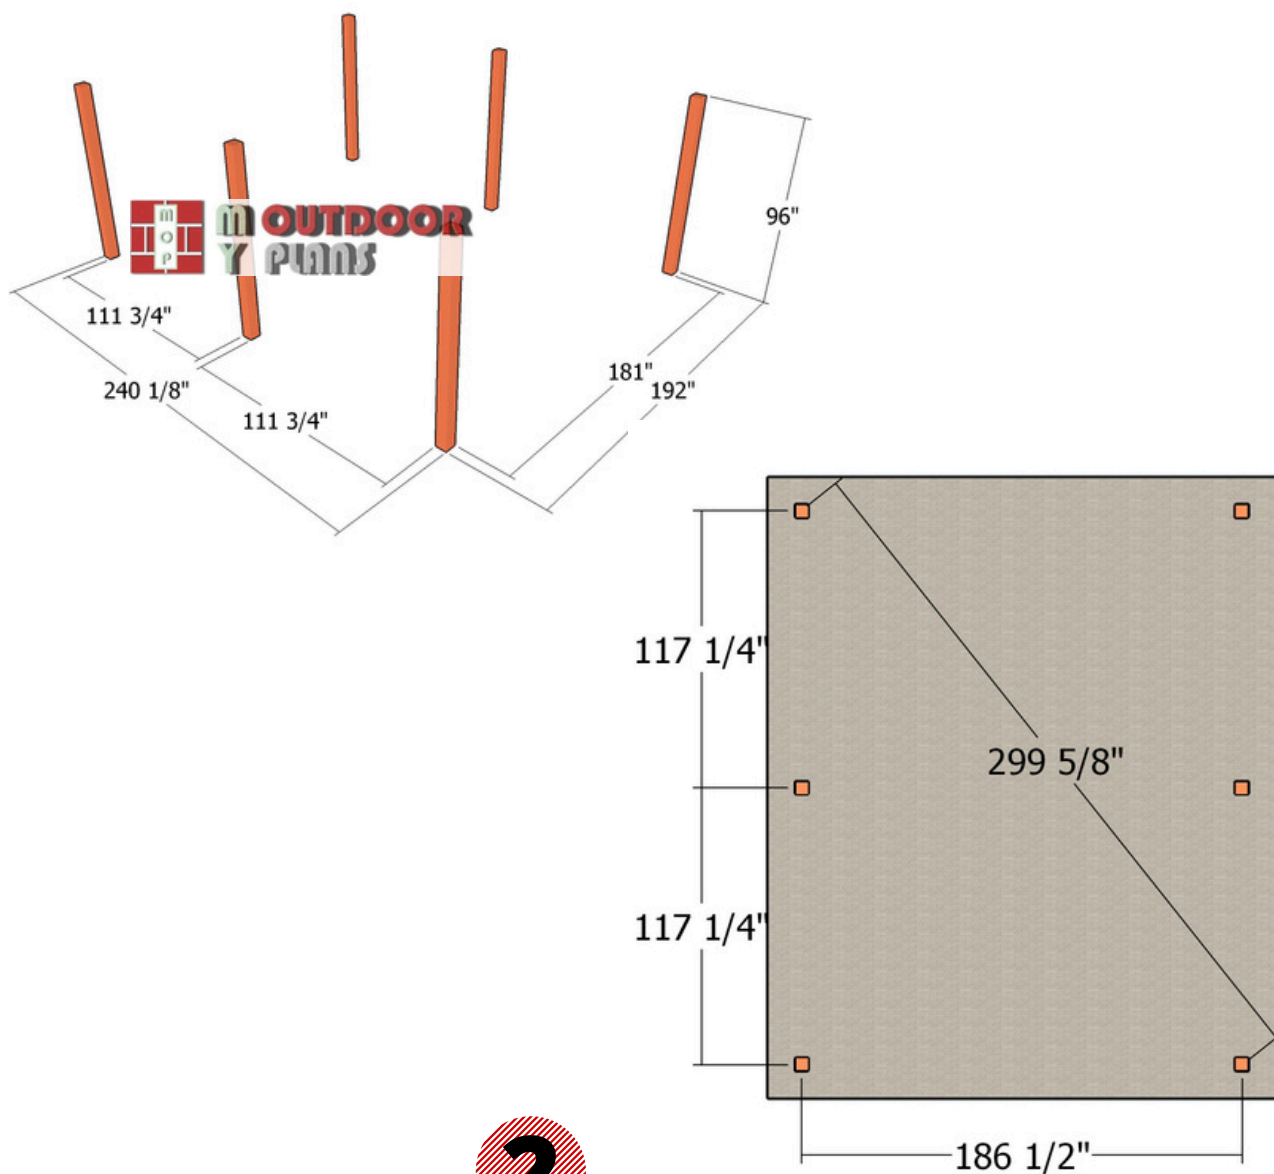


Use batter boards and string to layout the location of the posts. Apply the 3-4-5 rule to every corner and then measure the diagonals to make sure they are perfectly equal. You need to make adjustments until you get the desired result. Dig the holes 3' deep (or under the front line) and 12-16" in diameter (according to local codes).

The second diagrams shows the distance between the middle of the posts, so you can easily locate the center when digging the holes for the footings.

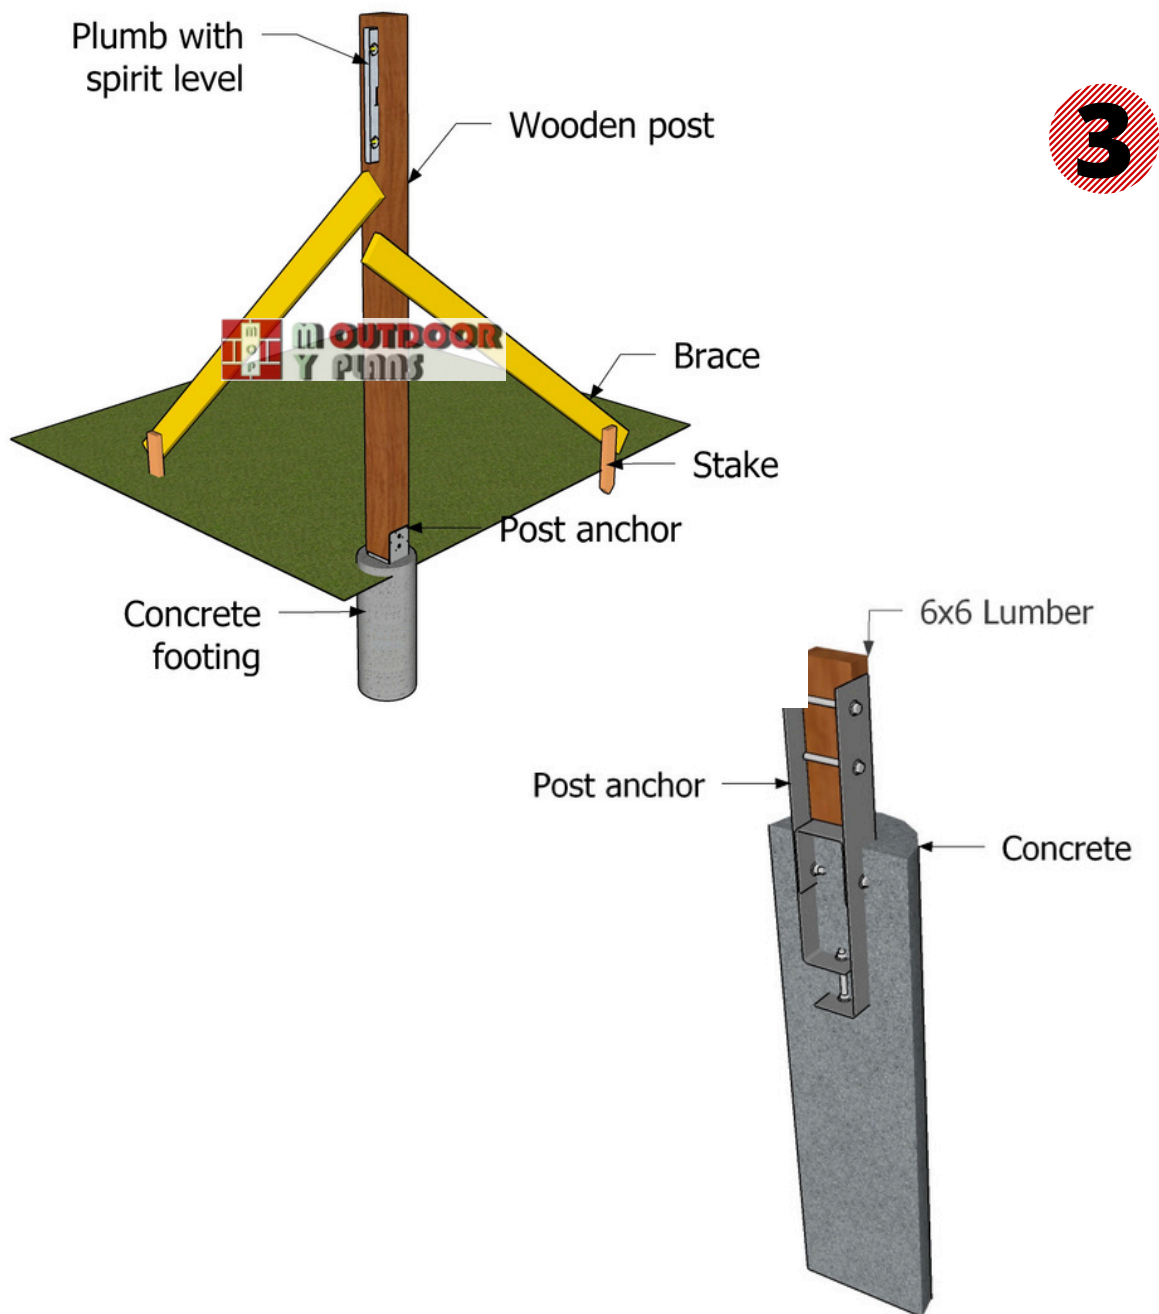

Dig 3 ft holes into the ground, making sure they have about 12" in diameter. Fit the tubes then the posts into the ground and plumb them with a spirit level. Fill the holes with concrete and insert the post anchors. Align the anchors one to another and let the concrete set for a few days.


Use lag screws to secure the posts to the anchors.
 Before pouring the concrete you need to make sure the top of the posts are horizontal one to another.
 Use a laser to mark the level to the top of the posts and use a circular saw, if you need to make cuts.

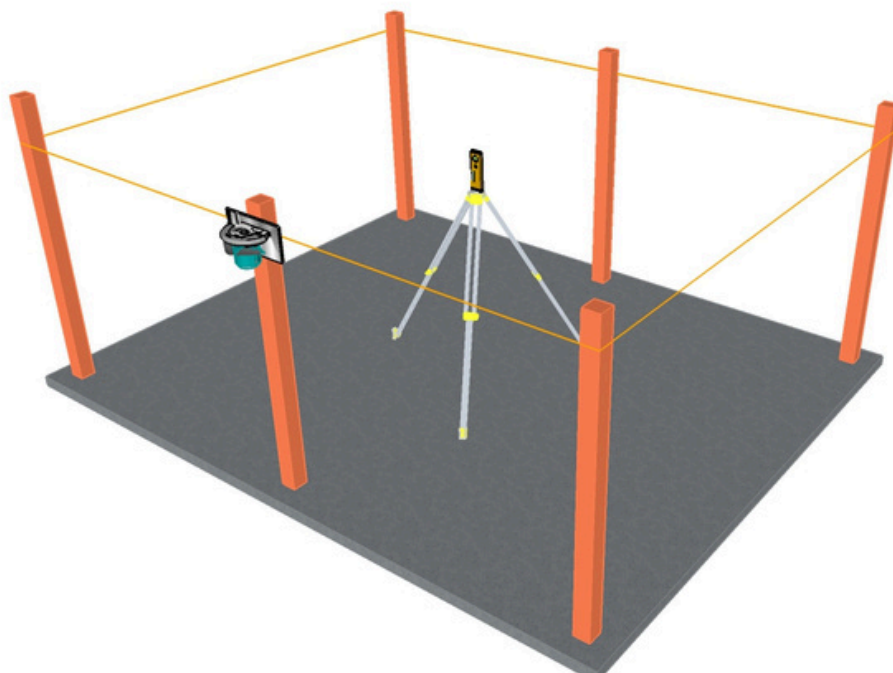

4

After setting the posts, you need to make sure the top are level one with another.


Use a spirit level to mark the cut lines to the posts. Use a circular saw to make the cuts. Smooth the cuts with sandpaper.

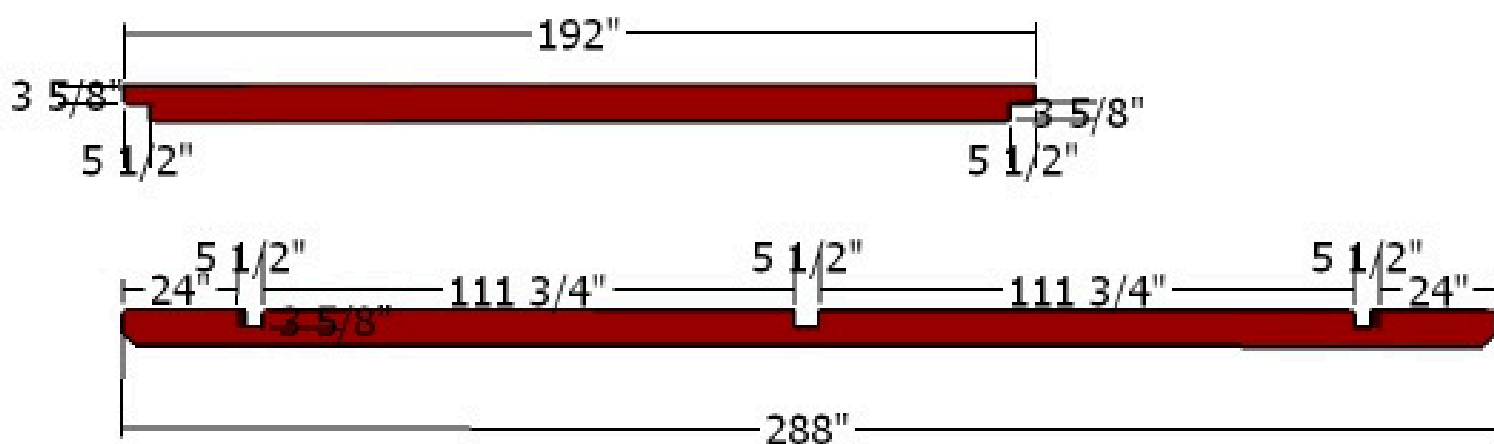

Use 6x8 lumber for the top plates. Use a circular saw to make the parallel cuts inside the marked areas. Use a chisel to remove the excess material and clean the recess with sandpaper. If you don't find 24 ft long beams, use 2 pieces at 12 ft and join them to the middle posts.


5

Fit the support beams to the top of the posts. Use a spirit level to plumb the posts and to check if the beams are horizontal. Drill pilot holes through the beams and Insert the 8" screws.

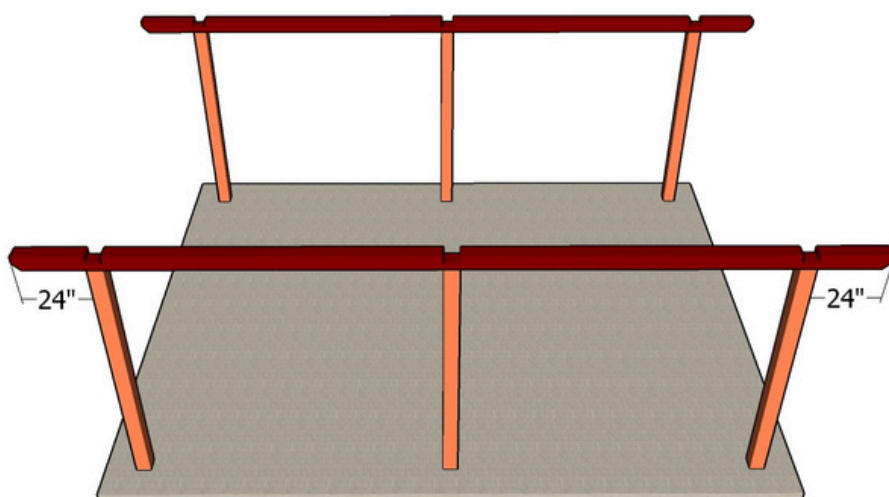


6

Fit the cross support beams to the top of the posts. Use a spirit level to plumb the posts and to check if the beams are horizontal. Drill pilot holes through the beams and Insert the 8" screws.

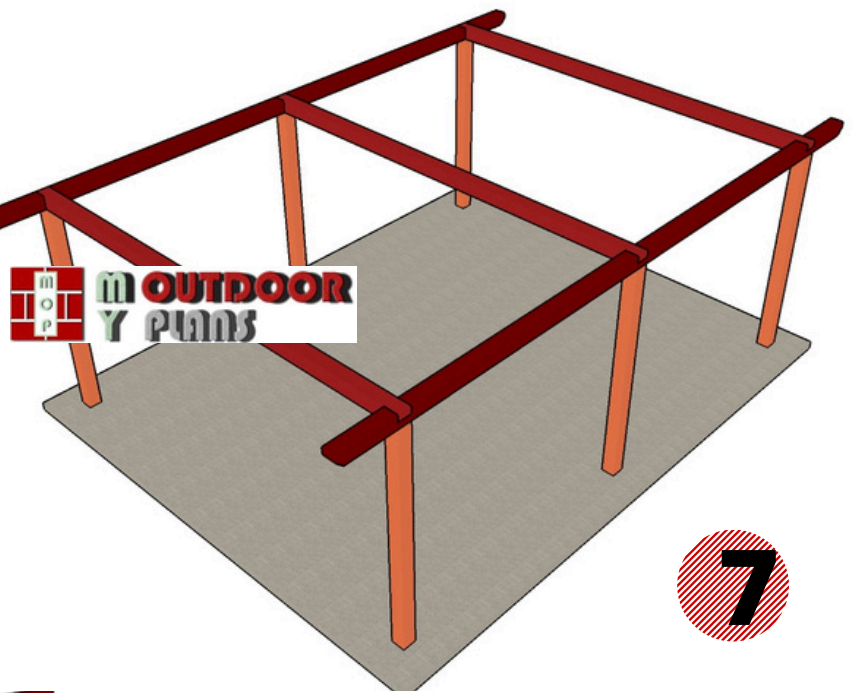


7

Make 45 degree cuts to both ends of the braces. Attach the 6x6 braces to the pavilion, after making sure the posts are plumb. Drill pilot holes and insert 5" screws to set the braces to the posts and to the beams.

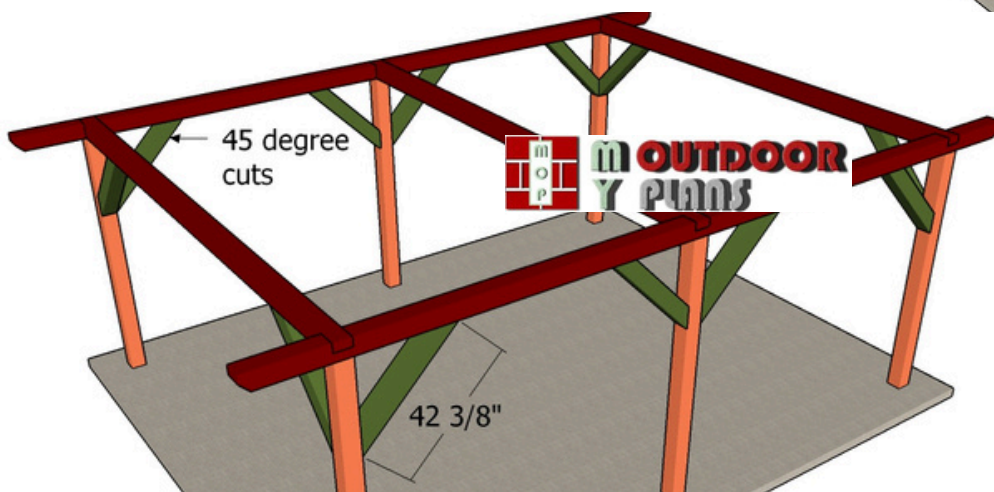


8

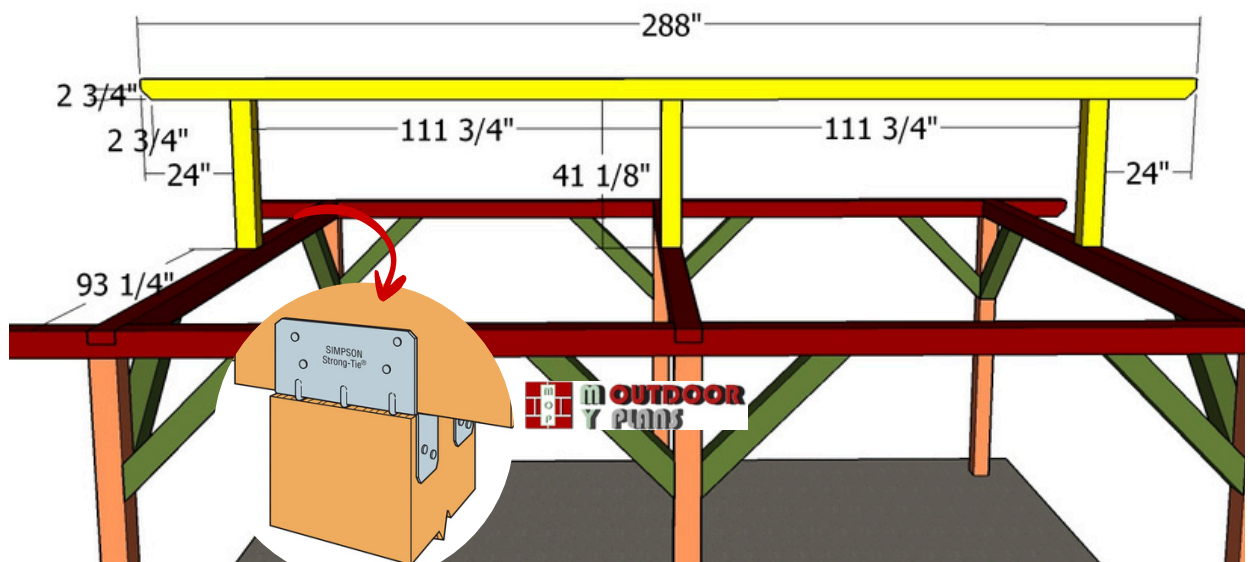

Use 6x6 lumber for the ridge beam and 6x6 for the supports. Center the supports to the beams and use post to beam connectors to secure them into place. Fit the ridge beam, making sure you have 24" overhangs on both sides. Use post to beam connectors to secure it to the supports.


9

Attach the 6x6 braces to the ridge beam, after making sure the supports are vertical. Drill pilot holes and insert 5 1/2" screws to set the braces to the supports and to the beams.

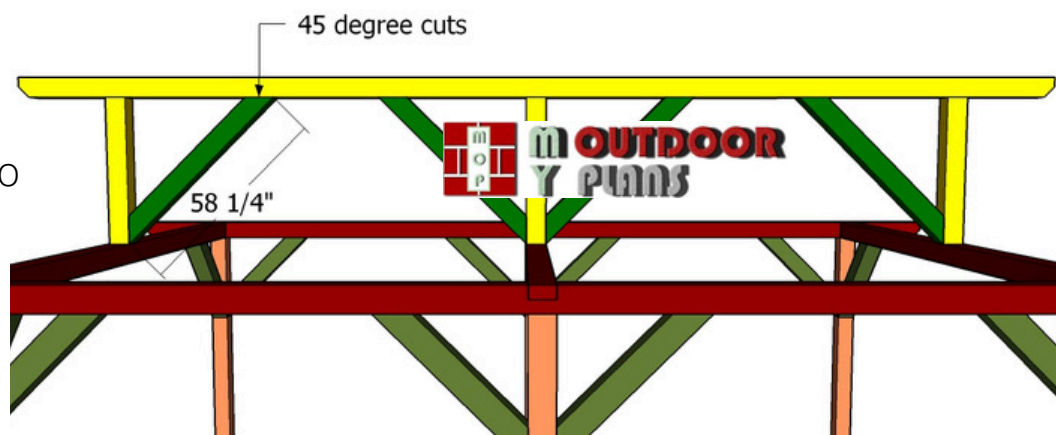


10

Use 2x6 lumber for the rafters. Mark the cut lines to the beams and make the cuts with a saw. Smooth the edges flush. Make the birdsmouth cuts with a circular saw.

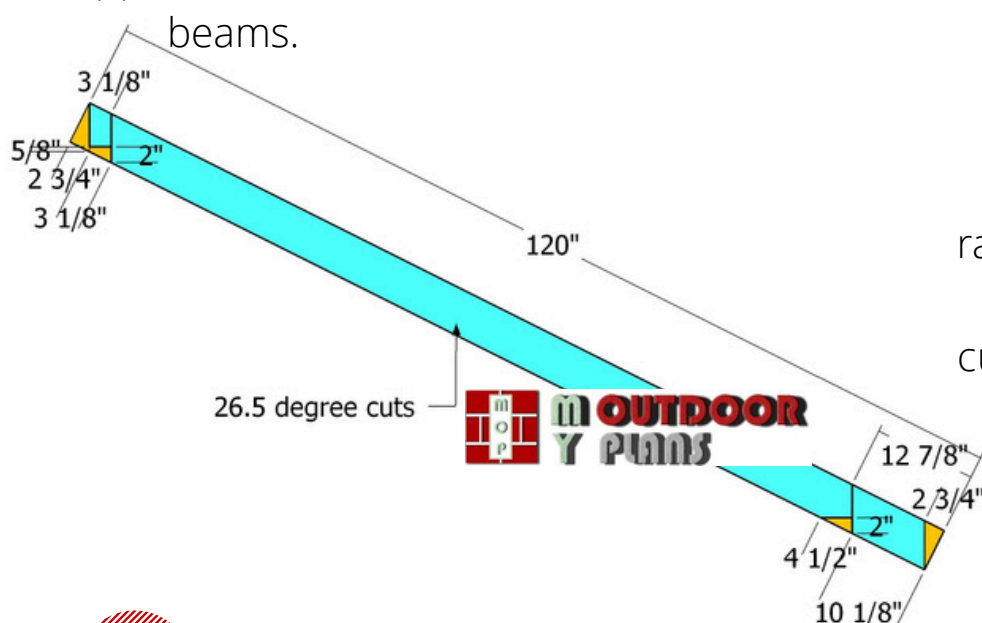


11


Fit the rafters to the top of the pavilion, every 24" on center. Use rafter ties and 1 1/2" structural screws to secure the rafters to the plates and ridge beam.

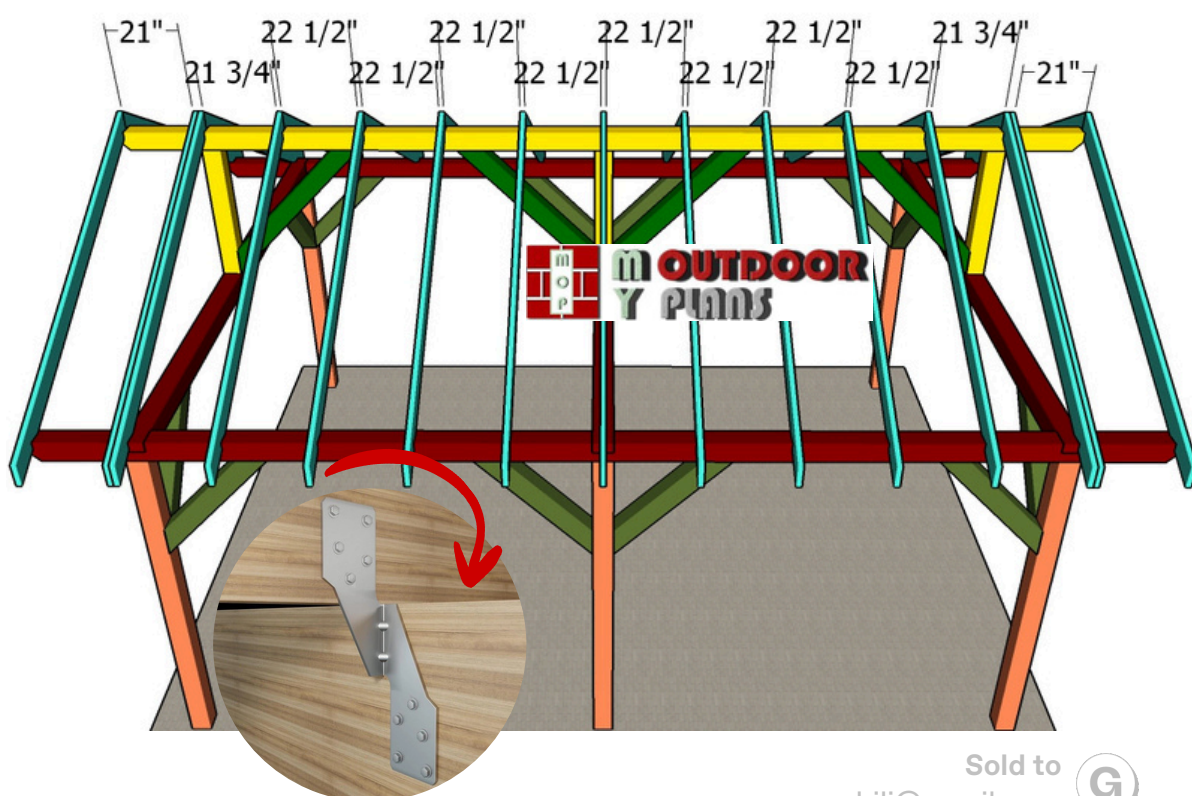

12

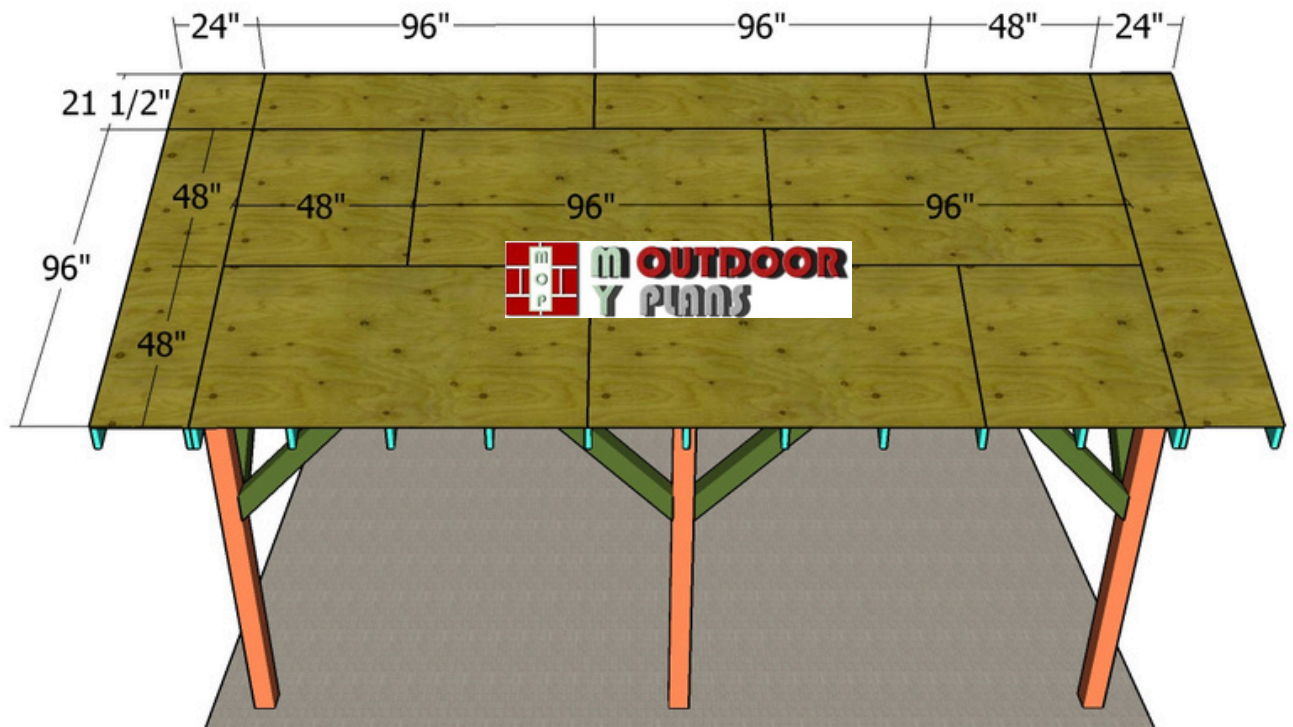


Use 1/2" plywood for the roof of the pavilion. Cut the sheets at the right dimensions and then lay them to the top of the pavilion. Leave no gaps between the sheets and then insert 1 5/8" screws, every 8" along the rafters, so you can secure them into place tightly.

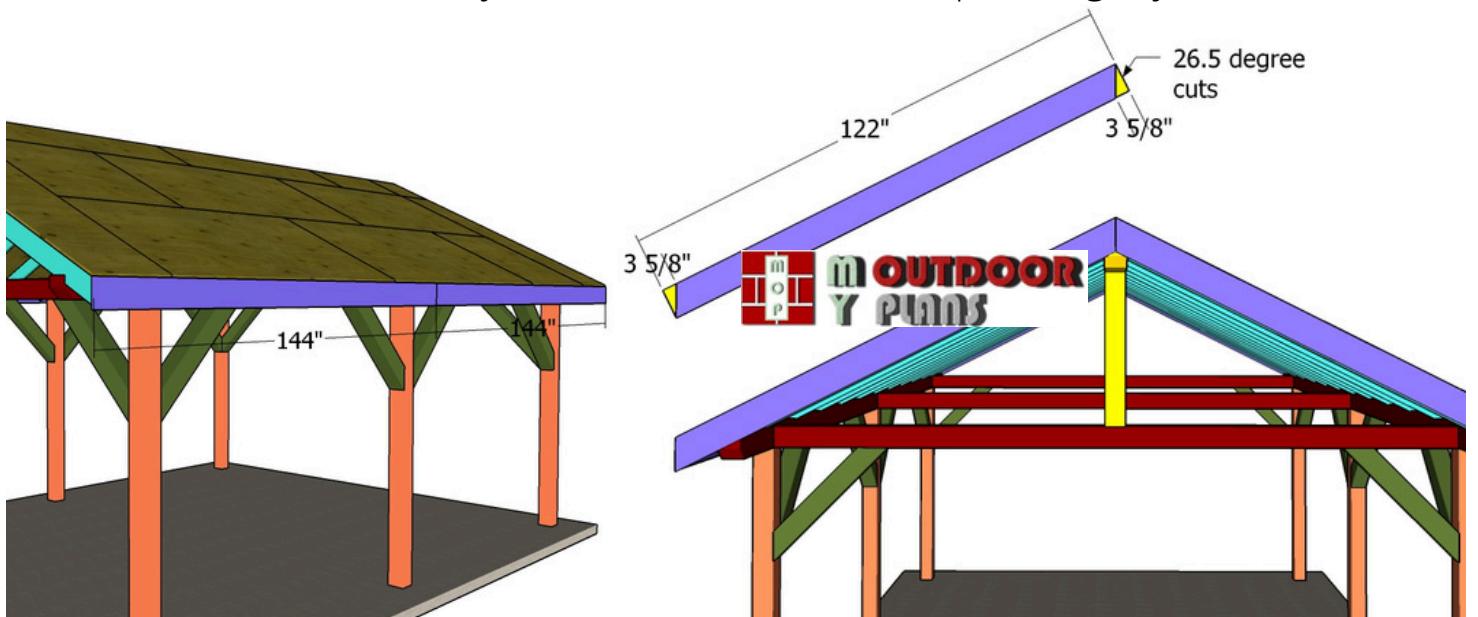

Use 1x8 lumber for the roof trims. Cut the trims at the dimensions shown in the diagram and set them to the roof with 2" nails, every 8" along the rafters.

13

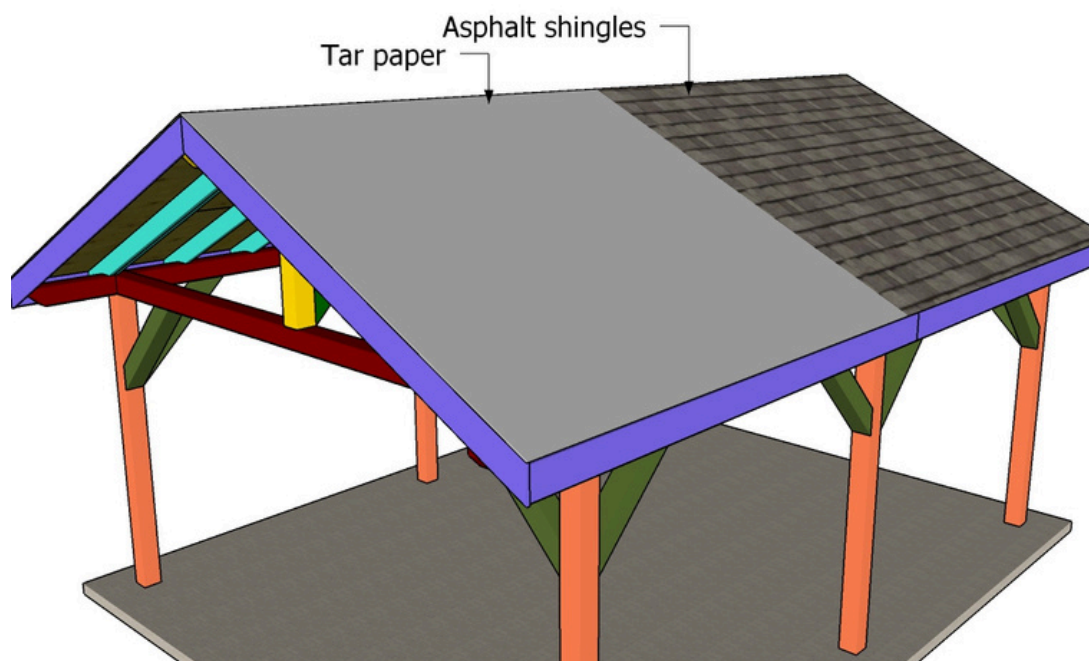

Installing asphalt shingles on your pavilion requires careful preparation and proper layering to ensure a durable, weather-resistant roof. Begin by installing the drip edge along the eaves, securing it with roofing nails every 8 to 10 inches. This metal flashing prevents water from seeping under the roof sheathing and protects the edges from rot.

Next, roll out the roofing underlayment over the plywood decking, starting at the bottom and working your way up, overlapping each row by at least 4 inches. For added protection, use a self-adhering ice and water shield along the eaves and valleys, if applicable, to prevent leaks caused by wind-driven rain or ice dams.

Finally, install the drip edge along the gable ends, overlapping it over the underlayment to keep water from running underneath.


Once the underlayment is secured, begin laying the asphalt shingles starting at the bottom edge of the roof. Install the starter strip shingles along the eaves, ensuring they slightly overhang the drip edge to direct water into the gutters.

Next, place the first row of shingles on top of the starter strip, following the manufacturer's recommended nailing pattern and overlapping each course to create a water-shedding system. Continue working your way up, staggering the seams between rows to prevent leaks. If your carport includes a ridge vent, leave space for it at the peak while installing shingles. Trim shingles as needed to fit around vents or any protrusions, sealing them with roofing cement for extra protection.

The final step is installing the ridge cap shingles to complete the roof. If your design includes a ridge vent, install it first by securing it along the peak with nails.


Then, lay ridge cap shingles over the vent or ridge line, overlapping each piece according to the manufacturer's guidelines. Secure them with nails on either side, ensuring they cover the exposed edges for a finished look.

15

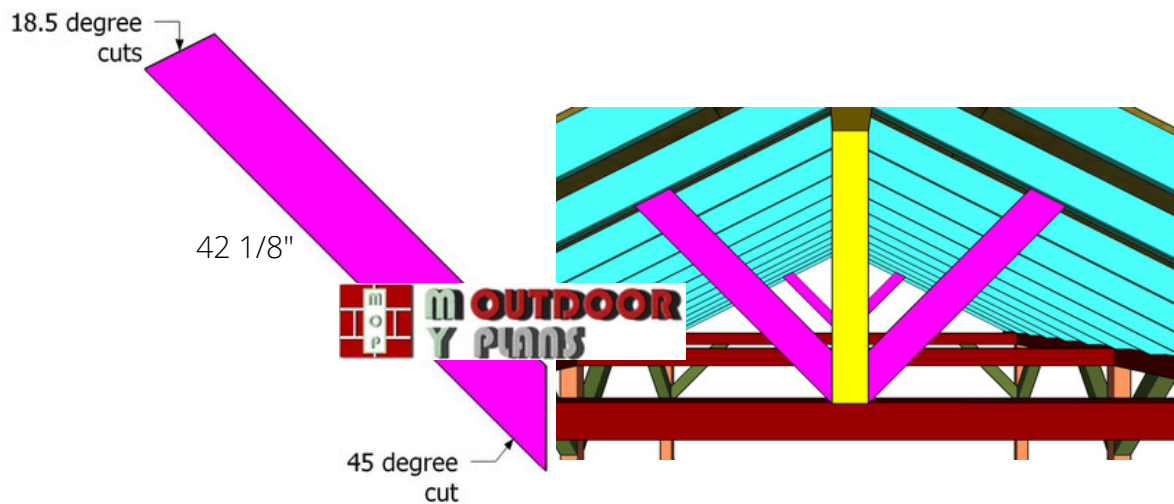

Use 2x6 lumber for the braces.



Make the angle cuts with a miter saw. Drill pocket holes at both ends of the trims and secure them into place with 2 1/2" screws.

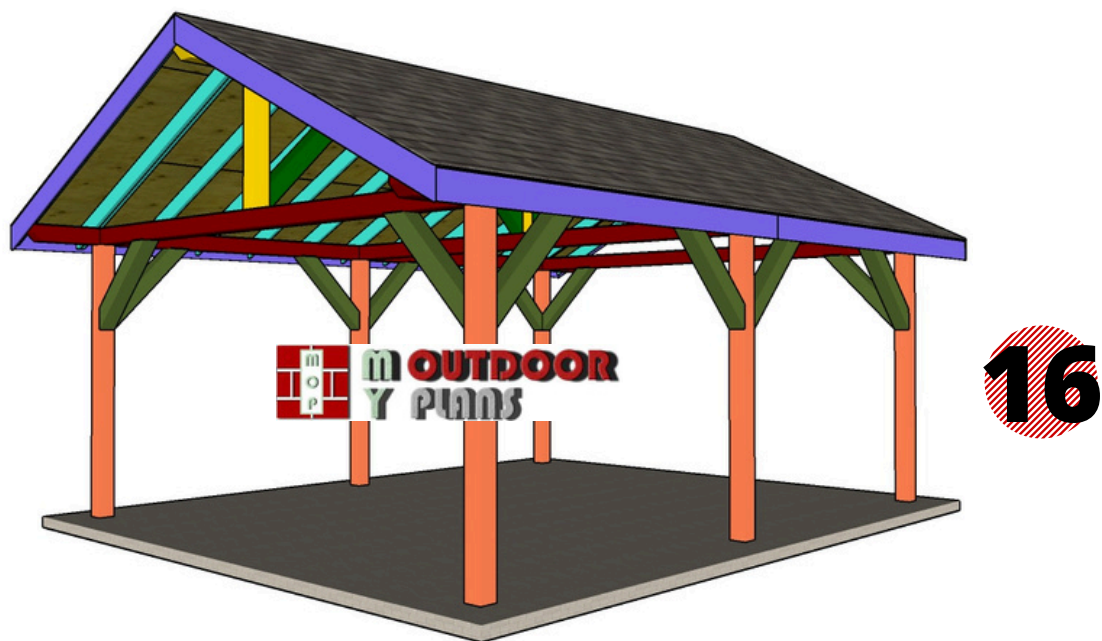

To complete the pavilion or carport, apply a high-quality wood finish to protect the structure from the elements. Use an exterior-grade stain or sealant to enhance the natural beauty of the wood while providing resistance to moisture, UV rays, and pests. If you prefer a painted finish, use a primer followed by a weather-resistant paint to ensure long-lasting protection. Reapply the finish every few years to maintain the durability and appearance of the wood.

For added functionality, consider incorporating gutters and downspouts to direct rainwater away from the posts and foundation, preventing water damage over time. You can also install lighting fixtures along the beams to create a well-lit space for evening use. If using the structure as a carport, adding a gravel or concrete pad underneath will improve drainage and keep the area clean. For a pavilion, consider adding built-in seating or a storage area for outdoor essentials.

This structure is highly versatile and can be customized to suit your needs. If you plan to use it as a pavilion, adding hanging planters, outdoor curtains, or decorative elements can enhance its aesthetic appeal. If it's a carport, installing side panels or lattice screens can provide additional protection from wind and sun. With the right finishing touches, this pavilion or carport can become a long-lasting and functional addition to your property.

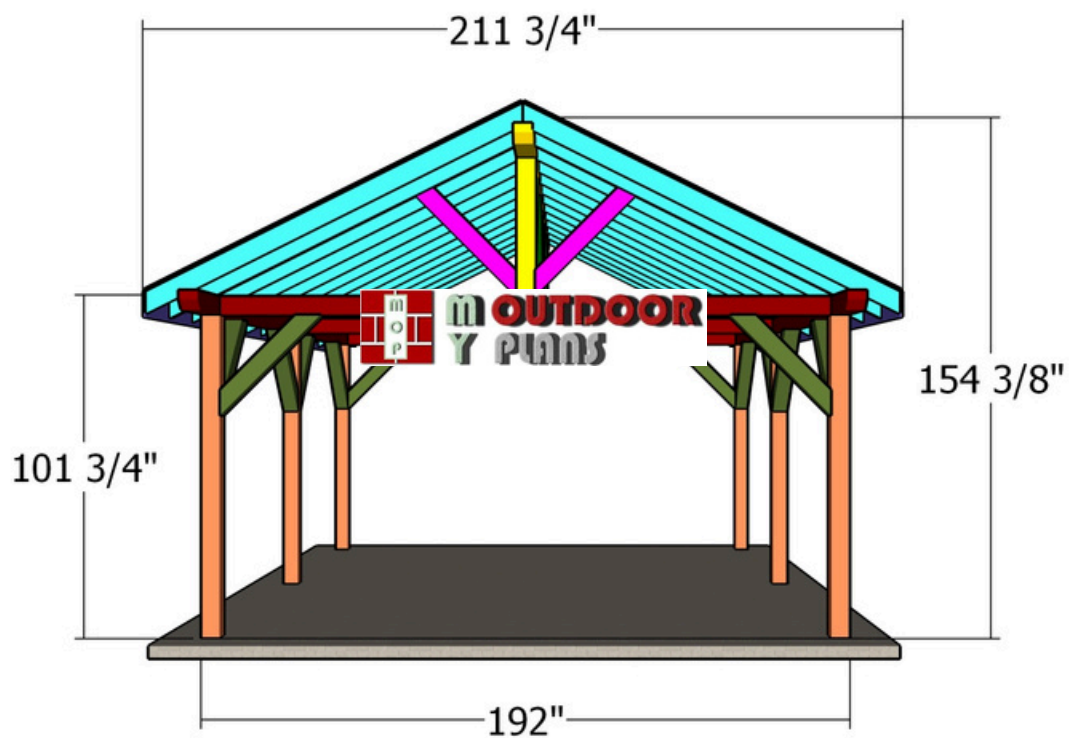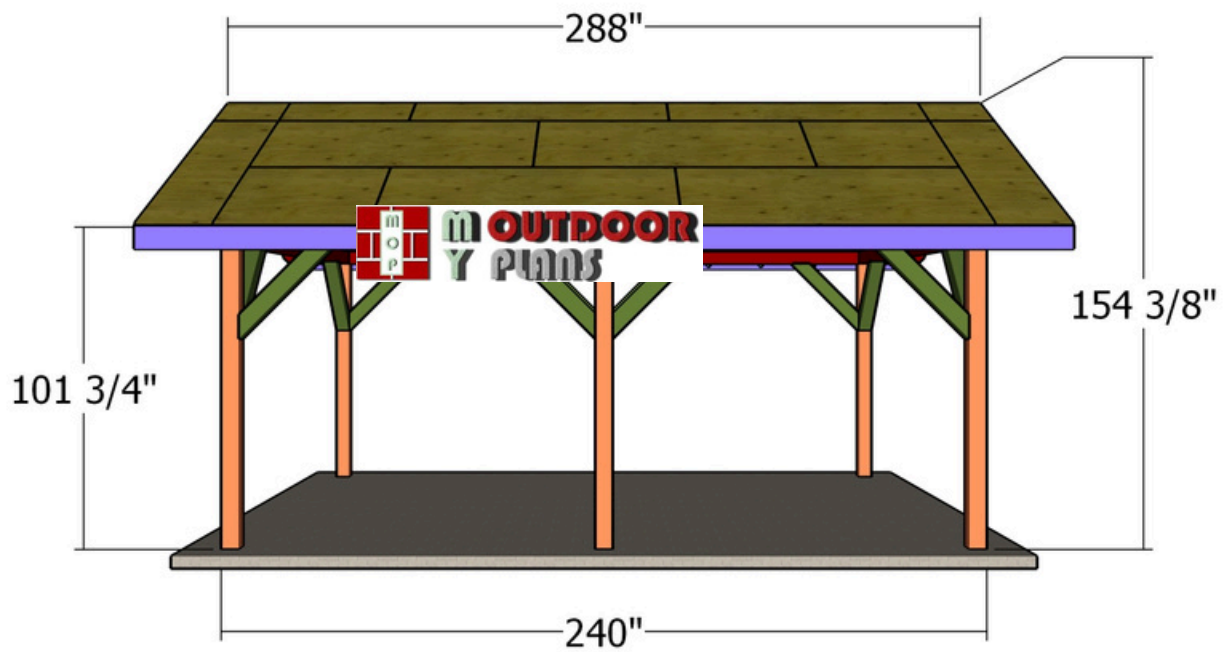





THANK YOU

I would love to see
your project.

To send a few pics

Click HERE

*In no event will MyOutdoorPlans.com or the its legal owners be liable for any loss, damage or injury arising from the use of information on this plan. You assume the full responsibility of your actions. For personal use only.

MORE PLANS AT:

MYOUTDOORPLANS.COM/SHOP

Sold to
monday@gmail.com

