




Click the "Options" button.

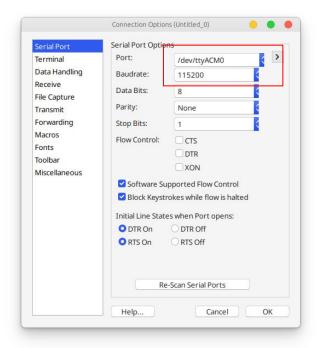


Select correct serial port and baudrate. Typically we use 115200 for the baudrate.

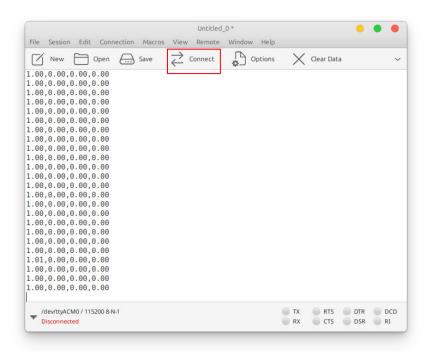


Click the "Connect" button.

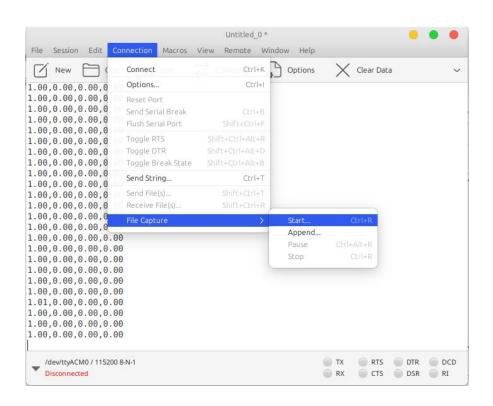

Start the file capture process.

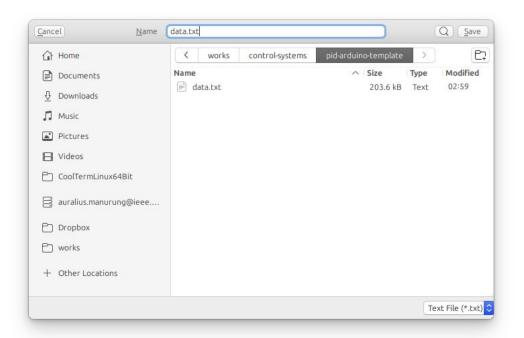

Select where to save the file and the file name.

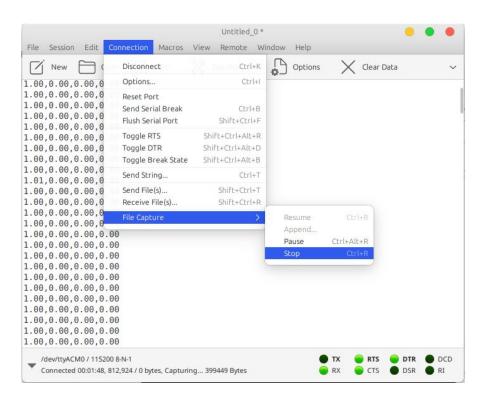

After you are done with collecting the data, stop the file capture process.