

Top side: pads and silkscreen

Place the real parts on the pads to check every footprint before you order.

Print at 100 % (actual size). Do not use "fit to page". The bar below must measure 100 mm.



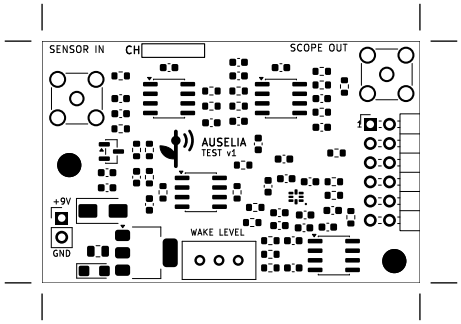



Board outline 50.0 x 32.0 mm. The right-angle PMOD header J3 sticks out 5.9 mm past the right edge and is not drawn.

Top side: pads and reference designators

Use it to find a part. The names are the same as in the schematic and the BOM.

Print at 100 % (actual size). Do not use "fit to page". The bar below must measure 100 mm.



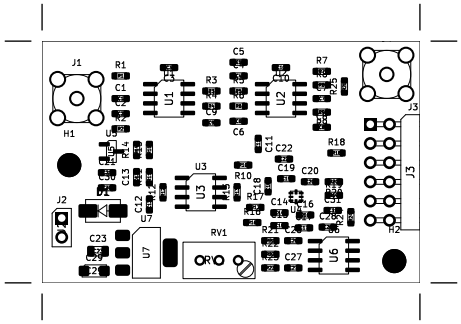



Board outline 50.0 x 32.0 mm. The right-angle PMOD header J3 sticks out 5.9 mm past the right edge and is not drawn.

Bottom side, seen from below (mirrored)

Only the through-hole pins and the ground pour are on this side.

Print at 100 % (actual size). Do not use "fit to page". The bar below must measure 100 mm.



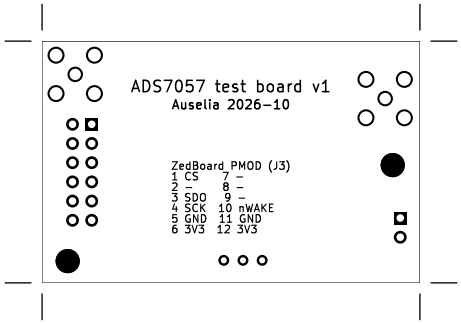

Board outline 50.0 x 32.0 mm. The right-angle PMOD header J3 sticks out 5.9 mm past the right edge and is not drawn.