# AUSELIA

## ADS7057 test board

How a perfboard signal becomes SPI samples, one step at a time.

The topology, the datasheet facts that matter, the routing of the board, and what each part is and where it sits.

Version 0.2 / October 15, 2026 / Nicolás Villegas

# How to read this manual

Read the text first. Then look at the figure. The figure shows the same thing with numbers.

01 **One panel, one step**

A page holds four steps in a 2 × 2 grid. Each panel has a title, a text and a figure.

02 **Example tag**

A figure with this tag is a worked example. Its numbers come from the netlist, the board file or the simulation.

03 **Source**

The KiCad project in hw/, the simulations in sim/, the vendor datasheets and one real JLCPCB quote.

04 **Estimate**

A number marked ESTIMATE is not measured. Read it as a size, not as a promise.

05 **Names**

R16 is a reference designator. It is the same name in the schematic, the BOM and the silkscreen file.

06 **Order**

Part 0 gives the basics. Steps 1 to 54 follow the power, the signal, the ADC, SPI, the wake-up, the board and the bring-up.

## Colors

signal chain · driver and ADC · power · control, data of the example · the item of this step

# The board in one view

the signal goes left to right, the power runs along the bottom

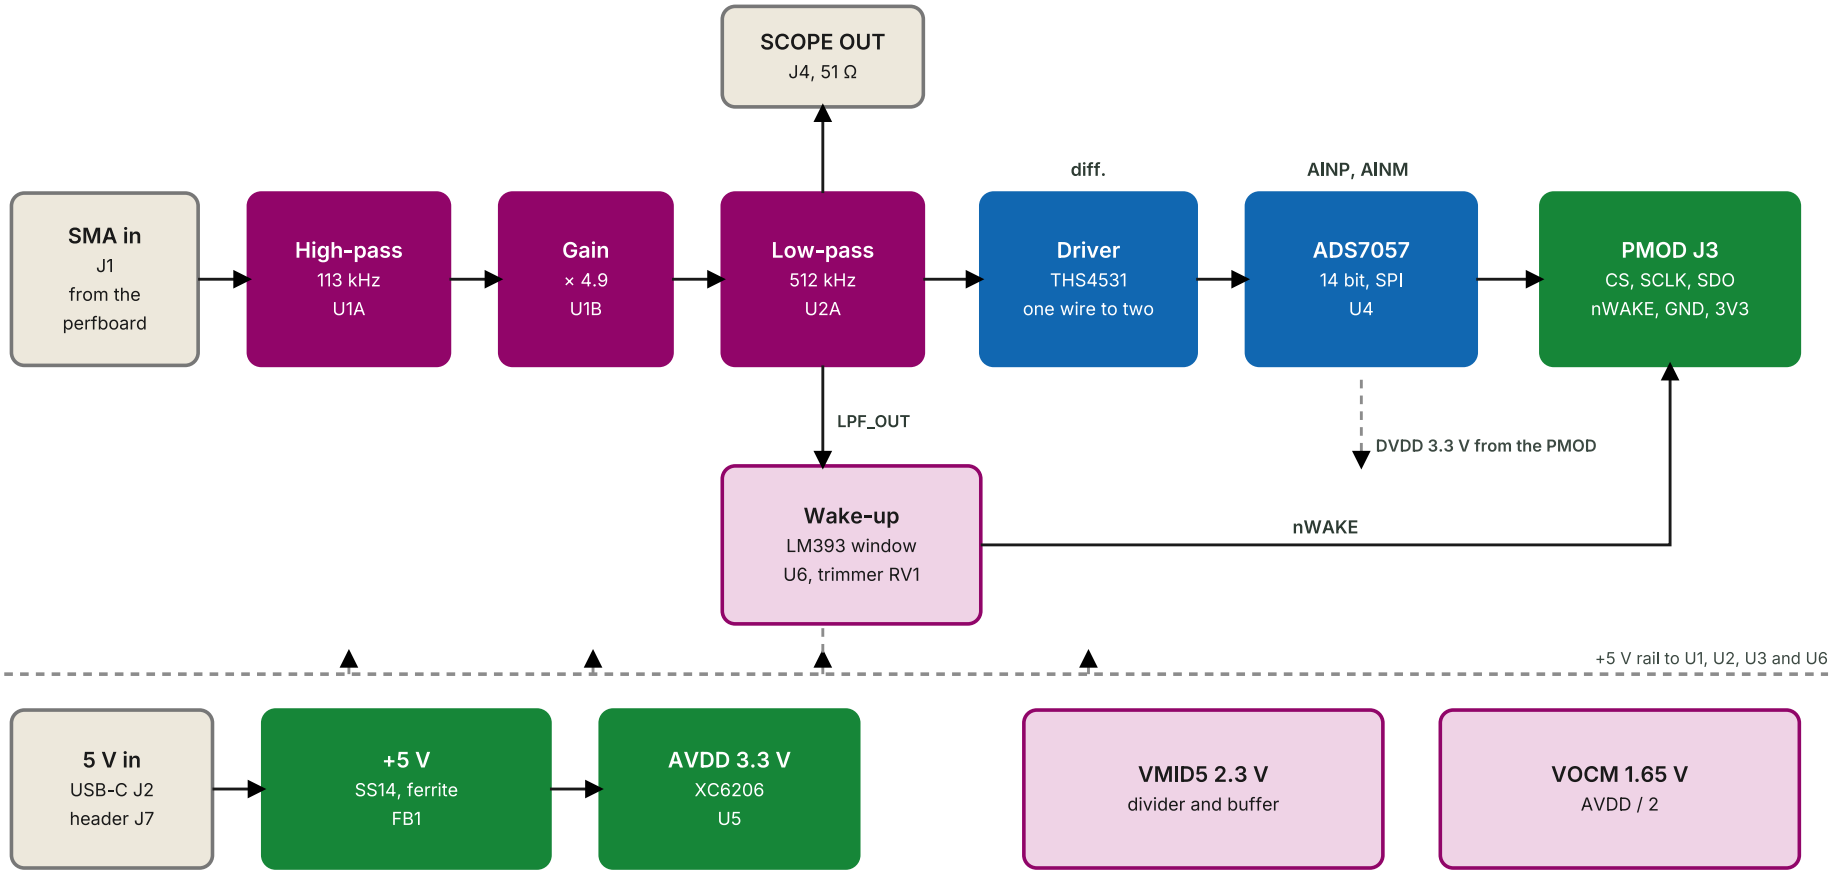


**THE BASICS**
part 0
What the signal is, why the mid-rails, what an ADC measures and why the filter comes first.

**POWER**
steps 1 to 6
5 V in, 3.3 V for the ADC, then the 2.3 V and 1.65 V mid-rails that the signal rides on.

**SIGNAL AND ADC**
steps 7 to 24
High-pass, gain, low-pass, then the driver and the ADC with its input filter.

**SPI AND WAKE-UP**
steps 25 to 35
The four SPI wires, the frame and its power-up rule, and the window comparator.

**THE BOARD**
steps 36 to 48
Layers, floor plan, every part and where it sits, routing, files for the factory and the cost.

**BRING-UP**
steps 49 to 54
Power-on checks, the first signal, the expected response and what is still open.

PART 0

# The basics

0.1 TO 0.6

What the board is for, what the signal looks like, why there are two mid-rails, what an ADC measures, why the filter comes first and how to read a PCB. No board details yet.

## 0.1 THE BASICS
# What the board is for

A piezoelectric sensor on a plant stem hears the clicks of **acoustic emission** (AE). The perfboard charge amplifier turns the charge of the sensor into a voltage.

This board takes that voltage, filters it and measures it with a 14-bit ADC. It hands the numbers to the ZedBoard over SPI. It also raises a wake-up line when a click is strong.

CHAIN

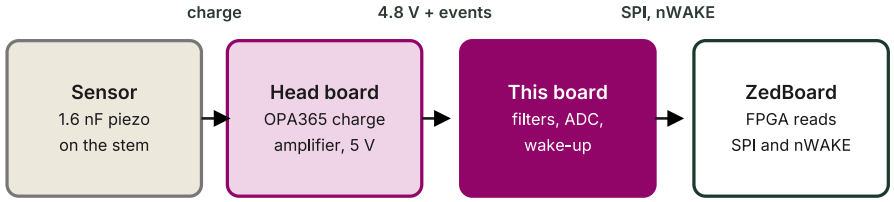


the gray box is the part that this manual describes

## 0.2 THE BASICS
# What the signal looks like

The perfboard output rests near 4.8 V. An AE event rides on it as a burst between 233 and 275 kHz that lasts 26 to 83 µs. The seven recorded events are 141 to 236 mV peak to peak.

Between events, five of the eight baseline records show 3.7 to 4.6 mV rms of noise in the band. That noise sets the smallest event that this board can see.

7 RECORDED EVENTS

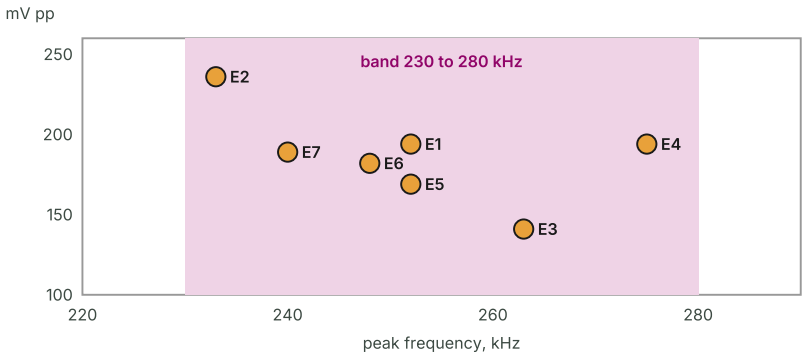


## 0.3 THE BASICS
# Why 2.3 V and 1.65 V

This board has no negative supply. A signal that swings below 0 V would be cut off. So each stage rests at the middle of its own supply, and the signal swings around that level.

The op-amps run from the 5 V rail (4.6 V after the diode), so they rest at **2.3 V**. The ADC runs from 0 to 3.3 V, so its inputs rest at **1.65 V**.

VOLTAGE LADDER

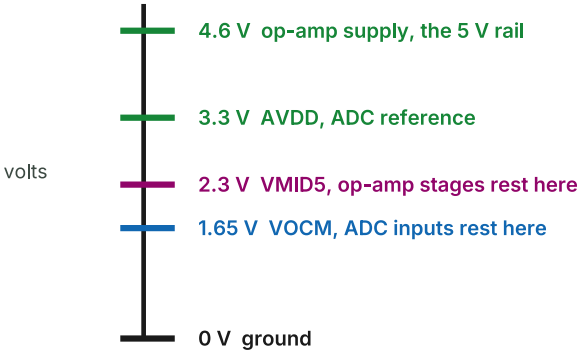


## 0.4 THE BASICS
# What an ADC measures

The ADS7057 measures the **difference** between two pins, AINP and AINM. It reports the difference as a 14-bit signed number in two's complement. One step, called 1 LSB, is 0.403 mV.

The full-scale range is plus and minus the supply AVDD, so ±3.3 V. The code 0x0000 means no difference.

CODE LADDER

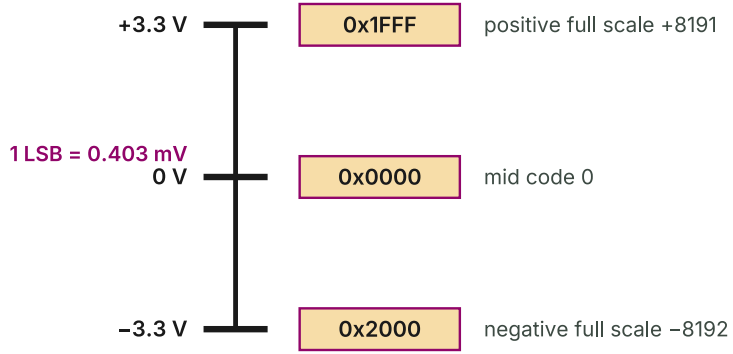

## 0.5 THE BASICS
# Why filter before sampling

A sampled signal cannot tell a frequency f from FS – f. At 1.2 MSPS a tone at 800 kHz looks exactly like a tone at 400 kHz, inside the band of interest.

So a low-pass filter must remove what lies above half the sample rate before the ADC sees it. The sample rate here is about 1.2 MSPS with a 25 MHz SPI clock (ESTIMATE).

ALIASING

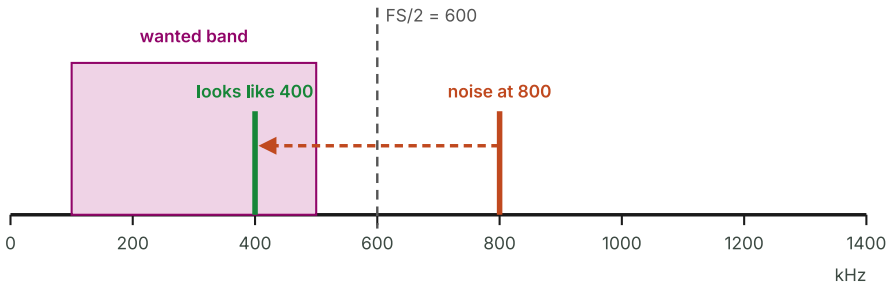


## 0.6 THE BASICS
# How to read a PCB

The board has two copper layers. A **pad** holds a part. A **track** joins pads. A **via** is a plated hole that joins the two layers. A **pour** fills free space with copper, here ground.

The **silkscreen** prints the names. The figure is a 20 × 8 mm cut of this board around the ADC.

REAL BOARD, 6 ×

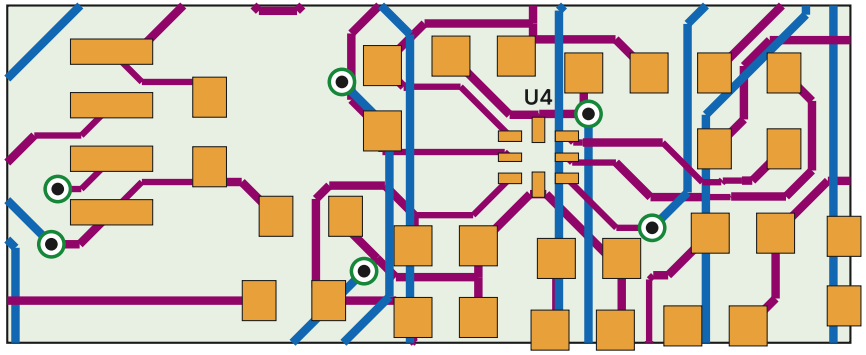


amber: pads  purple: top tracks  blue: bottom tracks  green ring: vias  pale green: ground pour

NOTES

NOTES

SECTION 1

# Power and references

STEPS 1 TO 6

How 5 V comes in through the USB-C or the header, how 3.3 V is made from it, and how the two mid-rails of 2.3 V and 1.65 V are made. Everything else on the board rests on these rails.

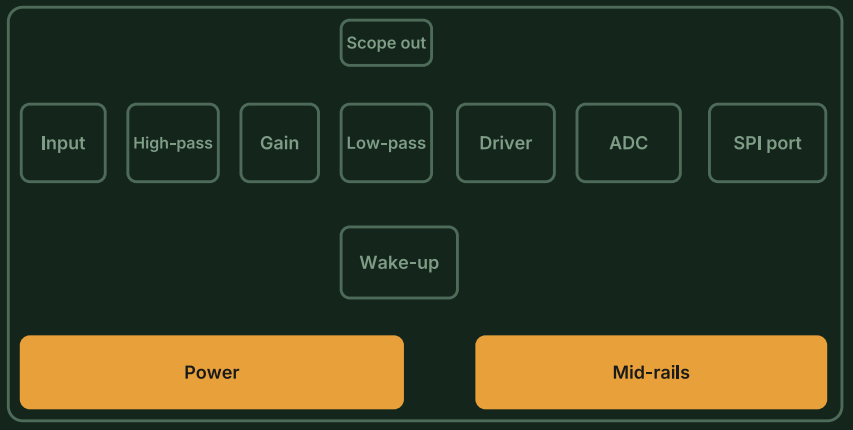


BLOCKS AT WORK IN THIS SECTION (SEE PAGE 3)

POWER AND REFERENCES

## 1 How 5 V comes in

The board takes 5 V from the USB-C connector (J2) or from the 2-pin header (J7). Two 5.1 kΩ resistors (R32, R33) on the CC pins tell any charger or power bank to give 5 V.

Each input goes through its own **SS14** diode (D1, D2). The diode blocks a reversed supply and lets you use both inputs together. It costs about 0.4 V, so the 5 V rail sits near 4.6 V.

INPUT PATH

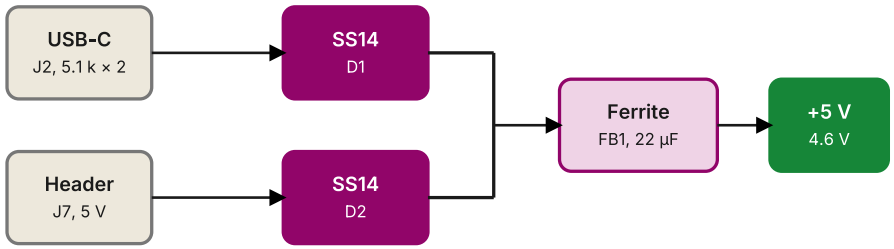


POWER AND REFERENCES

## 2 Why a ferrite and 22 µF on 5 V

A USB power bank is a switching converter, and its ripple can sit at 100 kHz to 1 MHz, the band the sensor listens to. A battery does not have this ripple, which is why the old 9 V design did not need a filter.

The ferrite bead FB1 and the 22 µF ceramic C23 form a low-pass filter. With an assumed 300 nH the corner is near 62 kHz (ESTIMATE), so the ripple in the AE band falls by 25 dB or more.

INPUT FILTER, ESTIMATE

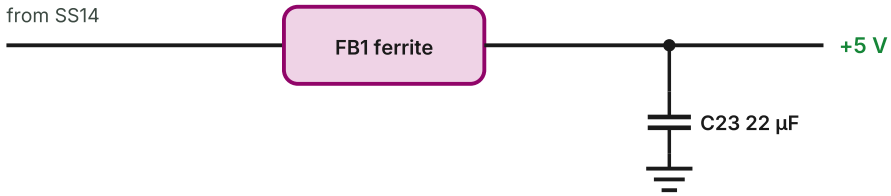


ceramic, 25 V part on a 5 V rail

POWER AND REFERENCES

## 3 Where the ADC reference comes from

The ADS7057 uses its supply pin AVDD as its reference. Full scale is ±AVDD, so noise on AVDD is noise in every code.

A second regulator, the **XC6206** (U5), makes AVDD from the 5 V rail. It accepts ceramic capacitors, so the 1 µF parts C30 and C21 are enough. The 4.7 µF C18 and the 100 nF C22 sit at the ADC pin.

AVDD PATH

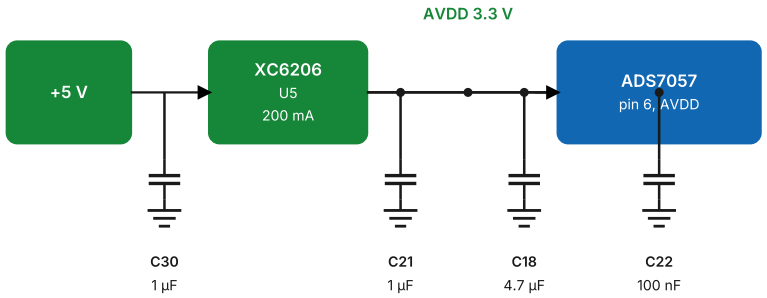


ESTIMATE: 0.5 mV rms of noise on AVDD adds about 0.2 LSB to an event of 17 % full scale

POWER AND REFERENCES

## 4 How the 2.3 V mid-rail is made

Two 10 kΩ resistors (R7, R8) divide the 5 V rail into 2.3 V. The 1 µF capacitor C7 smooths it. The op-amp U2B then copies this voltage and drives the rail called **VMID5**.

The divider and C7 form an RC of 5 ms, so VMID5 needs about 25 ms to settle after power-up. R9 (10 Ω) and C8 (10 µF) keep the buffer calm.

SETTLING AFTER POWER-UP

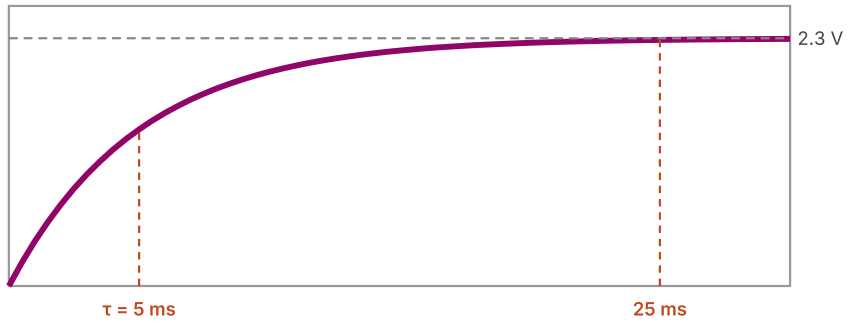


time after power-up

POWER AND REFERENCES

## 5 How the 1.65 V mid-rail is made

Two 1 kΩ resistors (R14, R15) divide **AVDD** in half, and C13 smooths the result. This voltage, VOCM, tells the THS4531 where to centre its two outputs.

The datasheet asks for the ADC inputs to rest at AVDD/2, within ±0.1 V. The divider follows AVDD by ratio, so any change of AVDD moves VOCM with it.

VOCM

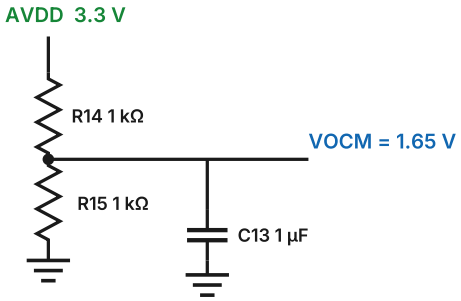


**allowed window**

**1.55 to 1.75 V**

AVDD/2 ± 0.1 V

POWER AND REFERENCES

## 6 How much current, and where to probe

The board draws about 27 mA from the 5 V input (ESTIMATE from datasheet typical values). The four op-amp channels and the sensor head are the largest parts. A 2 A USB port feeds four boards with a wide margin.

Every stage has a test point on the bottom strip of the board. The list below names the 5 V and the mid-rails.

ESTIMATE, mA

- OPA2365, 4 channels 18
- Sensor head 4.7
- VOCM divider 1.6
- ADS7057 AVDD 1.1
- LM393 0.4
- THS4531 0.25
- VMID5 divider 0.25
- threshold chain 0.065

| | | | | | |
|---|---|---|---|---|---|
| **+5 V** | TP11, 5V | **AVDD** | TP12, AVDD | **VMID5** | TP13, MID5 |
| **VOCM** | TP14, VOCM | **+3V3** | TP15, 3V3 | **GND** | TP19, TP20 |

NOTES

NOTES

SECTION 2

# The signal path

STEPS 7 TO 16

From the SMA connector to the output of the low-pass filter: input coupling, high-pass, gain, low-pass, the total response, headroom, the SCOPE OUT tap and the op-amps.

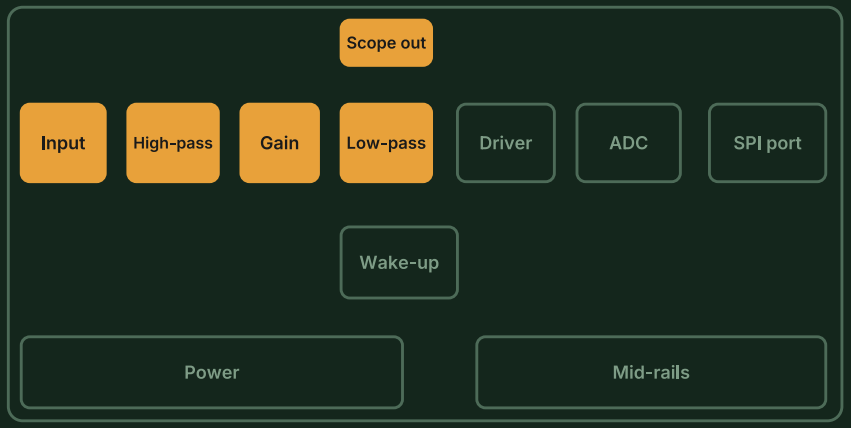


BLOCKS AT WORK IN THIS SECTION (SEE PAGE 3)

## 7 THE SIGNAL PATH
## How the signal gets in

The sensor head reaches J1 through a coax cable. The head has its own 49.9 Ω output resistor. The same cable carries the 5 V that powers the head, so the centre pin of J1 sits near 4 V.

So the first part is a 100 nF capacitor, C33. It passes the 250 kHz burst and blocks the DC level. A 1 MΩ resistor R27 to VMID5 sets the DC level of the next node, and C1 continues to the high-pass.

INPUT

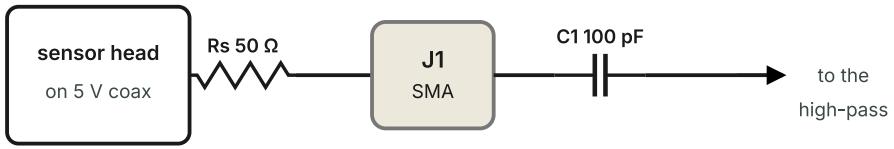


**at 250 kHz, C1 is 6.4 kΩ. At DC it is open.**

## 8 THE SIGNAL PATH
## How the high-pass works

The high-pass is a **Sallen-Key** stage: two capacitors in series, two resistors and one op-amp used as a buffer. Low frequencies cannot pass the capacitors.

$$f_0 = \frac{1}{2\pi C\sqrt{R_1 R_2}}, \qquad Q = \frac{1}{2}\sqrt{\frac{R_2}{R_1}}$$

With C = 100 pF, R1 = 10 kΩ and R2 = 20 kΩ, the corner is 112.5 kHz. Q is 0.71. That is a maximally flat response.

SALLEN-KEY HIGH-PASS

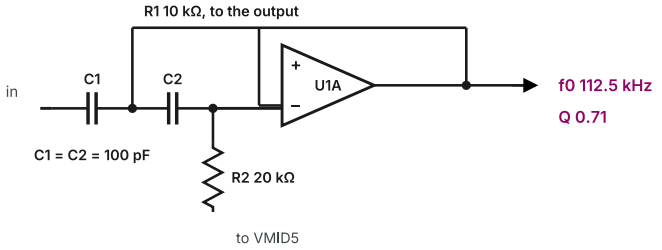


## 9 THE SIGNAL PATH
## Why the corner is at 113 kHz

Most noise on the perfboard sits below 100 kHz, from 11.5 to 26.8 mV rms. The AE band starts at 100 kHz and holds only about 4 mV rms.

So the high-pass sits just under the band. At 10 kHz it already removes 41 dB of this stage alone. A corner any higher would also cut the events.

SIMULATION, HIGH-PASS STAGE ONLY

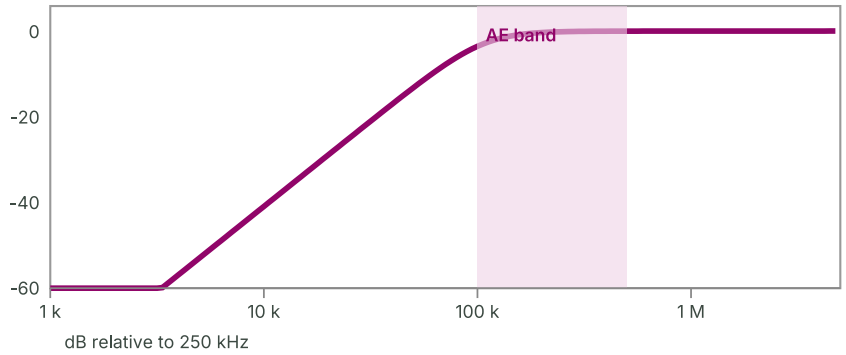


## 10 THE SIGNAL PATH
## How the gain is set

The second half of U1 is a non-inverting amplifier. Its gain comes from two resistors: R3 from the output back to the minus input, and R4 from that input to VMID5.

$$G = 1 + \frac{R_3}{R_4} = 1 + \frac{3.9\,\text{k}\Omega}{1\,\text{k}\Omega} = 4.9$$

Because R4 goes to VMID5 and not to ground, the gain is 1 for DC. The stage output rests at 2.3 V, and the gain applies only to the burst.

GAIN 4.9

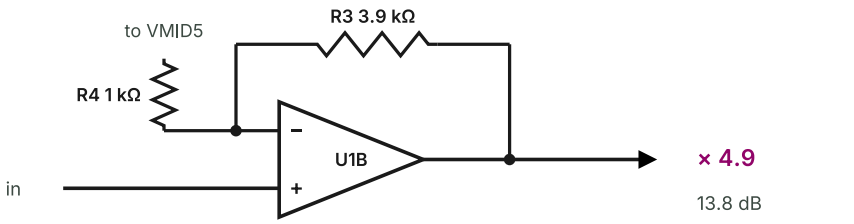

## 11 THE SIGNAL PATH
## How the low-pass works

The low-pass is also a Sallen-Key stage, with the parts swapped: two resistors in series and two capacitors. The capacitors give high frequencies a path to VMID5.

$$f_0 = \frac{1}{2\pi R\sqrt{C_1 C_2}}, \qquad Q = \frac{1}{2}\sqrt{\frac{C_1}{C_2}}$$

With R = 2.2 kΩ, C1 = 200 pF (C4 and C5 in parallel) and C2 = 100 pF (C6), the corner is 512 kHz. Q is 0.71.

SALLEN-KEY LOW-PASS

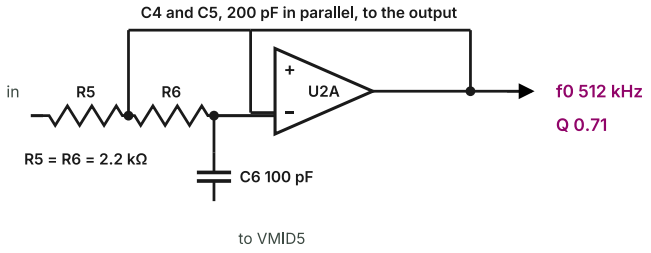


## 12 THE SIGNAL PATH
## The total response

Put the three stages together and add the 50 Ω source. The simulation, with TI's own OPA365 model, gives 12.3 dB of gain at 250 kHz. That is ×4.1, a little below the ideal ×4.9.

The loss at 10 kHz is 40.5 dB against a target of 40 dB. With part tolerances 11 of 150 runs fall under 40 dB, the worst at 39.7 dB.

SIMULATION, SMA TO ADC

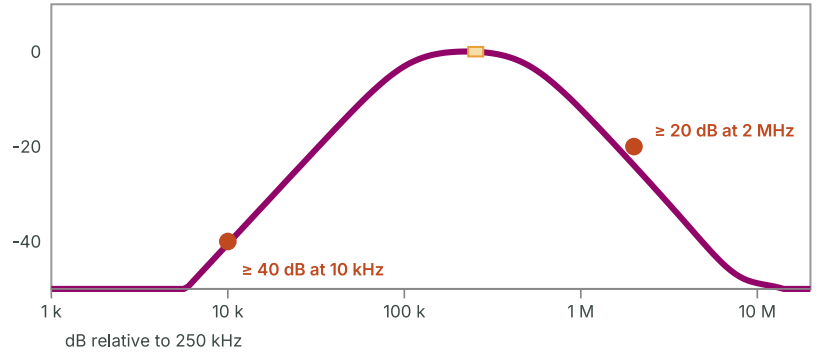


## 13 THE SIGNAL PATH
## What clips first

The 5 V stages are the narrowest part of the path. They can swing about 2.2 V either side of 2.3 V. A burst clips there when it is larger than 0.49 V at the perfboard output.

A typical recorded event is 120 mV, so the margin is 4.1×. At the ADC that event fills 16 % of the full scale.

SIMULATION, 3 BURSTS

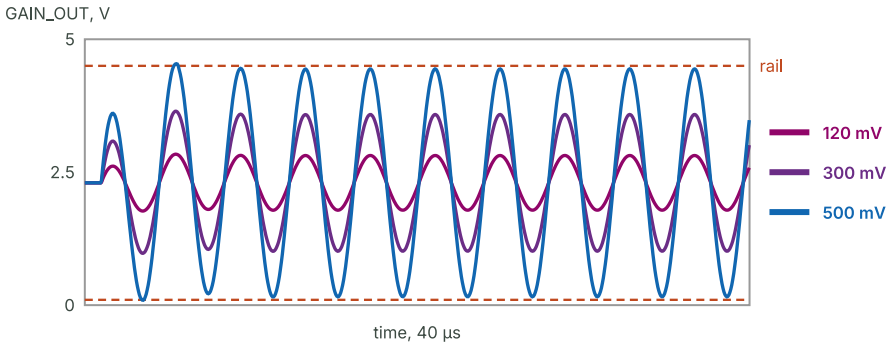


## 14 THE SIGNAL PATH
## What SCOPE OUT is for

J4 gives the scope the same signal that the ADC sees, taken at the output of the low-pass. A 51 Ω resistor (R25) sits between the op-amp and the connector.

The resistor keeps the cable capacitance away from the op-amp, so the filter cannot ring. Use the 1 MΩ input of the scope. A 50 Ω input would form a divider with R25 and halve the signal.

CABLE LOAD

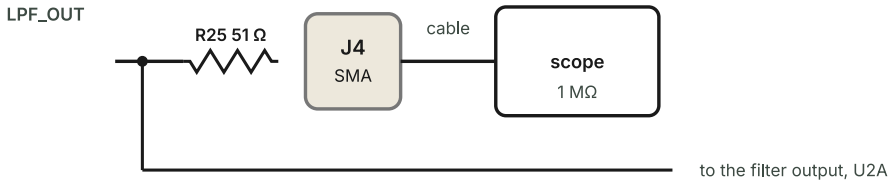


**1 MΩ input: 1.000 of LPF_OUT. 50 Ω input: 0.50**

## 15 THE SIGNAL PATH
## What the OPA2365 does here

Two dual op-amps, U1 and U2, do all the active filtering. The OPA2365 is rail-to-rail on input and output and runs from 2.2 to 5.5 V. Its gain-bandwidth is 50 MHz and its noise is 4.5 nV/√Hz.

Each package holds two channels. The table shows which stage uses which channel.

SOIC-8, TOP VIEW

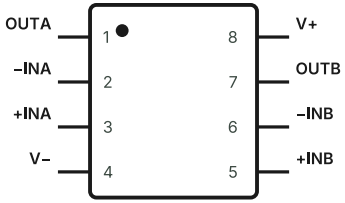


| | |
|---|---|
| **U1A pins 1 2 3** | high-pass buffer |
| **U1B pins 5 6 7** | gain × 4.9 |
| **U2A pins 1 2 3** | low-pass buffer |
| **U2B pins 5 6 7** | VMID5 buffer |

## 16 THE SIGNAL PATH
## Where these parts are

The signal parts sit in the top half of the board, from J1 on the left to U2 on the right. U1 holds the high-pass and the gain. U2 holds the low-pass and the VMID5 buffer.

J4 and its resistor R25 stand in the top right corner, away from the ADC.

TOP VIEW, ACTIVE PARTS IN AMBER

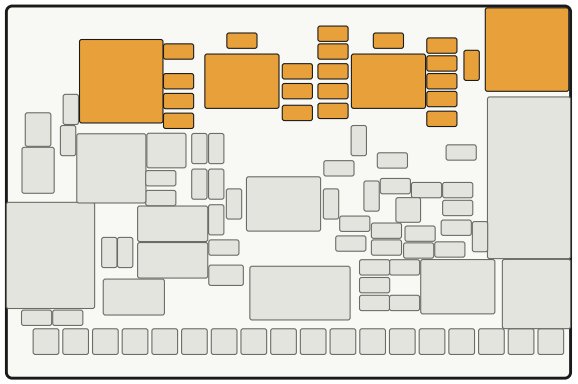

**Input and high-pass**
C1 C2 R1 R2

**Gain**
R3 R4

**Low-pass**
R5 R6 C4 C5 C6

**Op-amps**
U1 U2 C3 C10

**VMID5**
R7 R8 C7 R9 C8 C9

**Connectors**
J1 J4 R25

NOTES

NOTES

SECTION 3

# Driver and ADC

STEPS 17 TO 24

How one wire becomes two, how the ADC input is protected from its own sampling kick, what the ADS7057 is and what its numbers mean for this board.

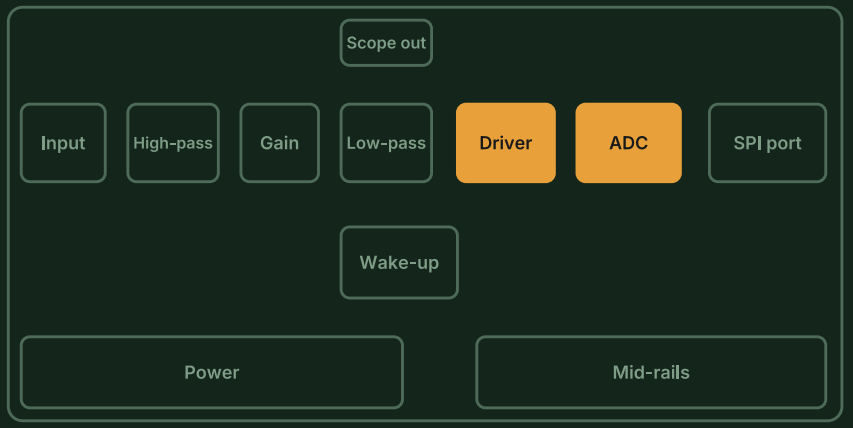


BLOCKS AT WORK IN THIS SECTION (SEE PAGE 3)

## 17 DRIVER AND ADC
## How one wire becomes two

The ADS7057 needs two inputs that move in opposite directions. The **THS4531** (U3) makes them from one wire. The capacitor C11 and R10 bring the signal in. The corner of this coupling is 159 Hz, far below the band.

$$V_{OUT+} - V_{OUT-} = \frac{R_{12}}{R_{10}} V_{IN} = 1 \cdot V_{IN}$$

Each output moves half of the signal around VOCM, in opposite directions.

SIMULATION, 120 mV BURST

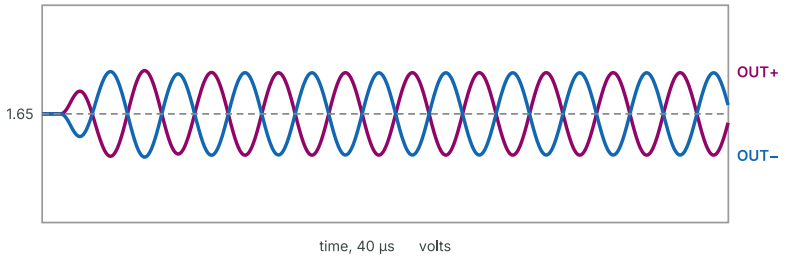


## 18 DRIVER AND ADC
## What to know about the THS4531

Three facts from the datasheet shape the board. The **PD** pin must be driven, so U3 ties it to 5 V. The **VOCM** pin accepts 0.95 to 4.0 V, so 1.65 V is fine.

The third fact is a limit. The designers of the part expect about 2 pF of load between its outputs. A larger load needs a series resistor.

DATASHEET AGAINST THIS BOARD

| item | datasheet | this board | |
|---|---|---|---|
| Supply | 2.5 to 5.5 V | **5 V** | |
| Gain-bandwidth | 27 MHz | **gain 1** | |
| Noise | 10 nV/√Hz | **0.2 LSB** | |
| VOCM range at 5 V | 0.95 to 4.0 V | **1.65 V** | |
| PD pin | must be driven | **tied to 5 V** | |
| **Load between outputs** | 2 pF nominal | **400 pF + 20 Ω** | OPEN |

## 19 DRIVER AND ADC
## What the 10 Ω and 400 pF are for

When the ADC samples, its 16 pF capacitor connects to the input and pulls a burst of charge. A step of 0.56 V moves 9 pC. A big capacitor next to the pins supplies this charge, so the driver sees only a small glitch.

Four 100 pF capacitors make 400 pF, which is 25 times the sampling capacitor. The datasheet asks for at least 20 times. The two 10 Ω resistors isolate the driver. The pole is at 20 MHz, far above the band.

KICKBACK FILTER

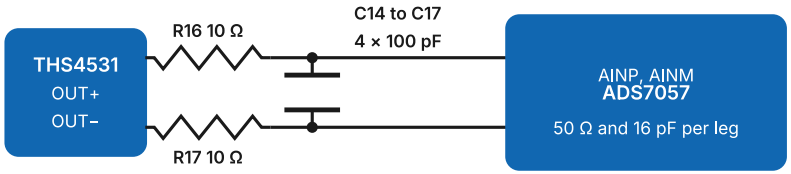


**the node dips by 22 mV (53 LSB) and recovers in 54 ns at worst**

the 25× rule: 16 pF × 20 = 320 pF minimum

## 20 DRIVER AND ADC
## What the ADC input looks like

The sampling switch of the ADC is 50 Ω in series with 16 pF on each leg. The simulation closes the switch on a signal that was left at the previous sample. The input settles to half an LSB in 29 ns for a typical step and 54 ns for a large one.

The ADC needs the input settled within 95 ns at the highest rate. So the margin is a factor of about two on the worst case.

SIMULATION, SETTLING

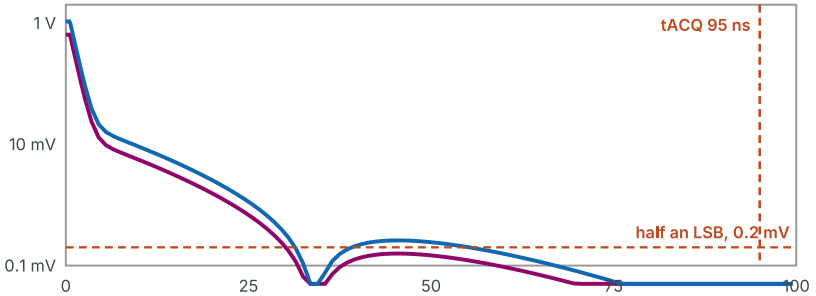


ns after the switch closes. Error against the final value, log scale.

## 21 DRIVER AND ADC
## What the ADS7057 is

A 14-bit successive-approximation ADC in a 1.5 × 1.5 mm package with eight pads. It samples on the falling edge of CS and sends its result over SPI.

The table lists the numbers that matter for this board. All come from datasheet SBAS821.

X2QFN-8, TOP VIEW

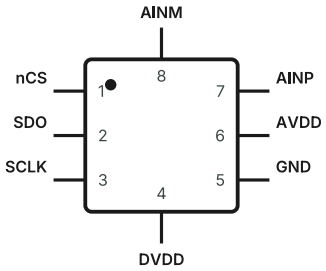


| | |
|---|---|
| **Resolution** | 14 bit, no missing codes |
| **Rate** | up to 2.5 MSPS |
| **Supply** | AVDD 2.35 to 3.6 V, DVDD 1.65 to 3.6 V |
| **Input** | differential, ±AVDD, common mode AVDD/2 |
| **SNR** | 79.6 dB at 2 kHz |
| **INL, DNL** | ±0.9 LSB, ±0.3 LSB typical |
| **SPI** | mode 1, SCLK up to 60 MHz |
| **Conversion** | 18 SCLK, then at least 95 ns acquisition |

## 22 DRIVER AND ADC
## How the ADC is decoupled

AVDD gets a 4.7 µF (C18) and a 100 nF (C22). DVDD gets a 1 µF (C19) and a 100 nF (C20). The datasheet asks for 3.3 µF and 1 µF and says to keep them close, with no vias between the pin and the capacitor.

On this board C22 is 4.4 mm from the ADC and C18 is 3.0 mm. C20 is 1.6 mm and C19 is 1.8 mm. The 100 nF parts sit farther than the large ones, which is a point to improve.

REAL BOARD, 7 ×

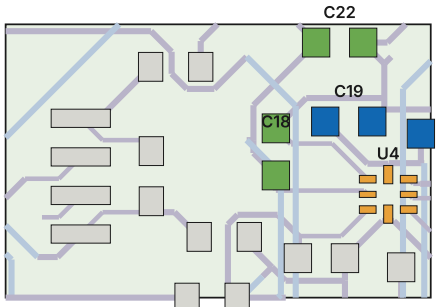


AVDD parts green, DVDD parts blue

## 23 DRIVER AND ADC
## How a voltage becomes a code

The 120 mV event of the simulation reaches 0.517 V between AINP and AINM. The code is the voltage divided by 1 LSB, rounded down.

$$\text{code} = \left\lfloor \frac{V_{\text{AINP}} - V_{\text{AINM}}}{1\ \text{LSB}} \right\rfloor$$

So the peak is 1284, which is 0x0504. The negative peak -0.507 V gives -1258, which is 0x3B16 in two's complement.

FROM THE SIMULATION

D13 is the sign bit

| | D13 | D12 | D11 | D10 | D9 | D8 | D7 | D6 | D5 | D4 | D3 | D2 | D1 | D0 | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| positive peak | 0 | 0 | 0 | 1 | 0 | 1 | 0 | 0 | 0 | 0 | 0 | 1 | 0 | 0 | 0x0504 |
| negative peak | 1 | 1 | 1 | 0 | 1 | 1 | 0 | 0 | 0 | 1 | 0 | 1 | 1 | 0 | 0x3B16 |

## 24 DRIVER AND ADC
## How much noise the ADC sees

Three noise sources add. The sensor noise of the perfboard, through this board, is 38 to 47 LSB rms. The board adds 0.2 LSB. The ADC itself adds about 0.6 LSB.

So the sensor decides the noise floor. The board and the ADC are small by comparison, and this is what a test board should show.

LSB RMS, ESTIMATE FOR THE ADC

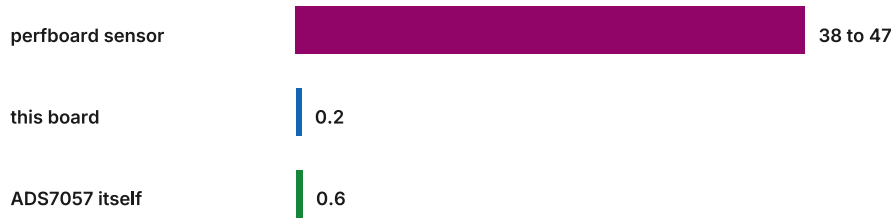

SECTION 4

# The SPI link

STEPS 25 TO 30

The four wires from the ADC to the ZedBoard, what one frame looks like, why the data comes one frame late, the calibration at power-up and how fast the link can go.

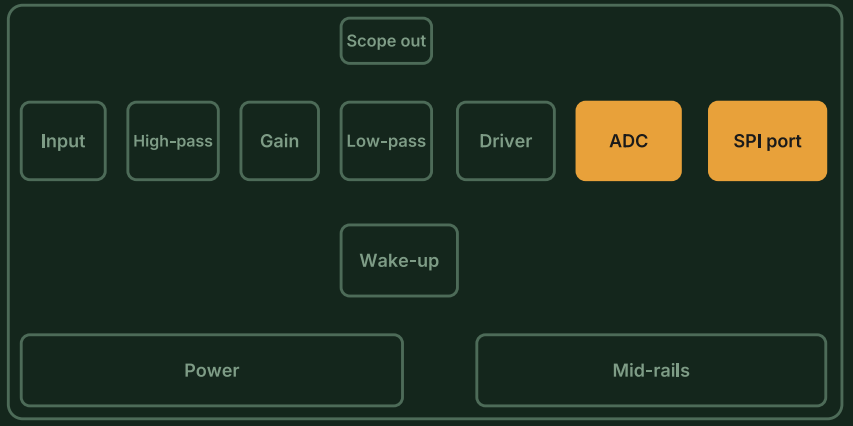


BLOCKS AT WORK IN THIS SECTION (SEE PAGE 3)

## 25 THE SPI LINK
## Which pin is which on the PMOD

The board plugs into one PMOD port of the ZedBoard, JA to JD. The board uses eight of the twelve pins. **CS**, **SCLK** and **SDO** carry SPI. **nWAKE** is the wake-up line. 3V3 powers the ADC logic, and GND is the return.

There is no MOSI wire, because this ADC only sends data. The numbering follows the Digilent SPI PMOD, so pin 1 is CS.

J3, SEEN FROM THE TOP

| left column | right column |
|---|---|
| 1 CS | 7 not used |
| 2 not used | 8 not used |
| 3 SDO | 9 not used |
| 4 SCLK | 10 nWAKE |
| 5 GND | 11 GND |
| 6 3V3 | 12 3V3 |

The number is the PMOD pin. Row 1 holds pin 1 and pin 7.

## 26 THE SPI LINK
## Why 22 Ω in each line

R18, R19 and R20 sit in the CS, SCLK and SDO lines at the ADC. Together with the small capacitance of the trace and the pin they slow the edge of the FPGA output a little and damp ringing.

The cost in speed is tiny. 22 Ω with about 10 pF (ESTIMATE) gives 0.2 ns, and one bit at 60 MHz lasts 16.7 ns.

SERIES RESISTOR

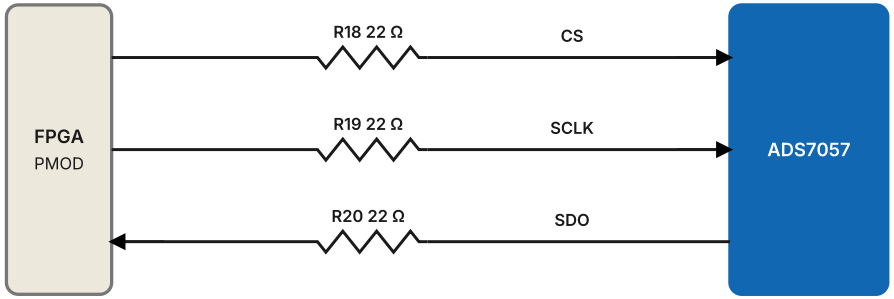


## 27 THE SPI LINK
## What one frame looks like

A **frame** starts when CS falls. The ADC samples at that moment. The host then sends 18 clock pulses. On SDO the ADC answers with a leading 0, then 14 data bits, most significant bit first, then three zeros.

After the 18th clock the ADC converts nothing more. CS goes high and the ADC acquires the next sample for at least 95 ns.

ONE FRAME

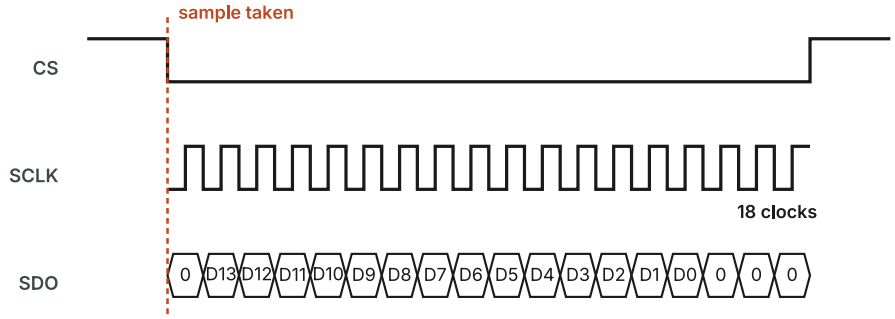


## 28 THE SPI LINK
## Why the data is one frame late

The ADC uses the clocks of a frame to send the result of the **previous** conversion. The conversion of the current sample runs inside the same frame, and its result waits for the next one.

So the first frame after power-up returns all zeros, and every later frame returns the sample that was taken one frame before.

THREE FRAMES

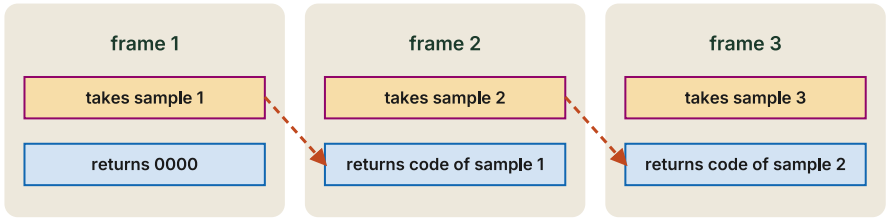

## 29 THE SPI LINK
## What happens at power-up

The datasheet recommends an offset calibration at power-up. The host does it by sending **24** clocks in the first frame, not 18. The ADC then disconnects its input, corrects its own offset and sends zeros.

At a 20 MHz clock this first frame takes 1200 ns plus 95 ns of acquisition, so 1295 ns. Repeat it when AVDD or the temperature changes a lot.

FIRST FRAME

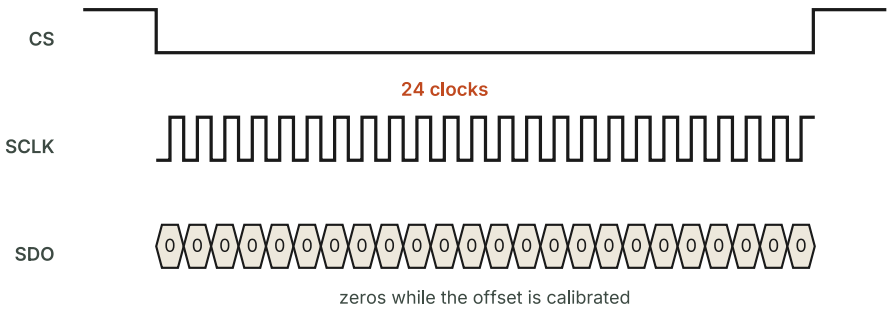


## 30 THE SPI LINK
## How fast the link can go

One sample costs 18 clock periods plus 95 ns. So the sample rate is set by SCLK. The datasheet allows up to 60 MHz, which gives the full 2.5 MSPS.

There are no level shifters on this board, so the FPGA drives the ADC pins directly at 3.3 V. Start at 10 to 20 MHz and raise the clock when the first test works.

SAMPLE RATE AGAINST SCLK

| SCLK | one sample | sample rate |
|---|---|---|
| **10 MHz** | 1895 ns | **0.53 MSPS** |
| **20 MHz** | 995 ns | **1.01 MSPS** |
| **25 MHz** | 815 ns | **1.23 MSPS** |
| **40 MHz** | 545 ns | **1.83 MSPS** |
| **60 MHz** | 395 ns | **2.50 MSPS** |

NOTES

NOTES

SECTION 5

# The wake-up

STEPS 31 TO 35

How the LM393 turns a strong burst into a low level on nWAKE, how the trimmer sets the window and how to set it on the bench.

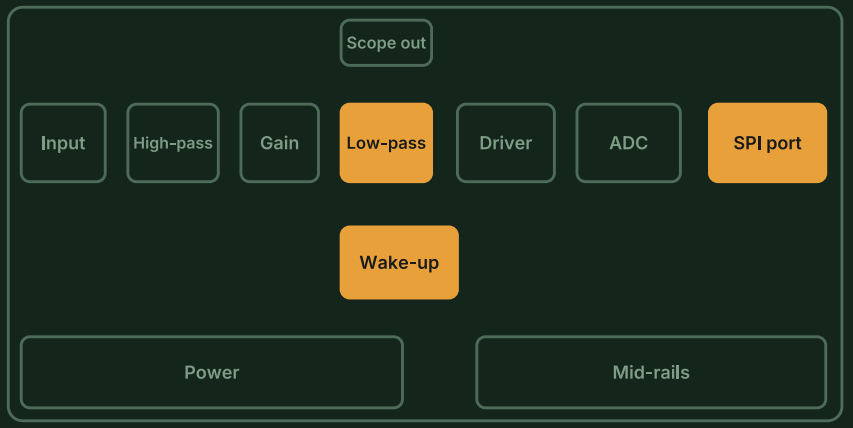


BLOCKS AT WORK IN THIS SECTION (SEE PAGE 3)

## 31 THE WAKE-UP
## What a window comparator is

The LM393 holds two comparators. One trips when the signal rises above the **upper** threshold. The other trips when it falls below the **lower** threshold. Both thresholds sit around the mid-rail VMID5.

The two outputs share one wire. So nWAKE goes low as soon as the signal leaves the window on either side.

SIMULATION, 120 mV BURST

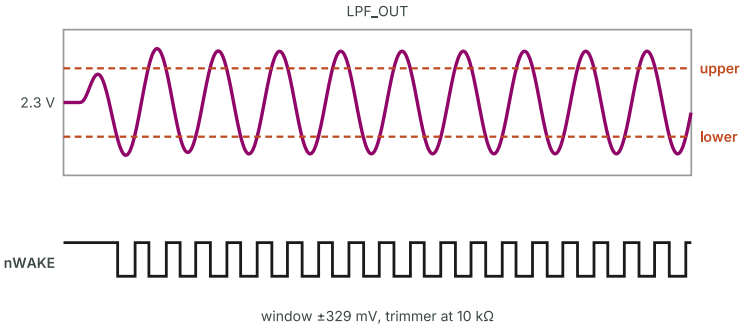


## 32 THE WAKE-UP
## How the window is set

One resistor chain from 5 V to ground makes both thresholds. The trimmer RV1 and a 1 kΩ resistor set the distance between them.

$$V_{\text{half}} = 2.5\,\text{V} \cdot \frac{1\,\text{k}\Omega + R_p}{67\,\text{k}\Omega + R_p}$$

The last column converts the window back to the perfboard output with a gain of 4.1.

RP AGAINST WINDOW

| Rp | upper | lower | half window | at J1 |
|---|---|---|---|---|
| 0 kΩ | 2.534 V | 2.466 V | 34 mV | 8 mV |
| 5 kΩ | 2.692 V | 2.308 V | 192 mV | 47 mV |
| 10 kΩ | 2.829 V | 2.171 V | 329 mV | 80 mV |
| 14 kΩ | 2.926 V | 2.074 V | 426 mV | 104 mV |
| 20 kΩ | 3.055 V | 1.945 V | 555 mV | 135 mV |

## 33 THE WAKE-UP
## Why nWAKE is open-collector

The LM393 output can only pull the line to ground. It cannot drive it high. A 10 kΩ resistor (R24) pulls the line up to 3.3 V from the PMOD.

So the FPGA never sees 5 V, although the LM393 runs from 5 V. The two outputs share one wire, so either one can pull nWAKE low.

WIRED-OR

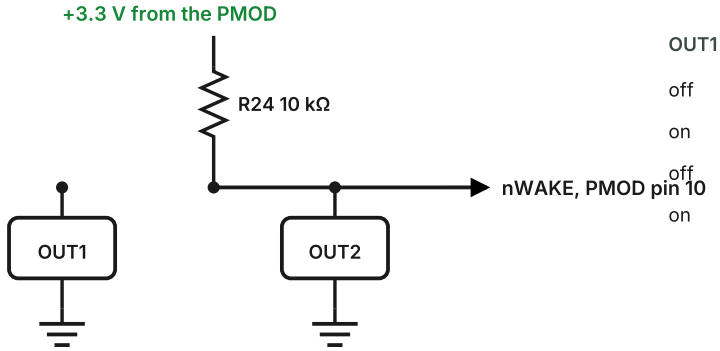


| OUT1 | OUT2 | nWAKE |
|---|---|---|
| off | off | high |
| on | off | low |
| off | on | low |
| on | on | low |

## 34 THE WAKE-UP
## How fast and how accurate

The LM393 answers in about 1.3 µs. That is slow for a clock but fast for a wake-up. Its input offset is about 5 mV, which is small against the window.

The noise decides the smallest useful setting. The quiet baseline of 4.1 mV rms becomes 17 mV rms at the comparator. Three times that is 51 mV. Below Rp = 0.4 kΩ the noise alone trips the output.

NOISE AGAINST WINDOW, ESTIMATE

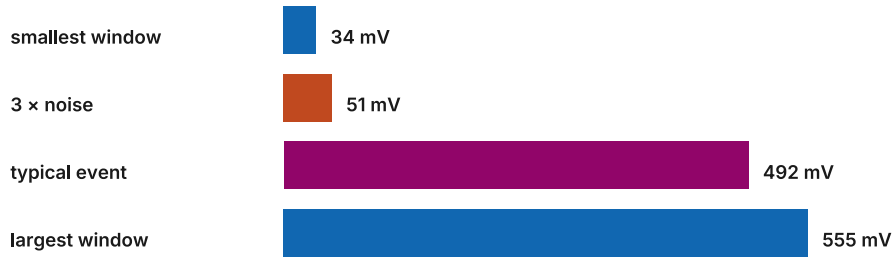

THE WAKE-UP

# 35 How to set the trimmer

Choose the burst that should wake the system. Feed that burst to J1. Watch SCOPE OUT and nWAKE together. Turn RV1 slowly until nWAKE drops for that burst and stays high without it.

A 50 mV burst at J1 needs Rp near 4.9 kΩ. A 100 mV burst needs Rp near 12.0 kΩ. The trimmer is a 20 kΩ part, so the middle of its travel is close to 100 mV.

BENCH STEPS

1. **Feed 250 kHz, 100 mV to J1**
2. **Read 0.41 V peak on SCOPE OUT**
3. **Turn RV1 until nWAKE just pulses**
4. **Remove the burst. nWAKE must stay high**

clockwise should widen the window. Check with a meter on VTH_H

NOTES

NOTES

NOTES

SECTION 6

# The board

STEPS 36 TO 44

The stack, the floor plan, where every part sits, how the tracks and the power are routed, what the silkscreen says and which footprints need care.

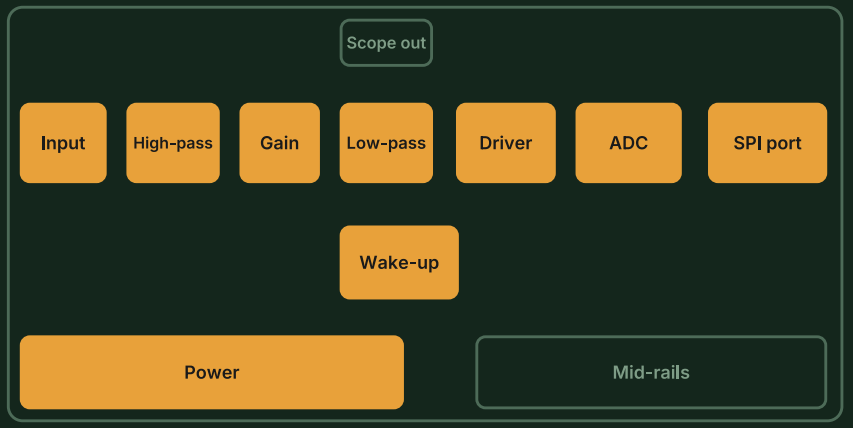


BLOCKS AT WORK IN THIS SECTION (SEE PAGE 3)

## 36 THE BOARD
# The stack and the size

The main board is 57 × 37.6 mm with two copper layers on 1.6 mm FR-4. Both layers carry a ground pour. 119 of the 173 vias are ground stitching vias that tie the two pours together.

The board has 608 track segments. 528 are 0.2 mm wide. 75 are 0.15 mm, near the fine-pitch pads. 5 are 0.35 mm, on the 5 V input. Vias are 0.6 mm with a 0.3 mm drill.

FROM THE BOARD FILE

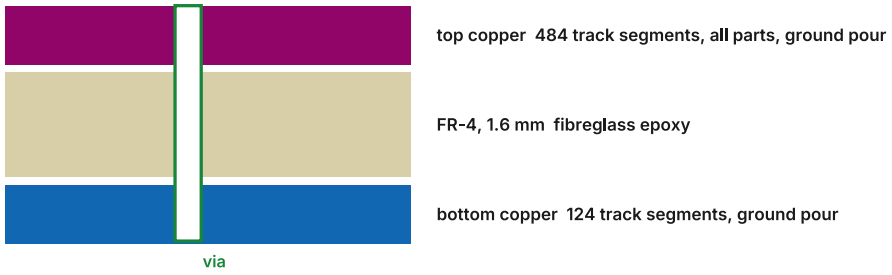


## 37 THE BOARD
# How the floor is planned

The signal runs left to right across the top half, as in the block diagram. The driver and the ADC sit in the middle. The USB-C connector and the 5 V parts take the bottom left. The comparator sits in the bottom right. The test points run along the bottom edge.

The PMOD connector is on the right edge so the board hangs on the ZedBoard. The SMA connectors stand at the top, away from the ADC. The left strip holds the bias-T.

TOP VIEW, COLORS BY BLOCK

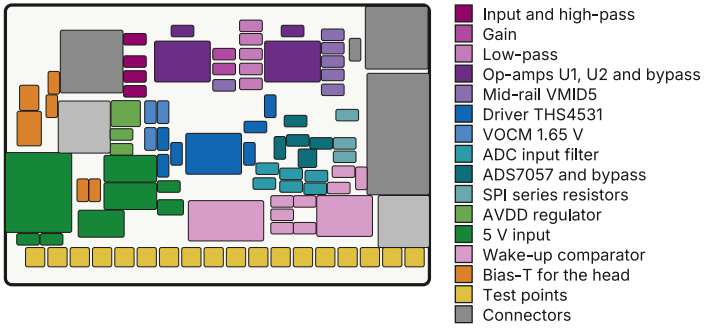


## 38 THE BOARD
# Where every part is

The table lists the blocks, the references and the count. The main board has 96 footprints: 68 surface-mount parts, 6 through-hole parts and 2 mounting holes and 18 test points, plus one not-fitted capacitor and the solder jumper JP1.

Every part has a place in exactly one block, and the same reference appears in the schematic, the BOM and the placement file.

BLOCKS, REFERENCES

- **Input and high-pass** — C1 C2 R1 R2
- **Gain** — R3 R4
- **Low-pass** — C4 C5 C6 R5 R6
- **Op-amps U1, U2 and bypass** — C3 C10 U1 U2
- **Mid-rail VMID5** — C7 C8 C9 R7 R8 R9
- **Driver THS4531** — C11 C12 R10 R11 R12 R13 U3
- **VOCM 1.65 V** — C13 R14 R15
- **ADC input filter** — C14 C15 C16 C17 R16 R17
- **ADS7057 and bypass** — C18 C19 C20 C22 U4
- **SPI series resistors** — R18 R19 R20
- **AVDD regulator** — C21 C30 U5
- **5 V input** — C23 D1 D2 FB1 J2 J7 R32 R33
- **Wake-up comparator** — C26 C27 C28 C31 RV1 R21 R22 R23 R24 U6
- **Bias-T for the head** — C32 C33 JP1 L2 R26 R27
- **Test points** — TP3 TP4 TP5 TP6 TP7 TP8 TP9 TP10 TP11 TP12…
- **Connectors** — J1 J3 J4 R25
- **Holes** — H1 H2

## 39 THE BOARD
# Why the ADC corner is built this way

Everything that touches the ADC input sits around U4: the two 10 Ω resistors, the four 100 pF capacitors, the supply capacitors and the three 22 Ω resistors. The tracks AINP and AINM are 38 and 30 mm long.

The 5 mm difference is harmless here. A 5 mm track delays a signal by about 30 ps, and a 500 kHz wave lasts 2 µs.

REAL BOARD, ADC CORNER

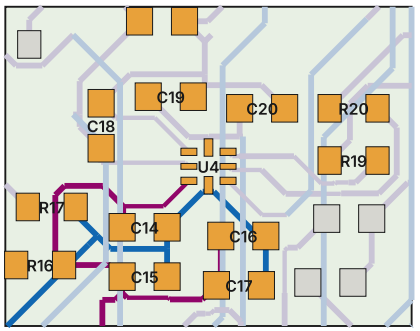

## 40 THE BOARD How the analog tracks are routed

The longest analog net is LPF_OUT at 91 mm, because it feeds the SCOPE OUT connector, the comparator and the driver. All other analog nets are under 46 mm.

The router chose the paths, and the board is small enough that none of them matters at 500 kHz. The figure lists the lengths.

NET LENGTH, mm

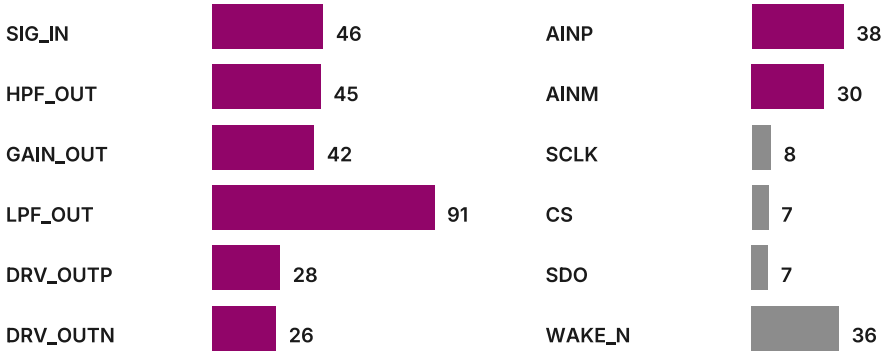


## 41 THE BOARD How power and ground are routed

Ground is a pour on both layers, tied by 119 vias, so every ground pad finds a short path. The power nets are mostly 0.2 mm tracks, because the currents are small. Only the input path is 0.35 mm.

The +5 V net is 141 mm of track in total. With 27 mA (22 mA, plus 5 mA for the sensor head) this drops about 9 mV across its whole length (ESTIMATE, worst case).

POWER NET LENGTH, mm

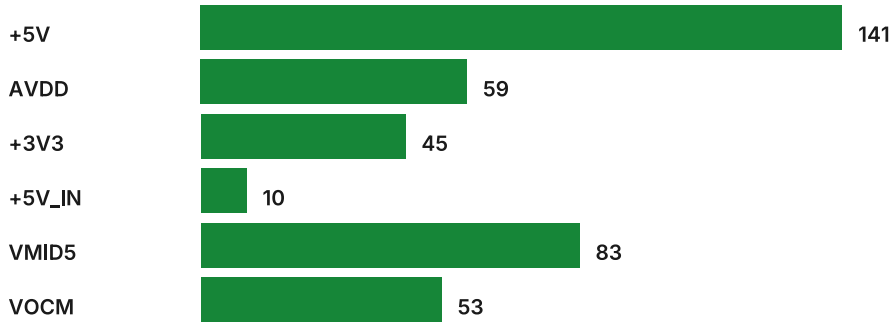


## 42 THE BOARD What each label on the silkscreen means

The front carries the labels that a user needs. The names of the parts (R16, C29 and so on) are not on the silkscreen, because the board is dense. They are in the KiCad file and in the 1:1 print.

The back carries the PMOD pin list and the title.

FRONT SIDE

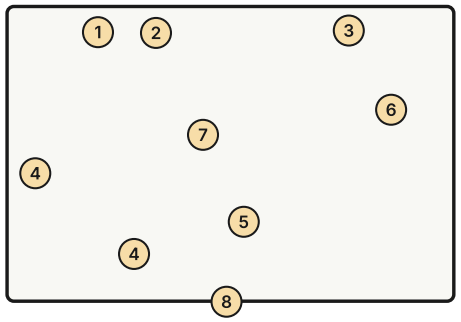


1 SENSOR IN: J1, sensor head, +5 V on the centre
2 CH box: write the channel number
3 SCOPE OUT: J4, the signal at the ADC
4 USB-C 5V and 5V IN: the two supply inputs
5 WAKE LEVEL: trimmer RV1
6 1: PMOD pin 1
7 logo: Auselia mark
8 test points: name under each pad

## 43 THE BOARD Which footprints are tricky

The ADS7057 pads are 0.55 × 0.25 mm at 0.5 mm pitch. The gap between pads is 0.25 mm, so the solder mask web is thin. JLCPCB assembled it in the quote without a warning.

Four other parts needed care. The factory model of each one had a different orientation or origin from the footprint, and the CPL now corrects it.

PARTS TO WATCH

**U4 ADS7057**
X2QFN-8, 1.5 mm
pin 1 mark checked

**U5 XC6206**
SOT-23, 3 pins
rotation 180

**J2 USB-C**
16 pads, 4 shell tabs
mouth beyond the left edge

**J3 PMOD**
right-angle 2 × 6
5.9 mm beyond the edge

THE BOARD

# 44 What the board looks like

The render is from the final KiCad file. J1 stands on the top left and J4 on the top right. The PMOD header J3 points off the right edge. The blue trimmer RV1 is at the bottom.

The two holes are M3 mounting holes.

3D RENDER, KICAD

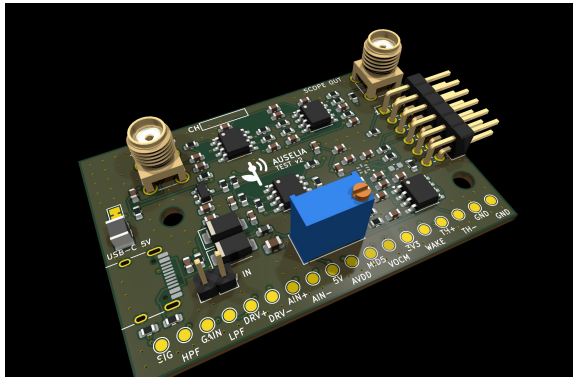


**J1: SENSOR IN, top left**

**J4: SCOPE OUT, top right**

**J3: PMOD, right edge**

**RV1: wake level trimmer**

**U4: ADS7057, centre right**

NOTES

NOTES

NOTES

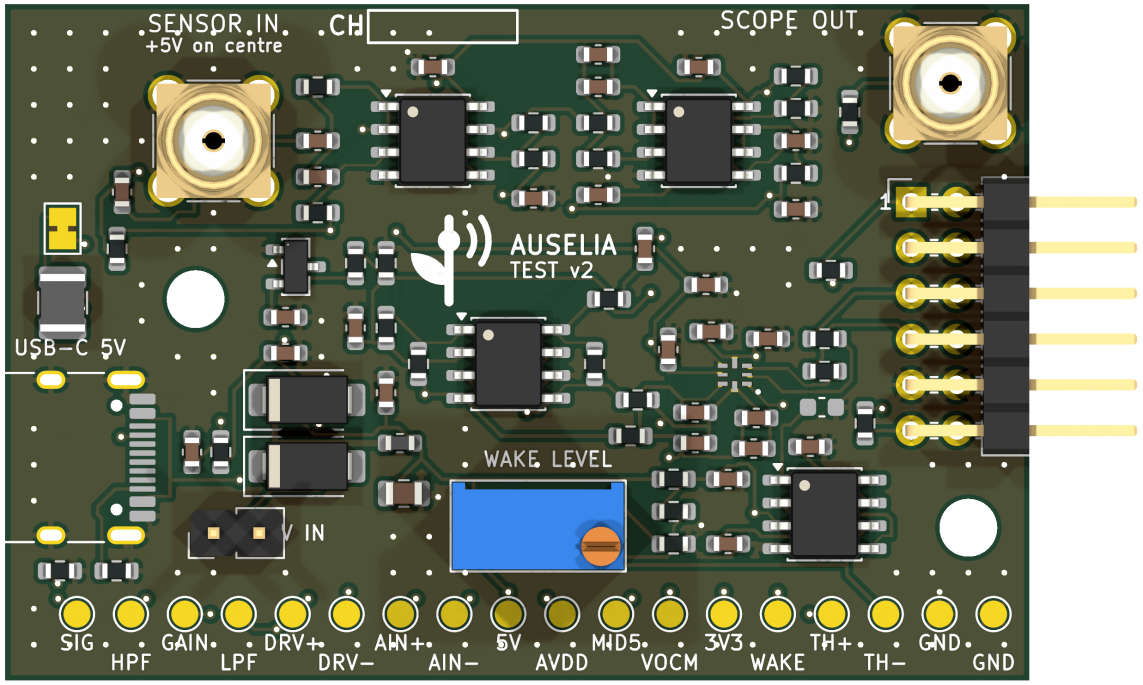


**10 mm at this scale (2.5 : 1)** Board 57.0 × 37.6 mm, KiCad 3D render, view from the top

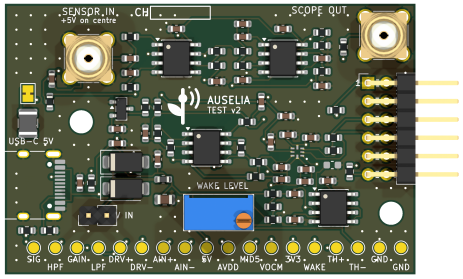

**The same view at real size, 1 : 1**

SECTION 7

# Making the board

STEPS 45 TO 48

The files the factory needs, the parts list, what the placement viewer corrected and what the order costs.

MAKING THE BOARD

# 45 Which files go to the factory

JLCPCB needs three files. The Gerber zip makes the bare board. The BOM names every part. The CPL gives the position and angle of each part.

The main board zip holds 13 files. The BOM has 31 lines and 74 parts. The CPL has 74 rows. The mounting holes and the not-fitted capacitor C31 are in none of them. The sensor head has its own zip, BOM and CPL.

FILES IN hw/fab

**ADC_Test_gerbers.zip**
Copper, mask, silk, paste, outline, drill

**ADC_Test_BOM_JLC.csv**
Value, references, footprint, LCSC number

**ADC_Test_CPL_JLC.csv**
Reference, X, Y, layer, rotation

MAKING THE BOARD

# 46 What is in the BOM

31 lines hold 74 parts. Five lines hold extended parts, and JLCPCB charges a fee for each type. All other lines hold basic parts.

The ADC, the driver and the two op-amps are the extended parts, with the USB-C connector and the 470 µH inductor of the bias-T.

EXTENDED PARTS, PRICE PER PART

| Ref | Part | LCSC | Price |
|---|---|---|---|
| U1,U2 | OPA2365 | C130011 | $1.38 |
| U3 | THS4531 | C705347 | $2.99 |
| U4 | ADS7057 | C2669902 | $7.98 |
| J2 | USB-C receptacle | C165948 | $0.19 |
| L2 | 470uH | C75644 | $0.09 |

Through-hole parts: J1 J4 SMA, J7, J3, RV1. The USB-C J2 has four through-hole tabs. JLCPCB solders them by hand, for a fee per joint.

MAKING THE BOARD

# 47 What the placement viewer corrected

The JLCPCB viewer showed three parts turned wrong on the first revision. The new parts (J2 USB-C, U8, L1, L2, J6) are not checked yet. The KiCad footprints and the JLC library disagree on the zero angle. Each fix sits in `jlc_files.py`, not in the board.

The trimmer RV1 also moved 2.54 mm in X and 1 mm in Y, because its library origin differs from the pin 1 pad.

KICAD ROTATION AGAINST CPL ROTATION

| Ref | KiCad | CPL | Why |
|---|---|---|---|
| U5 | 0° | 180° | viewer showed it turned; set absolute angle |
| J7 | 90° | 180° | viewer showed it turned; set absolute angle |
| J3 | 0° | 90° | viewer showed it turned; set absolute angle |

Rule: look at every part in the viewer once. The viewer shows the real answer.

MAKING THE BOARD

# 48 What the order costs

Two ADC boards and five sensor heads are two JLCPCB orders. They cost $107.76 at the factory. With one parcel, shipping and IVA, the total is $141.02, or 135 thousand CLP at 960 CLP per USD.

The ADC order is $67.00 and the head order is $40.76. Five ADC boards would cost $118.21. These are estimates from the model of the first quote, until you upload the files.

ESTIMATE, 2 ADC BOARDS + 5 HEADS, USD

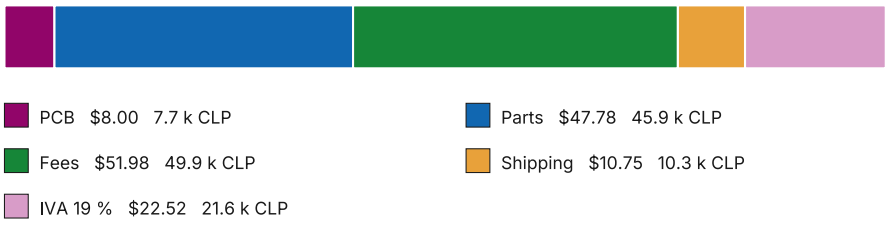


**Total $141.02. Two parcels $153.81. 5 + 5 boards $201.97.**

SECTION 8

# Bring-up and checks

STEPS 49 TO 54

What to measure before the PMOD goes in, the first signal test, the response to expect, how to test the wake-up, what to do when something fails and what is still open.

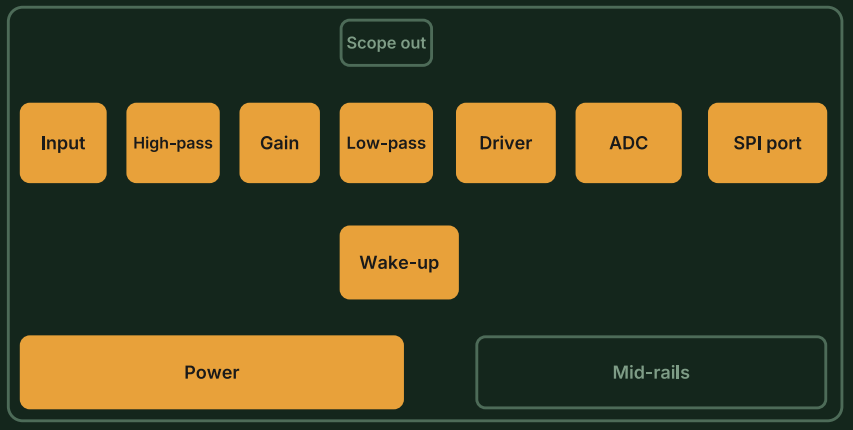


BLOCKS AT WORK IN THIS SECTION (SEE PAGE 3)

## 49 BRING-UP AND CHECKS
## What to check before the PMOD goes in

Feed 5 V to the USB-C J2 or the header J7 with the PMOD unplugged. Measure each rail at the test points against GND. Unplug the supply if the 5 V rail is off by more than 0.25 V.

The 3.3 V line comes from the ZedBoard through the PMOD. With no PMOD it reads 0 V, and that is correct.

EXPECTED VOLTAGES, 5 V IN

| Node | Test point | Expect |
|---|---|---|
| +5V | TP11, 5V | 4.6 V (5.0 V – SS14) |
| AVDD | TP12, AVDD | 3.30 V |
| VMID5 | TP13, MID5 | 2.30 V (half of +5V) |
| VOCM | TP14, VOCM | 1.65 V |
| +3V3 | TP15, 3V3 | 0 V (no PMOD) |
| nWAKE | TP16, WAKE | floats, no pull-up |

## 50 BRING-UP AND CHECKS
## The first signal test

Plug the PMOD in. Put 100 mV peak at 250 kHz on J1 from the Analog Discovery 2 and send a burst of ten cycles. Look at SCOPE OUT and read the SPI words.

The scope shows 410 mV peak above 2.3 V. The ADC sees 410 mV peak between its inputs, which is 1018 codes.

EXPECTED, 100 mV PEAK AT J1

| Where | Expect |
|---|---|
| J1 | 100 mV peak, 250 kHz |
| SCOPE OUT (J4) | 410 mV peak on 2.3 V |
| ADC input, differential | 410 mV peak |
| Code, peak | about 1018 (0x03FA) |
| Code, no signal | near 0 (0x0000), ± 1 |

## 51 BRING-UP AND CHECKS
## What response to measure

Sweep J1 at 100 mV and read the code amplitude. Divide by the amplitude at 250 kHz. The numbers below come from the simulation.

Component spread moves the 10 kHz point. In 11 of 150 random runs the loss at 10 kHz was below 40 dB.

SIMULATION, NOMINAL PARTS

| Frequency | Gain SMA to ADC | Against 250 kHz |
|---|---|---|
| 10 kHz | -28.2 dB | -40.5 dB |
| 50 kHz | -0.5 dB | -12.7 dB |
| 100 kHz | +9.2 dB | -3.1 dB |
| 250 kHz | +12.3 dB | +0.0 dB |
| 500 kHz | +9.4 dB | -2.8 dB |
| 1000 kHz | +0.1 dB | -12.1 dB |
| 2000 kHz | -11.7 dB | -24.0 dB |

## 52 BRING-UP AND CHECKS
## How to test the wake-up

Sweep RV1 and keep a burst at J1. nWAKE must drop for a burst above the threshold and stay high below it. The table gives the threshold for five trimmer positions.

The lowest setting is ± 8 mV at J1. The quiet perfboard noise is 4.6 mV rms in the band, so that setting is only about 2 times the noise.

COMPUTED FROM THE RESISTORS

| Trimmer | RV1 | Threshold at J1 |
|---|---|---|
| 0 % | 0.0 Ω | ± 8 mV |
| 25 % | 5 kΩ | ± 47 mV |
| 50 % | 10 kΩ | ± 80 mV |
| 75 % | 15 kΩ | ± 109 mV |
| 100 % | 20 kΩ | ± 135 mV |

ESTIMATE: comparator offset (up to 5 mV, datasheet) moves each threshold by that much.

BRING-UP AND CHECKS

# 53 What if it does not work

Find the first stage that is wrong, then look only at that stage. Work from the input toward the ADC. Measure DC first, then the signal.

Most first-board failures are a short, a part turned the wrong way or a missing 3.3 V.

SYMPTOM, CAUSE, CHECK

| Symptom | Likely cause | Check |
|---|---|---|
| 5 V low | Weak USB source | TP11 under load |
| SCOPE OUT flat | U1 or U2 not powered | 5 V at pin 8 |
| SDO all zeros | First frame only | Read twice |
| SDO stuck | No 3.3 V from PMOD | J3 pin 11 |
| Wake always low | RV1 near 0 and noise | Turn RV1 up |
| Code offset | VOCM or VMID off | Step 49 table |

BRING-UP AND CHECKS

# 54 What is verified and what is open

Checked by tools: the electrical rules, the design rules, the netlist against the board, and the rotations in the JLC viewer. Checked by simulation: gain, band, noise and settling.

Nothing has run on a real board yet. Red rows mark the three open items.

STATUS

| Item | Status | How |
|---|---|---|
| ERC, DRC, parity | Done | KiCad, 0 errors |
| Rotations | Done | JLC viewer |
| Chain response, noise | Simulated | ngspice, vendor models |
| Head and bias-T | Simulated | ngspice, OPA365 |
| THS4531, 400 pF load | OPEN | LTspice netlist, not run |
| PMOD fit on ZedBoard | OPEN | print 1:1 and test |
| First board, bench | OPEN | steps 49 to 52 |

NOTES

NOTES

SECTION 9

# The sensor head

STEPS 55 TO 60

The perfboard charge amplifier on its own small board, how it is powered through the coax by a bias-T, how it is laid out and how to test it.

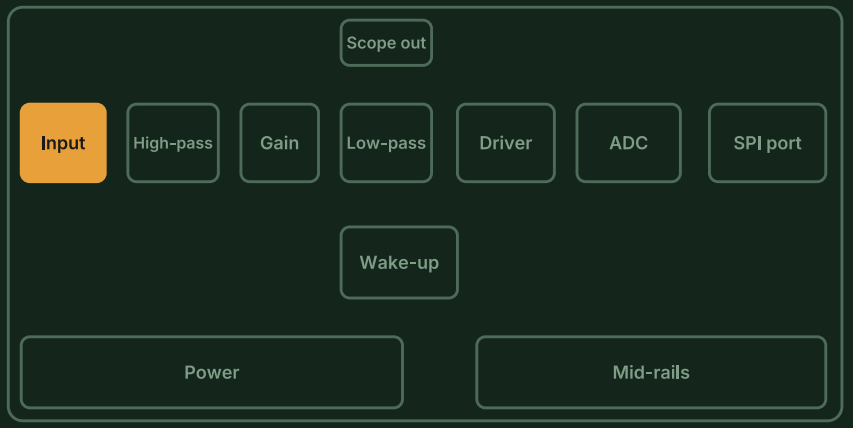


BLOCKS AT WORK IN THIS SECTION (SEE PAGE 3)

## 55 THE SENSOR HEAD
## What the sensor head does

The head is the perfboard on a PCB. The piezo wires solder to it. It turns the charge of the piezo into a voltage and sends that voltage down one coax cable.

The same coax brings 5 V from the ADC board to the head. So the head needs one cable and no battery.

CHAIN

The head loses 0.16 dB at 250 kHz to the bias-T. To use a generator or a perfboard instead, cut the solder jumper JP1.

## 56 THE SENSOR HEAD
## How the charge becomes a voltage

The amplifier keeps its input at a fixed voltage. So the charge Q of the piezo flows into the feedback capacitor Cf, and the output moves by Q / Cf. With Cf = 47 pF, a charge of 4 to 7 pC gives 85 to 149 mV.

Rf = 1 MΩ drains the capacitor with a time constant of 47 µs, a corner at 3.4 kHz. The noise gain is 35, so the 50 MHz amplifier keeps 1.4 MHz of bandwidth.

FROM THE NETLIST, ESTIMATE FOR Q

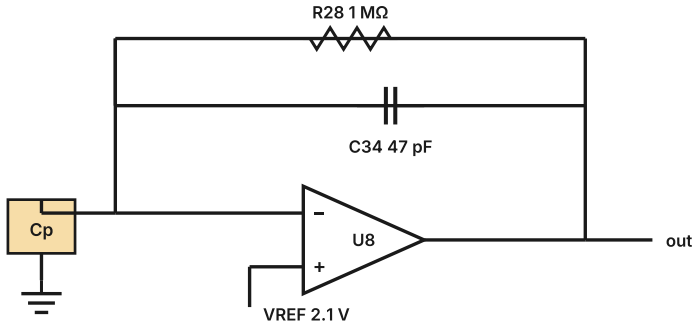


## 57 THE SENSOR HEAD
## How the coax carries power and signal

A bias-T joins a DC path and an AC path on one wire. The DC path is an inductor: 470 µH looks like 738 Ω at 250 kHz, so it hardly loads the signal. The AC path is a capacitor: 100 nF passes 250 kHz and blocks the DC.

The simulation with the OPA365 model gives a loss of 0.16 dB at 250 kHz and 19 dB at 10 kHz. The low-frequency noise of the perfboard is cut before it reaches the filters.

SIMULATION, RG174 1 M

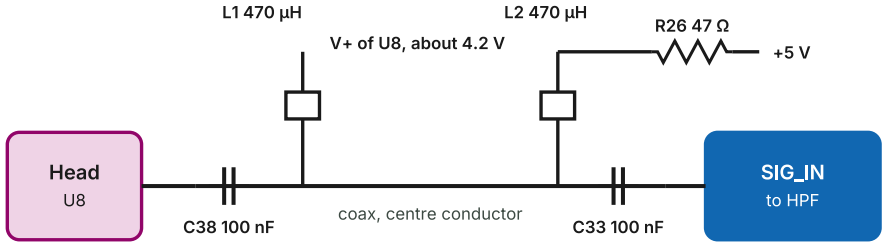


L1 and L2 are the same part. Cut the solder jumper JP1 (between C32 and L2) to turn the 5 V off.

## 58 THE SENSOR HEAD
## Where the parts are on the head

The head is 10 × 22 mm, with 14 parts, all on one face. The piezo sits on the other face, flat against the pads. The SMA stands on the parts face and points out of the capsule.

The capsule drawing v3 has a PCB of 10 × 20 mm. With the SMA and the inductor the head needs 2 mm more, so the PCB sticks out 9 mm instead of 7.

REAL BOARD, TOP VIEW, 2.2 : 1

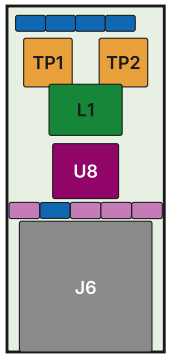


| | |
|---|---|
| U8 | OPA365, charge amplifier |
| L1 | 470 µH, supply from the coax |
| TP1 | piezo +, summing node |
| TP2 | piezo –, ground |
| J6 | SMA, vertical |
| R28 C34 | Rf 1 MΩ, Cf 47 pF |
| R29 R30 C35 | VREF 2.1 V |
| C36 C37 | supply bypass |
| R31 C38 | 49.9 Ω and 100 nF out |

THE SENSOR HEAD

# 59 What goes to the factory for the head

The head has its own Gerber zip, BOM and CPL. It is 9 BOM lines and 12 parts. The OPA365 and the inductor come from the extended library.

Five heads cost about $40.76 at the factory, $8.15 each (ESTIMATE). Fixed fees are most of it: setup, stencil and hand soldering of the SMA.

HEAD BOM, PRICE PER PART

| Ref | Part | LCSC | Price |
|---|---|---|---|
| C34 | 47pF C0G | C1567 | $0.008 |
| C35,C37 | 10uF | C15525 | $0.026 |
| C36,C38 | 100nF | C307331 | $0.010 |
| J6 | SMA jack | C496549 | $0.402 |
| L1 | 470uH | C75644 | $0.090 |
| R28 | 1M | C26083 | $0.002 |
| R29,R30 | 10k | C25744 | $0.002 |
| R31 | 49.9R | C25120 | $0.002 |
| U8 | OPA365 | C96626 | $2.674 |

NOTES

THE SENSOR HEAD

# 60 How to test the head

Power the ADC board from 5 V (USB-C or header) and connect the head to SENSOR IN (J1) with the coax. Measure the head first, then inject a known charge. A 10 pF capacitor from the function generator to the piezo + pad gives Q = 10 pF × ΔV.

A step of 100 mV injects 1 pC. The output moves by 21 mV, because Q / Cf = 1 pC / 47 pF.

EXPECTED VALUES

| Where | Expect |
|---|---|
| C37 (V+ of U8) | about 4.2 V |
| VREF, C35 | about 2.1 V after 0.2 s |
| U8 output, R31 pad 1 | equal to VREF |
| J1 centre pin | about 4.3 V |
| Extra current on the 5 V input | about 5 mA |
| 100 mV step via 10 pF | 21 mV step at SIG_IN |

NOTES

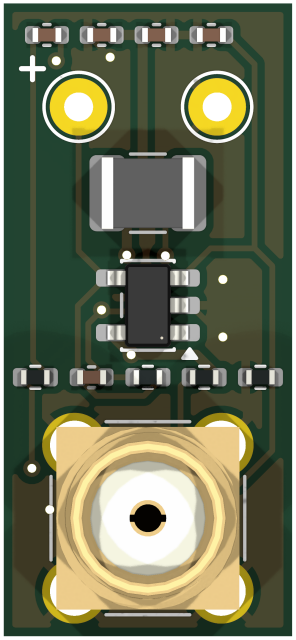

Top view at 4 : 1, board 10 × 22 mm

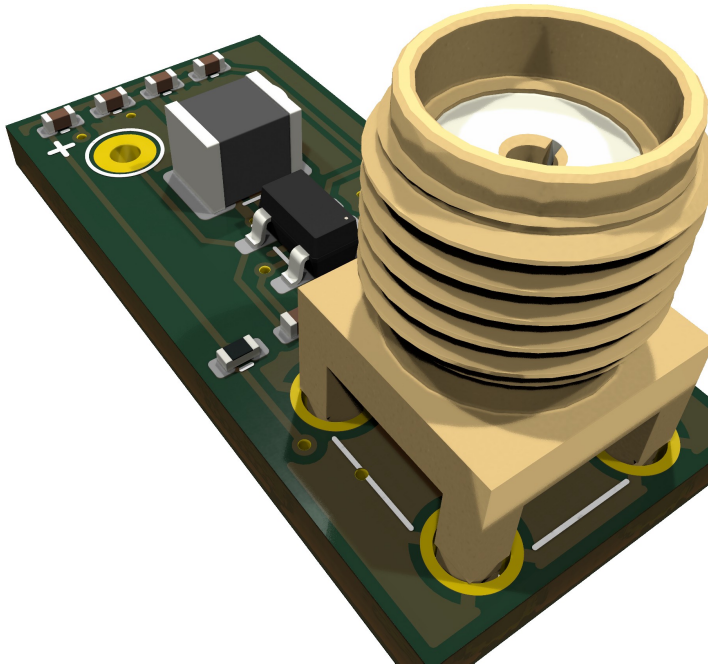

The same board seen at an angle. The piezo goes on the other face, over the two wire holes.



**Real size, 1 : 1**

WHERE THINGS LIVE

# Files, models and datasheets

| | |
|---|---|
| `hw/` | KiCad project, schematic, both boards |
| `hw/fab/` | Gerbers, BOM and CPL for JLCPCB, both boards |
| `hw/tools/` | Generators, DRC, cost model, 1:1 print |
| `sim/` | Chain simulation, vendor models list, LTspice netlist |
| `doc/tools/` | This manual, built from the files above |
| `doc/data/` | Board and simulation snapshots used in the figures |

DATASHEETS

ADS7057, THS4531, OPA365 (OPA2365), LM393, XC6206

```
Rebuild: M4_PDF_PYTHON=<python with pymupdf> python3 doc/tools/make_adc_manual.py
```