
λutonomous
www.autonomous.ai

AUTONOMOUS COMPUTER 2

ASSEMBLY MANUAL

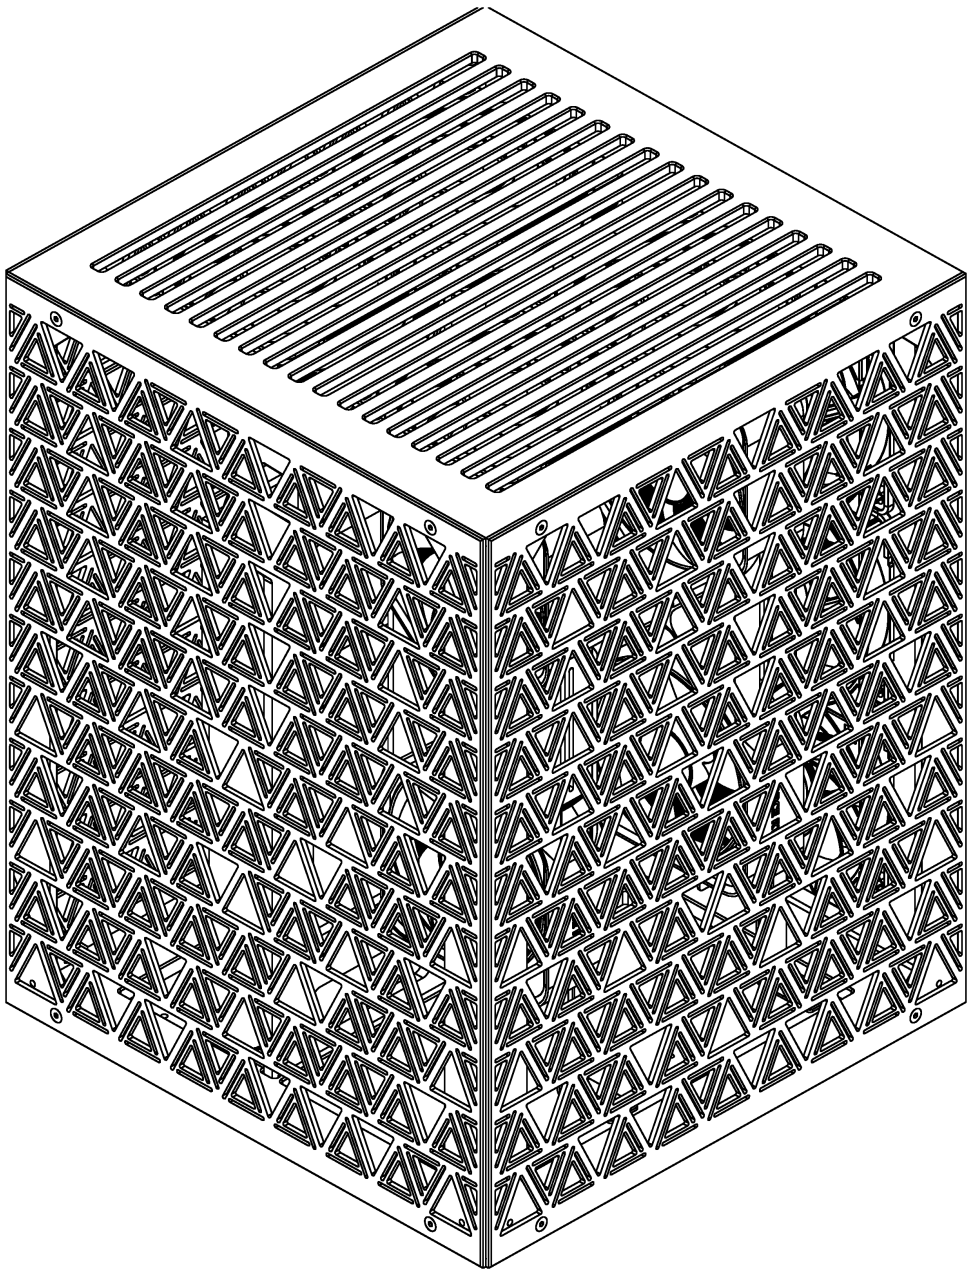

BEFORE YOU START

NOT INCLUDED – PURCHASE SEPARATELY

The kit contains the case parts, brackets and hardware. You also need:

ITEM	QTY	NOTES
Mainboard	1	Mounts on the nine M3 standoffs in Step 10.
CPU, memory and SSD	As required	Install them on the mainboard before Step 10.
Graphics card (GPU)	2	Installed in the PCIe 5.0 risers in Step 14.
ATX power supply (PSU)	1	Mounts with the four screws supplied with it (Step 22).
120mm fans (with screws)	7	3 on the rear panel (Step 9), 4 under the top panel (Step 24).


TOOLS

TOOL	USED FOR
Hex key 2.5mm (included)	All M4 screws
Hex key 2mm (included)	M3 button head screws only (Step 10)


CHECK THE KIT

Before you start, check every part against the parts list (pages 1–3) and every fastener against the hardware list (page 4). The hardware list shows each screw at actual size, so you can hold a screw against the printed page to identify it.


PARTS LIST

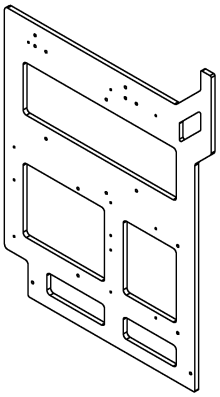


MID FRAME ×1

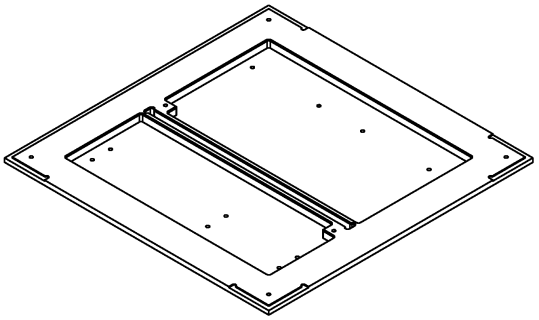


BASE ×1

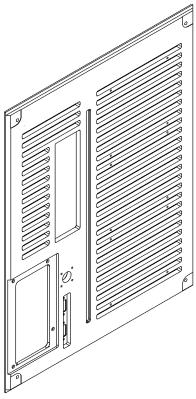

REAR PANEL ×1

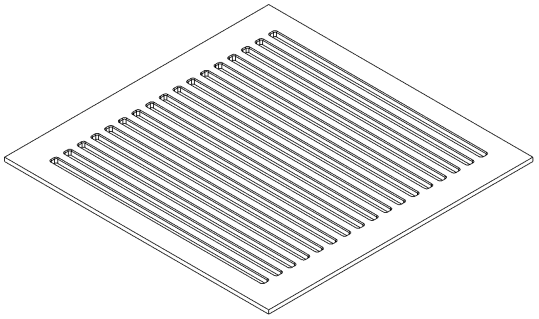

TOP PANEL ×1

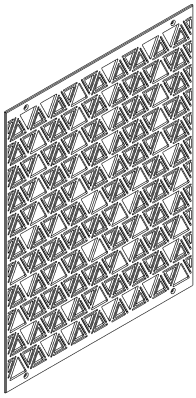


SIDE PANEL ×3




CORNER PANEL ×6


PARTS LIST (CONTINUED)

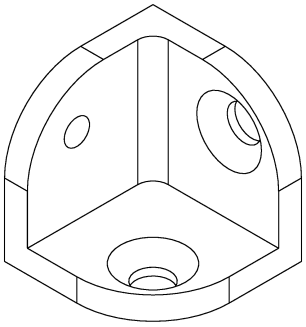


3-SIDED CORNER BRACKET TYPE A ×4

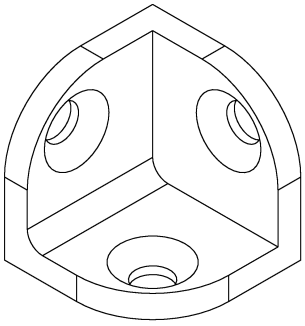


3-SIDED CORNER BRACKET TYPE B ×4

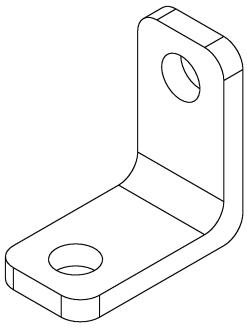


L-BRACKET ×2

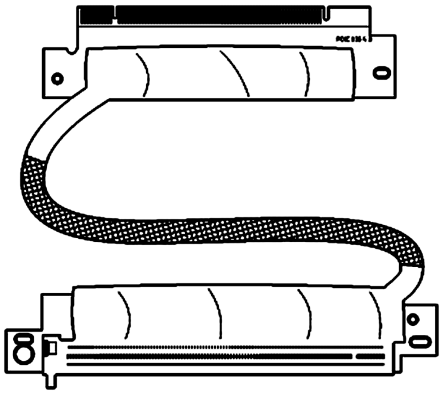

PCIE 5.0 RISER 50CM ×2

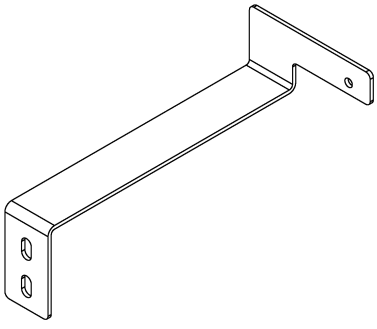


GPU SUPPORT RACK ×2

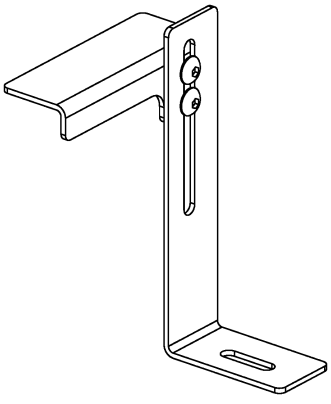


GPU SUPPORT BRACKET (ARM + STAND) ×2


PARTS LIST (CONTINUED)

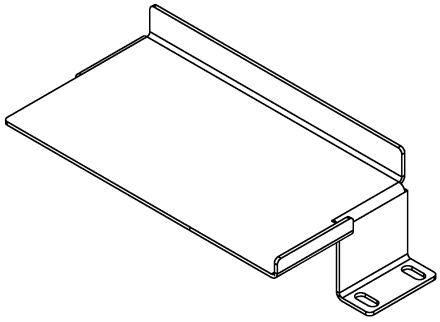


PSU SUPPORT RACK ×1

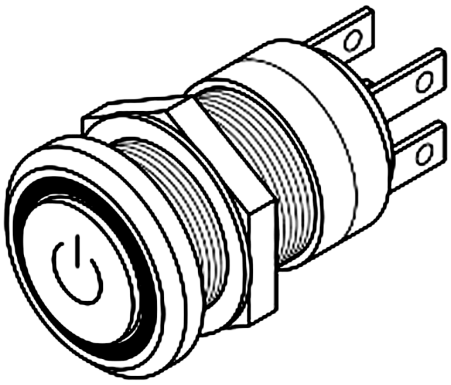


POWER SWITCH ×1

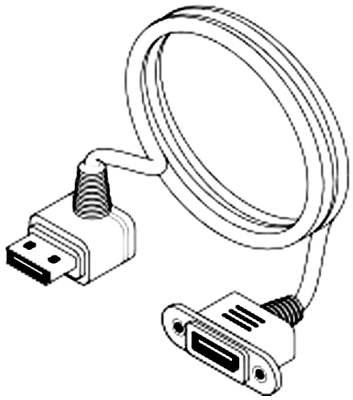


DISPLAYPORT EXTENSION CABLE ×2

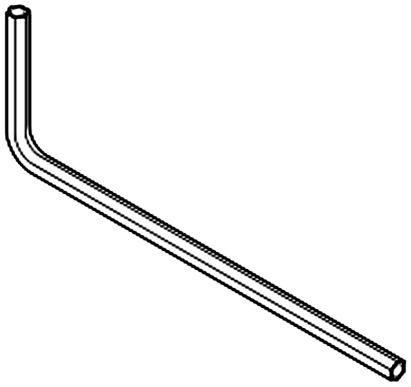

2.5MM HEX KEY ×1

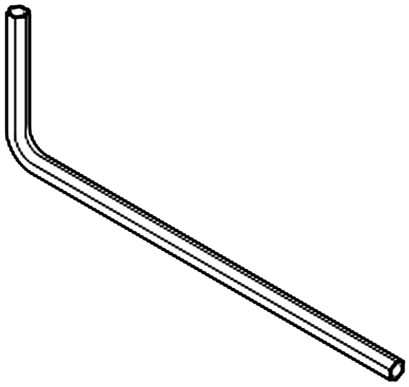


2MM HEX KEY ×1

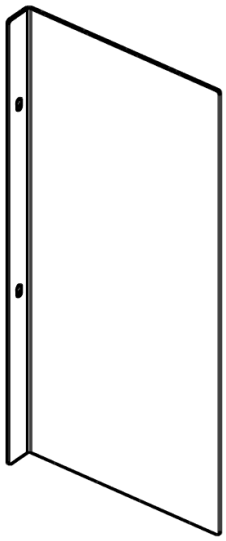


HEAT SHIELD PLATE (OPTIONAL) ×1


HARDWARE LIST

	FASTENER	QTY	USED IN STEPS
FLAT HEAD SCREWS			
	M3x8mm flat head screw	4	18
	M4x6mm flat head screw	20	5, 6, 8, 20, 21, 25
	M4x8mm flat head screw	12	26
	M4x12mm flat head screw	4	5, 6, 7
BUTTON HEAD SCREWS			
	M3x5mm button head screw	9	10
	M4x6mm button head screw	26	2, 3, 4, 11, 12, 13, 15, 19
STANDOFFS			
	M3x15mm M/F standoff	9	1
	M4x5mm M/F standoff	4	2
SPACERS			
	M3x8mm spacer	9	10
	M4x10mm spacer	4	2

GENERAL EXPLODED VIEW

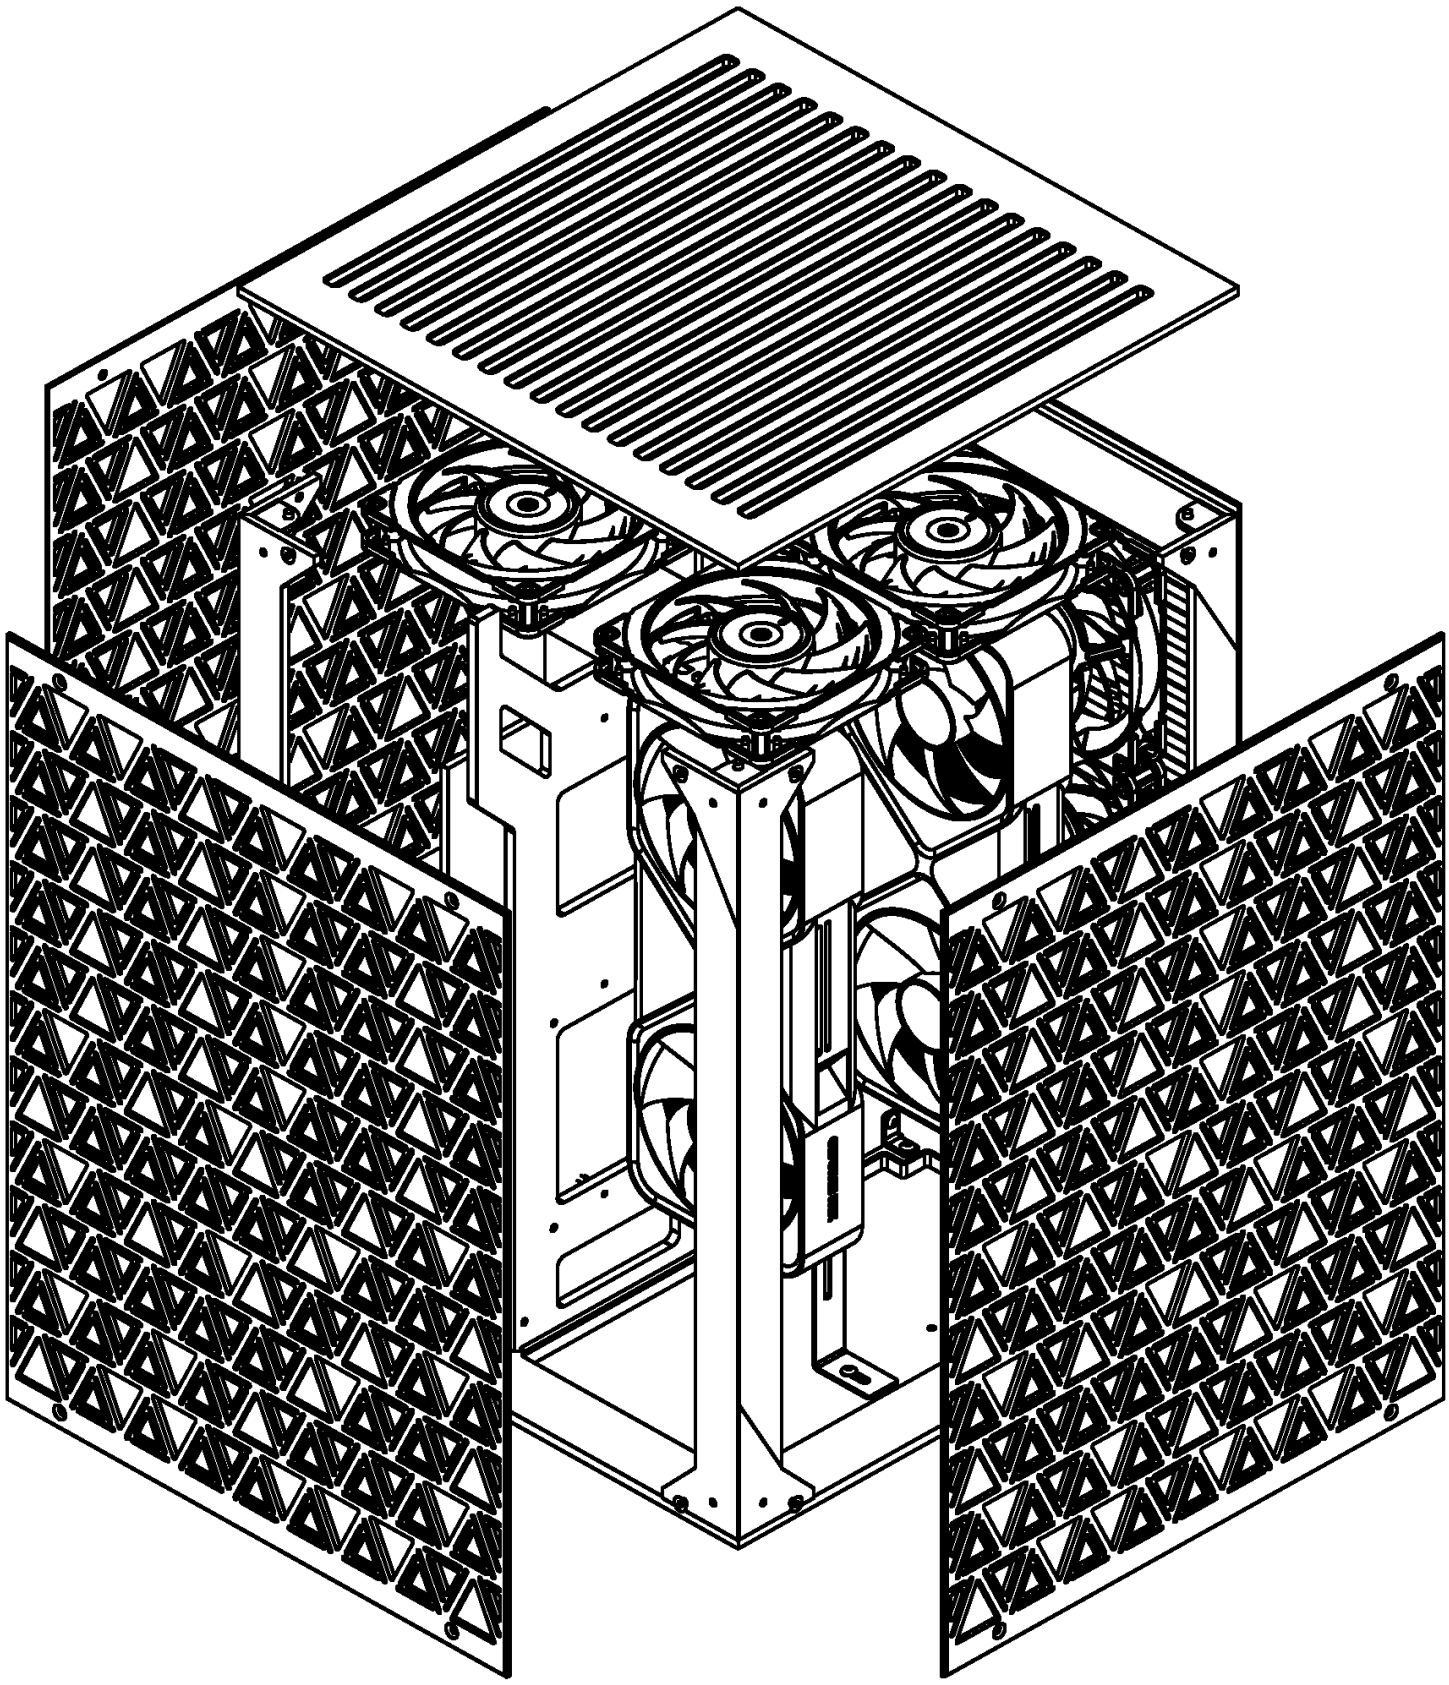


ASSEMBLY GUIDE

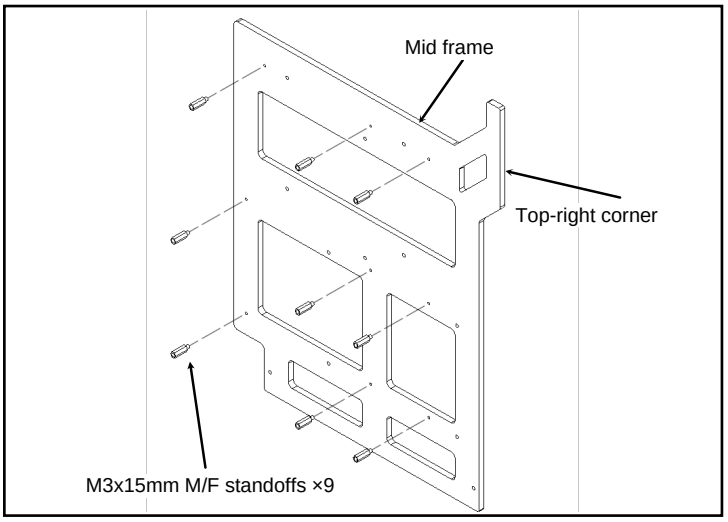


STEP 1:

Place the mid frame front side up, with its top-right corner on your right. Insert nine M3x15mm M/F standoffs into the marked holes.

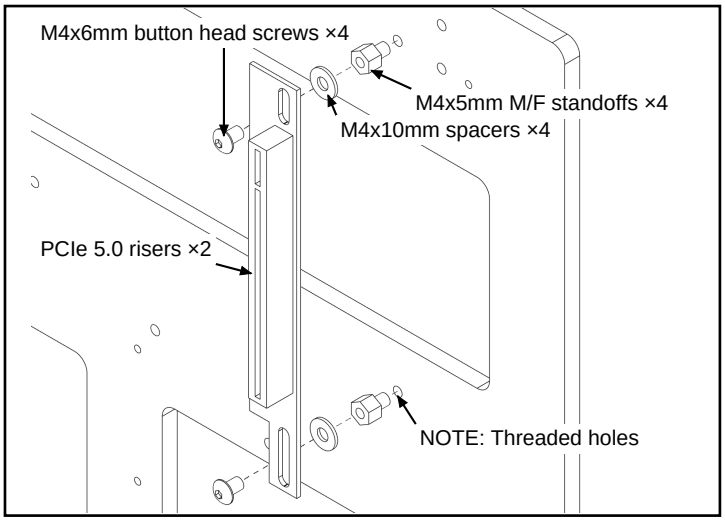


STEP 2:

Turn the mid frame over. Mount the two PCIe 5.0 risers on its rear side: at each of the four mounting points, fit an M4x5mm M/F standoff, then an M4x10mm spacer, then the riser, and secure it with an M4x6mm button head screw.

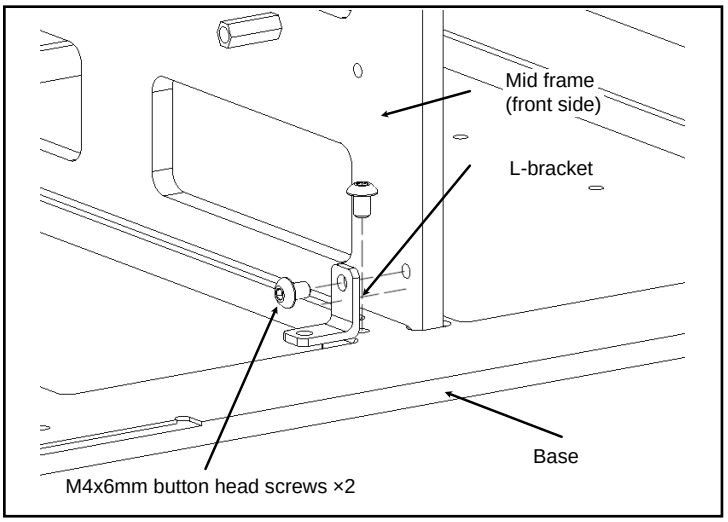


STEP 3:

Place the mid frame on the base. Secure the front side with an L-bracket and two M4x6mm button head screws.

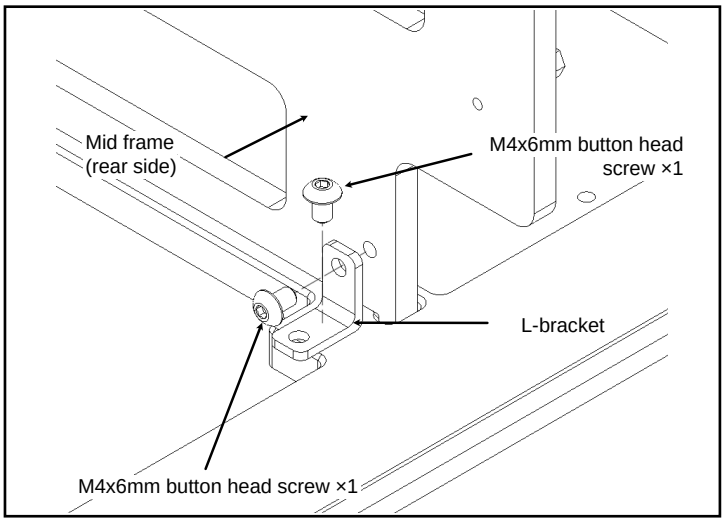


STEP 4:

Secure the rear side the same way, with an L-bracket and two M4x6mm button head screws.

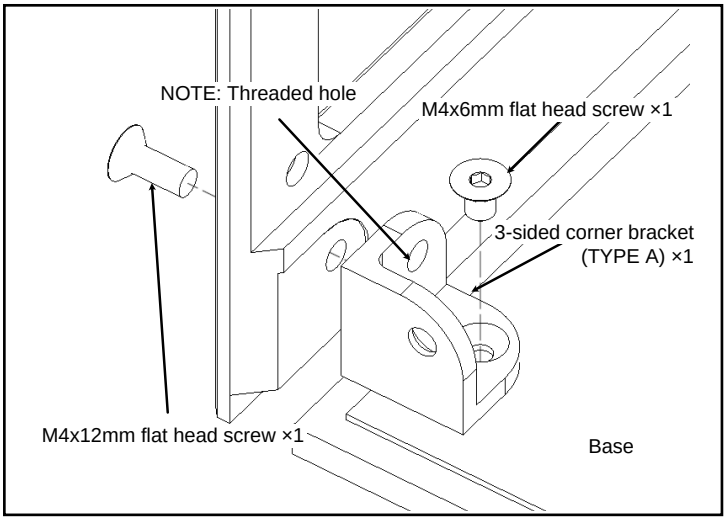

STEP 5:


Join the rear panel to the base with a TYPE A 3-sided corner bracket, threaded hole facing the panel. Use an M4x12mm flat head screw into the panel and an M4x6mm one into the base.

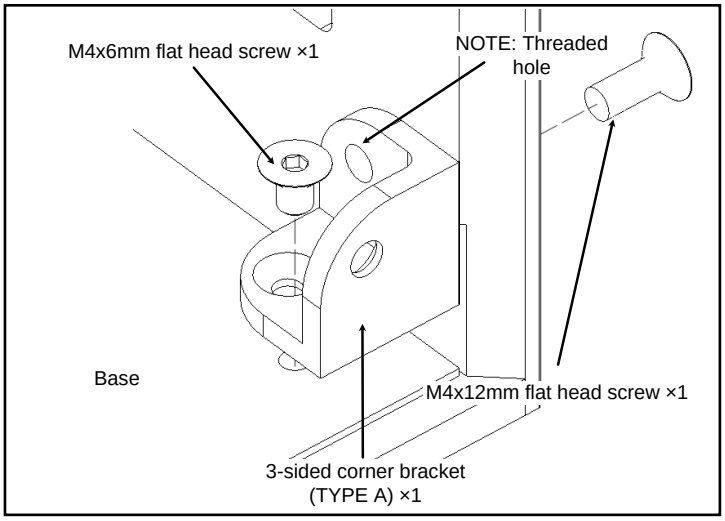

STEP 6:


Repeat Step 5 on the other side.

ASSEMBLY GUIDE (CONTINUED)

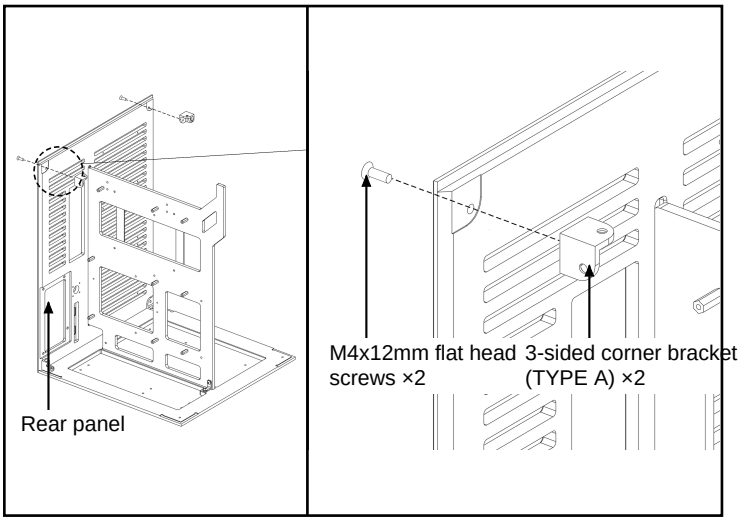


STEP 7:

Fit a TYPE A 3-sided corner bracket inside each top rear corner, threaded hole facing the rear panel. Fix it from outside with one M4x12mm flat head screw through the rear panel.

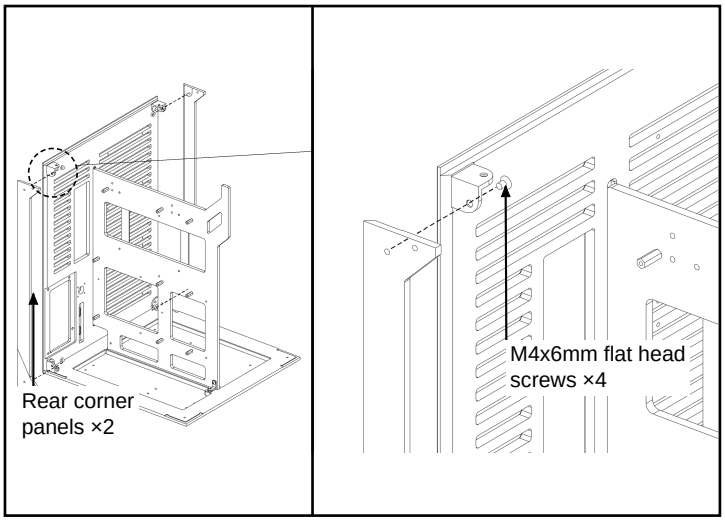


STEP 8:

Attach the two rear corner panels. Working from inside the case, fix each panel to the TYPE A brackets at the top and bottom with M4x6mm flat head screws, four in total.

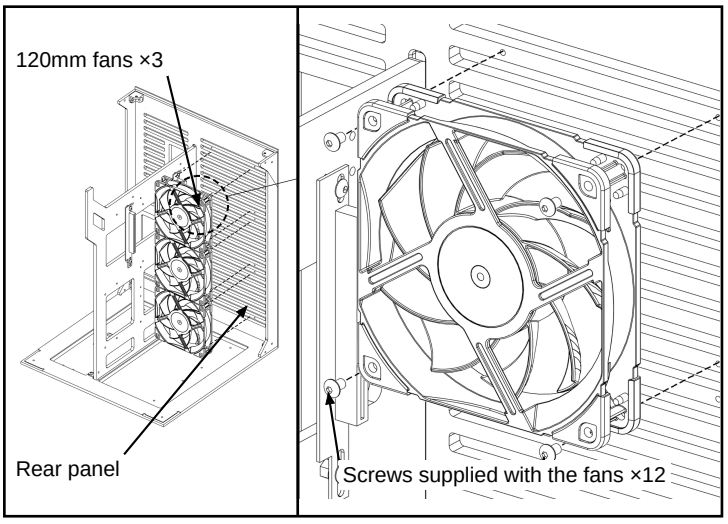


STEP 9:

Mount the three 120mm fans on the inside of the rear panel with the four screws supplied with each fan. Face each fan's airflow arrow out of the case.

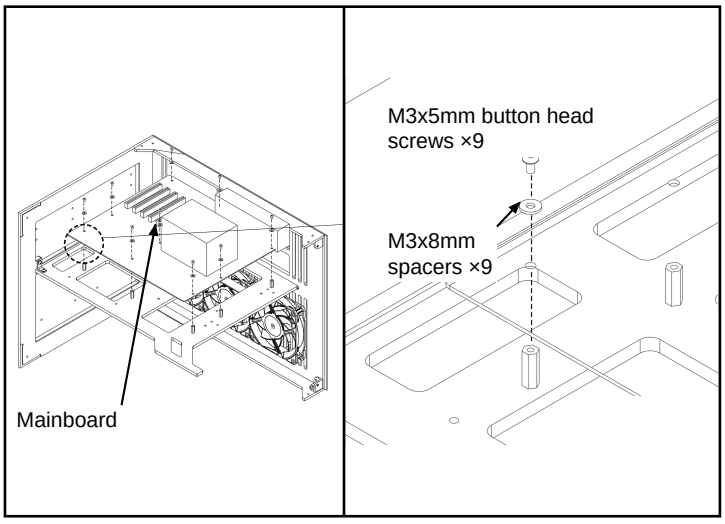


STEP 10:

Lay the case on its side, mainboard side up. Mount the mainboard on the standoffs. At each of the nine mounting holes, place an M3x8mm spacer on the mainboard and secure it with an M3x5mm button head screw (2mm hex key).

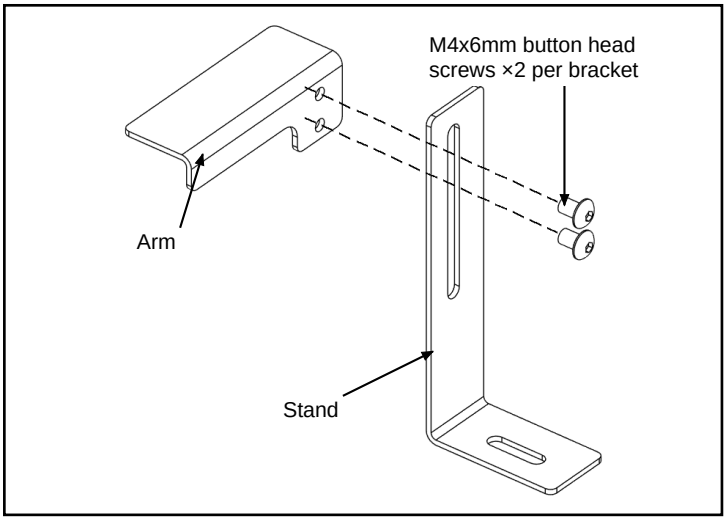

STEP 11:


Assemble the two GPU support brackets. Fix each arm to its stand with two M4x6mm button head screws, finger-tight for now.

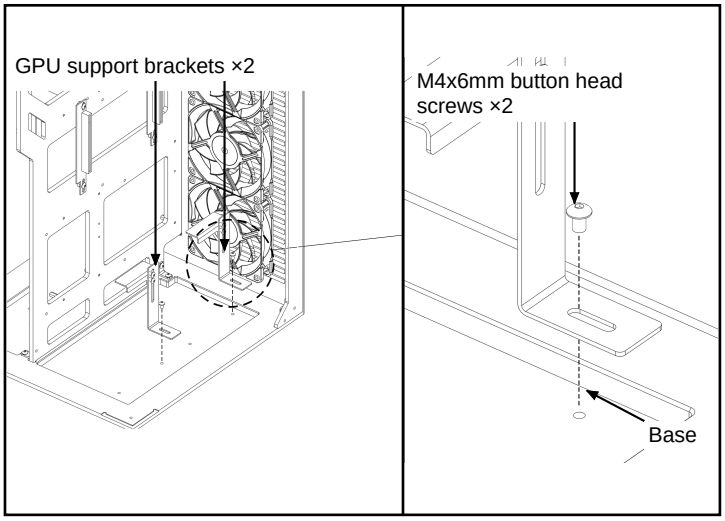

STEP 12:


Stand the case upright. Place a GPU support bracket on the base below each PCIe 5.0 riser and fix it with one M4x6mm button head screw.

ASSEMBLY GUIDE (CONTINUED)

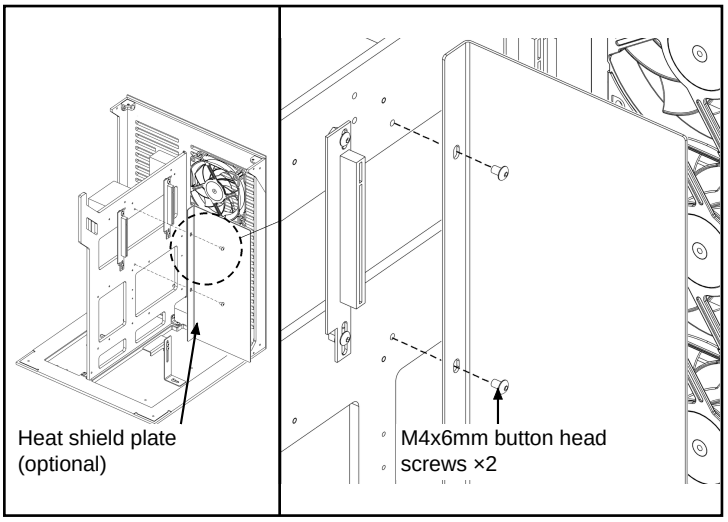


STEP 13:

OPTIONAL: Fit the heat shield plate between the two GPU positions, flange against the mid frame. Fix it with two M4x6mm button head screws through the slots.

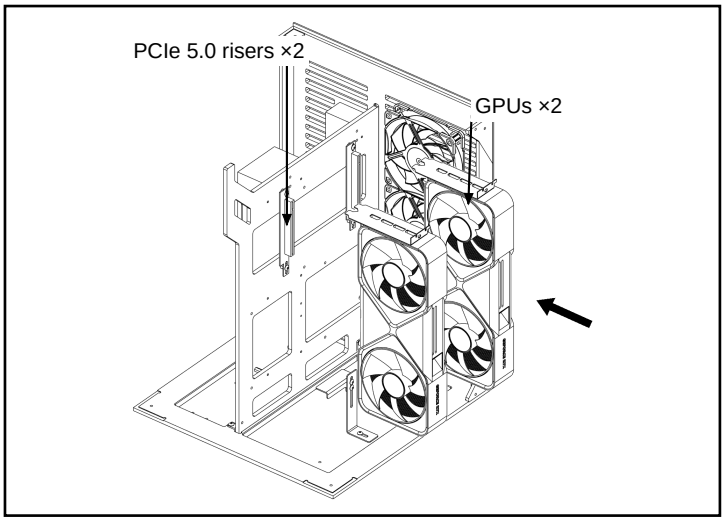


STEP 14:

Install the GPUs in the PCIe 5.0 risers. Raise each GPU support bracket arm until it supports the card, then tighten its two screws.

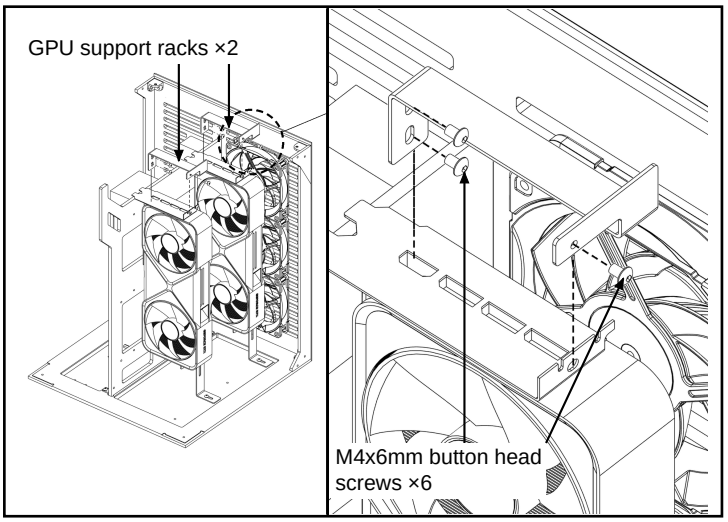


STEP 15:

Fit a GPU support rack over the end of each GPU. Fix it to the mid frame with two M4x6mm button head screws, and to the hole in the GPU's I/O bracket with one M4x6mm button head screw.

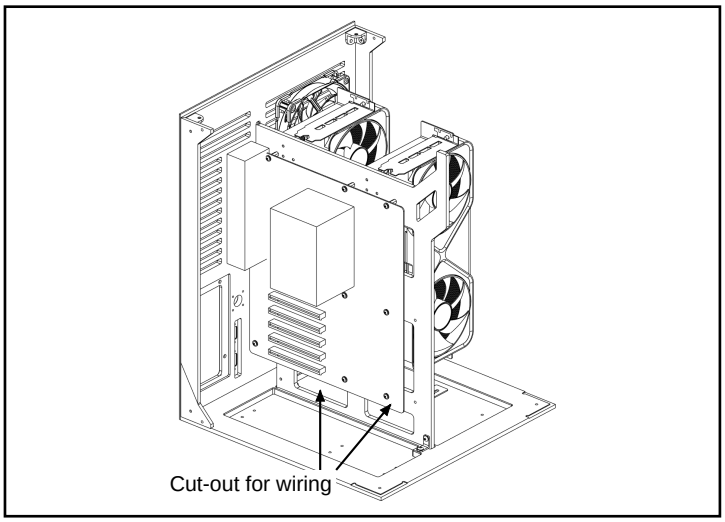


STEP 16:

Route the PCIe 5.0 riser cables through the cut-out in the mid frame and connect them to the PCIe slots on the mainboard.

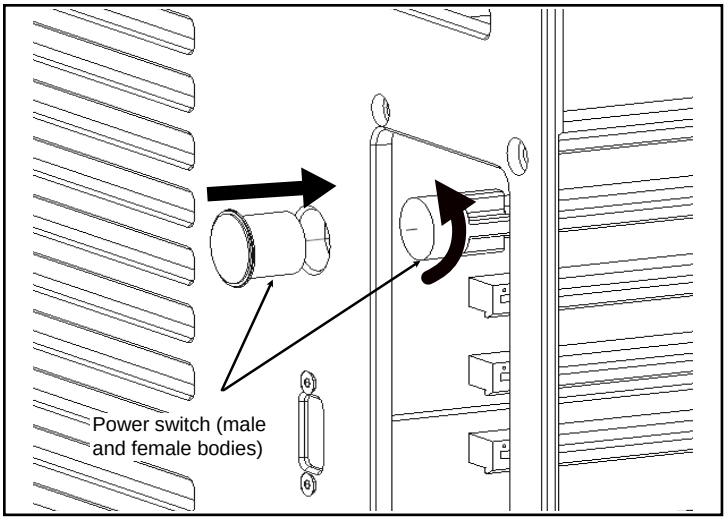

STEP 17:


Push the power switch through the rear panel hole and screw the female body on from inside. Plug its switch lead into PWR_SW and its LED lead into PWR_LED (+ to +) on the mainboard.

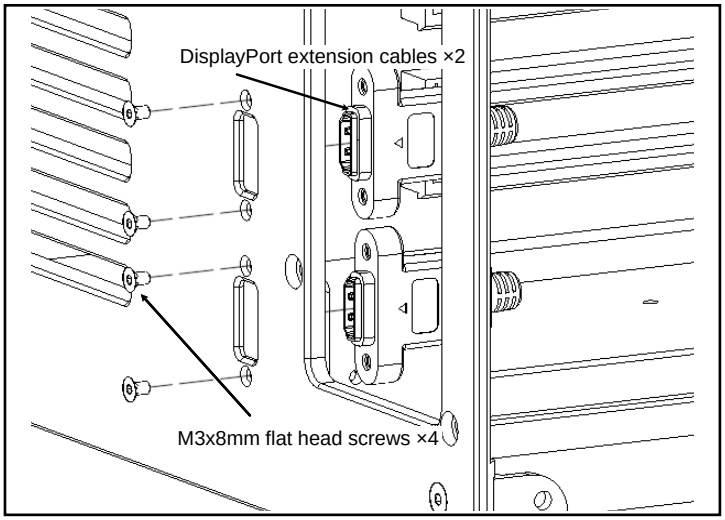

STEP 18:


Mount the two DisplayPort extension cables on the rear panel with four M3x8mm flat head screws. Route the cables through the mid frame cut-out and connect them to the GPUs.

ASSEMBLY GUIDE (CONTINUED)

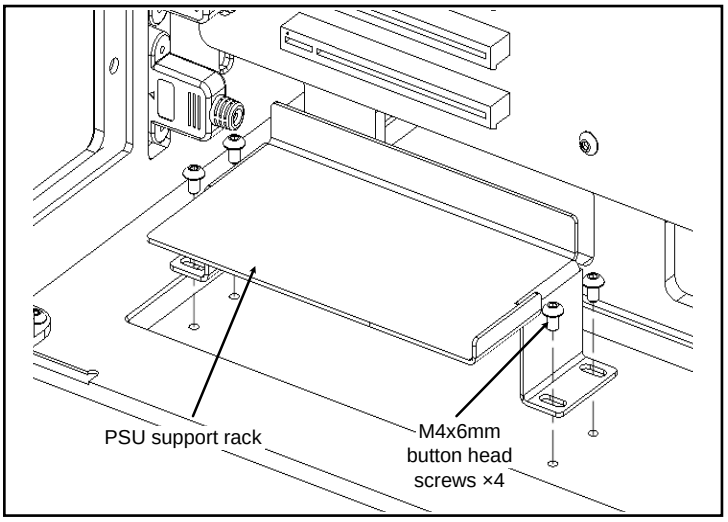


STEP 19:

Install the PSU support rack with four M4x6mm button head screws.

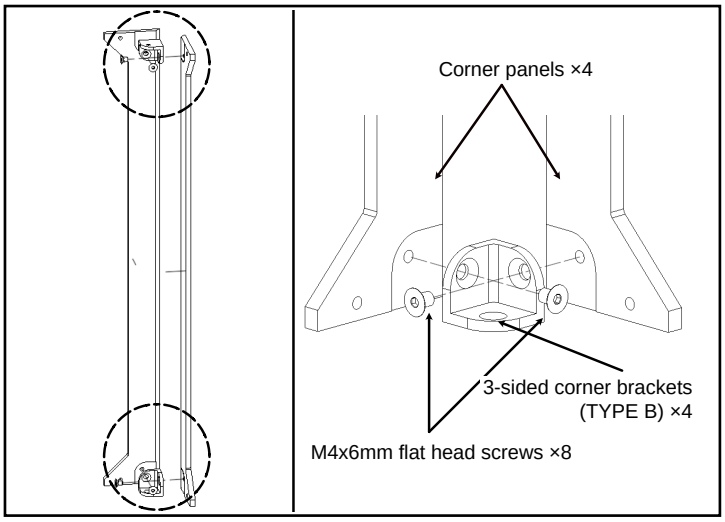


STEP 20:

Assemble the two side corners. For each corner, join two corner panels with a TYPE B 3-sided corner bracket at the top and bottom, using four M4x6mm flat head screws.

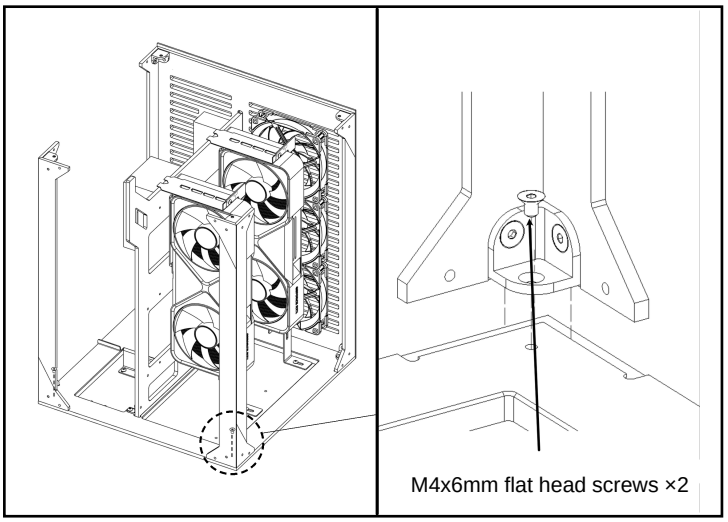


STEP 21:

Fix both side corners to the base with two M4x6mm flat head screws, one for each corner.

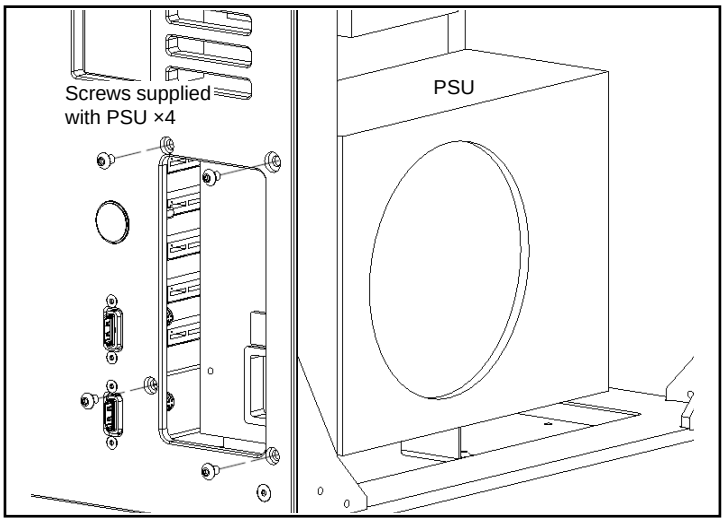


STEP 22:

Place the PSU on the support rack and fix it to the rear panel with the four screws supplied with it. Then connect all cables as shown in the wiring diagram (last page).

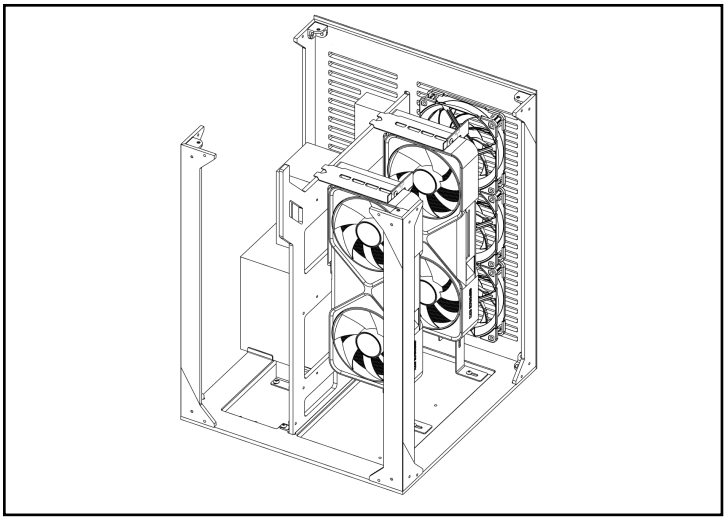

STEP 23:


Check your assembly. The rear corner panels, side corners and all corner brackets are now in place and should match this view.

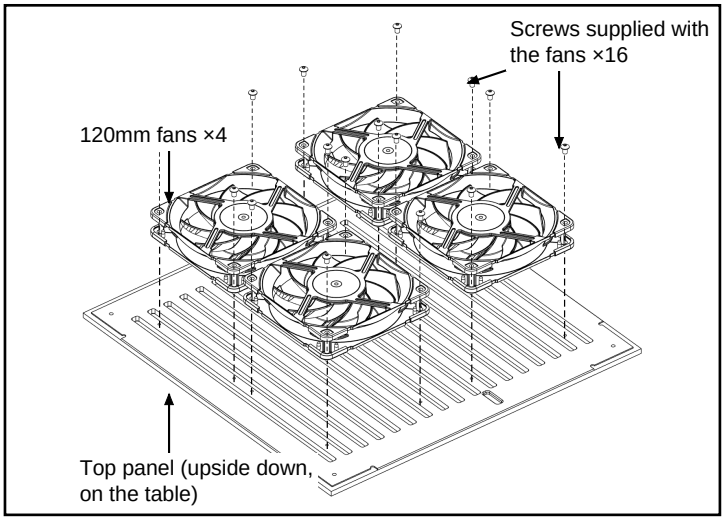

STEP 24:


Lay the top panel upside down on a flat surface. Mount the four 120mm fans on it with the four screws supplied with each fan. Face each fan's airflow arrow out through the top panel.

ASSEMBLY GUIDE (CONTINUED)

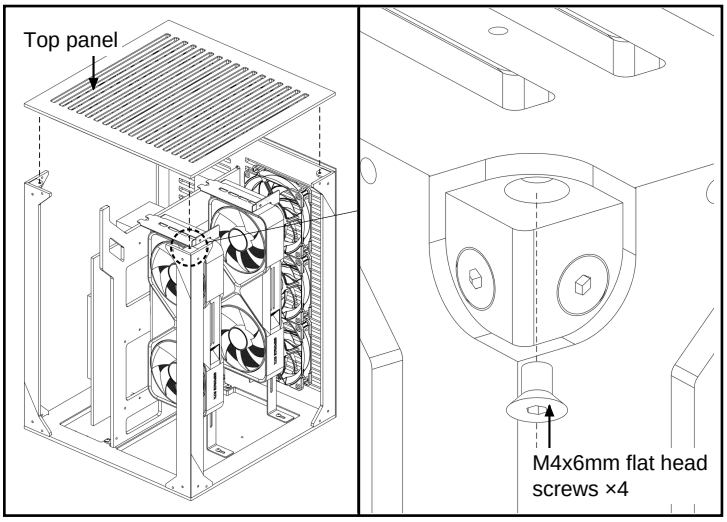


STEP 25:

Fit the top panel on the four top corners with four M4x6mm flat head screws, tightened from inside.

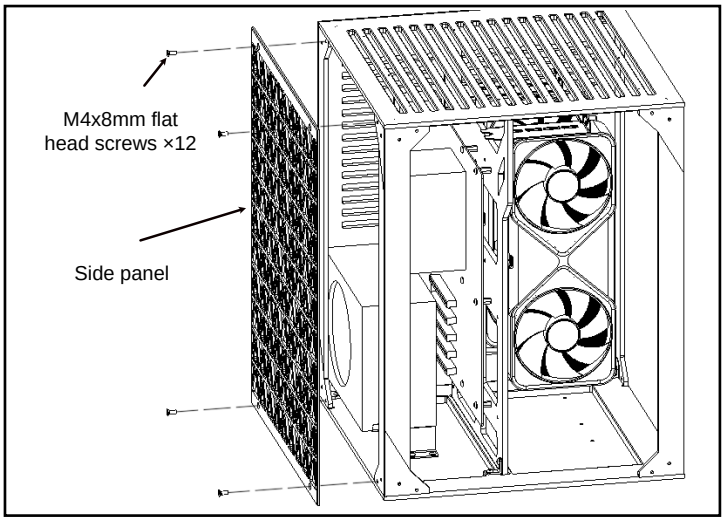

STEP 26:


Fix a side panel to the corner panels with four M4x8mm flat head screws. Repeat for the other two sides.

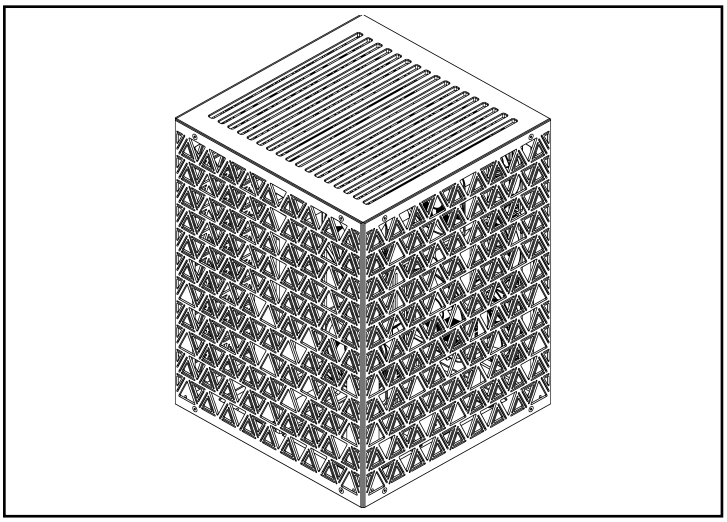

STEP 27:


Assembly is complete.

ASSEMBLY GUIDE (CONTINUED)

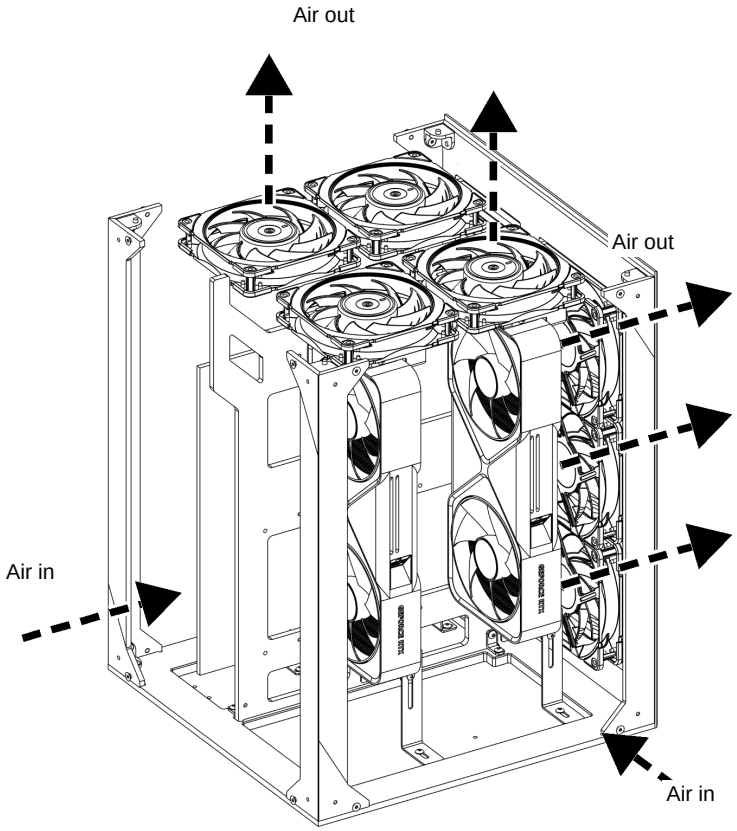

AIRFLOW:

All seven fans blow air out of the case: the three rear fans out through the rear panel, the four top fans up through the top panel. Fresh air is drawn in through the side panels. Mount every fan so it faces the direction shown.

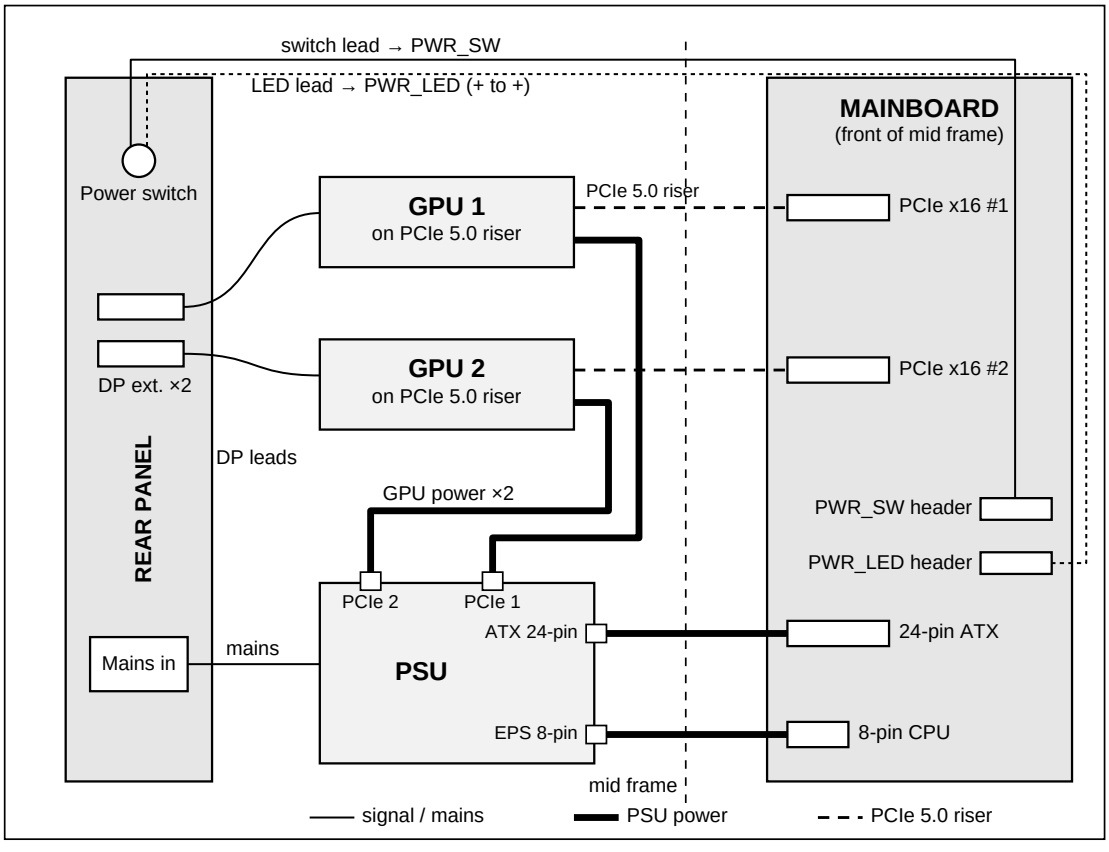

WIRING:

Connect the power switch, DisplayPort extension cables, PSU, mainboard and PCIe 5.0 risers as shown (Step 22).